

Installation Guide

Solenoid Valve

Types EVRP 0.85 and EVRP 3


032R9228

032R9228



Refrigerants:

R404A

Oil: General used ISO 32 POEs

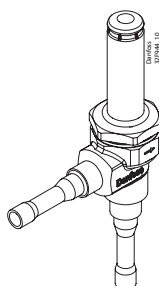


Mounting directions

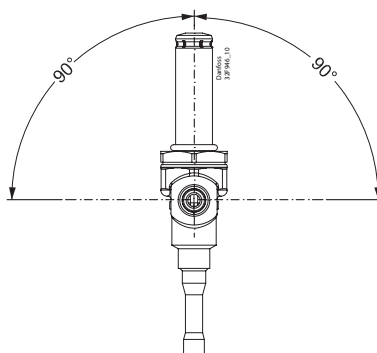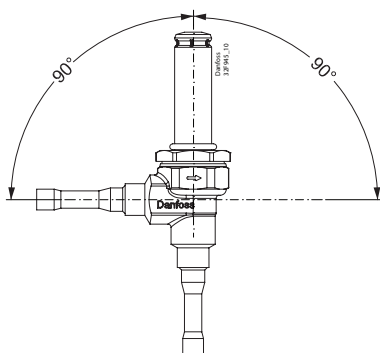


Soldering


Max. 150 °C
(300 °F)

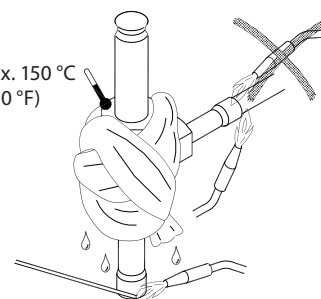

Dismounting and mounting

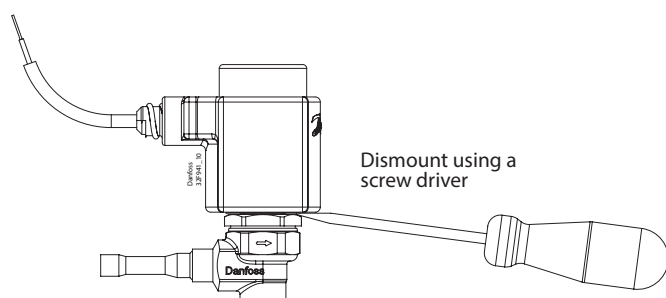


Dismount using a screw driver

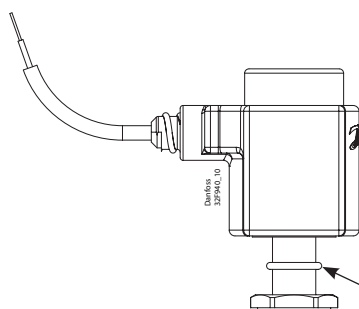

Be sure that the O-ring is in place

Correct sealing

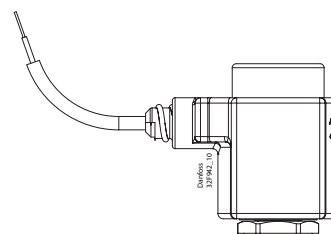

To ensure correct sealing between coil and valve mount the coil in the proper position and make sure that the coil is fully clicked on to the valve.

