

Installation Guide

Connectors with Screw terminals (027H0430) for ICAD Actuators

027R9795

027R9795

<p>Connector with screw terminals, 4-pin female 027H0424</p>	<p>Connector with screw terminals, 8-pin female 027H0425</p>
<p><i>Assembly instruction</i></p> <p>Screw Tightening Sealing Housing Connector</p>	<p><i>Assembly instruction</i></p> <p>Screw Tightening Sealing Housing Isolator Connector</p>
<p><i>Wiring diagram</i></p> <p>Pin1: (+) Fail safe supply Battery / UPS* 19 V d.c. Pin2: (+) Supply voltage 24 V d.c. Pin3: (-) Supply voltage 24 V d.c. Pin 4: Not used Pin 5: Not used</p>	<p><i>Wiring diagram</i></p> <p>Pin 1: Common alarm Pin2: ICM fully open Pin3: ICM fully closed Pin4: GND ground Pin5: 0/4 – 20 mA Input Pin6: 0/2 – 10V Input Pin7: 0/4 – 20 mA Output Pin 8: Not used</p>
<p>Connected to the 4-pin red male connector on the ICAD</p>	<p>Connected to the 8-pin black male connector on the ICAD</p>

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.