
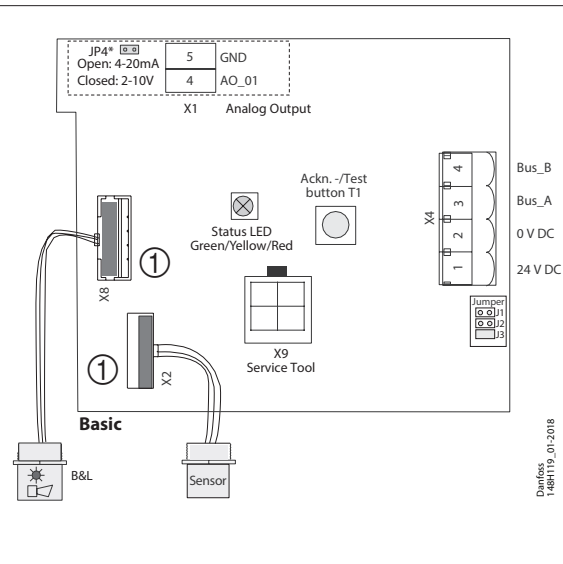


## Installation Guide


# Gas detection sensor/B&L (buzzer & light) alarm replacement for the types Basic, Premium and Heavy Duty

148R9632

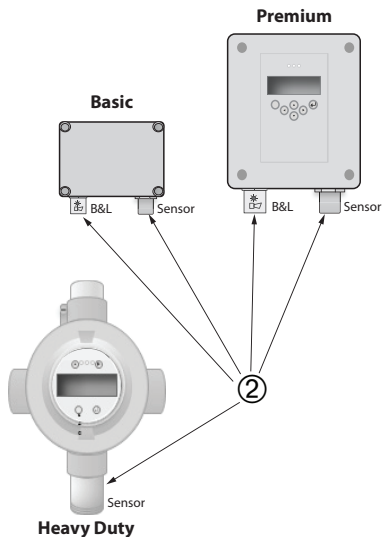

148R9632

Danfoss  
148H119\_01-2018

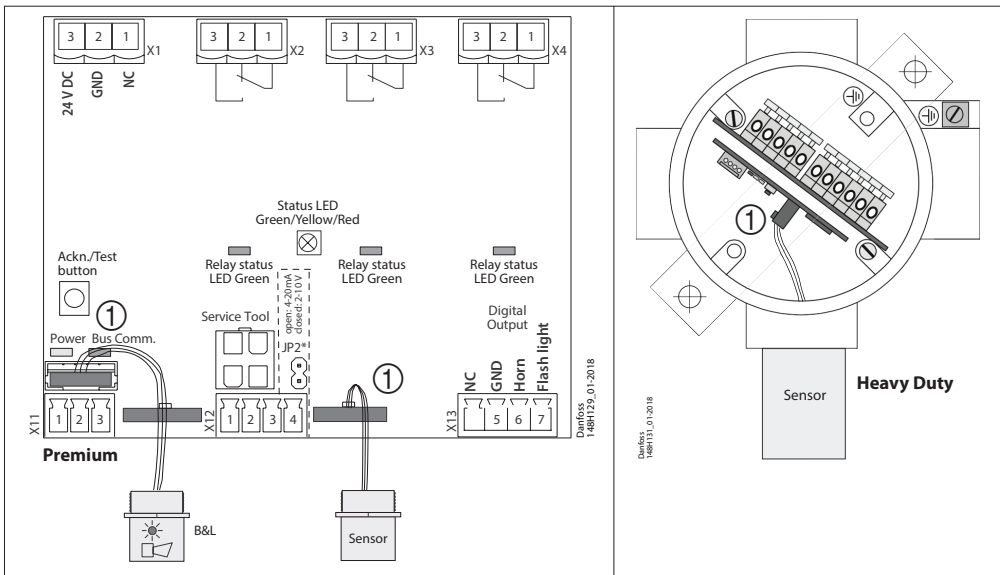

1. Unplug sensor (LED → yellow)/B&L
2. Unscrew sensor/B&L
3. Install new device in reverse order
4. Await green light in LED

Further documentation:

