

Installation guide


Mounting instruction for MBT 5111 and MBT 5114




087R0011

087R0011


Tightening torque

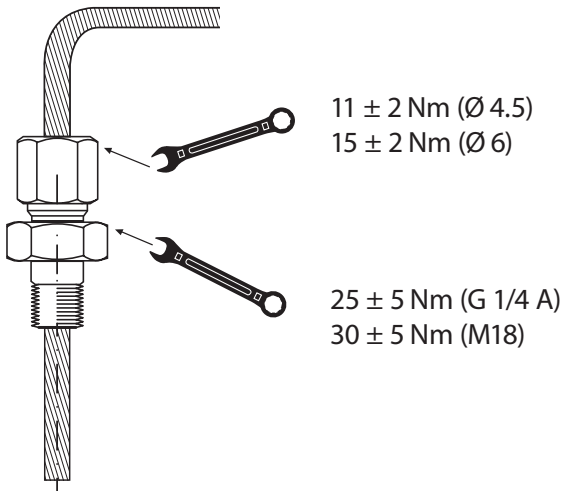


Bending instruction

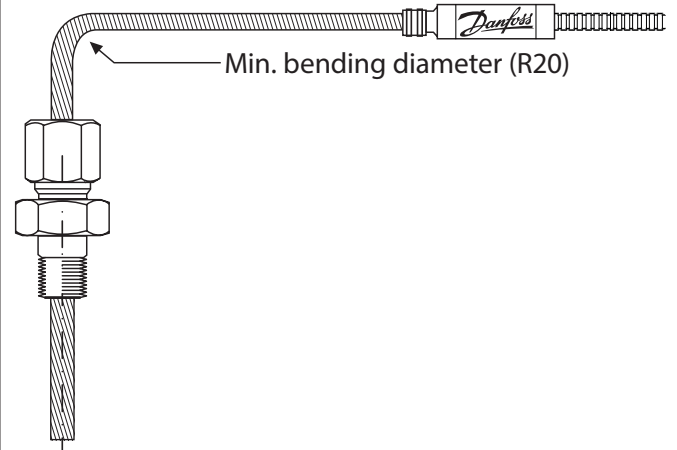

Temperature zones

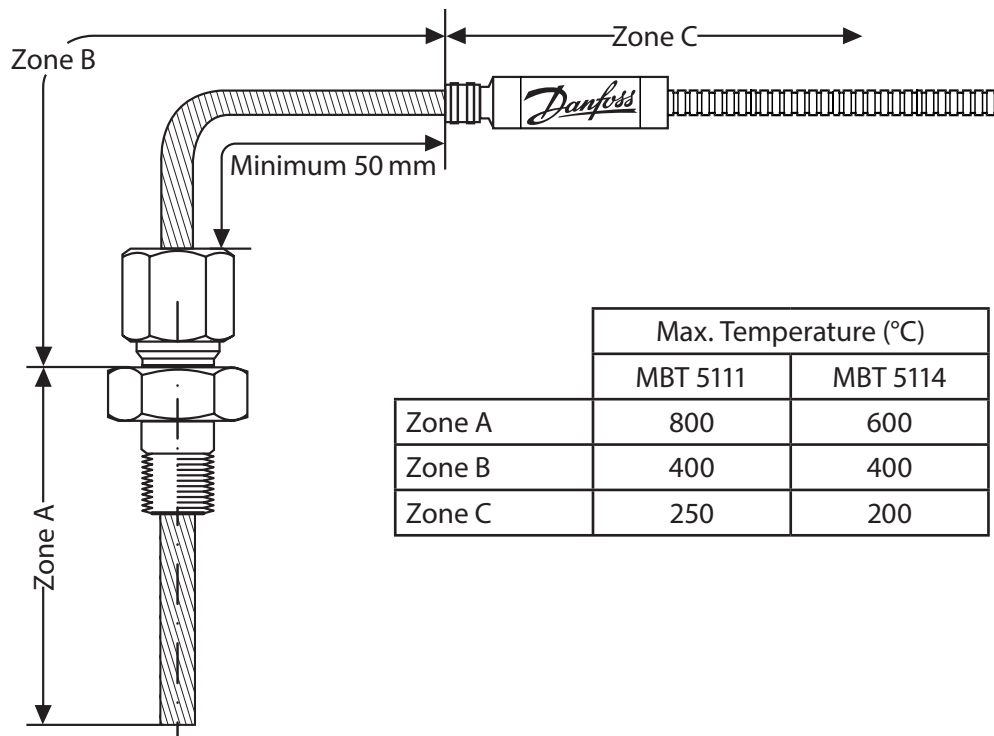

Mounting thread version

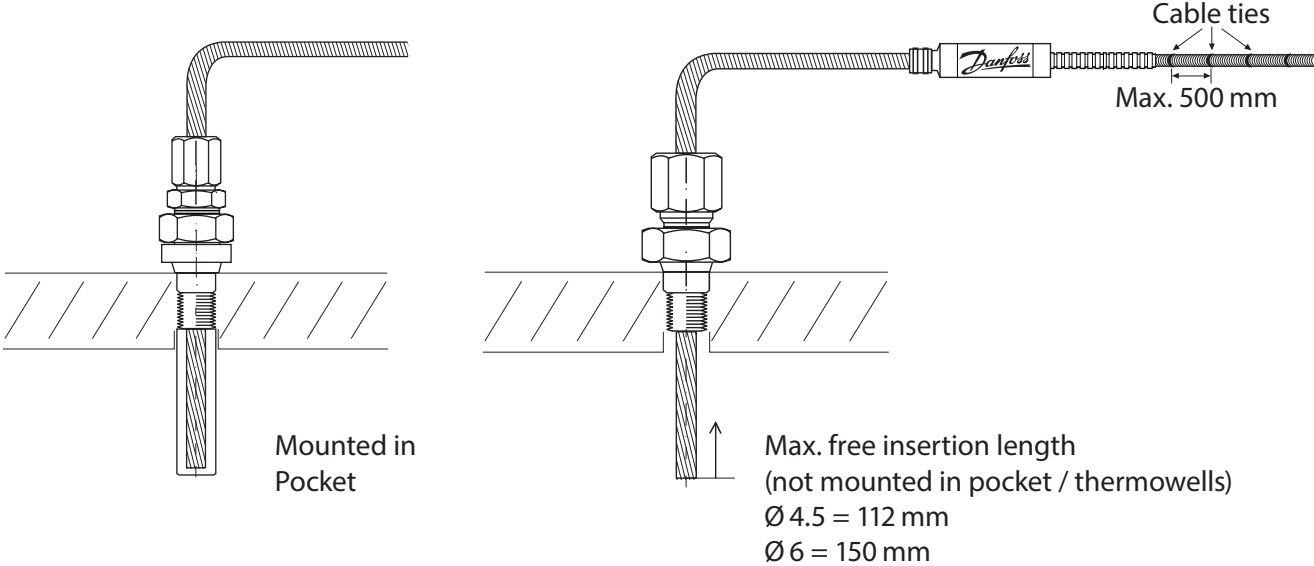

Mounting clamp version

