

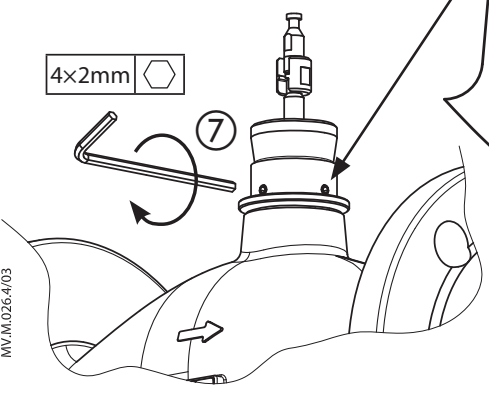


MV.M.028.1/02

MV.M.026.1/04

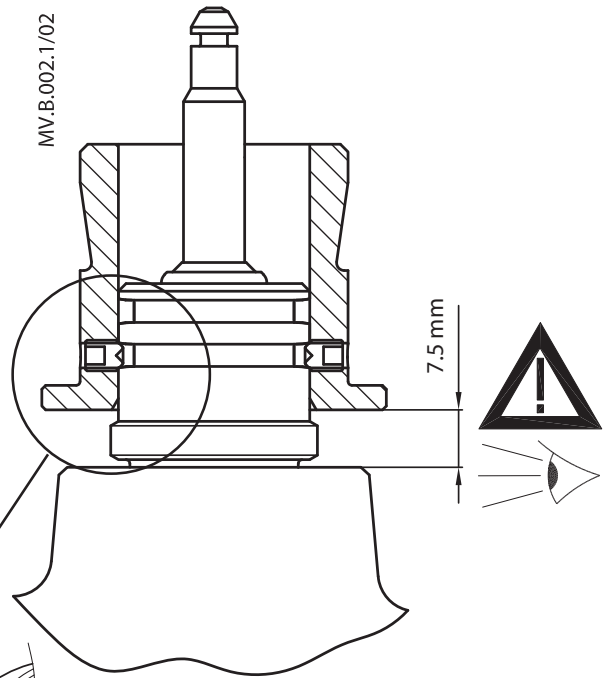

MV.M.026.4/03

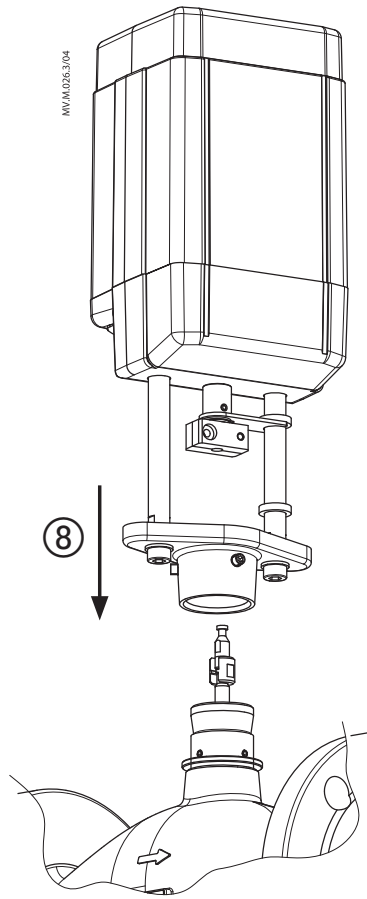

MV.M.026.3/04

Instructions

AMV(E) 55, 56
AMV 323, 423, 523

Danfoss