 


Data sheet

 
Spare parts and accessories

Solenoid valves, types EVRA, EVRAT, EVRS and EVRST


Pilot valves, types EVM (NC) and EVM (NO)

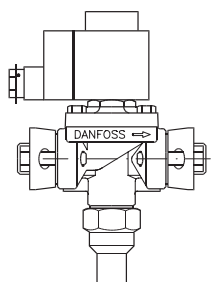

EVRA/EVRAT

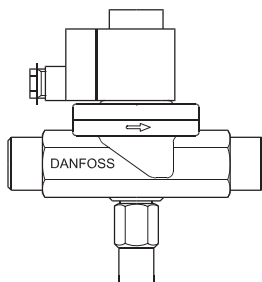

EVRS/EVRST

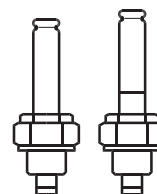 

EVM (NC/NO)

Valve type	Size	See details on page #	Code no.
Inspection kits			
EVRA	25	2	032F2326
EVRA	32/40	3	032F2327*

Repair kits			
EVRA / EVRS	3	4	032F2329
EVRA / EVRS	10	5	032F2330
EVRA / EVRS	15	6	032F2331
EVRA / EVRS	20	7	032F2332
EVRA / EVRS	25	8	032F2333
EVRA / EVRS	32	9	032F2334
EVRA / EVRS	40	10	032F2335
EVRAT / EVRST	10	11	032F2343
EVRAT / EVRST	15	12	032F2344
EVRAT / EVRST	20	13	032F2345
EVM NC		14	032F2324
EVM NO		15	032F2325

Overhaul kits (Previous valve design)			
EVRA	10	16	032F2202
EVRA	15	17	032F2209
EVRA	20	18	032F2210
EVRA	25	19	032F2218
EVRAT	10	20	032F2321
EVRAT	15	21	032F2322
EVRAT	20	22	032F2323

* Also applicable for AKVA 20

Valve type	Size	See details on page #	Code no.
Overhaul kits (Current valve design)			

EVRA / EVRS	3	23	032F2336
EVRA / EVRS	10	24	032F2337
EVRA / EVRS	15	25	032F2338
EVRA / EVRS	20	26	032F2339
EVRA / EVRS	25	27	032F2340
EVRA / EVRS	32	28	032F2341
EVRA / EVRS	40	29	032F2342
EVRAT / EVRST	10	30	032F2346
EVRAT / EVRST	15	31	032F2347
EVRAT / EVRST	20	32	032F2348

Valve housings			
EVRA/T housing for valves with manual opener	10	33	032F2230
EVRA/T housing for valves without manual opener	10	33	032F2231
EVRA/T housing for valves with manual opener	15	33	032F2232
EVRA/T housing for valves with manual opener	20	33	032F2233

Inspection kits:

Contain all gaskets, O-rings and aluminium rings belonging to 1 valve size.
For detailed content, see specific pages mentioned above.

Repair kits:

Contain all gaskets, O-rings and aluminium rings belonging to 1 valve size,
armature, diaphragm, piston and piston ring.
For detailed content, see specific pages mentioned above.


Overhaul kits:

Contain all gaskets, O-rings and aluminium rings belonging to 1 valve size
and parts that could be damaged or worn out.
For detailed content, see specific pages mentioned above.

Valve housing kits:

Include housing and flange gaskets only. Manual opener parts are not included.


Inspection kit | Code number 032F2326 Solenoid valve, type EVRA, size 25

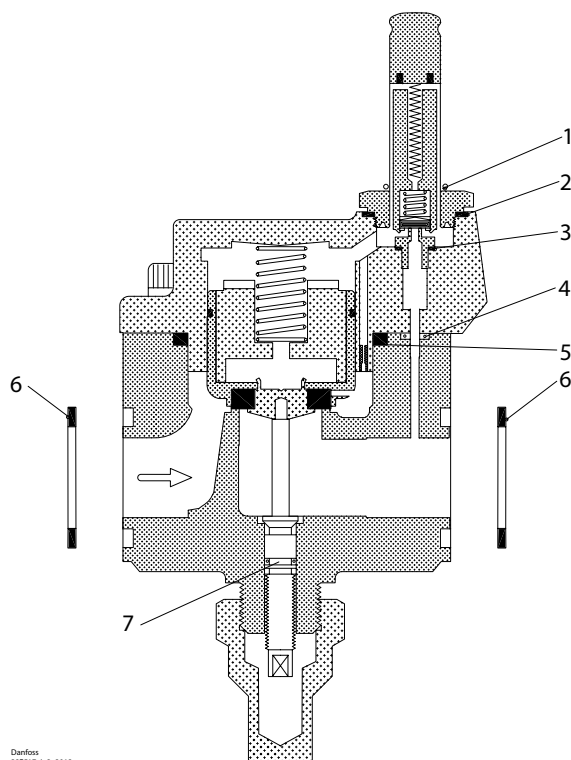 

Danfoss
32F517_1_2_2012

1 $\varnothing 14 \text{ mm}$ $\varnothing 0.56''$ Total no. = 1	2 = Alu. $\varnothing 27 \text{ mm}$ $\varnothing 1.04''$ Total no. = 1	3 = Alu. $\varnothing 10 \text{ mm}$ $\varnothing 0.40''$ Total no. = 1	4 $\varnothing 6.07 \text{ mm}$ $\varnothing 0.25''$ Total no. = 1	5 = Rubber $\varnothing 66 \text{ mm}$ $\varnothing 2.60''$ Total no. = 1	6 = Fibre $\varnothing 39 \text{ mm}$ $\varnothing 1.53''$ Total no. = 2
7 $\varnothing 5.28 \text{ mm}$ $\varnothing 0.21''$ Total no. = 1					


Inspection kit | Code number 032F2327
Solenoid valve, type EVRA, size 32/40

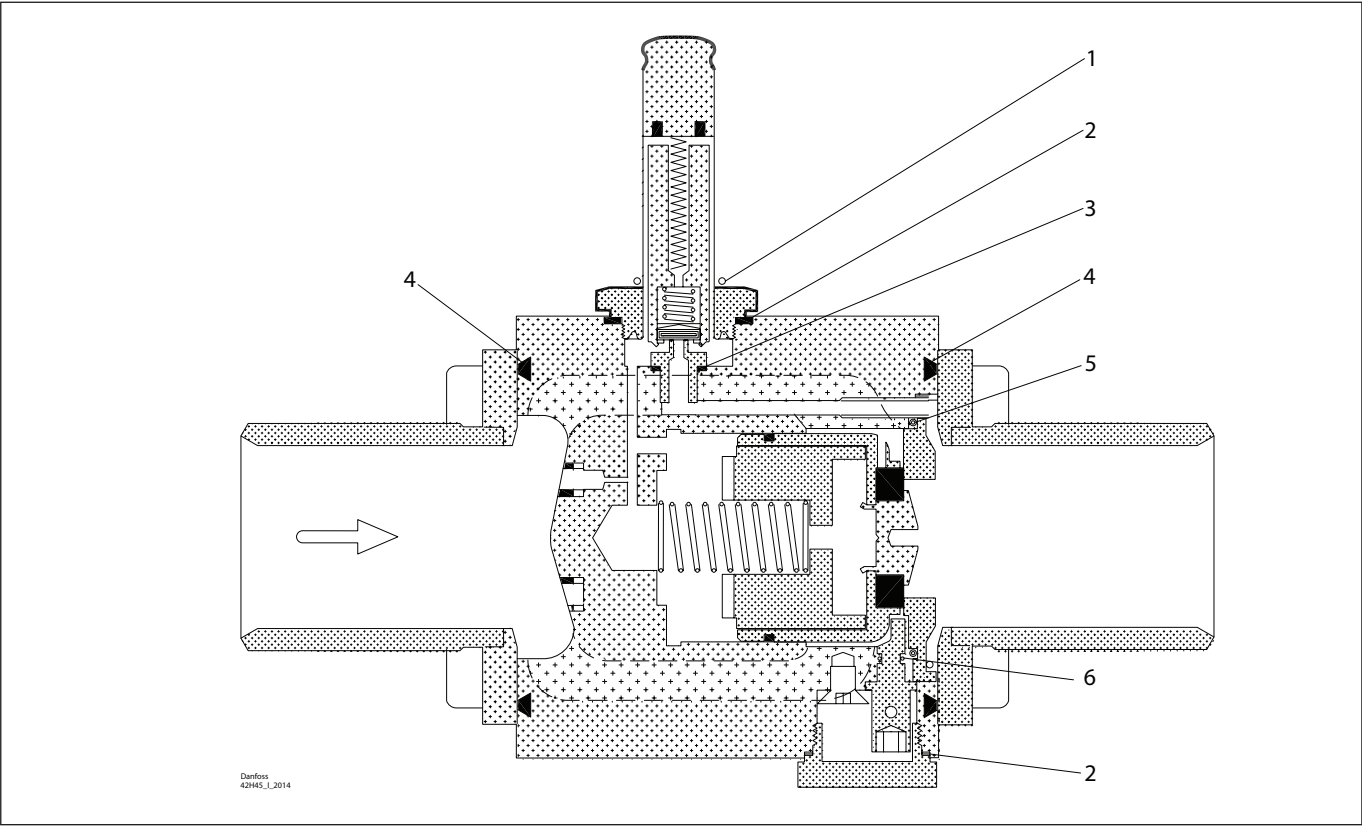 

1 Total no. = 1	2 = Alu. Total no. = 2	3 = Alu. Total no. = 1	4 Total no. = 2	5 Total no. = 1
6 Total no. = 1				

032F2327 can also be used for electric expansion valve, type AKVA 20


Repair kit | Code number 032F2329 Solenoid valves, types EVRA and EVRS, size 3

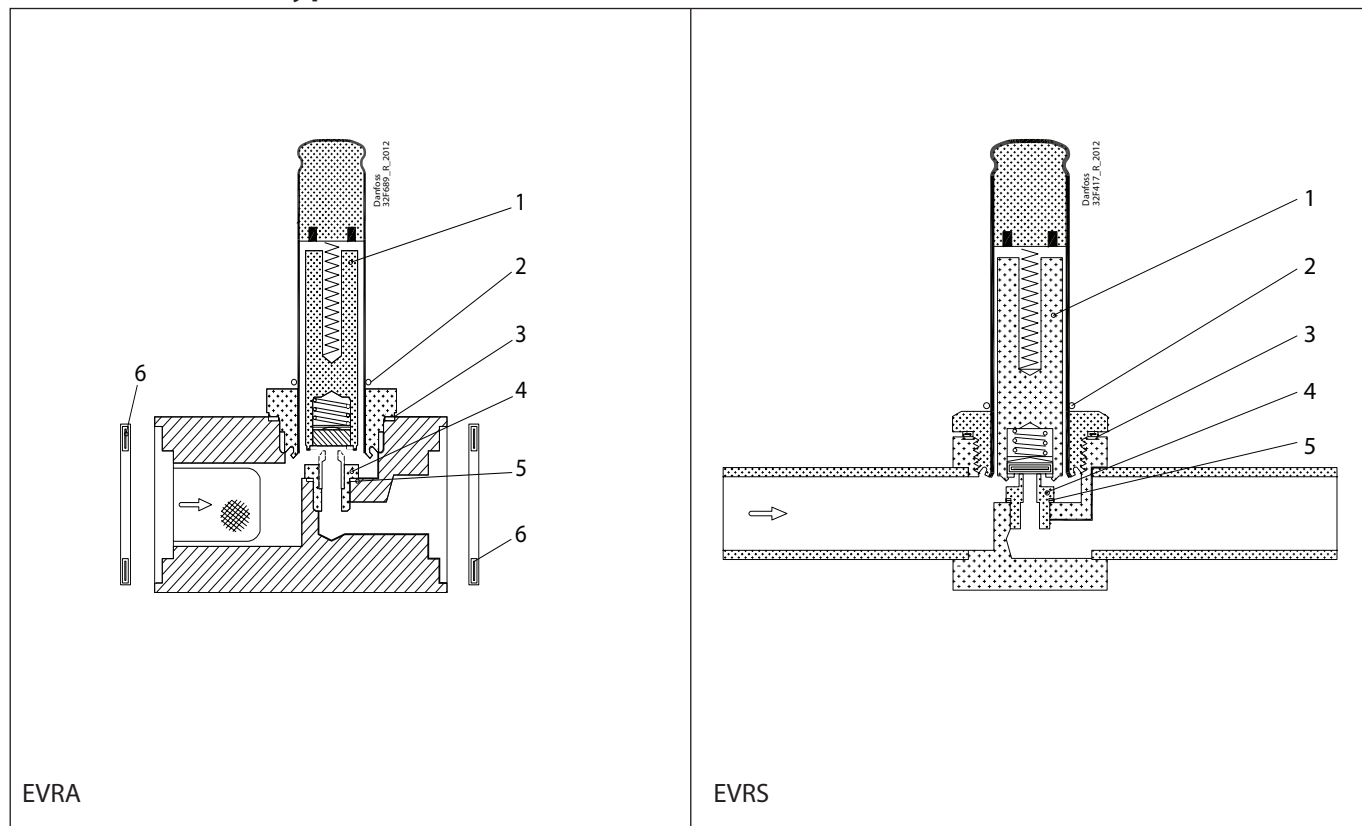 

1 For AC / DC Total no. = 1	2 Total no. = 1	3 — = Alu. Total no. = 1	4 Total no. = 1	5 — = Alu. Total no. = 1	6 — = Fibre Total no. = 2
--	--------------------------------------	--	--------------------------------------	--	---


Repair kit | Code number 032F2330

 Solenoid valves, types EVRA and EVRS, size 10

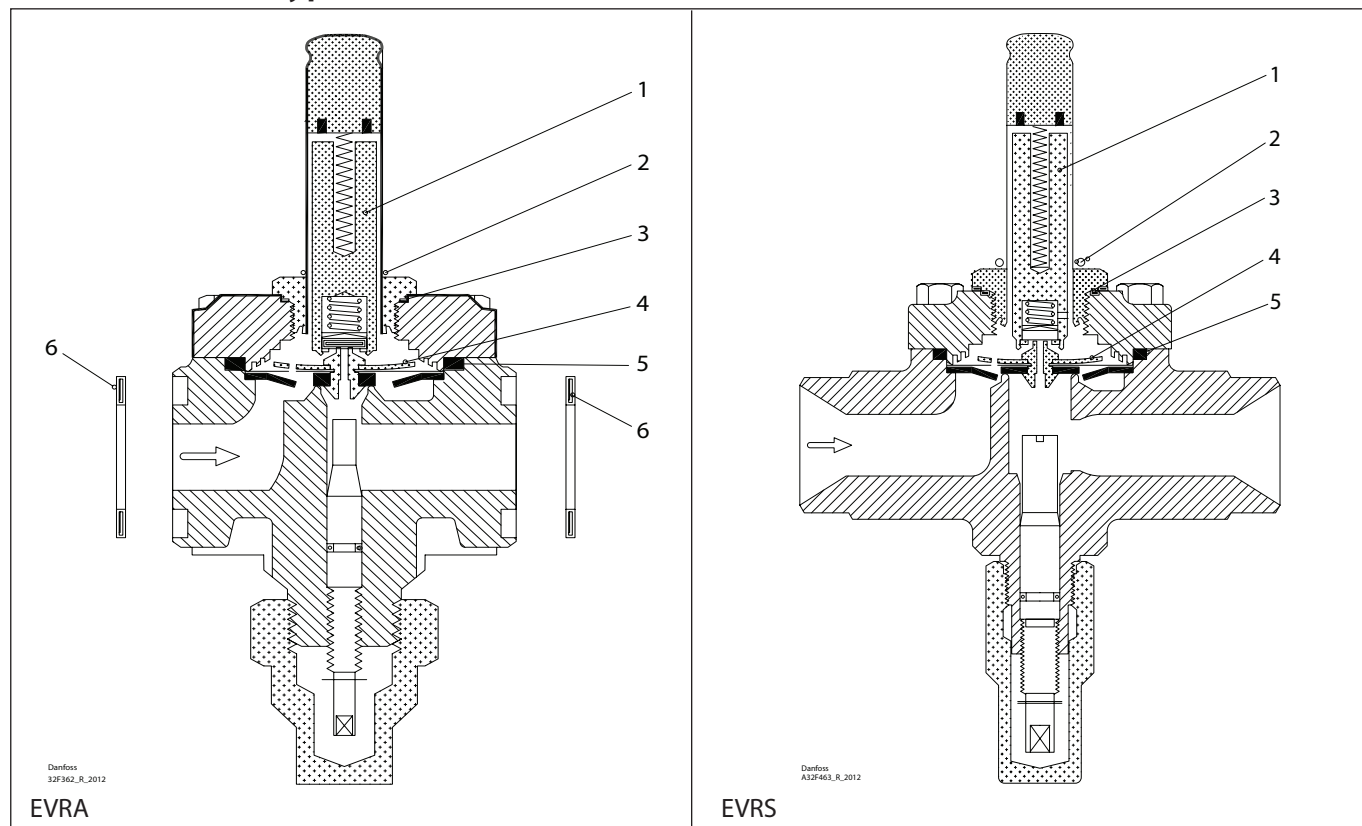

1 For AC / DC Total no. = 1	2 Total no. = 1	3 = Alu. Total no. = 1	4 Total no. = 1	5 = Rubber Total no. = 1	6 = Fibre Total no. = 2
--	--------------------------------------	---	--------------------------------------	---	--


Repair kit | Code number 032F2331 Solenoid valves, types EVRA and EVRS, size 15

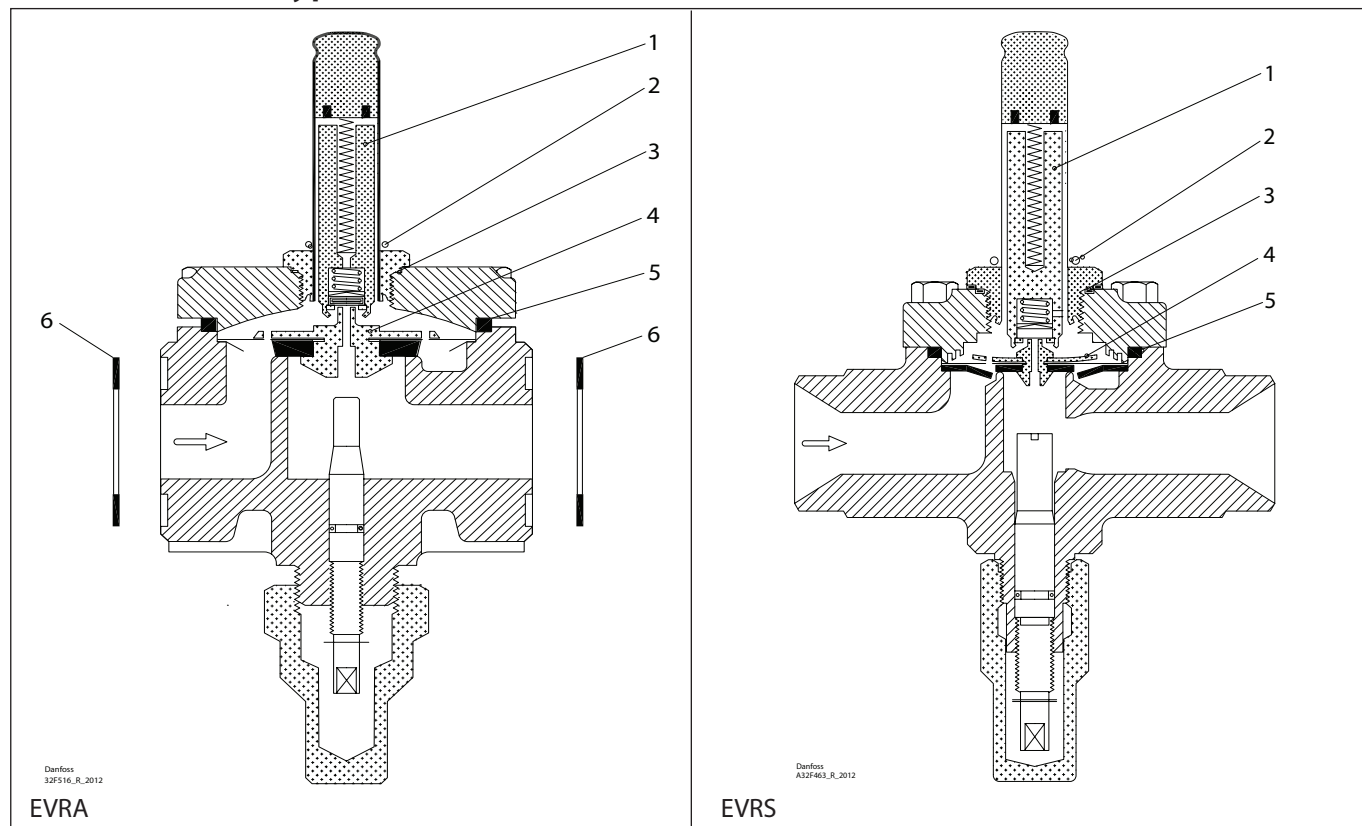 

1 For AC / DC Total no. = 1	2 Total no. = 1	3 = Alu. Total no. = 1	4 Total no. = 1	5 = Rubber Total no. = 1	6 = Fibre Total no. = 2
--	--------------------------------------	--	--------------------------------------	--	---


Repair kit | Code number 032F2332

 EVRA and EVRS, size 20

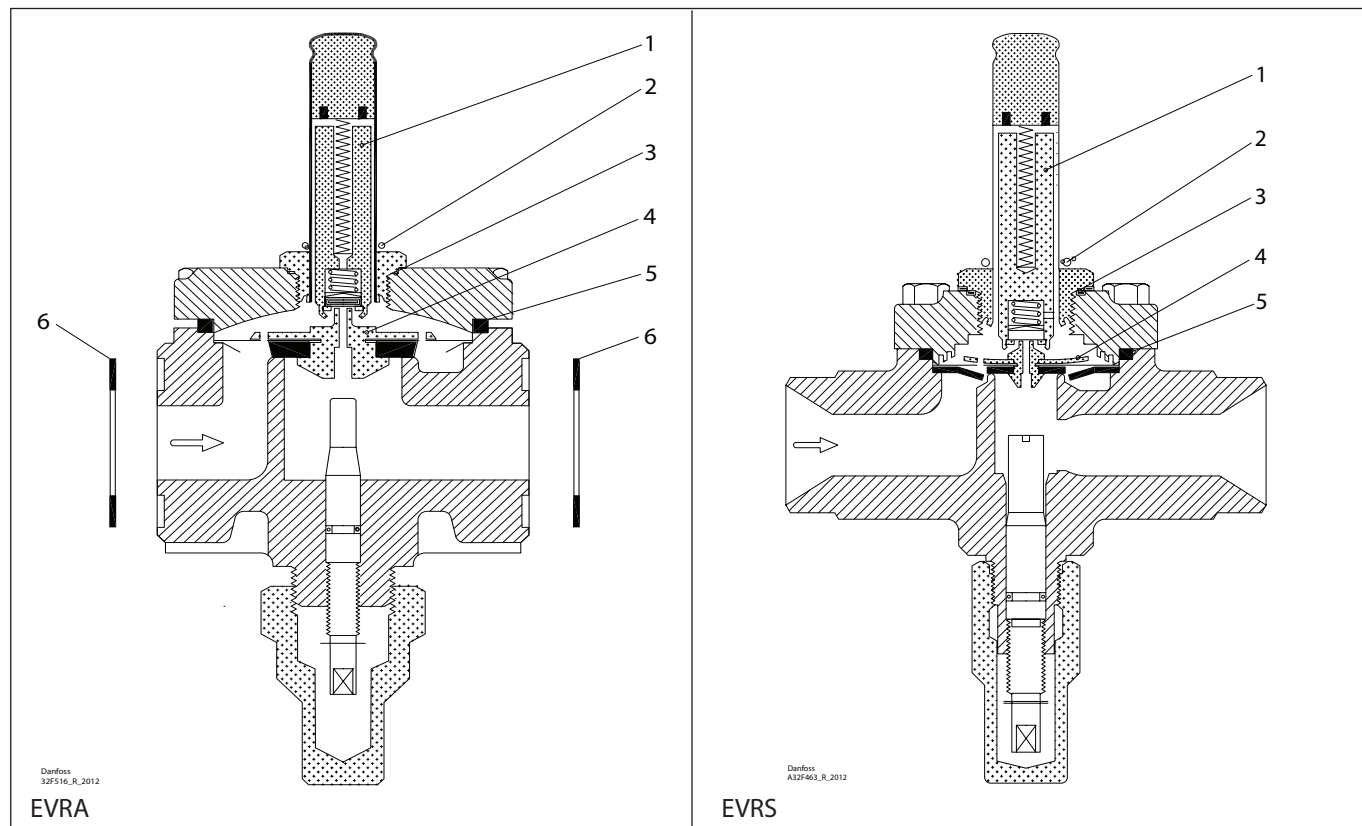


1 For AC / DC Total no. = 1	2 Total no. = 1	3 = Alu. Total no. = 1	4 Total no. = 1	5 = Rubber Total no. = 1	6 = Fibre Total no. = 2
--	--------------------------------------	---	--------------------------------------	---	--

Repair kit | Code number 032F2333 Solenoid valve, type EVRA, size 25

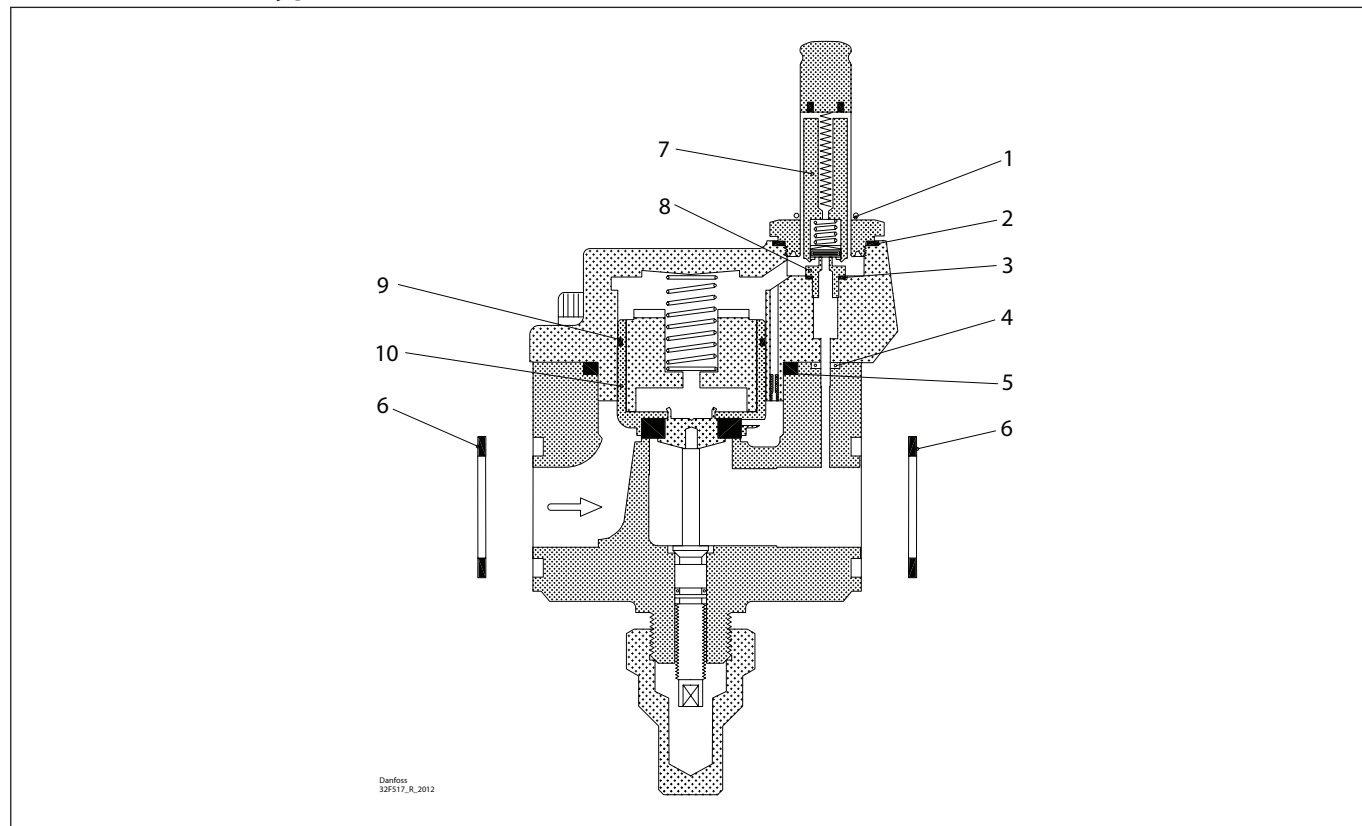 


1 Total no. = 1	2 Total no. = 1	3 Total no. = 1	4 Total no. = 1	5 Total no. = 1
6 Total no. = 2	7 Total no. = 1	8 Total no. = 1	9 Total no. = 1	10 Total no. = 1

Repair kit | Code number 032F2334 Solenoid valve, type EVRA, size 32

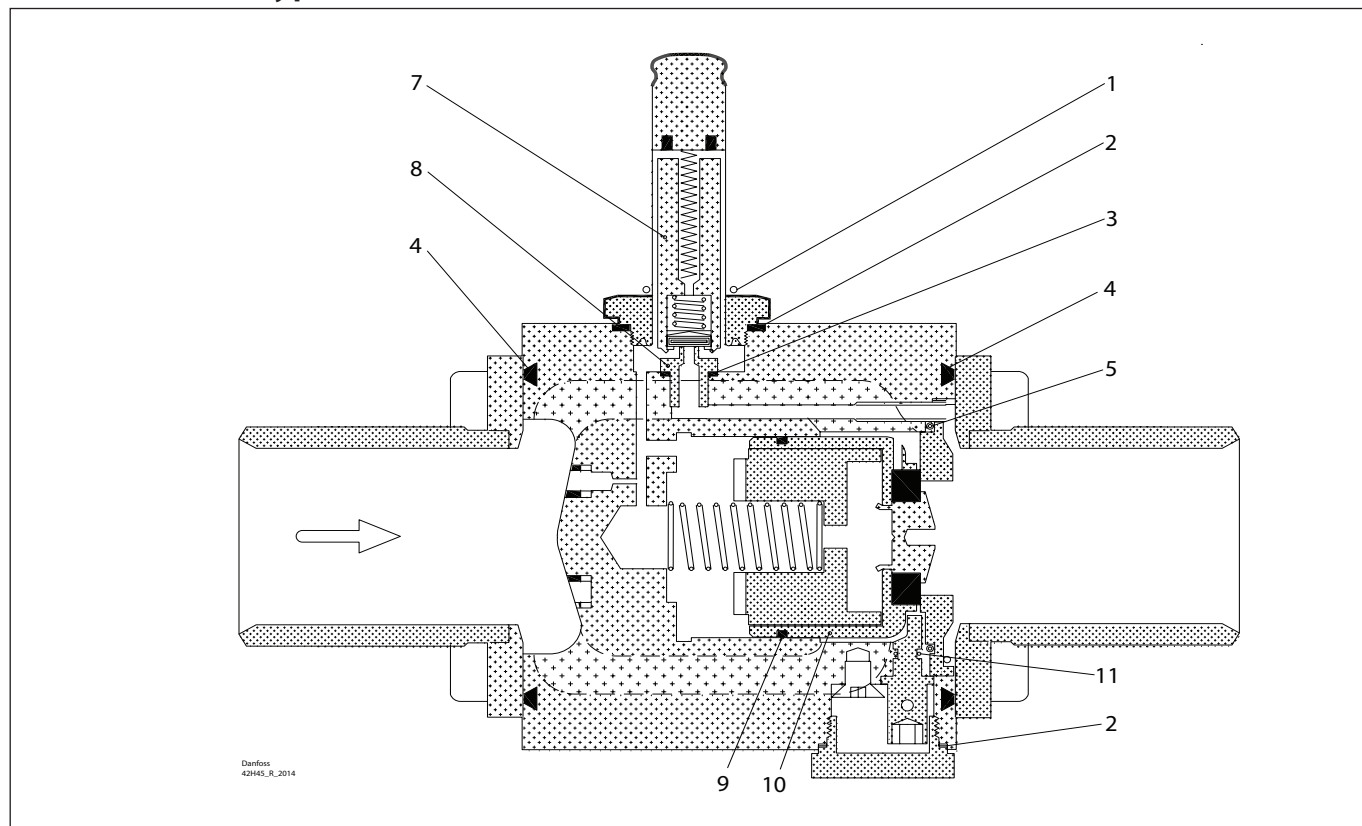 


1 Total no. = 1	2 Total no. = 2	3 Total no. = 1	4 Total no. = 2	5 Total no. = 1
7 Total no. = 1	8 Total no. = 1	9 Total no. = 1	10 Total no. = 1	11 Total no. = 1

Repair kit | Code number 032F2335 Solenoid valve, type EVRA, size 40

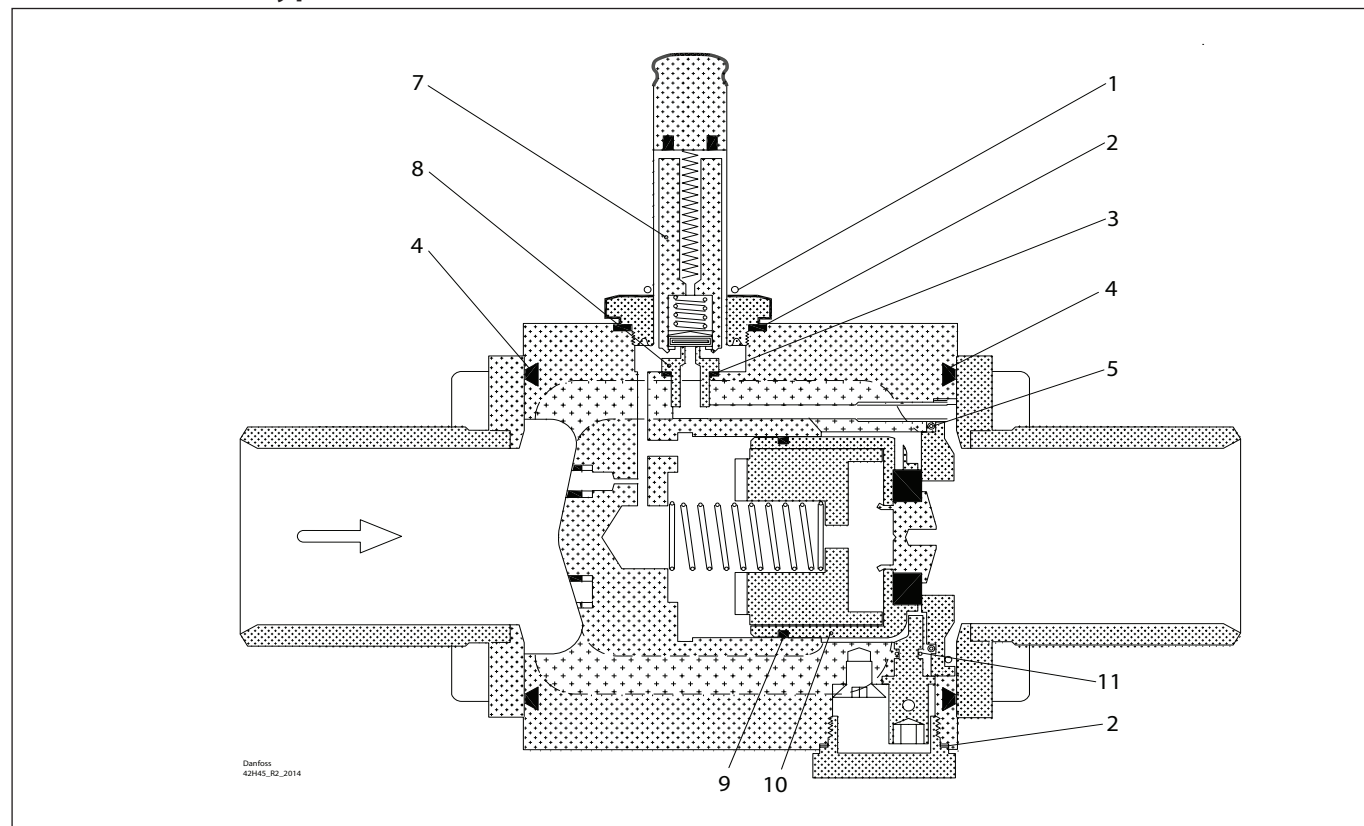 


1 Total no. = 1	2 Total no. = 2	3 Total no. = 1	4 Total no. = 2	5 Total no. = 1
7 Total no. = 1	8 Total no. = 1	9 Total no. = 1	10 Total no. = 1	11 Total no. = 1

Repair kit | Code number 032F234335 Solenoid valves, types EVRAT and EVRST, size 10

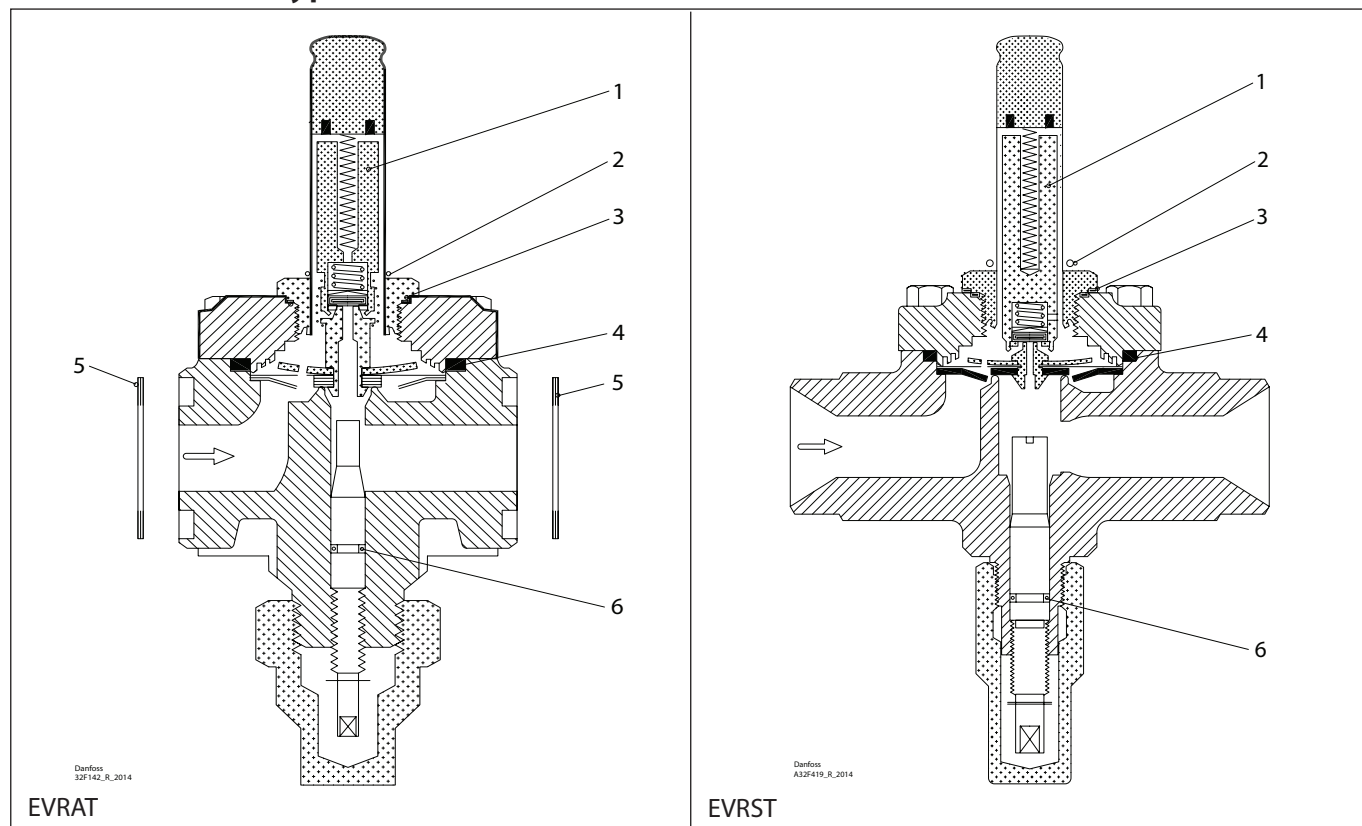 


1 Ø31 mm Ø1.22" Total no. = 1	2 Ø14 mm Ø0.56" Total no. = 1	3 Ø27 mm Ø1.04" Total no. = 1	4 Ø49 mm Ø1.92" Total no. = 1	5 Ø32 mm Ø1.26" Total no. = 2
6 Ø5 mm Ø0.2" Total no. = 1				

Repair kit | Code number 032F2344 Solenoid valves, types EVRAT and EVRST, size 15

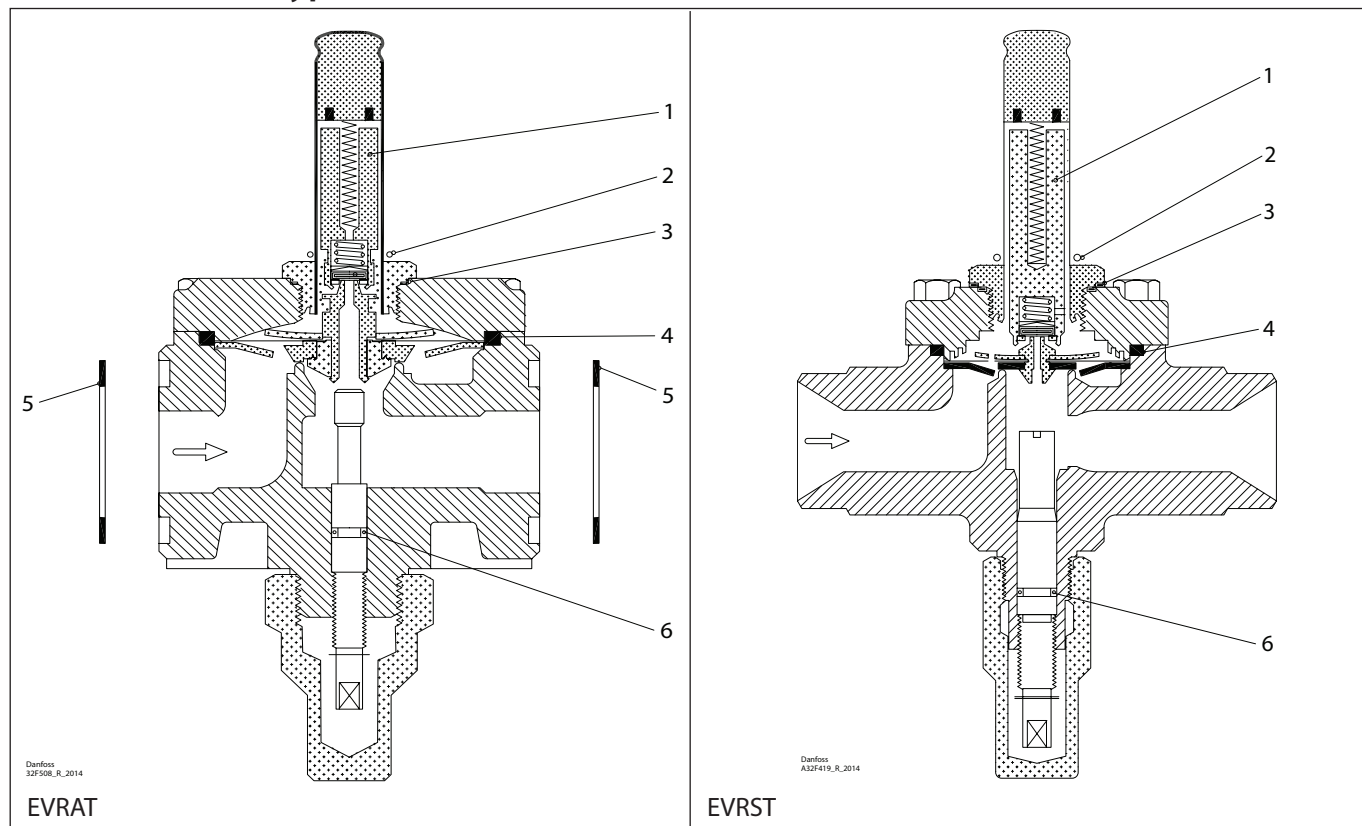 


1 Ø31 mm Ø1.22" Total no. = 1	2 Ø14 mm Ø0.56" Total no. = 1	3 Ø27 mm Ø1.04" Total no. = 1	4 Ø49 mm Ø1.92" Total no. = 1	5 Ø32 mm Ø1.26" Total no. = 2
6 Ø5 mm Ø0.2" Total no. = 1				

Repair kit | Code number 032F2345 Solenoid valves, types EVRAT and EVRST, size 20

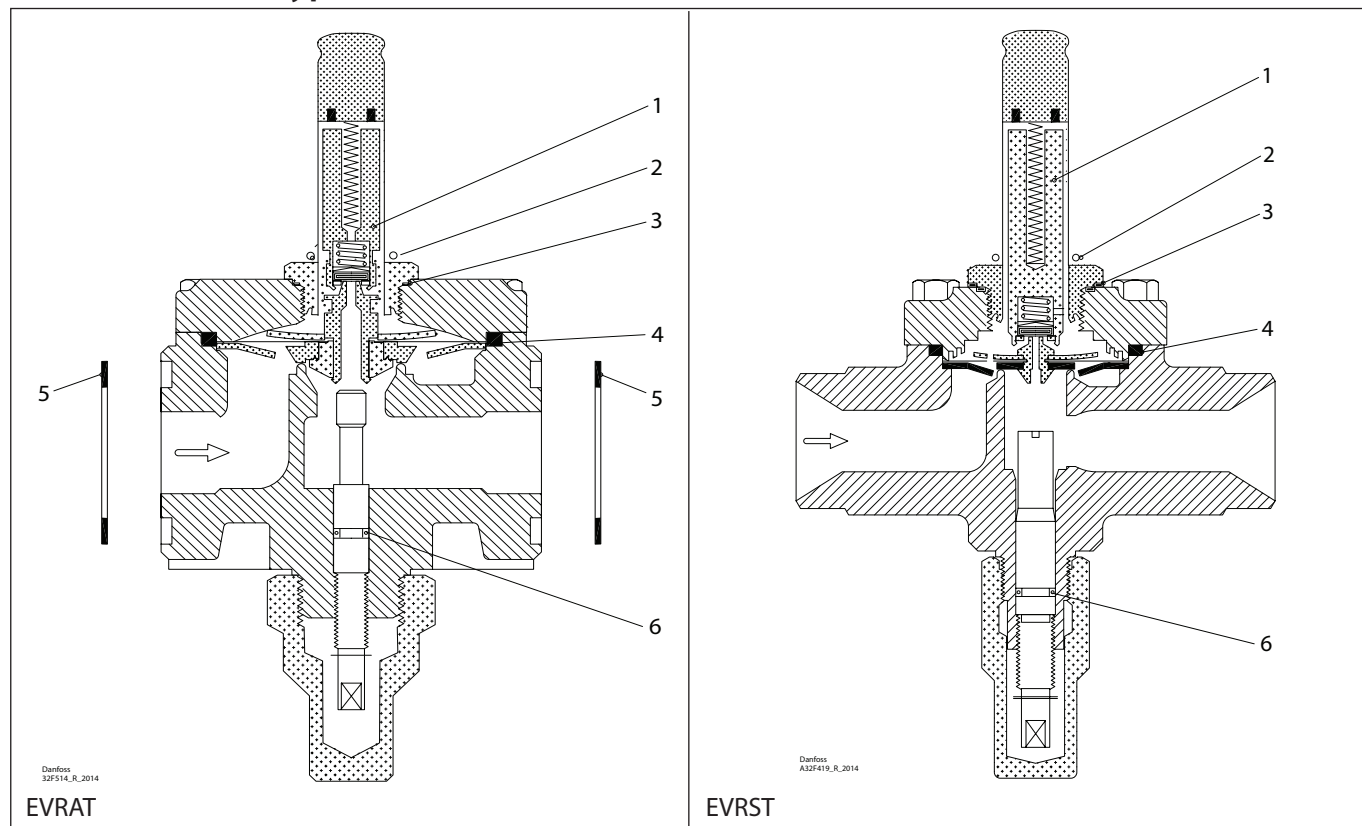 


1 Total no. = 1	2 Total no. = 1	3 — = Alu. Total no. = 1	4 — = Rubber Total no. = 1	5 — = Fibre Total no. = 2
6 Total no. = 1				

Repair kit | Code number 032F2324
Pilot valves, types EVM (NC)

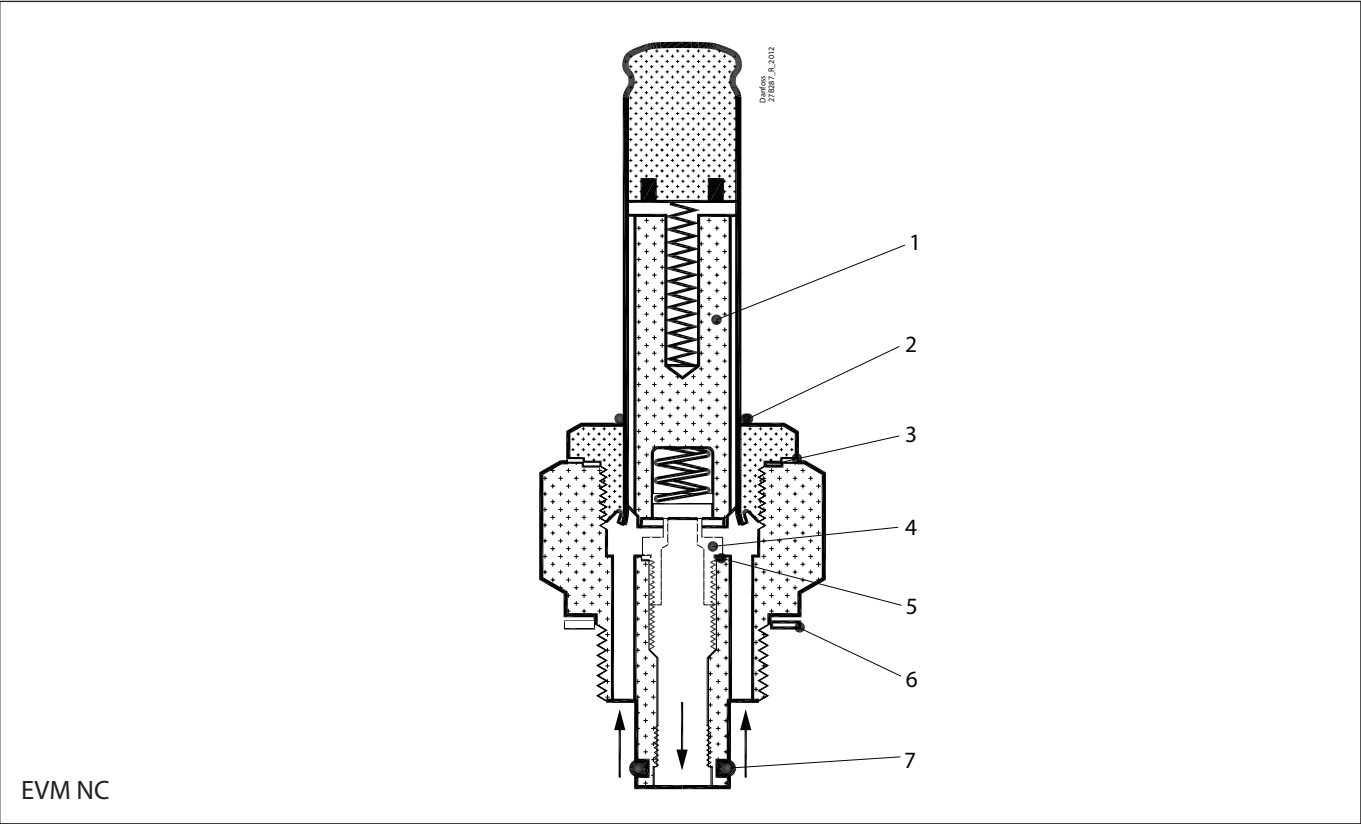 


1 Total no. = 1	2 Total no. = 1	3 = Alu. Total no. = 1	4 Total no. = 1	5 = Alu. Total no. = 1	6 = Fibre Total no. = 1
7 Total no. = 1					

Repair kit | Code number 032F2325
Pilot valves, types EVM (NO)

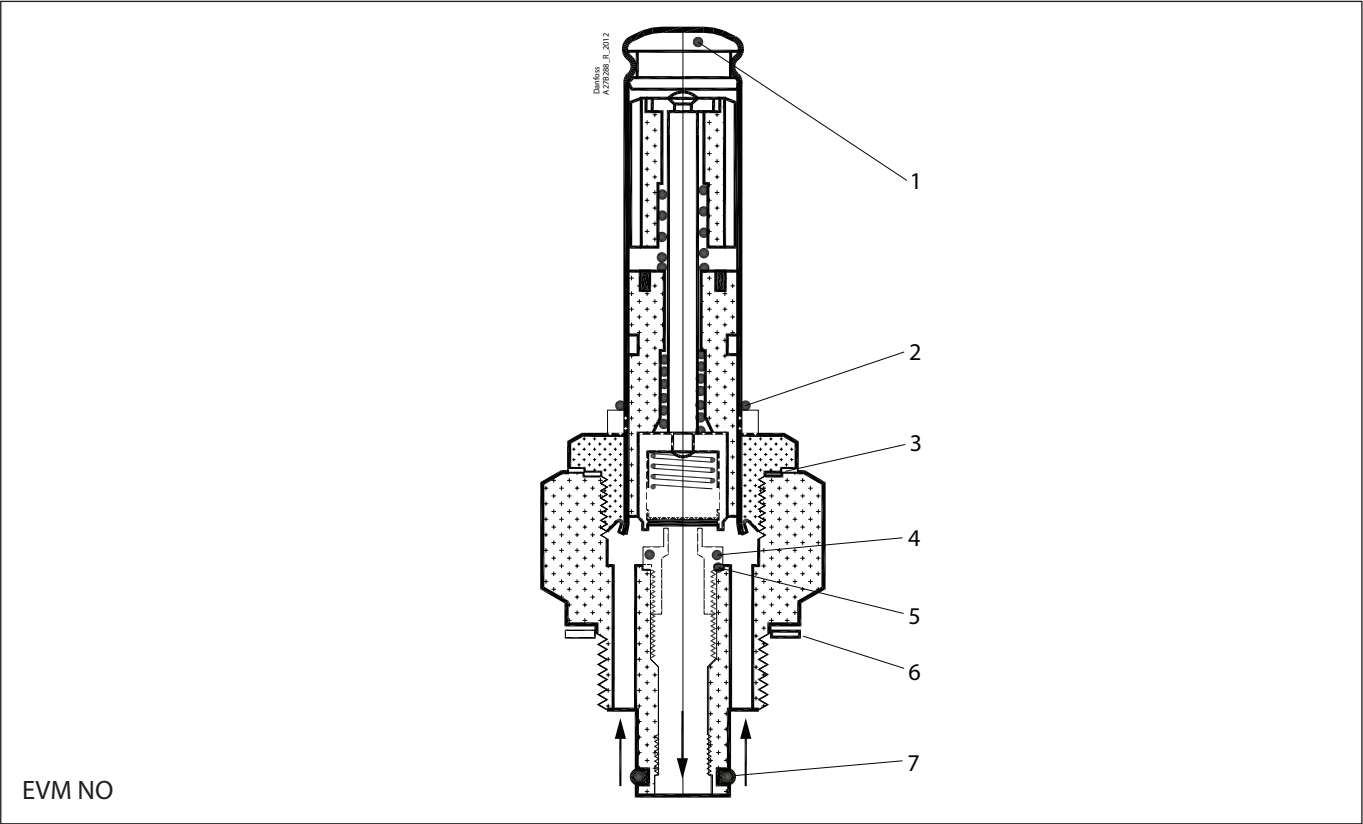 

1 Total no. = 1	2 Total no. = 1	3 Total no. = 1	4 Total no. = 1	5 Total no. = 1	6 Total no. = 2
7 Total no. = 1					


Overhaul kit | Code number 032F2202 Solenoid valve, type EVRA, size 10 (previous design)

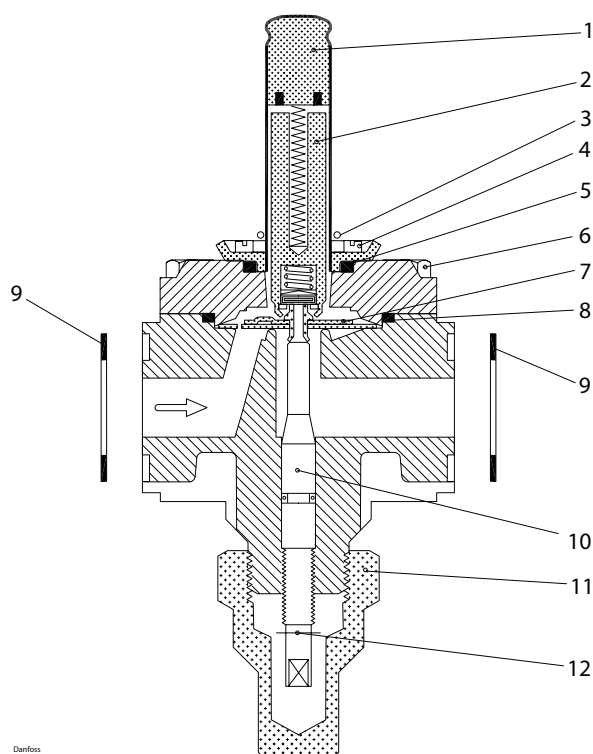 

Danfoss
327361_O_2011


1 Total no. = 1	2 For AC/DC Total no. = 1	3 Total no. = 1	4 Total no. = 4	5 Total no. = 1	6 Total no. = 4
7 Total no. = 1	8 Total no. = 1	9 Total no. = 2	10 Total no. = 1	11 Total no. = 1	12 Total no. = 1

Overhaul kit | Code number 032F2209 Solenoid valve, type EVRA, size 15 (previous design)

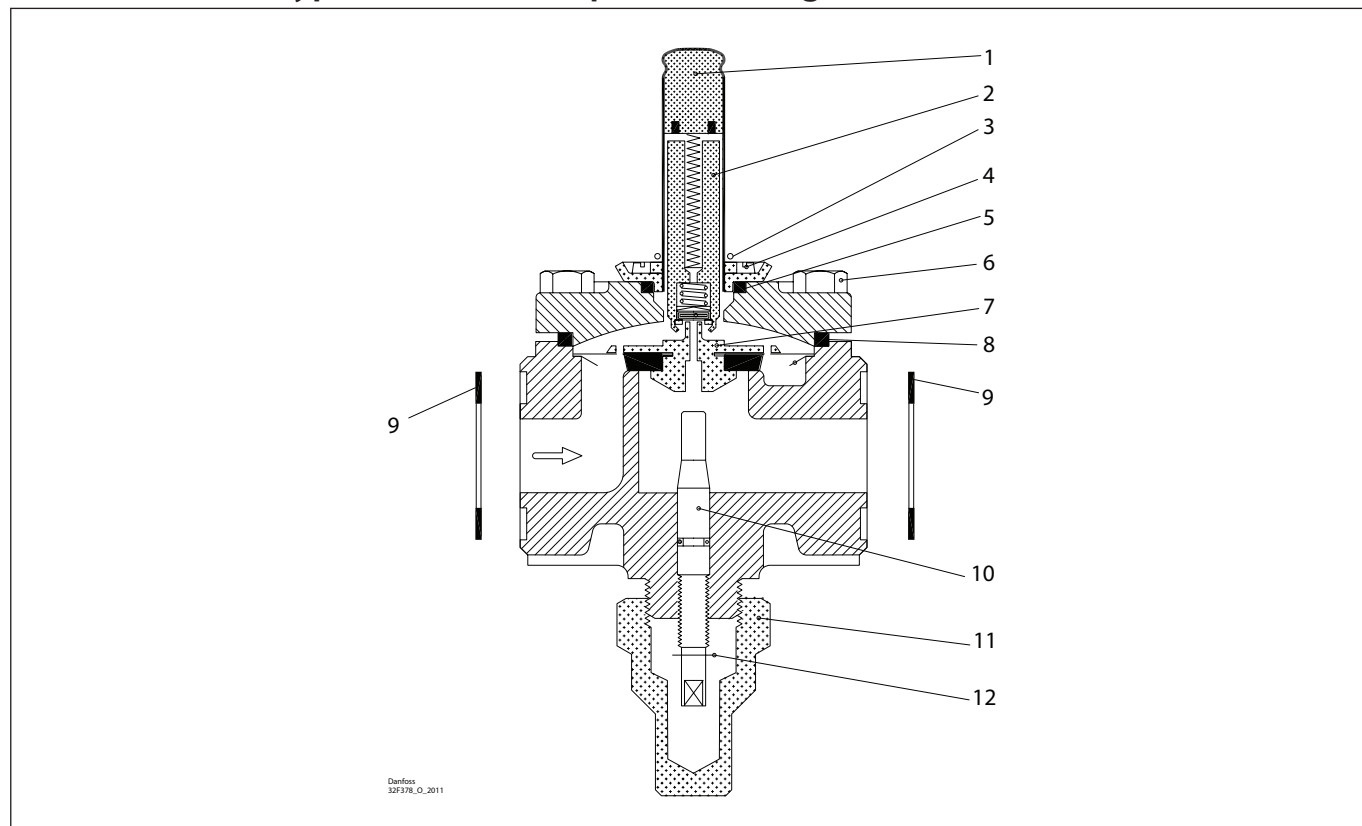 


1 Total no. = 1	2 For AC/DC Total no. = 1	3 Total no. = 1	4 Total no. = 4	5 Total no. = 1	6 Total no. = 4
7 Total no. = 1	8 Total no. = 1	9 Total no. = 2	10 Total no. = 1	11 Total no. = 1	12 Total no. = 1

Overhaul kit | Code number 032F2210 Solenoid valve, type EVRA, size 20 (previous design)

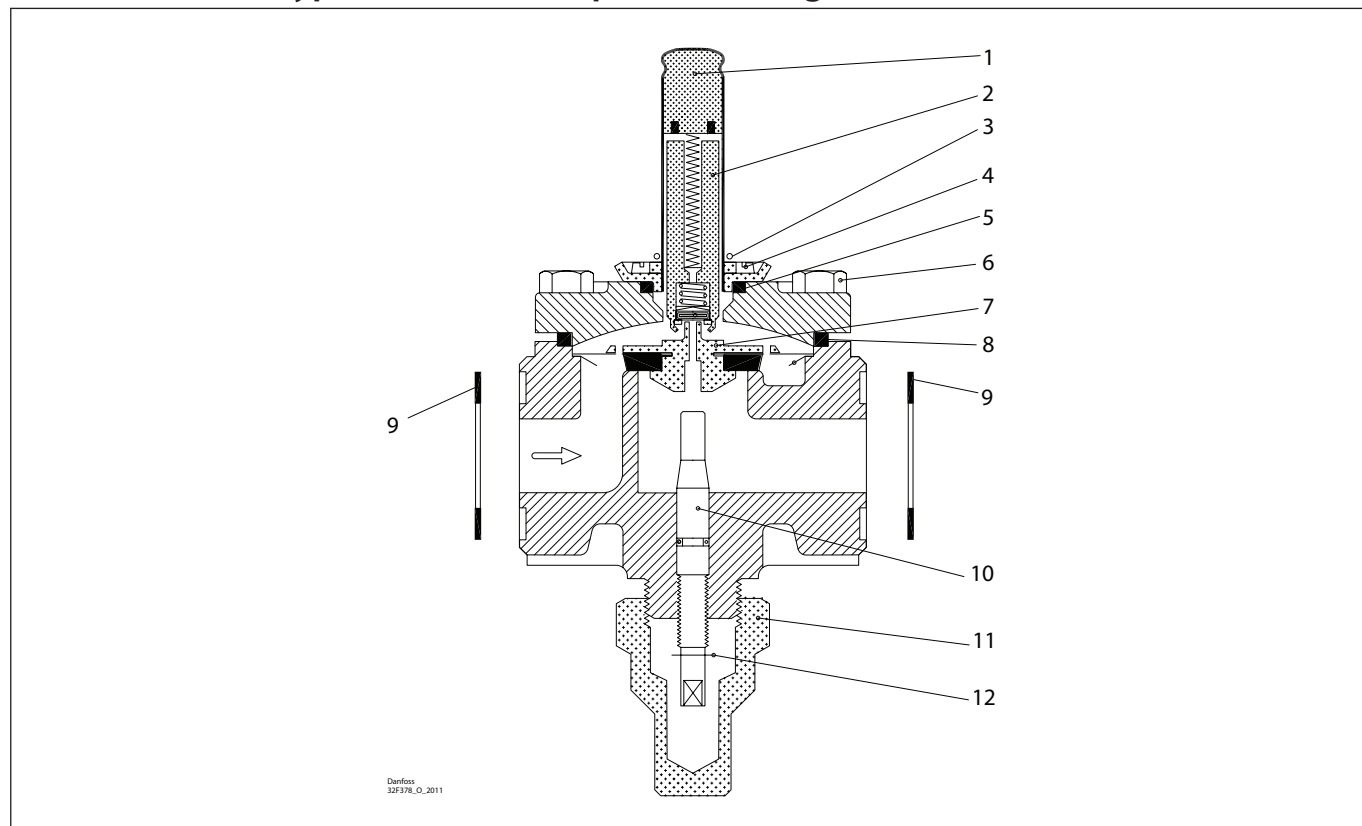 


1 Total no. = 1	2 For AC/DC Total no. = 1	3 Total no. = 1	4 Total no. = 4	5 Total no. = 1	6 Total no. = 4
7 Total no. = 1	8 Total no. = 1	9 Total no. = 2	10 Total no. = 1	11 Total no. = 1	12 Total no. = 1

Overhaul kit | Code number 032F2218 Solenoid valve, type EVRA, size 25 (previous design)

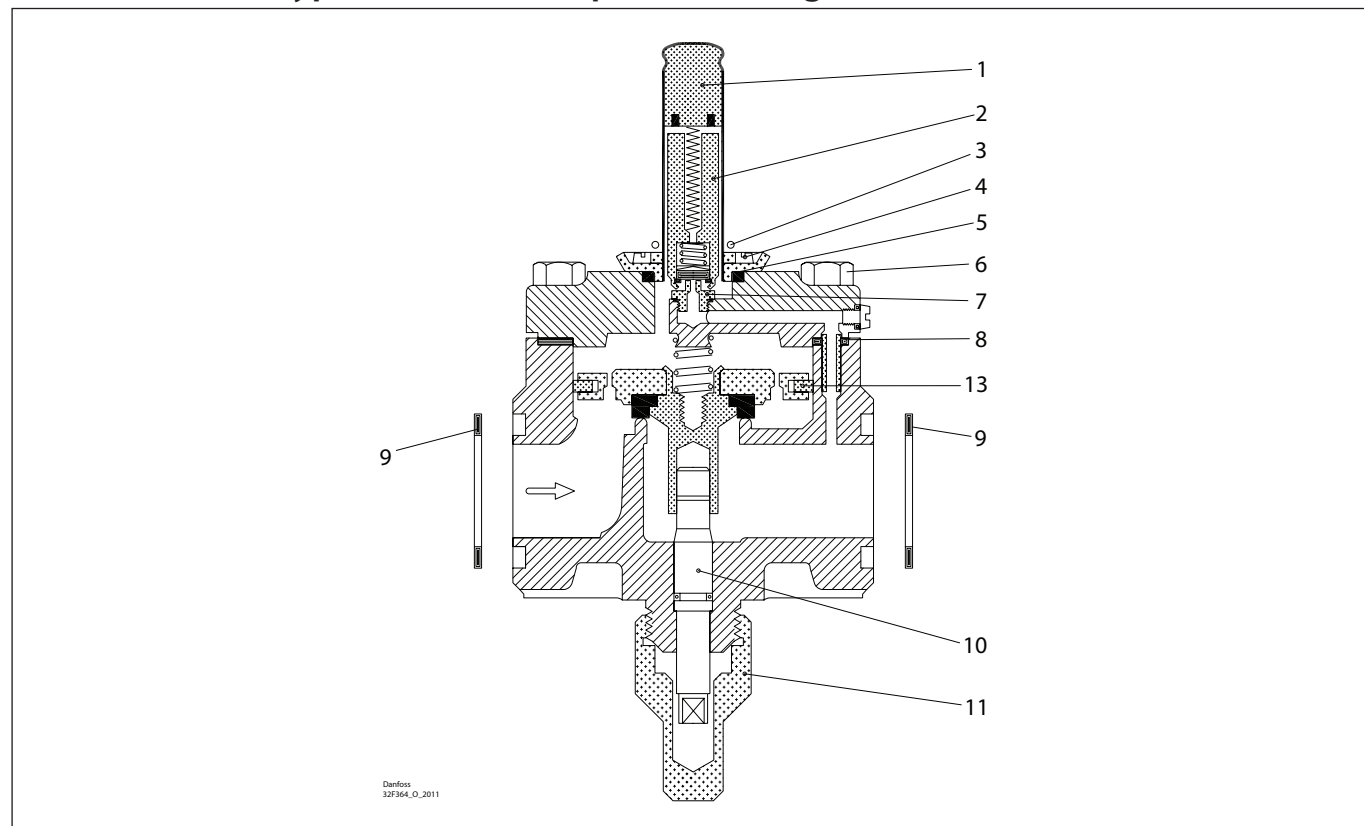 


1 Total no. = 1	2 For AC/DC Total no. = 1	3 Total no. = 1	4 Total no. = 4	5 Total no. = 1	6 Total no. = 4
7 Total no. = 1	8 Total no. = 1	9 Total no. = 2	10 Total no. = 1	11 Total no. = 1	13 Total no. = 1

Overhaul kit | Code number 032F2321 Solenoid valve, type EVRAT, size 10 (previous design)

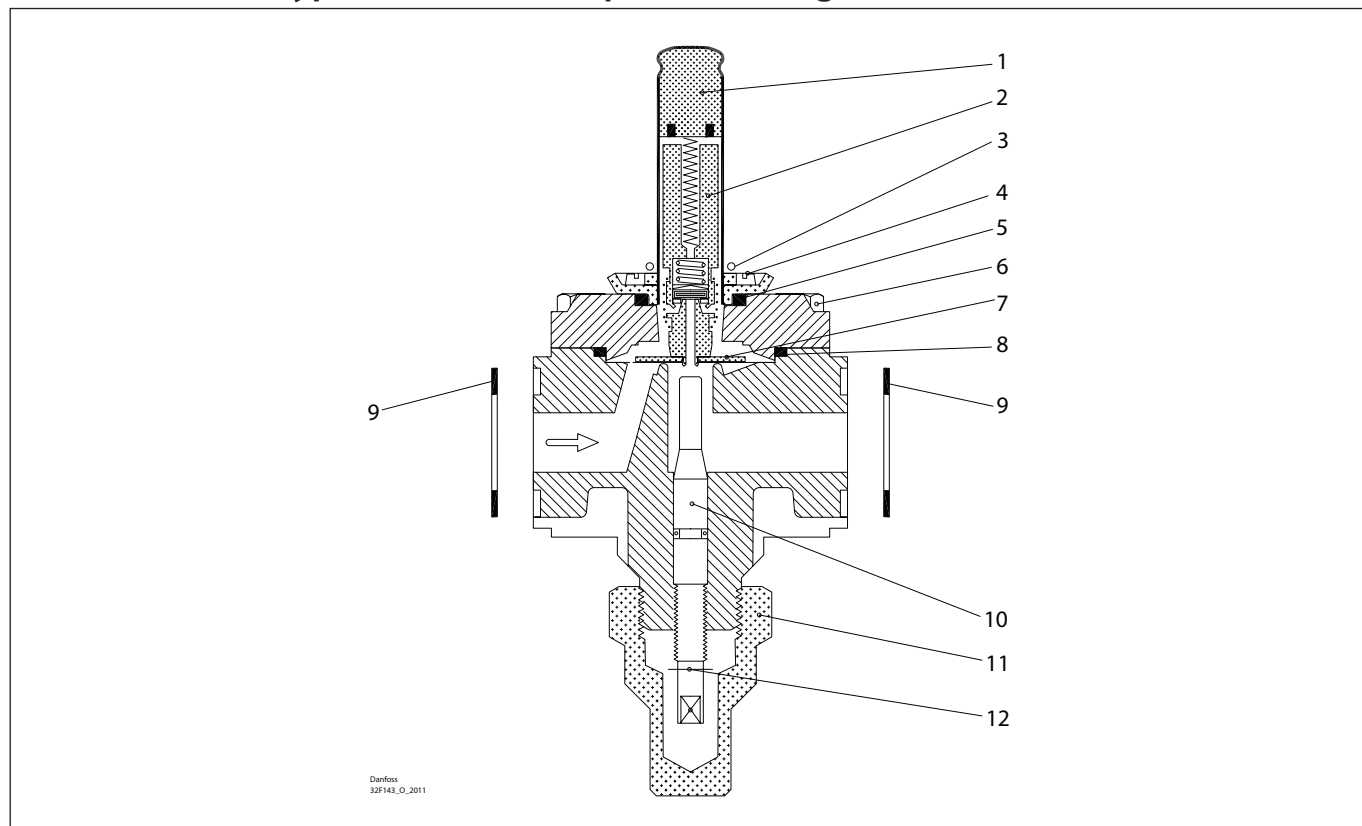 

1 Total no. = 1	2 Total no. = 1	3 Total no. = 1	4 Total no. = 4	5 Total no. = 1	6 Total no. = 4
7 Total no. = 1	8 Total no. = 1	9 Total no. = 2	10 Total no. = 1	11 Total no. = 1	12 Total no. = 1


Overhaul kit | Code number 032F2322 Solenoid valve, type EVRAT, size 15 (previous design)

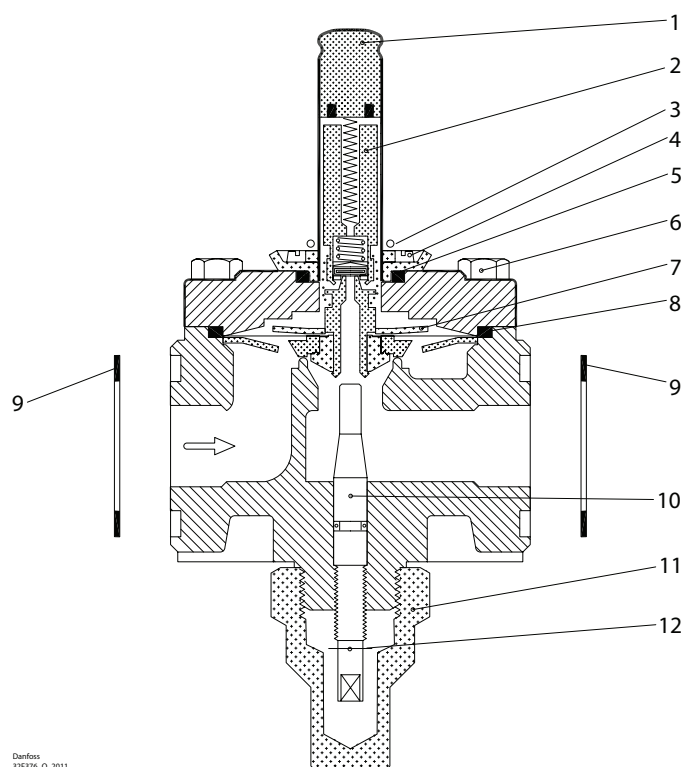 

Danfoss
32F376_O_2011

1 Total no. = 1	2 Total no. = 1	3 Total no. = 1	4 Total no. = 4	5 Total no. = 1	6 Total no. = 4
7 Total no. = 1	8 Total no. = 1	9 Total no. = 2	10 Total no. = 1	11 Total no. = 1	12 Total no. = 1


Overhaul kit | Code number 032F2323 Solenoid valve, type EVRAT, size 20 (previous design)

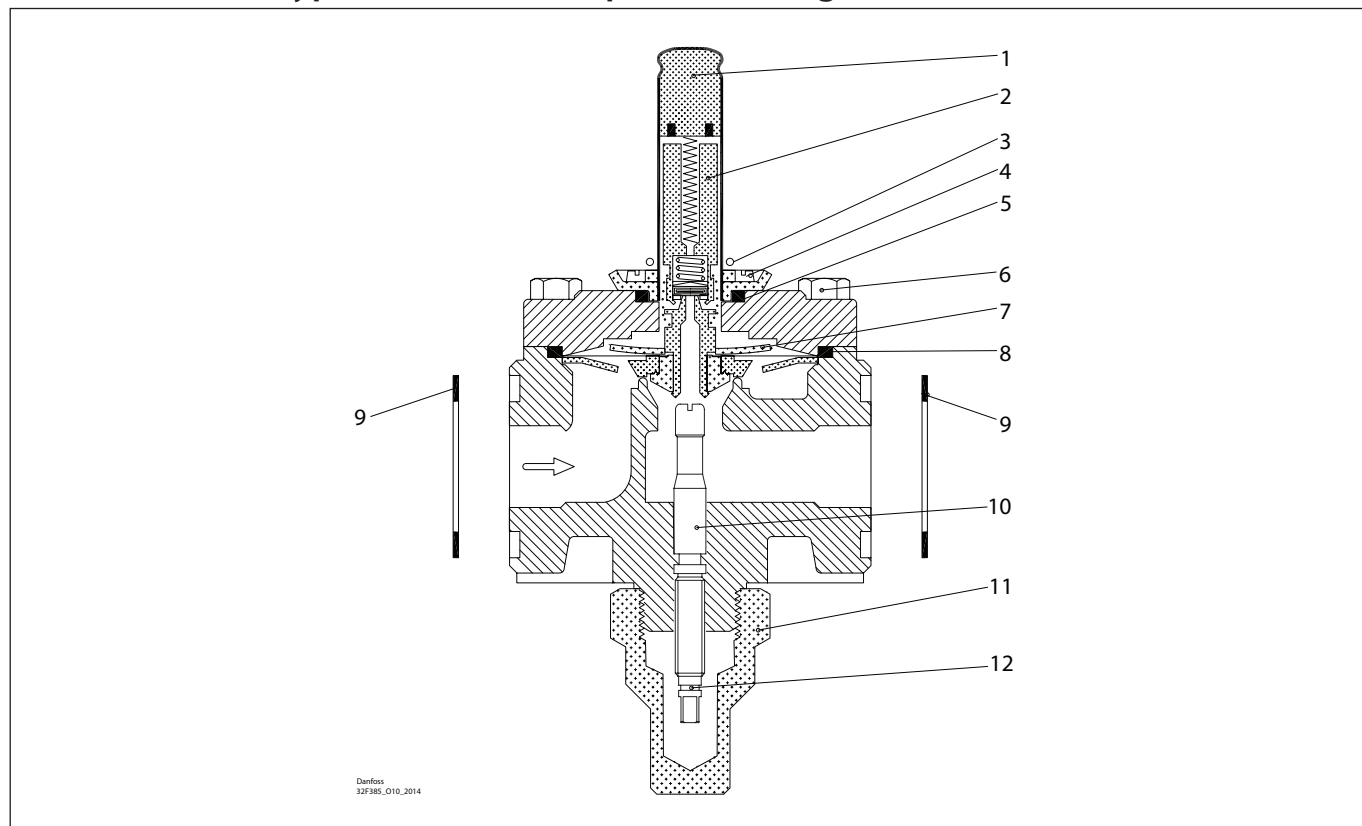 

1 Total no. = 1	2 Total no. = 1	3 Total no. = 1	4 Total no. = 4	5 Total no. = 1	6 Total no. = 4
7 Total no. = 1	8 Total no. = 1	9 Total no. = 2	10 Total no. = 1	11 Total no. = 1	12 Total no. = 1


Overhaul kit | Code number 032F2336

 Solenoid valves, types EVRA and EVRS, size 3

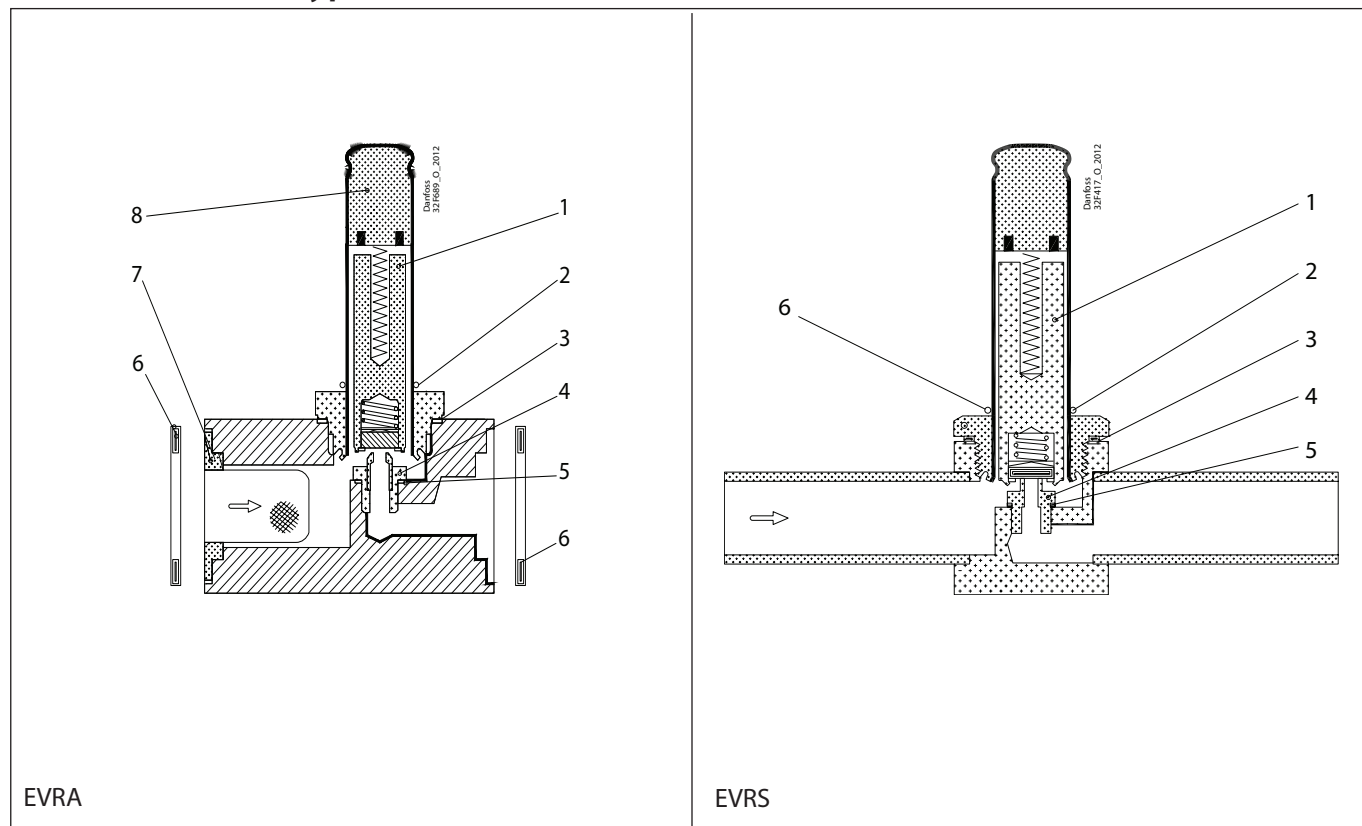


1 For AC / DC Total no. = 1	2 Total no. = 1	3 Total no. = 1	4 Total no. = 1	5 Total no. = 1	6 Total no. = 2
7 Total no. = 1	8 Total no. = 1				

Overhaul kit | Code number 032F2337 Solenoid valves, types EVRA and EVRS, size 10

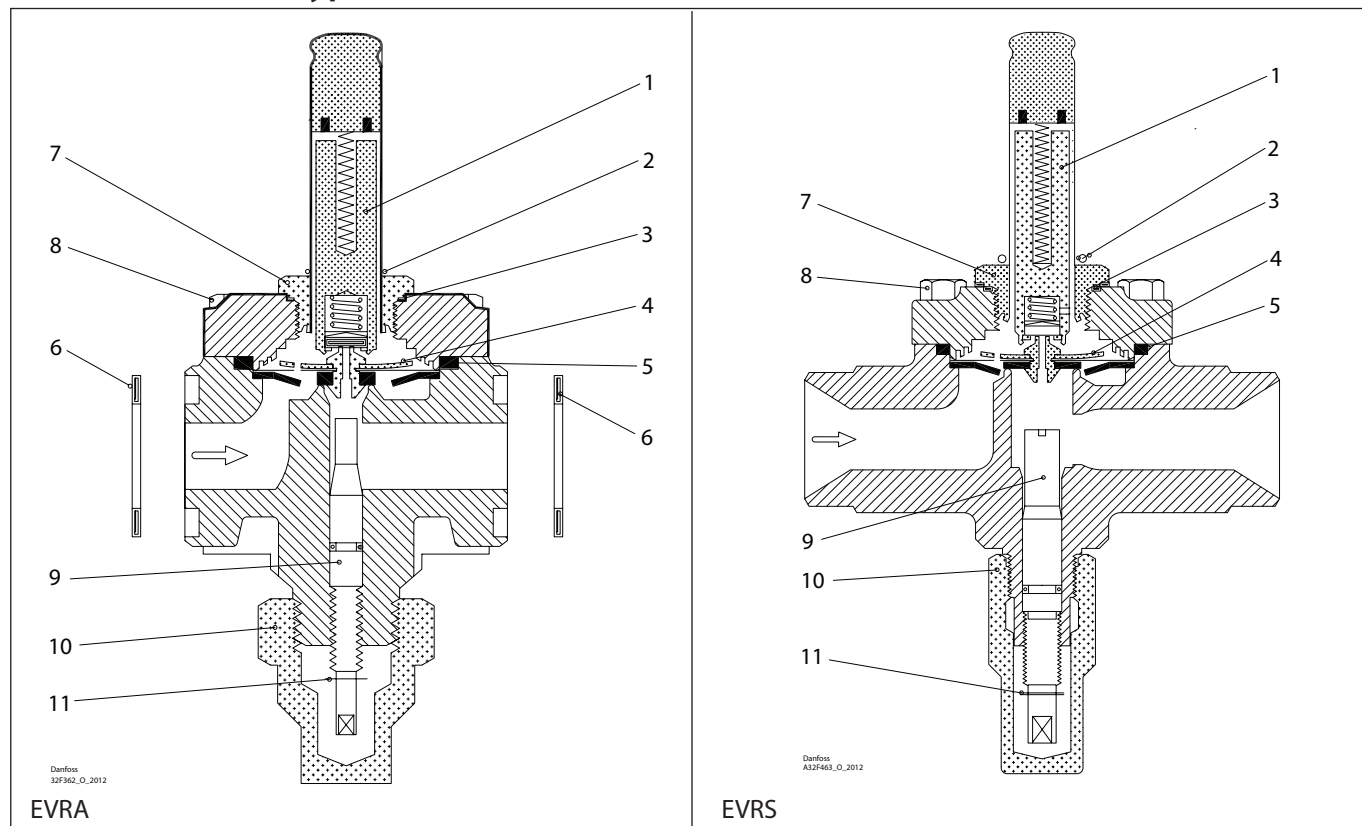 


1 For AC / DC Total no. = 1	2 Total no. = 1	3 = Alu. Total no. = 1	4 Total no. = 1	5 = Rubber Total no. = 1	6 = Fibre Total no. = 2
7 Total no. = 1	8 Total no. = 4	9 Total no. = 1	10 Total no. = 1	11 Total no. = 1	

Overhaul kit | Code number 032F2338 Solenoid valves, types EVRA and EVRS, size 15

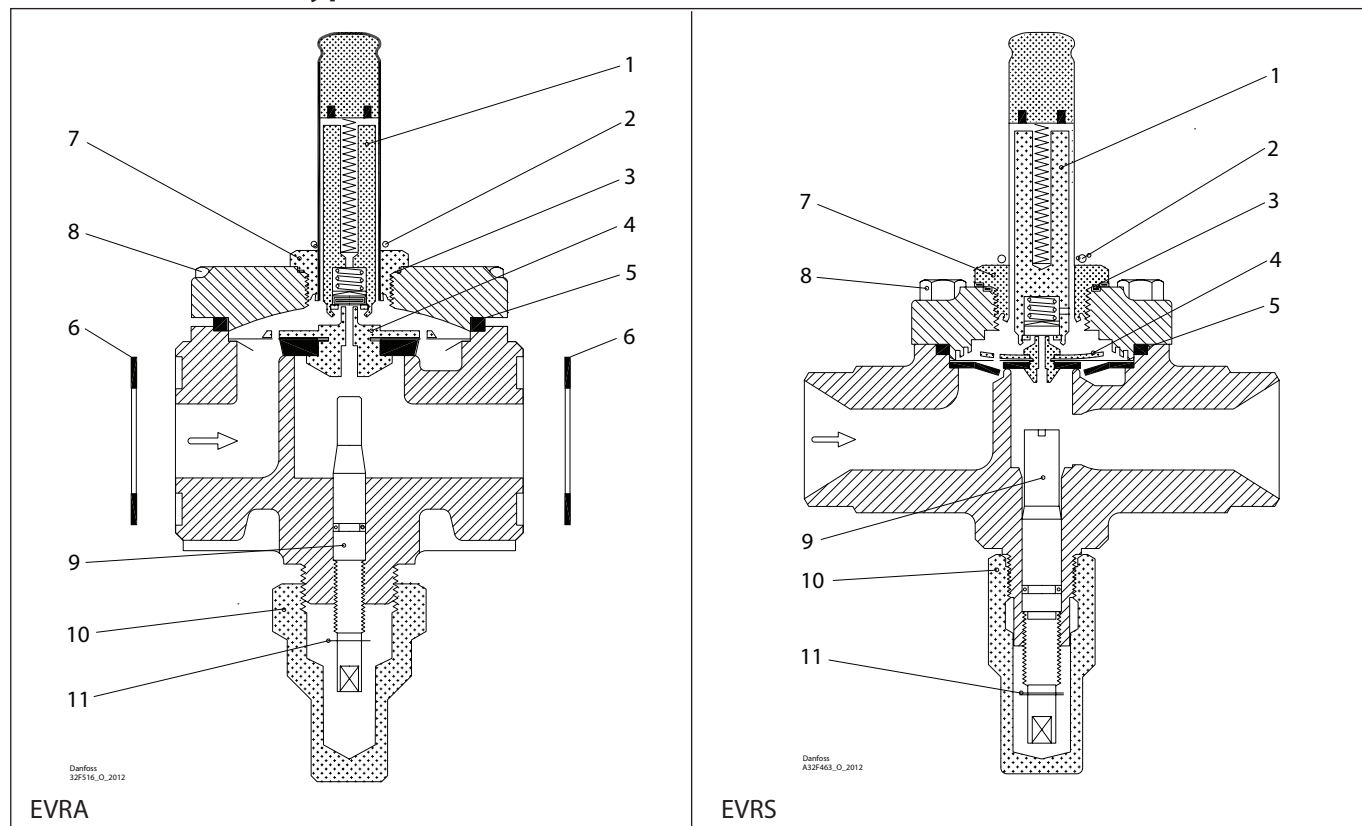 


1 For AC / DC Total no. = 1	2 Total no. = 1	3 = Alu. Total no. = 1	4 Total no. = 1	5 = Rubber Total no. = 1	6 = Fibre Total no. = 2
7 Total no. = 1	8 Total no. = 4	9 Total no. = 1	10 Total no. = 1	11 Total no. = 1	

Overhaul kit | Code number 032F2339 Solenoid valves, types EVRA and EVRS, size 20

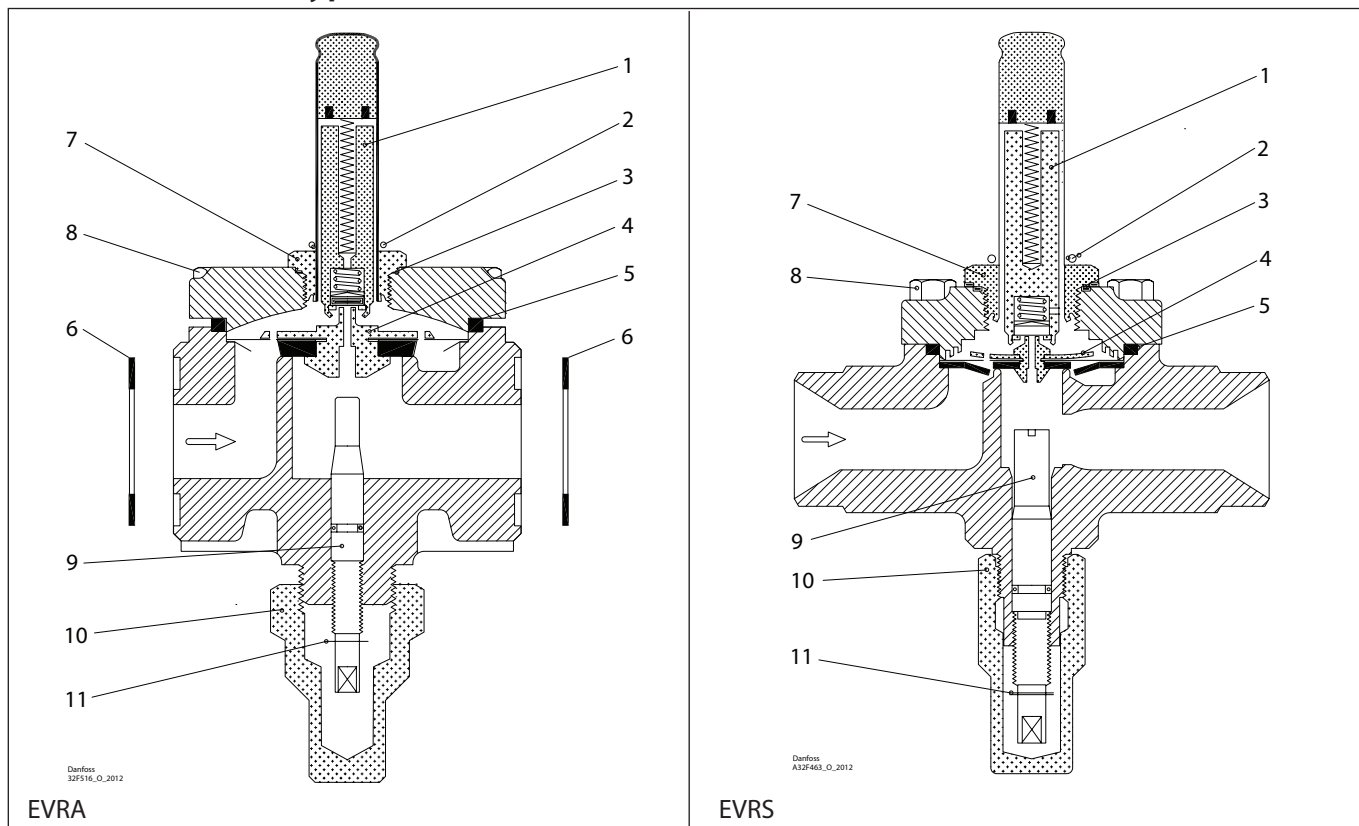 

1 For AC / DC Total no. = 1	2 Total no. = 1	3 Total no. = 1	4 Total no. = 1	5 Total no. = 1	6 Total no. = 2
7 Total no. = 1	8 Total no. = 4	9 Total no. = 1	10 Total no. = 1	11 Total no. = 1	


Overhaul kit | Code number 032F2340 Solenoid valve, type EVRA, size 25

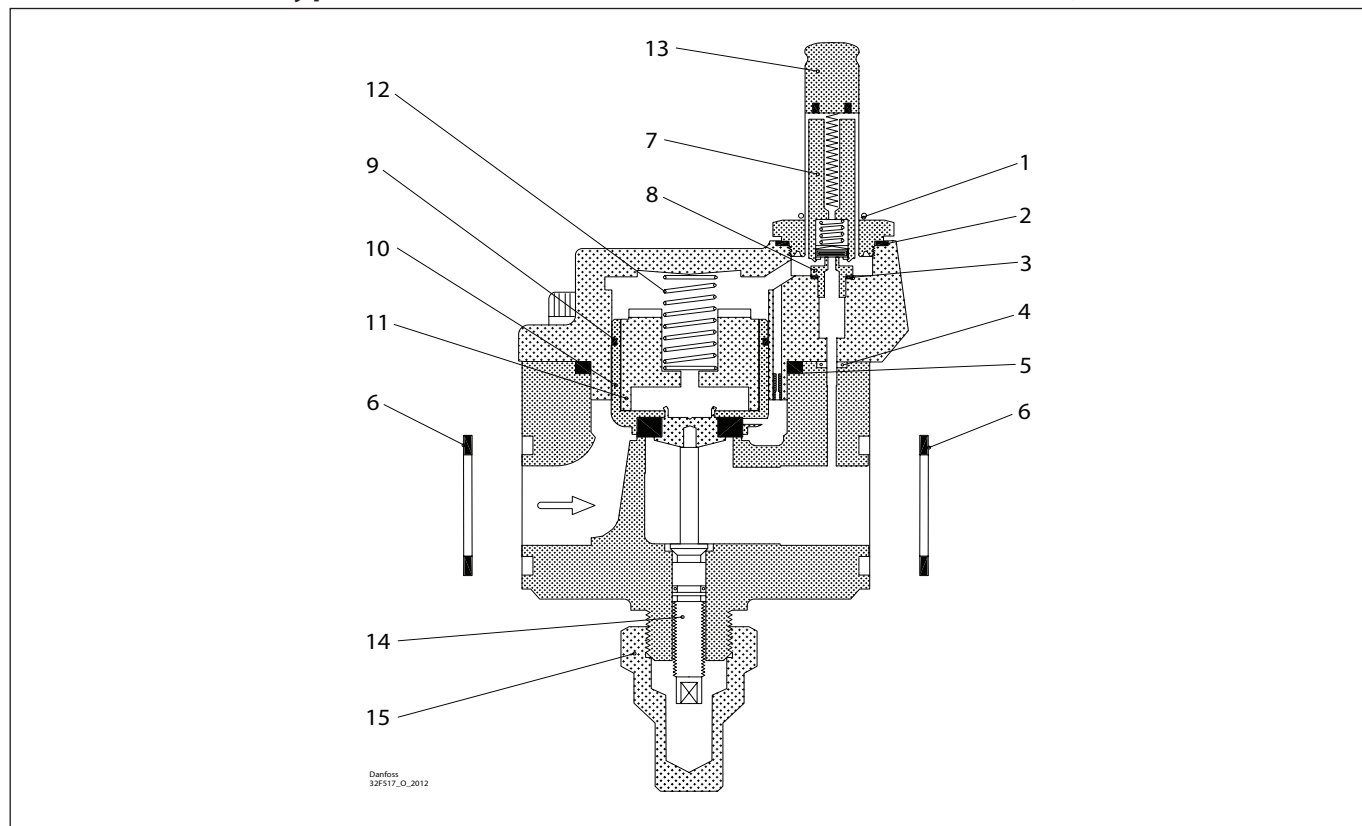 

1 Total no. = 1	2 Total no. = 1	3 Total no. = 1	4 Total no. = 1	5 Total no. = 1
6 Total no. = 2	7 Total no. = 1	8 Total no. = 1	9 Total no. = 1	10 Total no. = 1
11 Total no. = 1	12 Total no. = 1	13 Total no. = 1	14 Total no. = 1	15 Total no. = 1

Overhaul kit | Code number 032F2341

 
EVRA, size 32

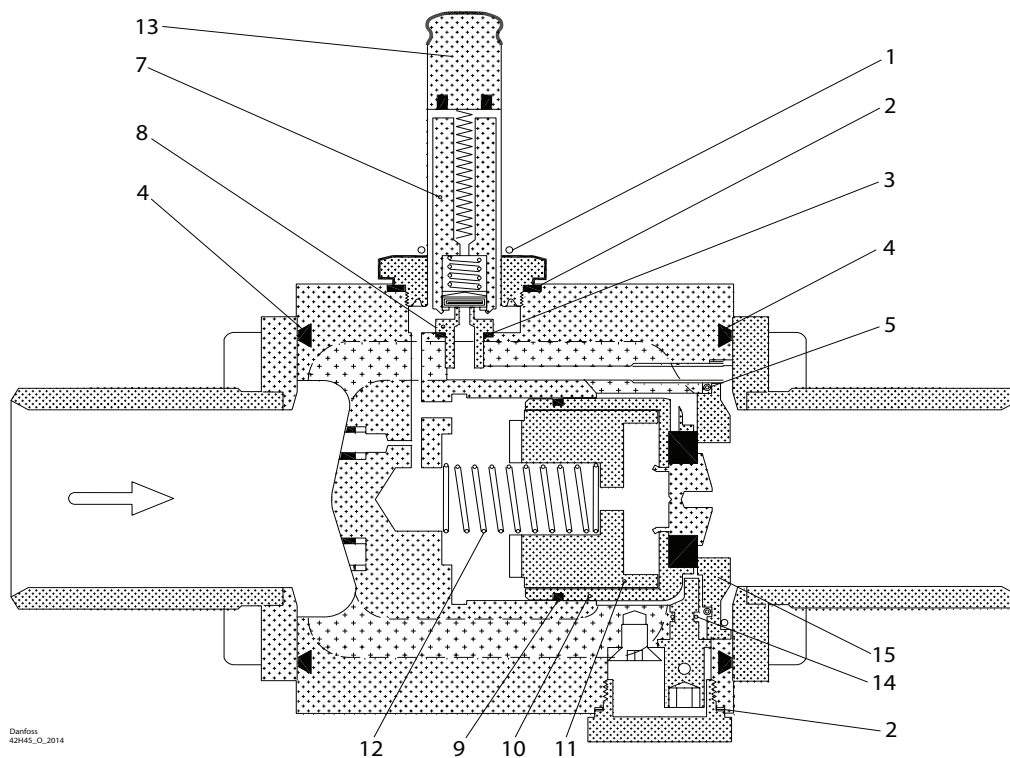

Danfoss
42945_O_2014


1 Total no. = 1	2 Total no. = 2	3 Total no. = 1	4 Total no. = 2	5 Total no. = 1
7 Total no. = 1	8 Total no. = 1	9 Total no. = 1	10 Total no. = 1	11 Total no. = 1
12 Total no. = 1	13 Total no. = 1	14 Total no. = 1	15 Total no. = 1	

Overhaul kit | Code number 032F2342 Solenoid valve, type EVRA, size 40

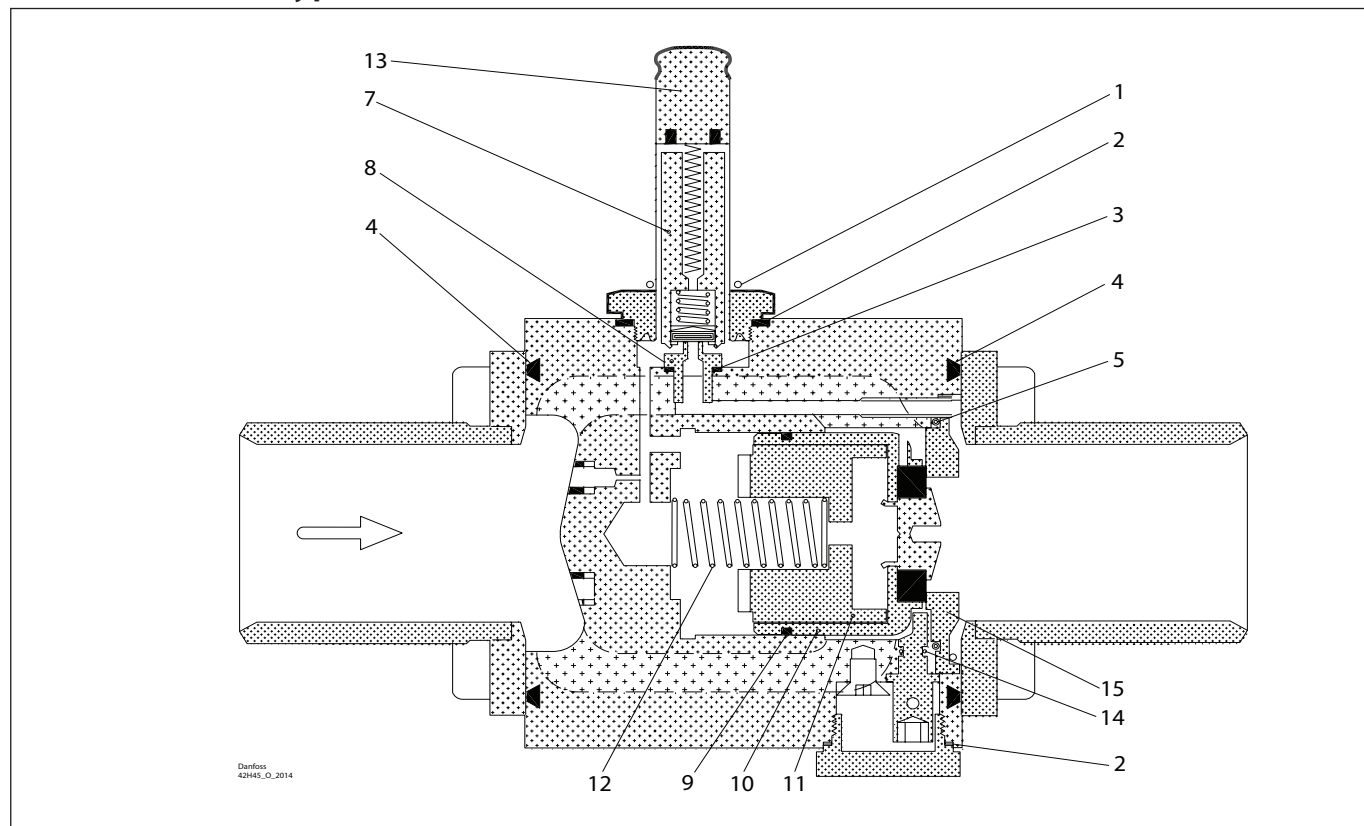 


1 Total no. = 1	2 Total no. = 2	3 Total no. = 1	4 Total no. = 2	5 Total no. = 1
7 Total no. = 1	8 Total no. = 1	9 Total no. = 1	10 Total no. = 1	11 Total no. = 1
12 Total no. = 1	13 Total no. = 1	14 Total no. = 1	15 Total no. = 1	

Overhaul kit | Code number 032F2346 Solenoid valves, types EVRAT and EVRST, size 10

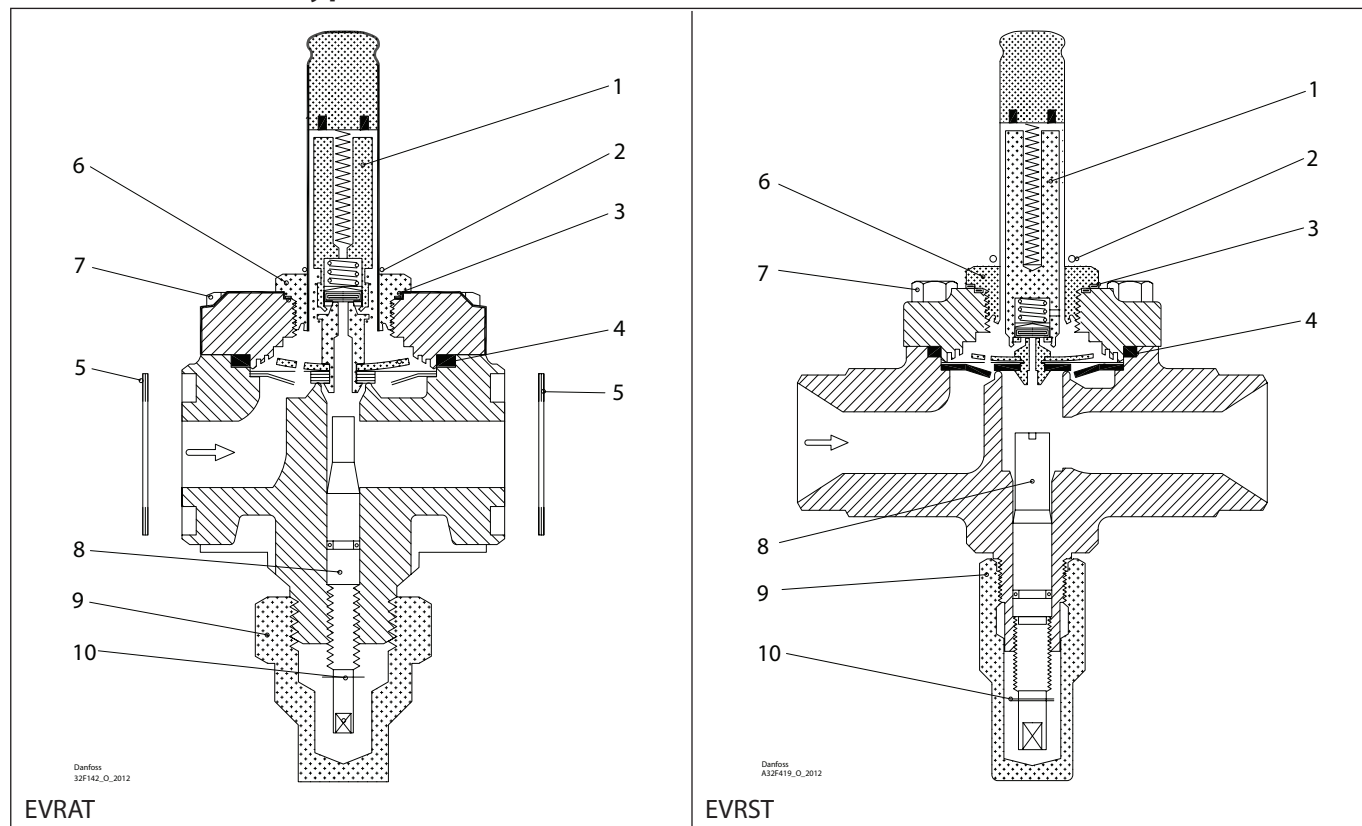 

1 Total no. = 1	2 Total no. = 1	3 Total no. = 1	4 Total no. = 1	5 Total no. = 2	6 Total no. = 1
7 Total no. = 4	8 Total no. = 1	9 Total no. = 1	10 Total no. = 1		


Overhaul kit | Code number 032F2347 Solenoid valves, types EVRAT and EVRST, size 15

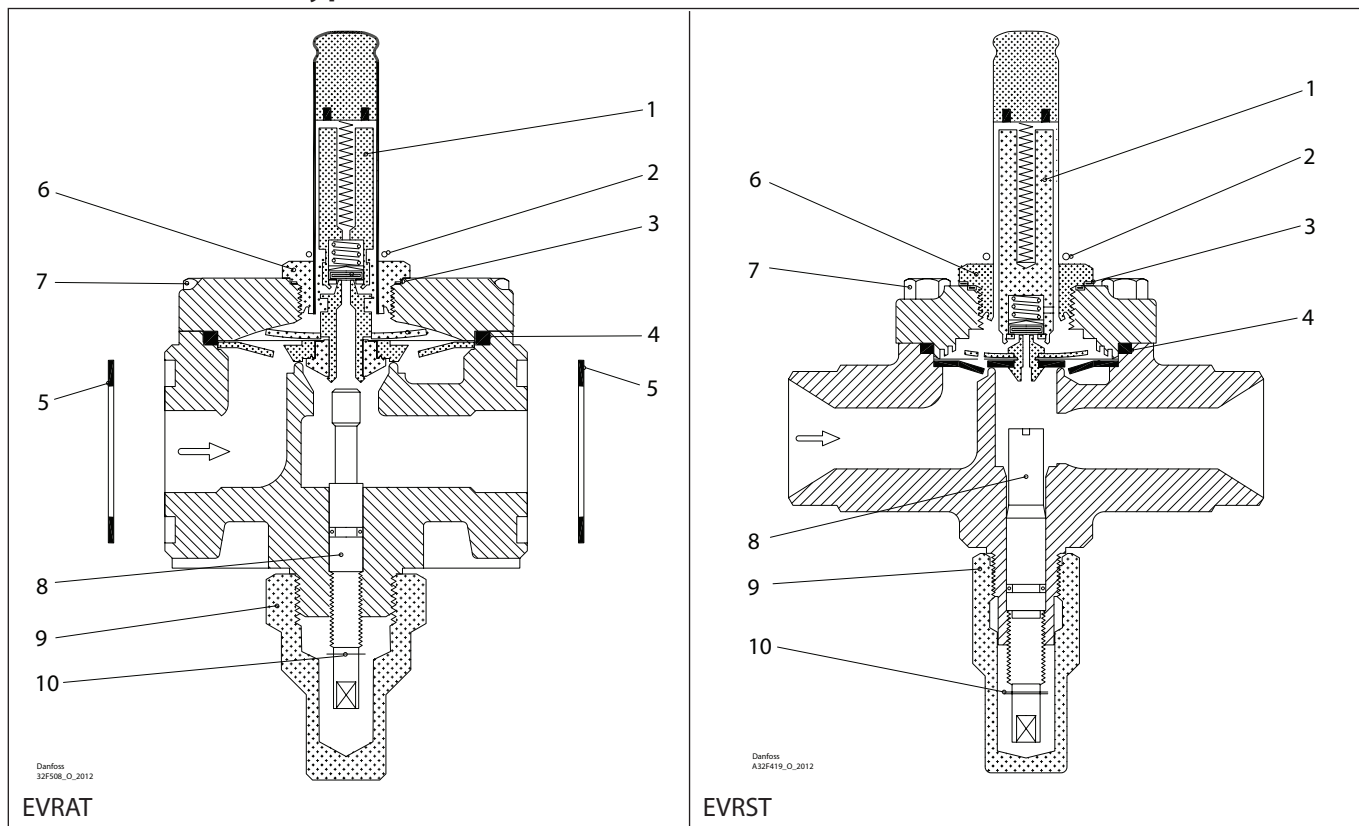 

1 Total no. = 1	2 Total no. = 1	3 Total no. = 1	4 Total no. = 1	5 Total no. = 2	6 Total no. = 1
7 Total no. = 4	8 Total no. = 1	9 Total no. = 1	10 Total no. = 1		

Overhaul kit | Code number 032F2348

 
Solenoid valves, types EVRAT and EVRST, size 20

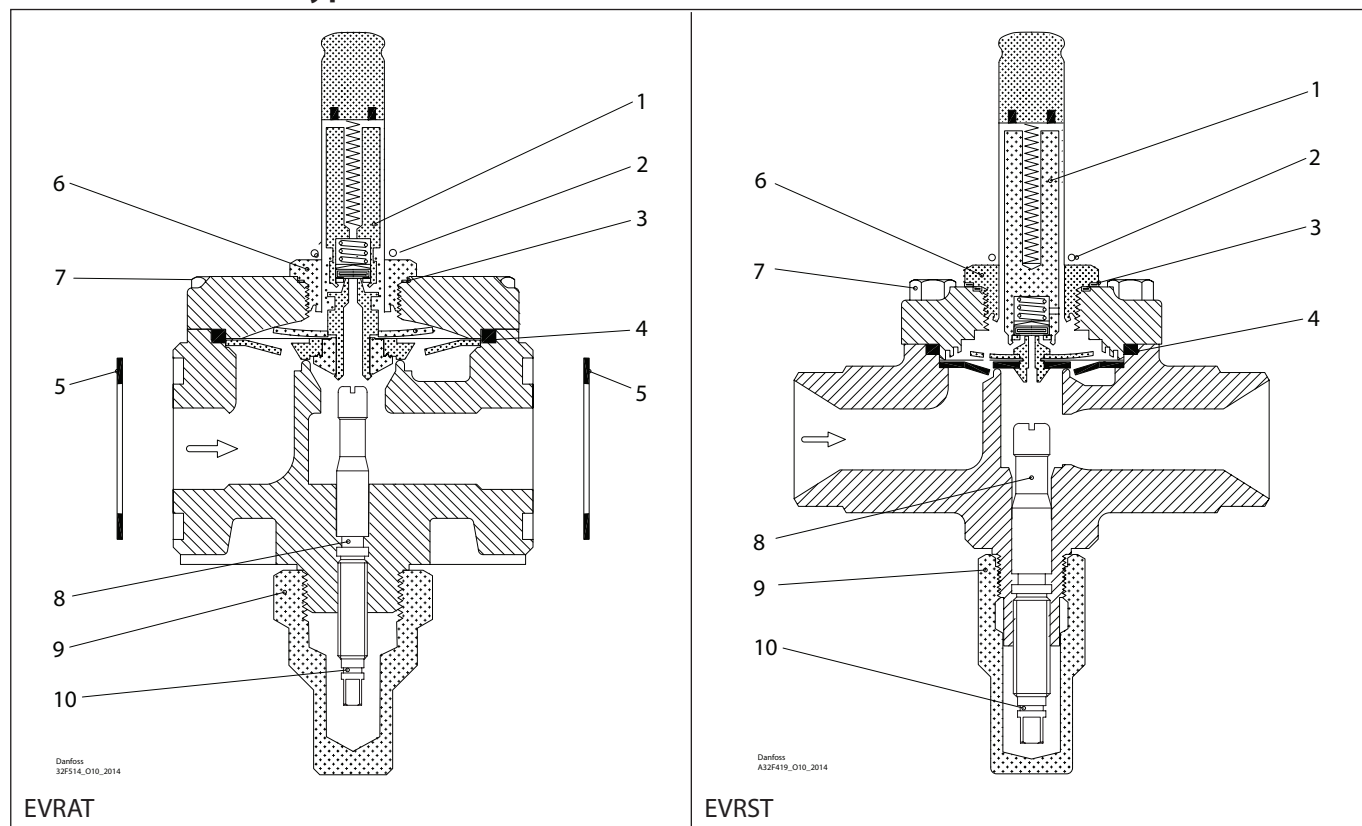


1 Total no. = 1	2 Total no. = 1	3 Total no. = 1	4 Total no. = 1	5 Total no. = 2	6 Total no. = 1
7 Total no. = 4	8 Total no. = 1	9 Total no. = 1	10 Total no. = 1		

Valve housing kits | Code number | 032F2230 | 032F2231 | 032F2232 | 032F2233

 
Solenoid valves, types EVRA(T) 10 / 15 / 20

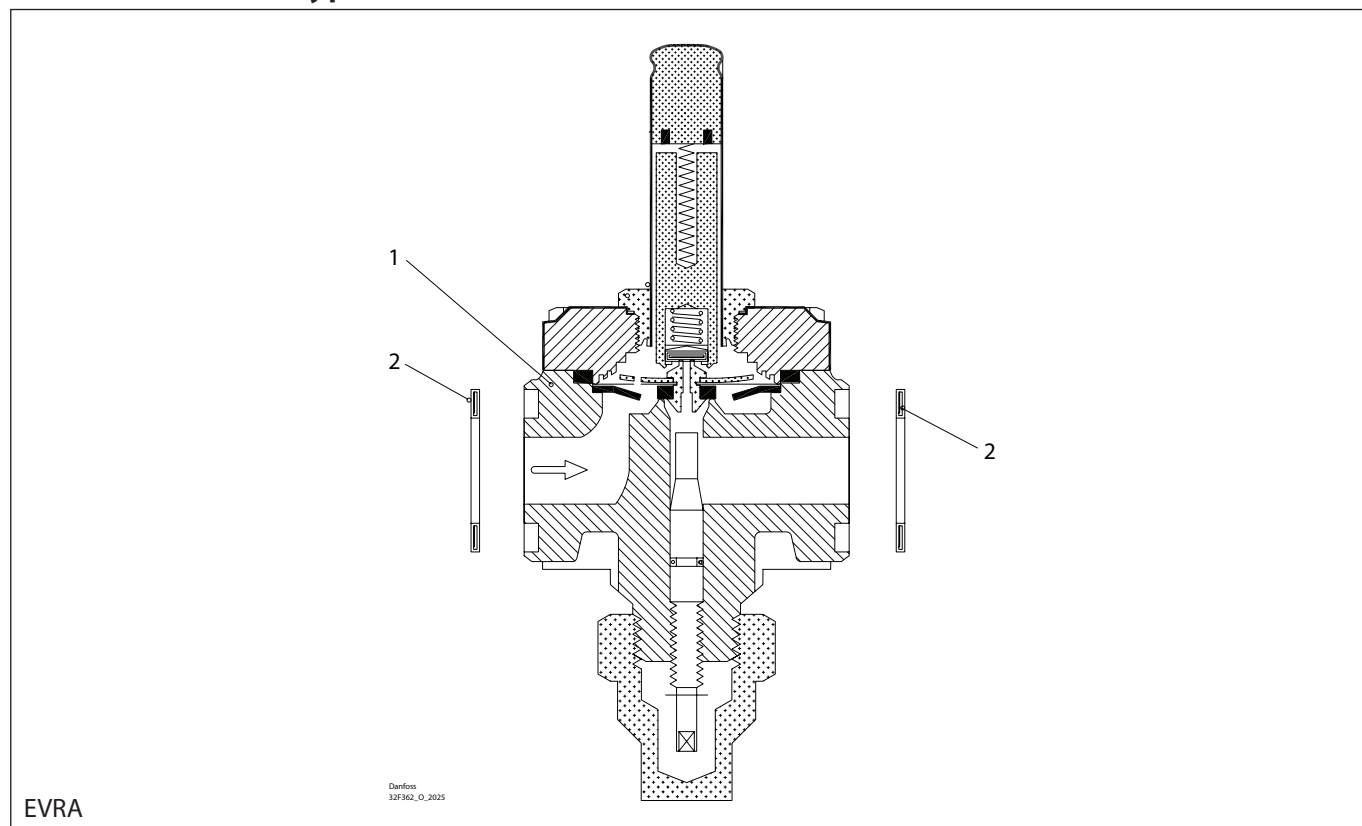

 
EVRA/T 10 housing for valves with manual opener - Code number 032F2230

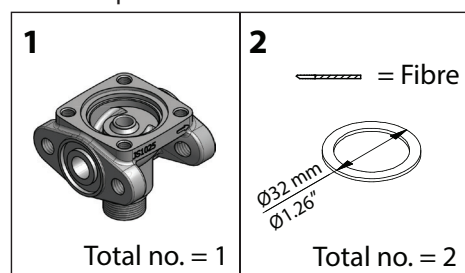

 
EVRA/T 15 housing for valves with manual opener - Code number 032F2232

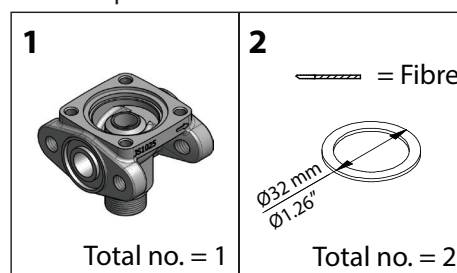

 EVRA/T 10 housing for valves without manual opener - Code number 032F2231

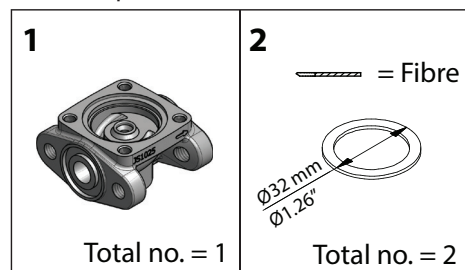

 EVRA/T 20 housing for valves with manual opener - Code number 032F2233

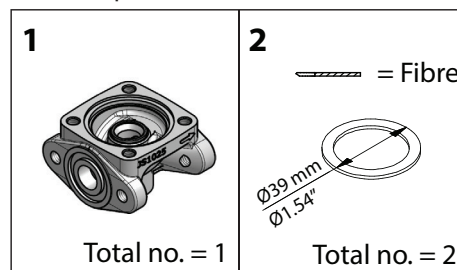

Danfoss A/S

Climate Solutions • danfoss.com • +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.

All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.