



Installation Guide

DEVIreg™ 610

Electronic Thermostat

www.DEVI.com

DEVI® 
by Danfoss

Table of Contents

1	Introduction	3
1.1	Technical Specifications	4
1.2	Safety Instructions	5
2	Mounting Instructions	6
3	Warranty	10
4	Disposal Instruction	13


1 Introduction

DEVIreg™ 610 is an electronic thermostat to be installed directly on the wall. It is provided with a 2-pole switch and a wire sensor to control the desired temperature.

The thermostat has a button for adjusting the temperature setting with a scale from -10 °C to +50 °C, and an LED indicator that shows standby periods (green light) and heating periods (red light).

**More information on this product can also be found at:
devireg.devi.com**

1.1 Technical Specifications

-30°C to +50°C	220-240V~, 50Hz
Standby power consumption	Max. 0,93W
Relay: Resistive load Inductive load	Max 10A / 2300W @ 230V cos φ= 0.3 max 1A
Sensing units	NTC 15kOhm at 25°C
Sensing values: 0 °C 25 °C 50 °C	42 kOhm 15 kOhm 6 kOhm
Hysteresis	±2,0 °C
Ambient temperature	-30 °C to +50 °C
Temperature range	-10 °C to +50 °C
Cable specification max	1 x 4 mm ² or 2 x 2,5 mm ²
Ball pressure temperature	75 °C
Pollution degree	2 (domestic use)
Type	1C
Storage temperature	-20 °C to +65 °C
IP class	44
Protection class	Class II - 

Dimensions	100 x 69,5 x 45 mm
Weight	165 g

The product complies with the EN/IEC Standard "Automatic electrical controls for household and similar use":

- EN/IEC 60730-1 (general)
- EN/IEC 60730-2-9 (thermostat)

1.2 Safety Instructions

Make sure the mains supply to the thermostat is turned off before installation.

Please also note the following:

- The installation of the thermostat must be done by an authorized and qualified installer according to local regulations.
- The thermostat must be connected to a power supply via an all-pole disconnection switch.
- The sensor is to be considered as live voltage. Have this in mind if the sensor must be extended.
- Always connect the thermostat to continuous power supply.
- Do not expose the thermostat to moisture, water, dust, and excessive heat.

2 Mounting Instructions

Please observe the following placement guidelines:

- The thermostat can be placed both indoors and outdoors.
- Place the thermostat on a wall, pole, steel/wooden plate or pipe.



In wet rooms, place the thermostat according to local regulation on IP classes.


Follow the steps below to mount the thermostat.

1. Open the thermostat:




- Set adjustment button to minimum temperature.
- Loosen the 2 screws and open the front cover.

2. Fasten the thermostat:

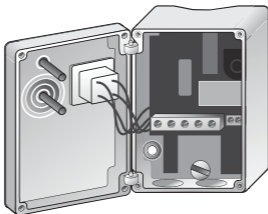

- Drive the screws through the holes in the bottom corners of the thermostat.
 - Seal the holes with the enclosed screw stopper to maintain the density.
3. Connect the thermostat according to the connection diagram.

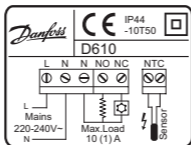

- Heating: (L-main, N-main, L-load, NO (normally open) - load).
- Cooling: (L-main, N-main, L-load, NC (normally closed) - load).

The screen of the heating cable must be connected to the earth conductor of the power supply cable by using a separate connector.

4. Reinstall the front cover.
5. Ensure that the adjustment button can be adjusted within full temperature range, i.e. from -10 °C to +50 °C.
6. Install sensor using the supplied sensor cable - spec. NTC 15 kΩ @ 25°C.
 - Press out the blanket located at the bottom of the thermostat and insert the seal nipple.
 - Connect sensor to terminals 6+7.

The sensor cable can be extended up to 50 m with 1,5 mm² installation cable without affecting the accuracy of the thermostat.

Do not place the cable parallel to other installation cables as undesirable signals may be induced.

The installation must be permanent.

If the sensor is to be built in, used for pipe applications, or exposed to pressure, always install it in a conduit.

7. Turn on the power supply.

3 Warranty

A 2-year product warranty is valid for:

- thermostats: DEVReg™ 610.

Should you, against all expectations, experience a problem with your DEVI product, you will find that Danfoss offers DEVReg warranty valid from the **date of purchase** on the following conditions: During the warranty period Danfoss shall offer a new comparable product or repair the product if the product is found to be faulty by reason of defective design, materials or workmanship. The repair or replacement.

The decision to either repair or replace will be solely at the discretion of Danfoss. Danfoss shall not be liable for any consequential or incidental damages including, but not limited to, damages to property or extra utility expenses. No extension of the warranty period following repairs undertaken is granted.

The warranty shall be valid only if the WARRANTY CERTIFICATE is completed correctly and in accordance with the instructions, the fault is submitted to the installer or the seller without undue delay and proof of purchase is provided. Please note that the WARRANTY CERTIFICATE must be filled in, stamped and signed by the authorized installer performing the installation (Installation date must be indicated). After the installation is performed, store and keep the WARRANTY CERTIFICATE and purchase documents (invoice, receipt or similar) during the whole warranty period.

DEVReg warranty shall not cover any damage caused by incorrect conditions of use, incorrect installation or if installation has been carried out by non-authorized electricians. All work will be invoiced in full if Danfoss is required to inspect or repair faults that have arisen as a result of any of the above. The DEVReg warranty shall not extend to products which have not been paid in full. Danfoss will, at all times, provide a rapid and effective response to all complaints and inquiries from our customers.

The warranty explicitly excludes all claims exceeding the above conditions.

For full warranty text visit **www.devi.com**.
devi.danfoss.com/en/warranty/

WARRANTY CERTIFICATE

The DEVI warranty is granted to:

Address _____ Stamp _____

Purchase date _____

Serial number of the product _____

Product _____ Art. No. _____

*Connected output [W] _____

Installation Date & Signature _____ Connection Date & Signature _____

**Not mandatory*



4 Disposal Instruction



Danfoss A/S

Nordborgvej 81
6430 Nordborg, Syddanmark
Denmark

Danfoss A/S

DEVI • devl.com • +45 7488 2222 • EH@danfoss.com


Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues, descriptions, advertisements, etc., and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.

All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.

DEVireg™ 610

140F1080

220-240 V~
50-60 Hz~
-10 to +50 °C
10 A / 2300 W @ 230 V~
IP 44

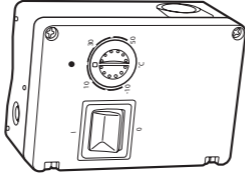

Product documentation

DK EL 7224215344
SE EL 8581196
NO EL 5491490
FI SSTL 3531041



8095435



Designed in Denmark for Danfoss A/S



For UK customer only: Importer:
Danfoss Ltd., 22 Wycombe End, HP9 1NB, GB