

Installation guide


VCH 30/ 60/ 120/ 150

180R9454

180R9454


Identification

Applies to the following codes: 180Z0007, 180H0115, 180H0116, 180H0117

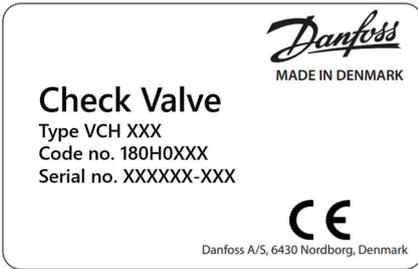

Orientation

Install the valve in the direction of flow (indicated by the arrow on the valve). If the valve is installed with flow in the opposite direction it will block the flow.

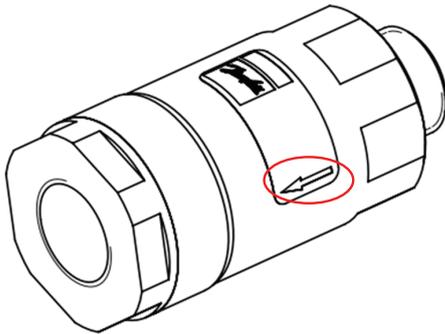

Mounting

The valve must be mounted in-line, connected directly to the pipeline.

Danfoss A/S

High Pressure Pumps • danfoss.com • +45 7488 2222 • highpressurepumps@danfoss.com

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.
All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.