


ENGINEERING  
TOMORROW



Service Manual

# Series 42 4T Axial Piston Tandem Pumps

## Size 41/51

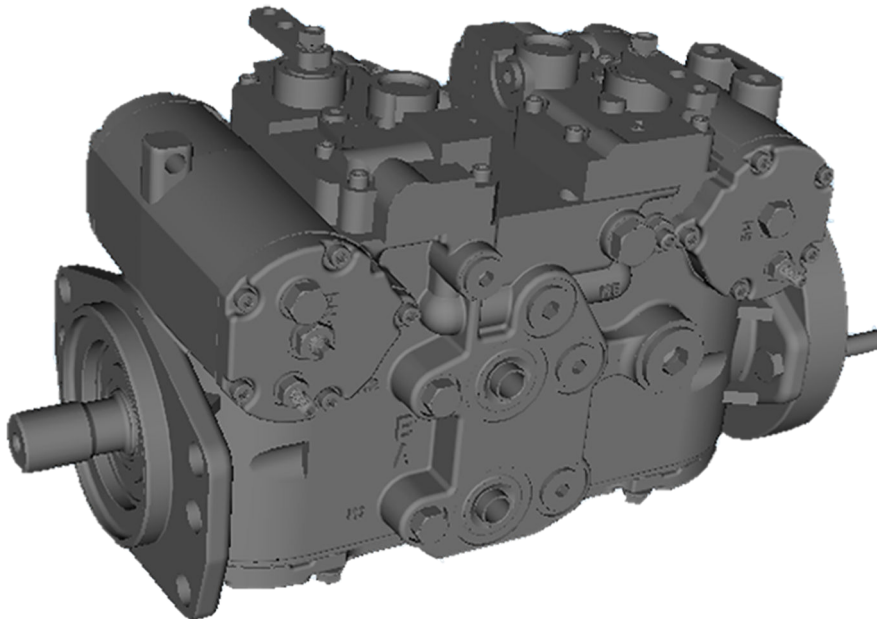

**Revision history***Table of revisions*

<b>Date</b>	<b>Changed</b>	<b>Rev</b>
July 2020	Updated P107 776E, Port locations and torque chart, and Changed document number from 'AX00000032' and '11042614' to 'AX152886481090'	0301
April 2016	correction to port callouts pgs 13 & 37	0202
November 2014	Danfoss layout	BA
September 2010	New Back Page	AC
March 2010	Fix Osaka address	AB
July 2008	First edition	AA

**Contents**

**Introduction**

Overview.....5  
 Warranty.....5  
 General instructions.....5  
     Remove the unit.....5  
     Keep it clean.....5  
     Replace all O-rings and gaskets.....5  
     Secure the unit.....5  
 Safety precautions.....6  
 Symbols used in Danfoss literature.....7  
 Ordering replacement parts and service.....7

**General description**

Basic design.....8  
 System diagram.....9  
 System schematic.....10

**Technical specifications**

System specifications.....11  
 System parameters.....11  
 Hydraulic fluid parameters.....12

**Pressure measurement**

Required tools.....13  
 Port locations and pressure gauge installation.....13  
 Ports and pressure gauges.....13

**Initial Start-Up Procedure**

General.....14  
 Start-up procedure.....14

**Fluid and Filter Maintenance**

Recommendations.....15

**Troubleshooting**

Overview.....16  
 System operating hot.....16  
 System response is sluggish.....16  
 System will not operate in either direction.....17  
 System will not operate in one direction.....17  
 Neutral difficult or impossible to find.....18

**Adjustments**

Overview.....19  
 Displacement limiter adjustment.....19  
     Conversions.....21  
 Pump neutral adjustment.....21  
 Control neutral adjustment for MDC and EDC.....22

**Minor repair**

Standard procedures.....24  
     Remove the pump.....24  
     Keep it clean.....24  
     Inspect for system contamination.....24  
     Replace the O-rings and gaskets.....24  
     Lubricate all moving parts.....24  
 EDC Spool, linkage, and neutral adjustment screw.....24  
     Removal.....24  
     Installation.....24  
 FNR controls.....26  
     Removal of FNR modules.....26  
     Installation of FNR modules.....26  
 System Check Relief (SCR) valves.....27

**Contents**

Removal.....	28
Inspection.....	28
Replacement.....	28
Servo piston covers and NFPH control orifices.....	29
Disassembly.....	30
Assembly.....	30
Shafts.....	31
Remove rear shaft.....	32
Remove front shaft (with seal carrier).....	32
Remove front shaft (without seal carrier).....	32
Inspect shafts.....	32
Install rear shaft.....	32
Install front shaft (with seal carrier).....	32
Install front shaft (without seal carrier).....	32

**Port locations and torque chart**

Fastener, plug and port locations and gauge installation.....	35
Fastener size and torque chart.....	35
Plug size and torque chart.....	35

## Introduction

### Overview

This manual includes information for the installation, maintenance, and minor repair of Series 42 axial piston closed circuit pumps. It includes a description of the unit and its individual components, troubleshooting information, and minor repair procedures.

Performing minor repairs requires you remove the unit from the vehicle/machine. Thoroughly clean the unit before beginning maintenance, or repair activities. Since dirt and contamination are the greatest enemies of any type of hydraulic equipment, follow cleanliness requirements strictly. This is especially important when changing the system filter and when removing hoses or plumbing.

A worldwide network of Danfoss Global Service Partners (GSPs) is available for major repairs. Danfoss trains and certifies GSPs on a regular basis. You can locate your nearest GSP using the distributor locator at [www.sauer-danfoss.com](http://www.sauer-danfoss.com). Click on the *Sales and Service* link.

### Warranty

Performing installation, maintenance, and minor repairs according to the procedures in this manual does not affect your warranty. Major repairs requiring the removal of a unit's rear cover or front flange voids the warranty unless done by a Danfoss global service partner.

### General instructions

Follow these general procedures when repairing Series 42 variable displacement closed circuit pumps.

#### Remove the unit



Prior to performing minor repairs, remove the unit from the vehicle/machine. Chock the wheels on the vehicle or lock the mechanism to inhibit movement. Be aware that hydraulic fluid may be under high pressure and/or hot. Inspect the outside of the pump and fittings for damage. Cap hoses after removal to prevent contamination.

#### Keep it clean



Cleanliness is a primary means of assuring satisfactory pump life, on either new or repaired units. Clean the outside of the pump thoroughly before disassembly. Take care to avoid contamination of the system ports. Cleaning parts with a clean solvent wash and air drying is usually adequate.

As with any precision equipment, you must keep all parts free of foreign material and chemicals. Protect all exposed sealing surfaces and open cavities from damage and foreign material. If left unattended, cover the pump with a protective layer of plastic.

#### Replace all O-rings and gaskets



Danfoss recommends replacing all O-rings, gaskets, and seals when servicing. Lightly lubricate all O-rings with clean petroleum jelly prior to assembly.

#### Secure the unit



For repair, place the unit in a stable position with the shaft pointing downward. It is necessary to secure the pump while removing and torquing end covers, controls, and valves.

## Introduction

### Safety precautions

Always consider safety precautions before beginning a service procedure. Protect yourself and others from injury. Take the following general precautions whenever servicing a hydraulic system.

#### Unintended machine movement

 **Warning**

---

Unintended movement of the machine or mechanism may cause injury to the technician or bystanders. To protect against unintended movement, secure the machine or disable/disconnect the mechanism while servicing.

---

#### Flammable cleaning solvents

 **Warning**

---

Some cleaning solvents are flammable. To avoid possible fire, do not use cleaning solvents in an area where a source of ignition may be present.

---

#### Fluid under pressure

 **Warning**

---

Escaping hydraulic fluid under pressure can have sufficient force to penetrate your skin causing serious injury and/or infection. This fluid may also be hot enough to cause burns. Use caution when dealing with hydraulic fluid under pressure. Relieve pressure in the system before removing hoses, fittings, gauges, or components. Never use your hand or any other body part to check for leaks in a pressurized line. Seek medical attention immediately if you are cut by hydraulic fluid.

---

#### Personal safety

 **Warning**



---

Protect yourself from injury. Use proper safety equipment, including safety glasses, at all times.

---

## Introduction

### Symbols used in Danfoss literature

	WARNING may result in injury		Tip, helpful suggestion
	CAUTION may result in damage to product or property		Lubricate with hydraulic fluid
	Reusable part		Apply grease / petroleum jelly
	Non-reusable part, use a new part		Apply locking compound
	Non-removable item		Inspect for wear or damage
	Option - either part may exist		Clean area or part
	Superseded - parts are not interchangeable		Be careful not to scratch or damage
	Measurement required		Note correct orientation
	Flatness specification		Mark orientation for reinstallation
	Parallelism specification		Torque specification
	External hex head		Press in - press fit
	Internal hex head		Pull out with tool – press fit
	Torx head		Cover splines with installation sleeve
	O-ring boss port		Pressure measurement/gauge location or specification

The symbols above appear in the illustrations and text of this manual. They are intended to communicate helpful information at the point where it is most useful to the reader. In most instances, the appearance of the symbol itself denotes its meaning. The legend above defines each symbol and explains its purpose.

### Ordering replacement parts and service

Danfoss provides a complete repair service for its products. Contact any Danfoss Global Service Partner for details.

To ensure the best performance, use genuine Danfoss replacement parts. To order parts, contact Danfoss Extended Customer Service (ECS) at (515) 239-6078, fax (515) 239-6230, or your nearest Global Service Partner.

Some service parts may be available only in kits, while other parts may be available on an individual basis. See publication **520L0589 Series 42 PV 41cc Service Parts Manual** or **520L0590 Series 42 PV 28cc Service Parts Manual** for listings of available service parts and service kits for Series 42 units.

**General description**

**Basic design**


S42 Pumps are advanced hydrostatic units for medium power applications with maximum loads of 415 Bar [6020 psi] (41 cm<sup>3</sup>) and 350 Bar [5075 psi] (51 cm<sup>3</sup>). You can combine these pumps with a suitable Danfoss motor or other products in a system to transfer and control hydraulic power.

The Series 42 variable displacement pump is a compact, high power density unit, using the parallel axial piston/slipper concept in conjunction with a tiltable swashplate to vary the pump's displacement..

Reversing the angle of the swashplate reverses the flow of fluid from the pump, and reversing the direction of rotation of the motor output. Series 42 pumps provide an infinitely variable speed range between zero and maximum in both forward and reverse.

Series 42 pumps use a cradle swashplate design with a hydraulic servo control cylinder. Control is provided through a compact servo control system. A variety of servo controls are available. These include mechanically- or electrically-actuated feedback controls, hydraulic or electric proportional controls, and a three-position electric control. These controls feature low hysteresis and responsive performance.


*28/32/41/51 cm<sup>3</sup> cross-sectional view*

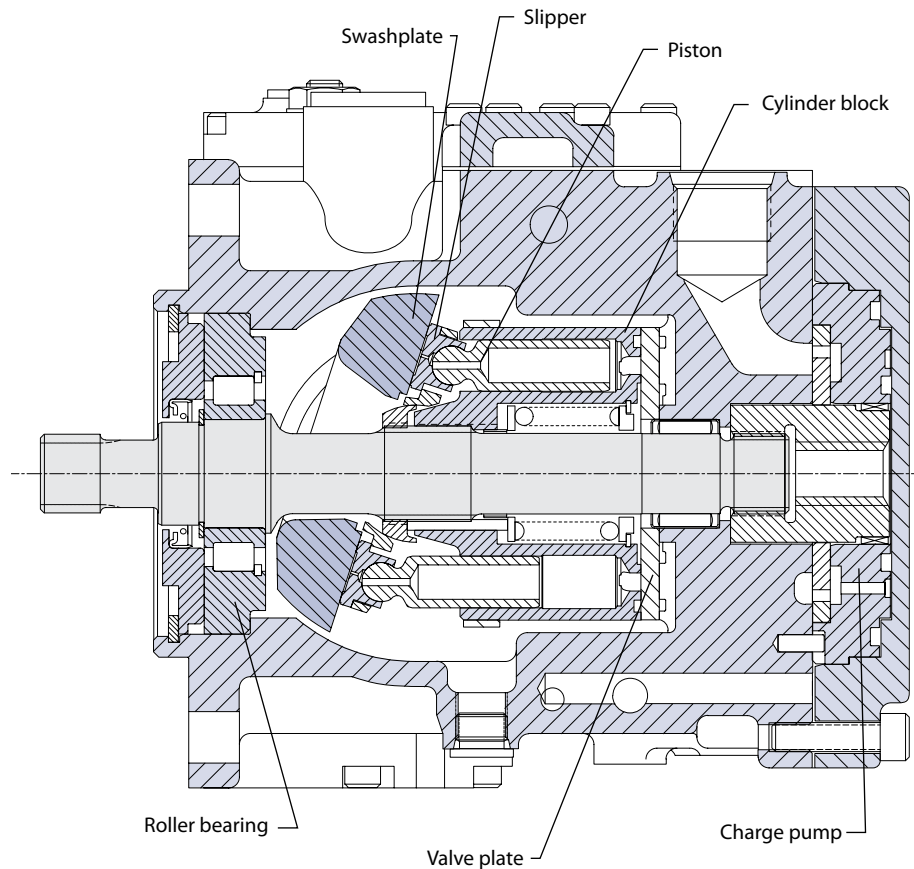



General description


System diagram

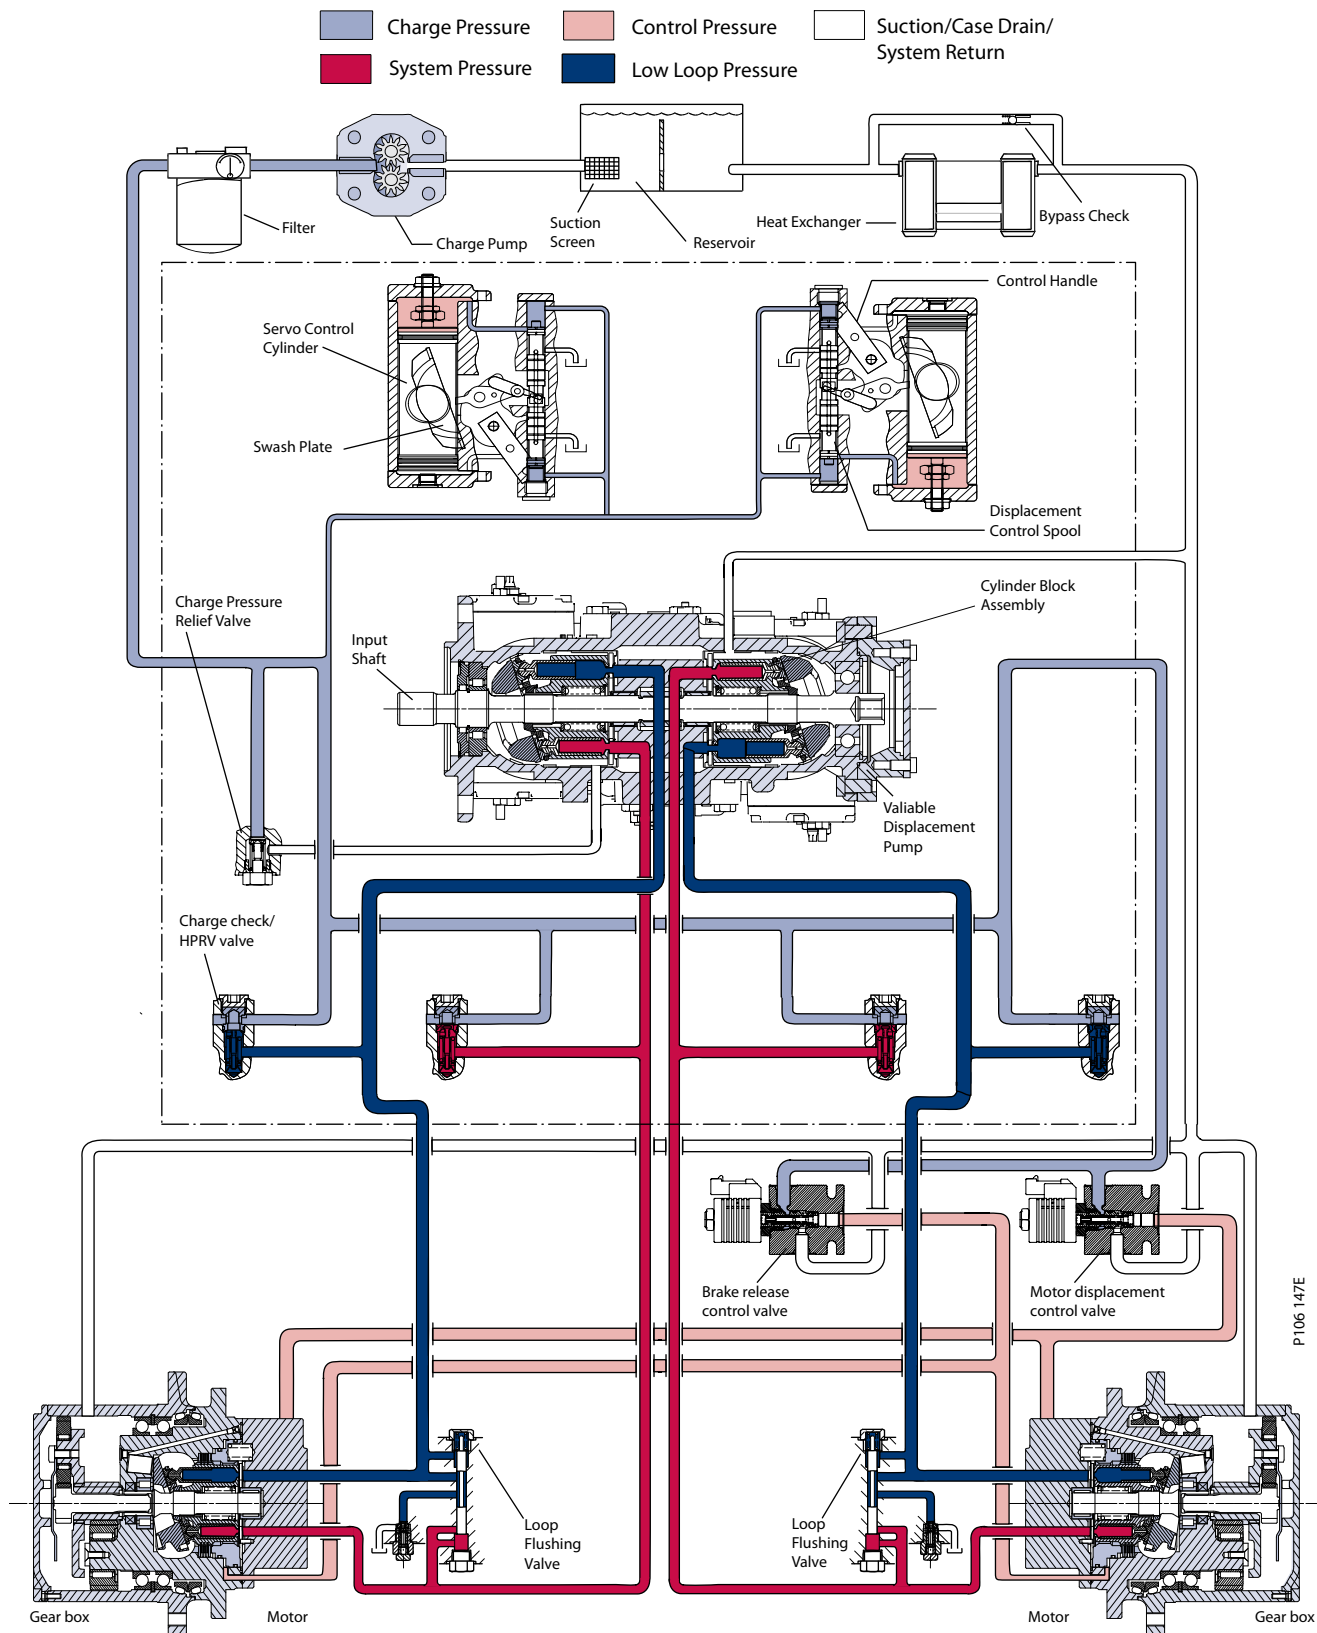

**General description**

**System schematic**

4T axial piston pump

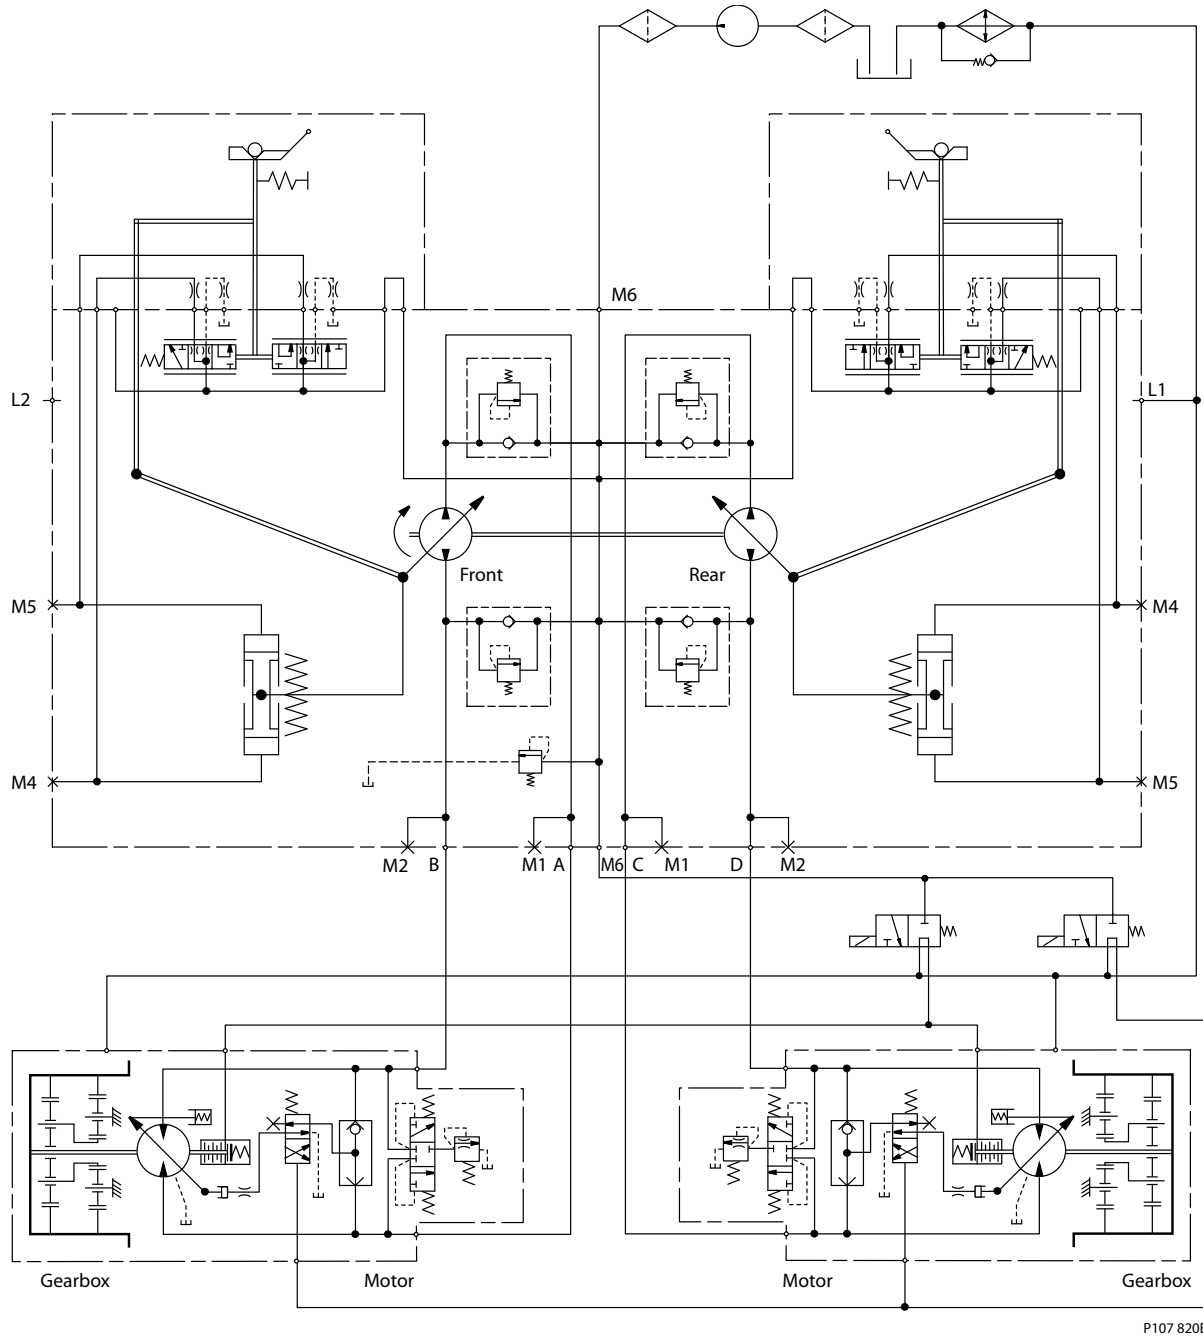

The illustration above shows a schematic of a 4T axial piston pump. System ports A,C and B,D connect to the high pressure work lines. Return fluid is received from its inlet port and discharged through the outlet port. Flow direction is determined by swashplate position. You can read system port pressure through ports M1 and M2. The pump has two case drains (L1 and L2) to ensure there is lubricating fluid in the system. This schematic includes a manual displacement control. For other control schematics see the related control section.

## Technical specifications

### System specifications

#### General specifications

Pump type	In-line, axial piston, positive displacement pumps including cradle swashplate and servo control
Direction of input rotation	Clockwise or counterclockwise
Recommended installation position	Pump installation recommended with control position on the top or side. Consult Danfoss for non conformance guidelines. The housing must always be filled with hydraulic fluid.
Other system requirements	Independent braking system, suitable reservoir and heat exchanger.

#### Hardware features

Pump configuration	Integrated Tandem Pump	
Displacement cm <sup>3</sup> /rev [in <sup>3</sup> /rev]	41 [2.50] x 2	51 [3.11] x 2
Weight kgf [lbf]	MDC: 76 [168]	
	NFPH: 72 [158]	
Mass moment of inertia kg·m <sup>2</sup> [lbf·ft <sup>2</sup> ]	0.0072 [0.0054]	0.0076 [0.0056]
Type of front mounting flange (SAE flange size per SAE J744)	2 Bolt SAE C, (4 additional bolt holes available)	
Port connections	SAE-twin ports, radial, opposite side ports	
System pressure regulation bar [psi]	210-415 [3045-6020]	210-325 [3045-4715]
Displacement limiters	Option	
Input shaft options	Splined	
Auxiliary mounting pad (SAE pad per SAE J744)	SAE A (9 tooth, 11 tooth, 13 tooth) SAE B (13 tooth)	
Control options	MDC, NFPH, EDC, FNR	
Loop flushing	NONE	

### System parameters

#### Case pressure

Continuous pressure bar [psi]	3.4 [50]
Maximum pressure (cold start) bar [psi]	10.3 [150]

#### Pressure limits

Displacement cm <sup>3</sup> /rev	41	51
Rated pressure bar [psi]	350 [5075]	325 [4713]
Maximum pressure bar [psi]	415 [6017]	350 [5075]

#### Speed limits

Displacement cm <sup>3</sup> /rev	41	51
Minimum speed min <sup>-1</sup> (rpm)	500	
Rated speed at maximum displacement min <sup>-1</sup> (rpm)	3200	2900
Maximum speed at maximum displacement min <sup>-1</sup> (rpm)	3450	3400

## Technical specifications

### Charge pump displacement and setting pressure

Charge pump		41	51
Internal cm <sup>3</sup> /rev [in <sup>3</sup> /rev]	—	none	none
Charge relief valve settings bar [psi]	Standard	20 [290]	
	Optional	14-24 [203-340]	

### Theoretical flow

Displacement cm <sup>3</sup> /rev	41	51
Theoretical flow at rated speed l/min [US gal/min]	131 [34.6]	148 [39.1]

### Check / high pressure relief valve

Options	No relief valve / check only	Relief valve / check
Settings bar [psi]	-	210-415 [3045-6020] or by setting available 210, 250, 280, 300, 325, 345, 360, 385, 415

## Hydraulic fluid parameters

### Fluid temperature range

Minimum	-40 °C [-40 °F]	Intermittent, cold start
Maximum continuous	104 °C [220 °F]	-
Maximum	115 °C [240 °F]	Intermittent

### Fluid cleanliness level

Required fluid cleanliness level	ISO 4406 Class 22/18/13
----------------------------------	-------------------------

### Fluid viscosity

Minimum	7.0 mm <sup>2</sup> /s (cSt)	Intermittent
Recommended operating range	12-60 mm <sup>2</sup> /s (cSt)	-
Maximum	1600 mm <sup>2</sup> /s (cSt)	Intermittent, cold start

## Pressure measurement

### Required tools

You can perform the service procedures in this manual using common mechanic's hand-tools. Calibrate gauges frequently to ensure accuracy. Use snubbers to protect pressure gauges.

### Port locations and pressure gauge installation

On pumps with non-feedback controls, the positions of the case drains may vary.


### Ports and pressure gauges

Proper service and diagnosis may require pressure measurement at various points in the hydraulic circuit. The Series 42 pump has several locations at which to take these measurements. The following illustration shows the locations of the various gauge ports. The table shows the recommended gauge size and the fitting size for each port.

#### Gauge ports

Gauge port	Pressure measured	Recommended gauge size	O-ring boss
			41 / 51 cc
M1 & M2	System pressure for ports A and B	600 bar [8700 psi]	9/16-18
M4 & M5	Servo pressure	60 bar [870 psi]	9/16-18
L1 & L2	Case pressure	35 bar [510 psi]	1-5/16-12

#### 4T gauge ports

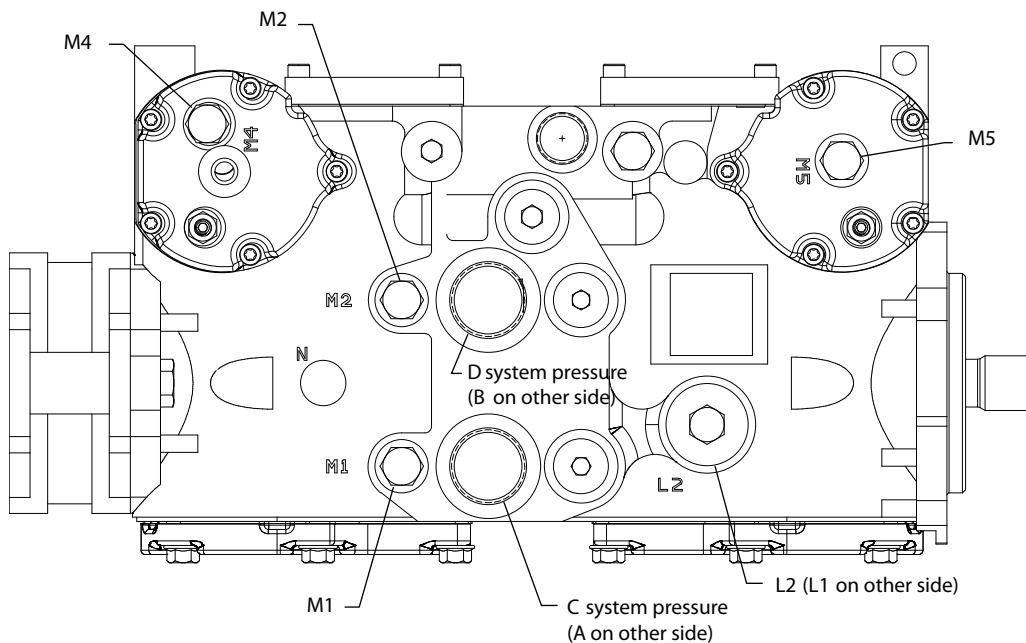

P107 818E

## Initial Start-Up Procedure

### General

Follow this procedure when starting-up a new Series 42 installation or when restarting an installation in which the pump has been removed.

 **Warning**

---

Unintended movement of the machine or mechanism may cause injury to the technician or bystanders. To protect against unintended movement, secure the machine or disable/disconnect the mechanism while servicing.

---

Prior to installing the pump, inspect for damage incurred during shipping. Make certain all system components (reservoir, hoses, valves, fittings, heat exchanger, etc.) are clean prior to filling with fluid.

### Start-up procedure

1. Connect the pump to the prime mover. Ensure that pump shaft is properly aligned with the shaft of the prime mover.

 **Caution**

---

Incorrect shaft alignment may result in damage to drive shaft, bearings, or seal which can cause external oil leakage.

---

2. Fill the reservoir with recommended hydraulic fluid. Always filter fluid through a 10 micron absolute filter pouring into the reservoir. Never reuse hydraulic fluid.
3. Fill the main pump housing with clean hydraulic fluid. Pour filtered oil directly into the upper most case drain port.
4. Fill the inlet line leading from the pump to the reservoir. Check the inlet line for properly tightened fittings and be certain it is free of restrictions and air leaks.
5. To ensure the pump stays filled with oil, install the case drain line in the upper most case drain port.
6. Install a gauge at port M2 to monitor system pressure during start up.

---

[Follow recommendations in the vehicle/machine operator's manual for prime mover start up procedures.](#)

---

7. While watching the pressure gauge at M2, jog the prime mover or run at the lowest possible speed until system pressure builds to normal levels (minimum 11 bar [160 psi]). Once system pressure is established, increase to full operating speed. If the pump does not maintain system pressure, shut down the prime mover, determine cause, and take corrective action. Refer to [Troubleshooting](#) on page 16.
8. Operate the hydraulic system for at least fifteen minutes under light load conditions.
9. Check and adjust control settings as necessary after installation. Refer to [Adjustments](#) on page 19.
10. Shut down the prime mover and remove the pressure gauge. Replace plug at port M2.
11. Check the fluid level in the reservoir; add clean filtered fluid if necessary.

The pump is now ready for operation.

## Fluid and Filter Maintenance

### Recommendations

To ensure optimum life of Series 42 products, perform regular maintenance of the fluid and filter. Contaminated fluid is the main cause of unit failure. Take care to maintain fluid cleanliness when servicing.

Check the reservoir daily for proper fluid level, the presence of water, and rancid fluid odor. Water in the fluid may be noted by a cloudy or milky appearance or free water in the bottom of the reservoir. Rancid odor indicates the fluid has been exposed to excessive heat. Change the fluid immediately if these conditions occur. Correct the problem immediately.

Change the fluid and filter per the vehicle/machine manufacturer's recommendations or at these intervals:

Change the fluid more frequently if it becomes contaminated with foreign matter (dirt, water, grease, etc.) or if the fluid is subjected to temperature levels greater than the recommended maximum.

---

[Dispose of used hydraulic fluid properly. Never reuse hydraulic fluid.](#)

---

Change filters whenever the fluid is changed or when the filter indicator shows that it is necessary to change the filter. Replace all fluid lost during filter change.

#### *Fluid and filter change intervals*

Sealed reservoir	2000 hours
Breather reservoir	500 hours

## Troubleshooting

### Overview

This section provides general steps to follow if you observe certain undesirable system conditions. Some of the items are system specific. Always observe the safety precautions listed in the introduction of this manual. If standard troubleshooting procedures do not remedy the problem, contact a Danfoss Global Service Partner.

### System operating hot

Item	Description	Action
Oil level in reservoir	Insufficient hydraulic fluid will not meet the cooling demands of system.	Fill the reservoir to the proper level with clean hydraulic oil.
Heat exchanger (if equipped)	The heat exchanger is not sufficiently cooling the system.	Check the air flow and input air temperature for the heat exchanger. Clean, repair, or replace the heat exchanger as necessary.
Bypass valve	A partially activated bypass valve may result in heat generation within the system.	Verify that the bypass valve is fully closed and that the valve is seating properly. Repair or replace it as necessary.
SCR (System Check / Relief) Valves	A partially activated SCR valve or SCR valves with relief settings too low may result in heat generation within the system.	Verify that the SCR valve is seating properly and is at the correct relief setting. Repair or replace it as necessary.
Oil filters	Clogged oil filters may result in an insufficient supply of cool oil to the system.	Inspect the oil filters and verify that they are still operable. Replace them if necessary.
Machine load	Excessive loads or extreme duty cycles could result in the pump and/ or motor operating at speeds and pressures beyond system design limitations.	Verify that the machine is operating within the parameters for which it was designed. If necessary, reduce the load on the machine.

### System response is sluggish

Item	Description	Action
Reservoir oil level	There is an insufficient amount of hydraulic fluid, resulting in an inadequate supply for the system loop.	Fill the reservoir to the proper level with clean hydraulic fluid.
Input control signal (linkage, current, or pressure)	The pump is receiving a faulty control signal: (MDC - binding or broken linkage; EDC - faulty or inadequate electrical signal; HDC - blocked or incorrectly orificed control lines).	Verify that the input signal is correct and identical in both directions.
Pump control	A damaged pump control or control spool will not correctly transmit the control input signal to the pump.	Verify that the pump's control is operating properly and that the control spool is not damaged or worn and moves freely within its bore. Clean, repair, or replace it as necessary.
Bypass valve	A partially activated bypass valve will cause cross port leakage.	Verify that the bypass valve is closed and that the valve is seating properly. Clean, repair, or replace it as necessary.
SCR (system check / relief) valves	One or both of the SCR valves may be binding within their bores.	Verify that the SCR valves operate freely. Repair or replace them as necessary.
Charge pressure (in neutral)	Low charge pressure resulting from a damaged charge pump or low charge pressure relief valve setting. Charge pressure may be insufficient to recharge the system loop.	Inspect the charge pump for damage and verify the charge pressure relief valve setting. Repair or replace it as necessary.
Charge pressure (in stroke)	There is low charge pressure resulting from internal leakage within the system.	Repair or replace the component or components within the system causing the internal leakage.



## Troubleshooting

Item	Description	Action
Servo pressure	There is insufficient pressure differential across the servo piston.	Check servo pressures at port M4 and M5 to verify sufficient pressure delta. Verify that the servo supply and drain paths are unobstructed and that any orifices are of the correct size and free of debris. Clean, repair, or replace as necessary.
Charge pump	The charge pump has been damaged or installed with the incorrect rotational orientation.	Verify that the charge pump is in good working order and that it is correctly installed. Repair or replace it as necessary.

## System will not operate in either direction

Item	Description	Action
Oil level in reservoir	There is an insufficient amount of hydraulic fluid, resulting in an inadequate supply for the system loop.	Fill the reservoir to the proper level with clean hydraulic oil.
Input control signal (linkage, current, or pressure)	The pump is receiving a faulty control signal: (MDC - binding or broken linkage; EDC - faulty or inadequate electrical signal; HDC - blocked or incorrectly orificed control lines).	Verify that the input signal is correct and identical in both directions. Adjust, clean, repair, or replace the input device as necessary.
Oil filters	Clogged oil filters may result in an insufficient supply of oil to the system.	Inspect the oil filters and verify that they are still serviceable. Replace them as necessary.
Bypass valve	A partially activated bypass valve may result in a cross port leakage.	Verify that the bypass valves are closed and that the valves are seating properly. Clean, repair, or replace them as necessary.
Charge pressure (in neutral)	Charge pressure may be insufficient to recharge the system loop.	Inspect the charge pump for damage and verify that the charge pressure relief valve is at the proper setting. Repair or replace it as necessary.
Charge pressure (in stroke)	Low charge pressure resulting from internal leakage within the system.	Repair or replace the component or components within the system causing the internal leakage.
Servo pressure	There is an insufficient pressure differential across the servo piston.	Check servo pressures to verify sufficient pressure delta. Verify that the servo supply and drain paths are unobstructed and that any orifices are of the correct size and free of debris. Clean, repair, or replace them as necessary.
Charge pump	The charge pump is damaged or has been installed with the incorrect rotational orientation.	Verify that the charge pump is in good working order and that it is correctly installed. Repair or replace it as necessary.
SCR (system check / relief) valves	The SCR valves are malfunctioning or improperly set.	Verify that the SCR valves are operating and properly set. Repair or replace them as necessary.
Displacement limiters	The displacement limiters may be improperly adjusted such that the servo piston is prevented from moving in one direction.	Verify that the displacement limiters are adjusted to the proper setting.

## System will not operate in one direction

Item	Description	Action
Input control signal (linkage, current, or pressure)	The pump is receiving a faulty control signal: (MDC - binding or broken linkage; EDC - faulty or inadequate electrical signal; HDC - blocked or incorrectly orificed control lines).	Verify that the input signal is correct and identical in both directions. Adjust, clean, repair, or replace the control module as necessary.
SCR (System Check/Relief) valves	The SCR valves are malfunctioning or improperly set.	Verify that the SCR valves are operating properly. Repair or replace them as necessary.

### Troubleshooting

Item	Description	Action
Pump control	A damaged or biased pump control may be sending a signal commanding the pump to stroke only in one direction.	Verify that the pump's control is functioning properly. Repair or replace it as necessary.
Servo pressure	The drain or supply path to one side of the servo piston may be blocked.	Verify that the servo supply and drain paths are unobstructed and that any orifices are of the correct size and free of debris. Clean or repair them as necessary.
Displacement limiters (if equipped)	The displacement limiters may be improperly adjusted such that the servo piston is prevented from moving in one direction.	Verify that the displacement limiters are adjusted properly.

### Neutral difficult or impossible to find

Item	Description	Action
Input control signal (linkage, current, or pressure)	The pump is receiving a faulty control signal: (MDC - binding or broken linkage; EDC - faulty or inadequate electrical signal; HDC - blocked or incorrectly orificed control lines).	Verify that the input signal is correct and identical in both directions. Adjust, clean, repair, or replace control module as necessary.
System pressure	With no input signal to the control, a pressure delta may exist between the two sides of the working loop.	Readjust pump neutral setting. Refer to <a href="#">Pump neutral adjustment</a> on page 21.
Servo pressure	With no input signal to the control, a pressure delta may exist across the servo piston.	Readjust the control neutral setting. Refer to <a href="#">Control neutral adjustment for MDC and EDC</a> on page 22.
PCP pressure (EDCs only)	With no input signal to the control, a pressure difference may exist across the control spool.	Replace the EDC.

## Adjustments

### Overview

This section offers instruction on how to perform adjustments to the Series 42 pump. Read through the entire procedure before beginning any service activity. Refer to [Port locations and pressure gauge installation](#) on page 13 for location of gauge ports and suggested gauge size.

### Displacement limiter adjustment

You may adjust displacement limiters to achieve a desired maximum flow rate. For Series 42 pumps, displacement limiters are available on one or both sides of the servo piston.

Accurate adjustment of the displacement limiters requires the use of a test stand capable of measuring system flow output from both the A and B output ports.

1. Mount the pump onto the test stand.
2. Loosen the displacement limiter seal lock nut (L025), but do not remove it.
3. Start the prime mover and place the pump into full stroke in one direction. Note the system output flow from either the A or B system port.
4. Adjust the displacement limiter adjustment screw (L020) until the desired output flow is reached. Turning the displacement limiter adjustment screw clockwise decreases the maximum output flow setting. Turning the displacement limiter adjustment screw counter clockwise increases the maximum output flow setting.

#### **Warning**

---

##### WARNING

The seal nut lock nut must be retorqued after every adjustment and the limiter screw must have full thread engagement in the servo piston cover to prevent unexpected changes in operating conditions and to prevent external leakage during unit operation.

---

The pump achieves maximum flow when the displacement limiter does not contact the servo piston while the unit is in full stroke. One full turn of the displacement limiter adjustment screw results in approximate flow output changes per the table.


---

5. Once you achieve the proper output flow, torque the displacement limiter seal lock nut (L025) to 20-26 N·m [15-19 lbf·ft] while holding the position of the adjustment screw (L020).


**Adjustments**

- If required, repeat this procedure using the opposite displacement limiter to set the output flow in the other direction.

*Displacement limiters*

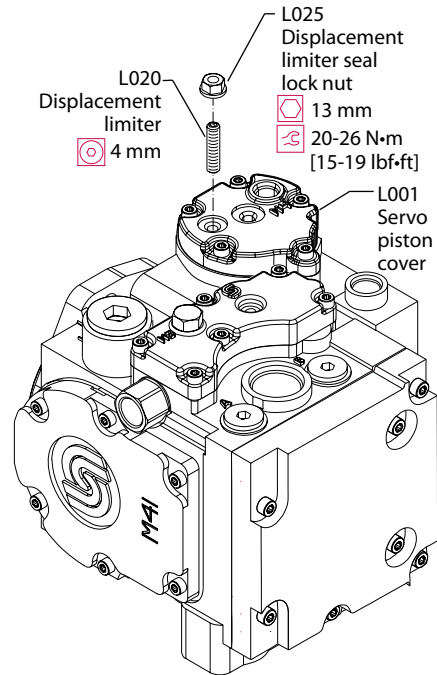

RIGHT SIDE VIEW (M4)

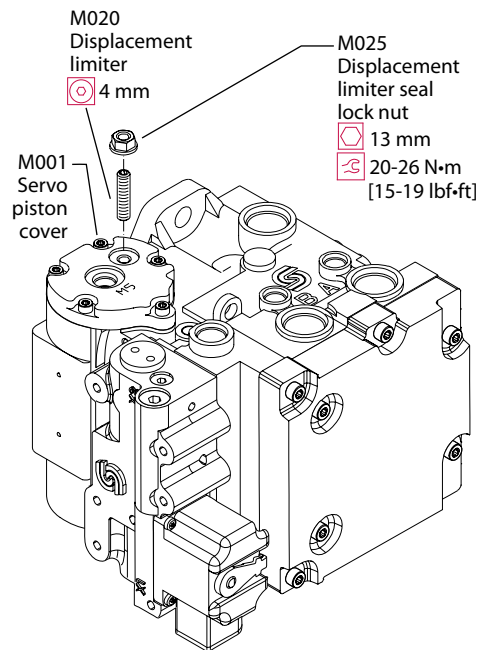

LEFT SIDE VIEW (M5)

*Displacement limiter adjustment*

Size	Displacement change per turn
41 cm <sup>3</sup>	5.0 cm <sup>3</sup> /rev [.31 in <sup>3</sup> /rev]

## Adjustments

### Conversions

Changes to the displacement limiter settings are conversions to the pump. Change the nomenclature on the specification tag to reflect the alterations of the unit. Refer to **520L0637 Series 42 Technical Information Manual, Model Code Supplement**, or contact your Danfoss representative for the appropriate nomenclature.

### Pump neutral adjustment


Zero output flow from the pump defines the neutral condition. To attain zero output flow, the pump must achieve both mechanical neutral and control neutral conditions. Mechanical neutral is the condition when the swashplate is at zero angle without any signal input from the control. Set mechanical neutral prior to setting control neutral.

#### **Warning**

**To prevent injury, disable the machine: raise wheels off the ground or disconnect the mechanism..**

1. Disable the control input to the pump by equalizing the pressures on both ends of the pump servo piston. To accomplish this, connect an SAE-06 hose between servo gauge ports, M4 and M5.
2. Install pressure gauges in gauge ports M1 and M2 to measure system pressure.
3. Start the prime mover and run at normal operating speed.
4. Loosen the pump neutral adjustment seal lock nut (T060) in the center of the servo cover on the right side of the pump.
5. Turn the adjustment screw (T015) clockwise until one of the gauges registers an increase in system pressure. Mark the position of the adjustment screw. Turn the screw counterclockwise until the other gauge registers an increase in system pressure. Mark the position of the adjustment screw. Turn the adjustment screw clockwise to a position halfway between the marks. The system pressure gauges should indicate equal pressures.
6. While holding the adjustment screw in position, torque the seal lock nut (T060). Torque to 31-50 N·m [23-37 lbf·ft].
7. Stop the prime mover and remove the hose between gauge ports M4 and M5. Remove the pressure gauges in gauge ports M1 and M2. Reinstall the plugs in the gauge ports.
8. Proceed to the control neutral adjustment section on the next page.


#### *Pump neutral adjustment screw*

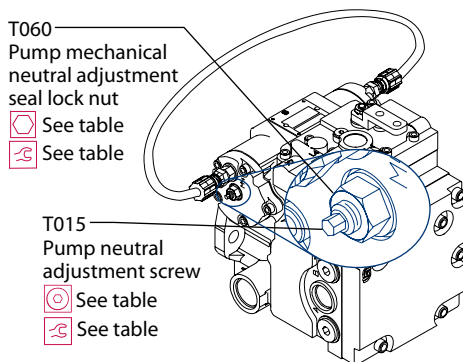

MDC Shown

**Adjustments**

Neutral adjustment gauge port readings

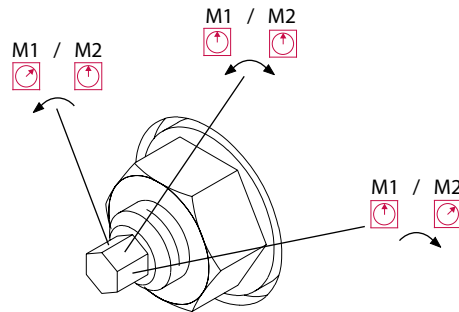

Frame size cm <sup>3</sup>	41/51	
Control	MDC/EDC	NFP
Lock nut mm	17	17
Servo adjust screw mm [in]	7	7
Lock nut torque N·m [lbf·ft]	31-50 [23-37]	31-50 [23-37]

**Control neutral adjustment for MDC and EDC**

Control neutral adjustment aligns the pump swashplate and the control spool so that a zero angle control setting provides a zero degree swashplate setting. Perform this adjustment whenever you adjust or move any part of the control or swashplate mechanism or after you adjust the pump neutral setting.

**Warning**


The following procedure requires the vehicle/machine to be disabled (wheels raised off the ground, work function disconnected, etc.) while performing the procedure in order to prevent injury to the technician and bystanders.

1. Disconnect the external control linkage (for MDC) or control signal input (for EDC) from the pump.
2. Install pressure gauges in the servo gauge ports M4 and M5 to measure pressure on the pump servo piston.
3. Start the prime mover and run at normal operating speed.
4. Loosen the control neutral adjustment seal lock nut (D015).
5. Turn the adjustment screw (D014) clockwise until one of the gauges registers an increase in pressure on the servo piston. Mark the position of the adjustment screw. Turn the screw counterclockwise until the other gauge registers an increase in pressure on the servo piston. Mark the position of the adjustment screw. Turn the adjustment screw clockwise so that it is midway between the marks. Adjustment screw movement produces constant change for both directions, so both the pressure gauges should indicate nearly equal pressures.
6. While holding the adjustment screw (D014) in position, torque the seal lock nut (D015) to 31-50 N·m [23-37 lbf·ft].
7. Stop the prime mover and remove the pressure gauges. Remove the plugs in the gauge ports.

## Adjustments

8. Connect the external control linkage (for MDC) or control signal input (for EDC) to the pump. Reconnect the work function.


*Control neutral adjustment screw*

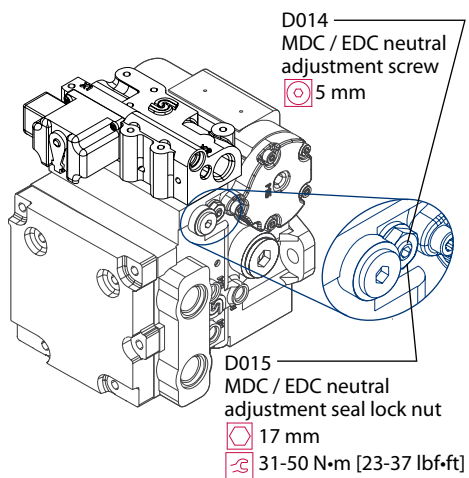

E100003E

EDC Shown

*Equalization of pressure gauges using pump neutral adjustment screw*

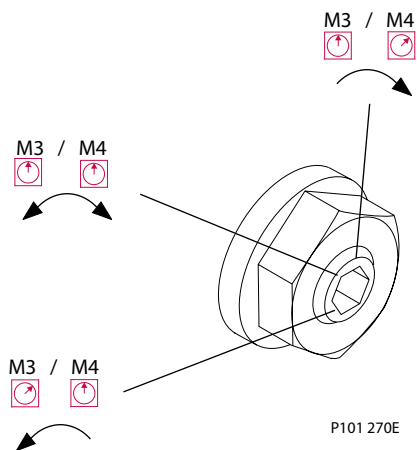

## Minor repair

### Standard procedures

#### Remove the pump

Prior to performing certain minor repairs on the Series 42 pump, it may be necessary to remove the pump from the machine. Chock wheels of vehicle to prohibit movement. Be aware that hydraulic fluid may be under high pressure and may be hot. Inspect the outside of the pump and fittings for damage.

#### Keep it clean

Cleanliness is a primary means of assuring satisfactory pump life, on either new or repaired units. Clean the outside of the pump thoroughly before disassembly. Take care to avoid contamination of the system ports. Clean parts using a clean solvent wash and air dry.

As with any precision equipment, keep all parts free of foreign materials and chemicals. Protect all exposed sealing surfaces and open cavities from damage and foreign material. If left unattended, cover the pump with a protective layer of plastic.

#### Inspect for system contamination

Inspect the pump for system contamination. If you find contamination, fully disassemble, clean, and inspect all components of the pump. Pump warranty will be voided unless disassembly and rebuild are performed by a Danfoss Global Service Provider.

#### Replace the O-rings and gaskets

Danfoss recommends you replace all O-rings and gaskets. Lightly lubricate O-rings with clean petroleum jelly prior to assembly.

#### Lubricate all moving parts

During reassembly, coat all moving parts with a film of clean hydraulic oil. This will help to lubricate these parts during start-up. For fluid quality requirements, refer to bulletin **BC152886484524** *Hydraulic Fluids and Lubricants, Technical Information*.

## EDC Spool, linkage, and neutral adjustment screw

It may be necessary to remove the control spool, control linkage, and control neutral adjustment screw for cleaning and to change the O-rings or the seal lock nut.

### Removal

1. Clean the external surface of the pump.
2. Use a T30 Torx to remove the screws (D002). Remove control modules from pump. Remove and discard gaskets (E011).

[Note control linkage assemblies, and the way the summing links engage the control spool flats.](#)

3. Remove the summing links (D011) by sliding them off the feedback link. Using a 4mm internal hex wrench, remove the summing link pivot pin (D010). Slide the feedback link (D012) towards the servo piston to disengage the neutral adjustment link (D013). Remove all linkages.
4. Remove plugs (D032). Note the orientation of the control spools (D90) and which side of the pump the springs (D91) are located. Remove control spools, washers and springs.
5. Remove the seal nuts (D015) and neutral adjustment screws (D014). Note position of adjustment screws for reassembly.

### Installation


1. Install adjustment screws (D014) to position previously noted. Install lock nuts (D015). Do not tighten the nuts. After pump is installed on machine, refer to [Control neutral adjustment for MDC and EDC](#) on page 22 for control neutral adjustment procedure.



**Minor repair**

2. Lubricate and install spools (D90), washers (D92) and springs (D91), noting proper orientation. Install the two side bore plugs and torque to 65 N·m [48 lbf·ft].
3. Combine the center pin of the feedback links (D012) with the mating bore of the neutral adjustment links (D013). Insert the end of the feedback links into the servo piston slots. Mate the neutral adjustment links with the control neutral adjustment screws (D014). Insert the linkage pivot screws (D010) and torque to 12 N·m [9 lbf·ft]. Install the summing links (D011). It may be necessary to rotate the control spools so that the summing link forks engage the flats on the control spools.
4. Install new gaskets (E011). Install controls.
5. Install screws (D002). Torque to 16 Nm [12 lbf·ft].

*MDC / EDC spool and linkage*

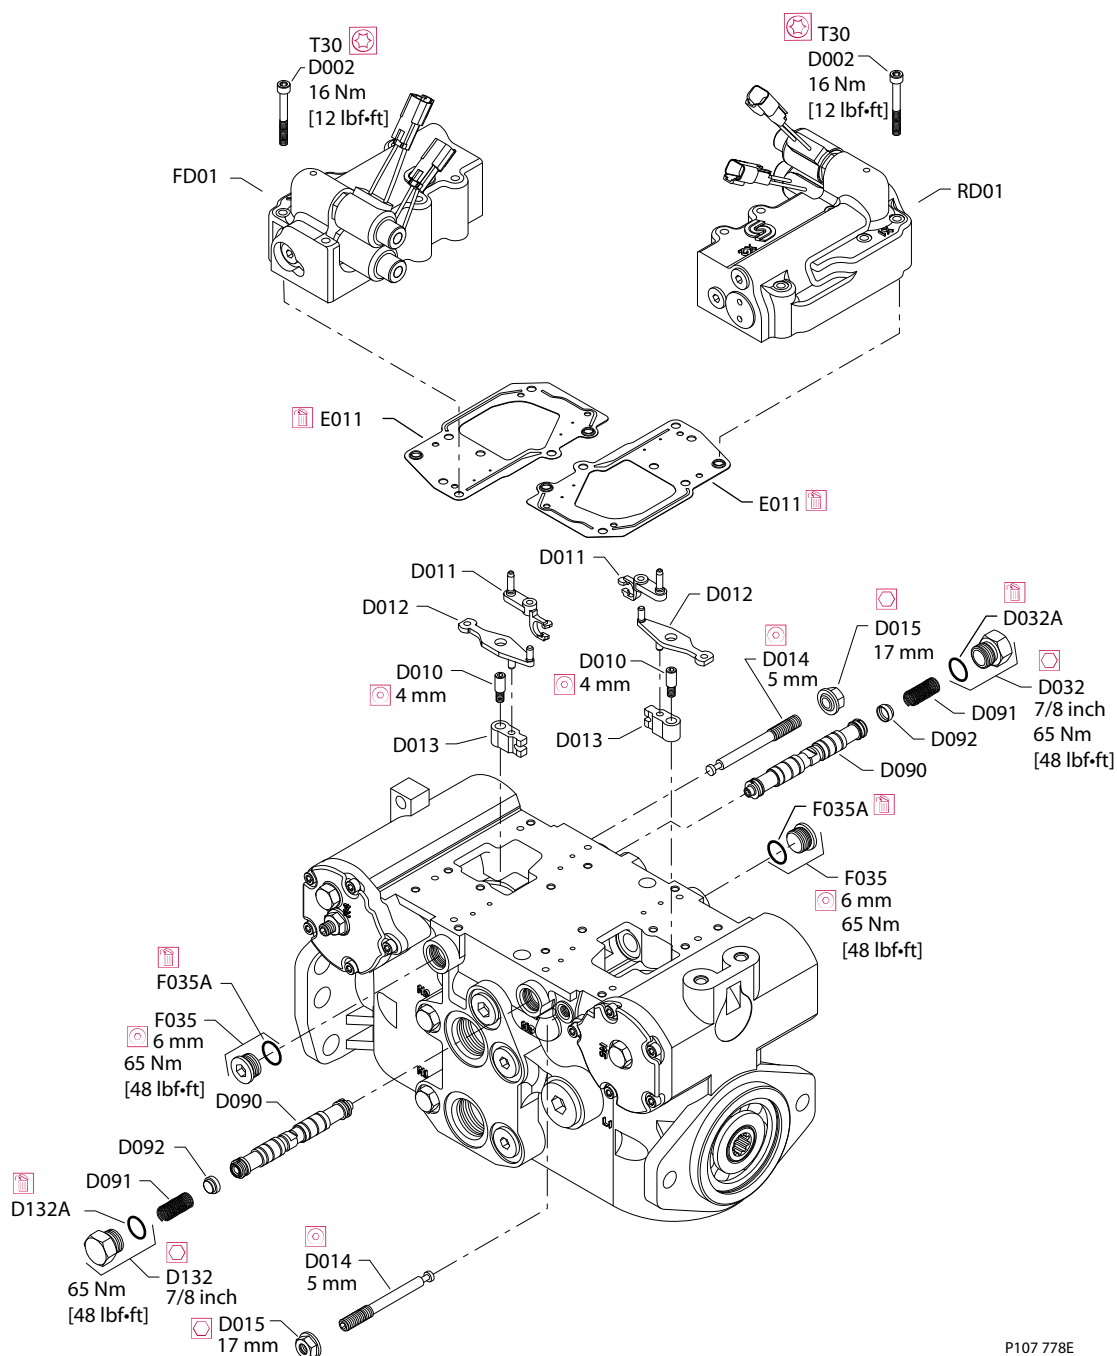

P107 778E

## Minor repair

### FNR controls

FNR controls are non-feedback type controls. The FNR controls consist of external, solenoid-actuated spool valves mounted on the pump housing.

It may be necessary to remove the FNR controls to clean the ports and replace the O-rings, however the controls themselves are not serviceable.

#### Removal of FNR modules

1. Clean the pump and control housings.
2. Use a 4 mm internal hex to remove screws (D081). Remove the control modules from the pump housing.
3. Remove and discard the O-rings (FD01A) from the control ports. Examine the ports for cleanliness.
4. Use a 4 mm internal hex to remove screws (D180). Remove plates (D043) and (D143).
5. Remove and discard gaskets (D044).
6. If necessary, remove plugs (D032) and (F035). Remove and discard O-rings (D032A) and (F035A).

---

The spools are solid; other than plugging the bores, they do not provide any function.

---

7. Unless leaking fluid, adjusting screws (D014) and lock nuts (D015) do not need to be removed.

---

Other than plugging the bores, adjusting screws do not provide any function.

---


#### Installation of FNR modules

1. If previously removed, install spools (D090). Lubricate and install new O-rings (D032A), and (F035A). Install plugs (D032) and (F035). Torque to 65 Nm [48 lbf·ft].
2. If previously removed, install adjusting screws (D014) and locknuts (D015). Torque locknuts to 40 Nm [30 lbf·ft].
3. Clean the sealing surfaces on the controls and housing.
4. Install gaskets (D044). Install plates (D043) and (D143). Use a 4 mm internal hex to install screws (D180). Torque to 16 Nm [12 lbf·ft].
5. Using petroleum jelly, lubricate and install O-rings (FD01A) to bottom of controls.

Minor repair

6. Install control modules. Use a 4 mm internal hex, install screws (D081). Torque to 16 N·m [12 lbf·ft].

FNR Minor Repair

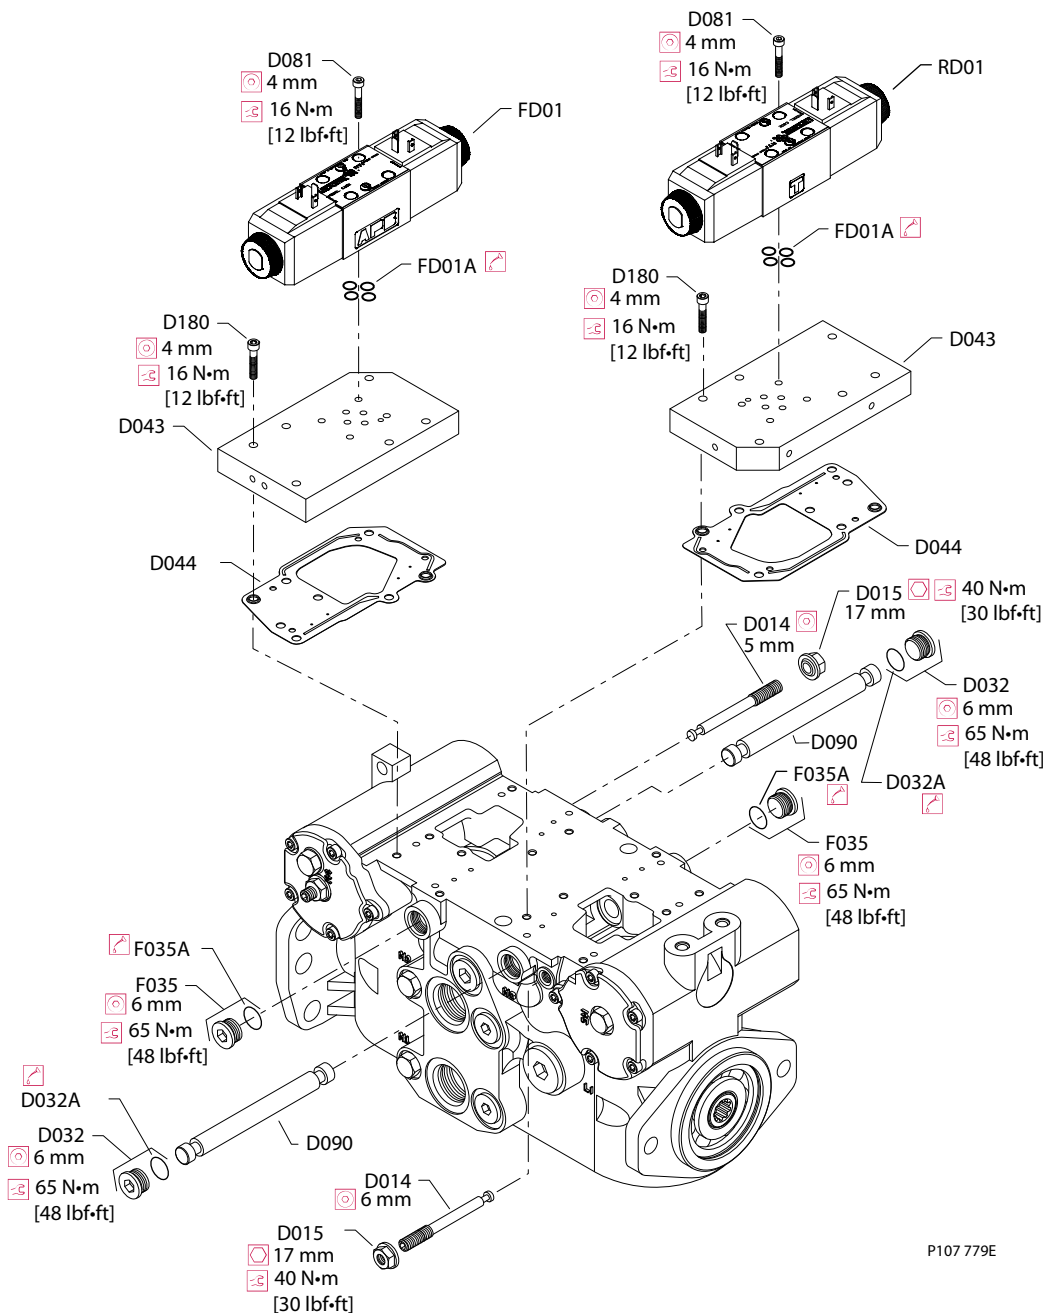

P107 779E

System Check Relief (SCR) valves

The System Check Relief valve assembly performs the charge check, high pressure relief, and loop bypass functions. You may remove this assembly for cleaning and replacement of O-rings.

**Minor repair****Removal**

1. Using a 1 inch wrench or an 8 mm internal hex, remove the valve seat plugs (K001) from the pump housing. Remove and discard the O-rings and backup rings (K008, K009, and K010).
2. Remove the SCR valve assemblies (H005/J005).

---

If SCR valve does not have a bypass plunger, skip steps 3 and 4.

---

3. Use a snap ring pliers to remove retaining ring (K005).
4. Remove bypass plunger (K002) and O-rings (K006). Discard O-rings.

**Inspection**

Inspect the valves and mating seats in the valve seat plugs (K001) for damage or foreign material.

---

The SCR valves (H005/J005) are not serviceable; replace as a complete unit.

---

**Replacement**

---

If SCR valve does not have a bypass plunger, skip steps 6 and 7.


---

1. Lubricate and install O-rings (K006) onto bypass plunger.
2. Install bypass plunger (K002). Install snap ring (K005).
3. Install new outer O-ring (K008), backup ring (K009), and inner O-ring (K010) on each valve seat plug.
4. Verify that the conical springs are properly retained on the check poppets/relief valves (H005/J005). Install the check poppet/relief valve assemblies into the pump housing. Ensure that the valve assembly moves freely in its bore.

**Minor repair**

- Using a 1 inch wrench or an 8 mm internal hex, install the valve seat plugs or valve seat/bypass plugs into the pump housing and torque to 82 N·m [60 lbf·ft].

*System check relief valve components*

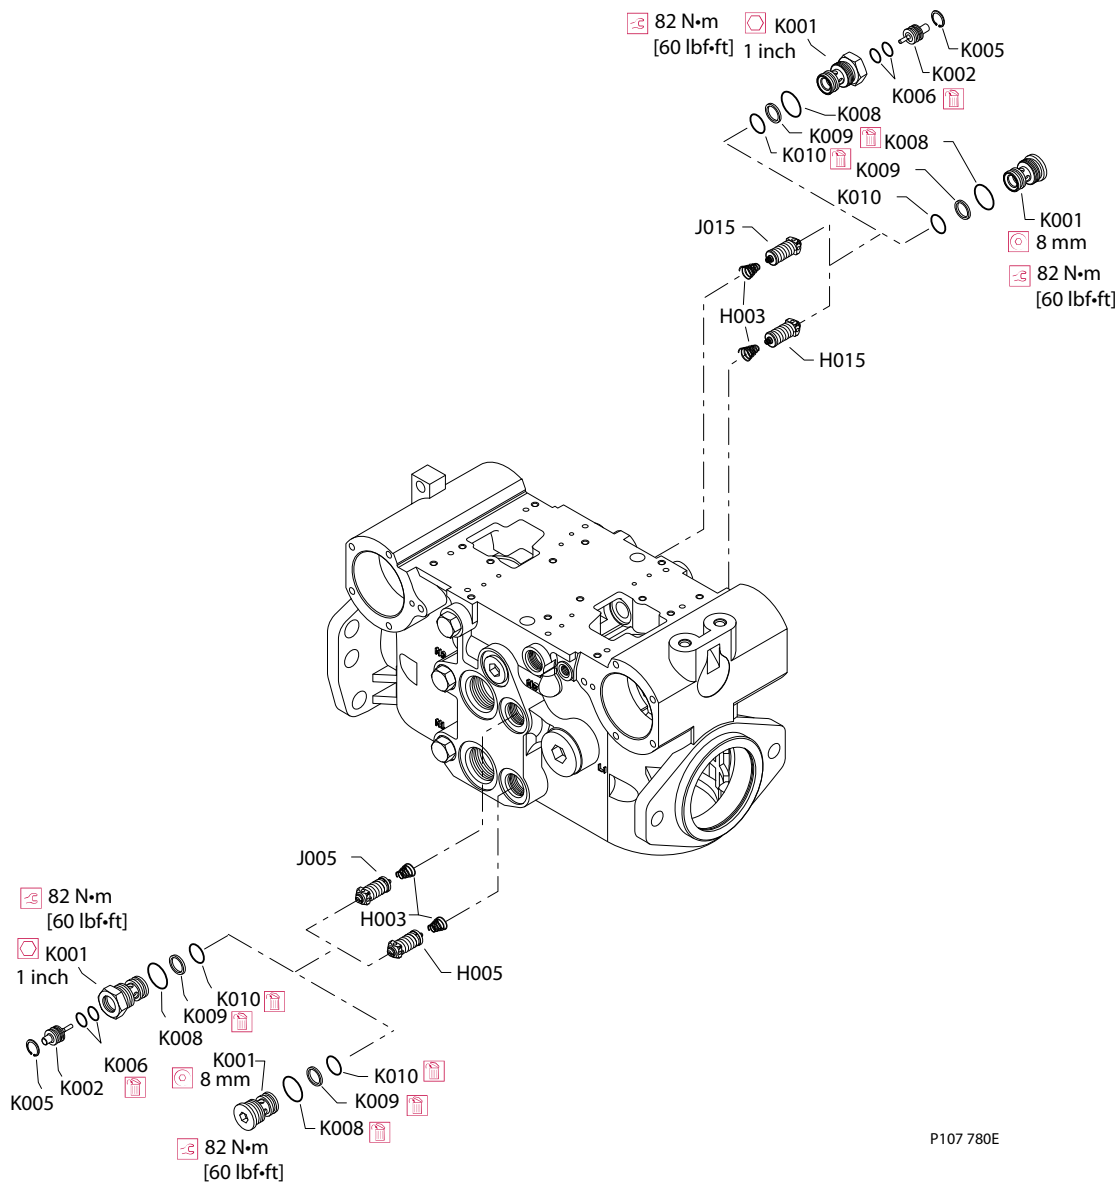

P107 780E

**Servo piston covers and NFPH control orifices**

You can remove the servo piston covers to replace the gasket or to clean or replace the NFPH control orifices.

**Minor repair**

**Disassembly**

1. Use a 13 mm or 17 mm wrench to remove locknuts (T060).
2. Using a T-30 Torx, remove the servo cover screws (L005/M005).

**⚠ Warning**

Unintended vehicle movement hazard: When you remove the right side servo piston cover, adjust neutral and control neutral after reinstalling the pump. Refer to [Pump neutral adjustment](#) on page 21 and [Control neutral adjustment for MDC and EDC](#) on page 22.

3. Remove servo piston covers (L001/M001).


To remove the right side servo cover turn the neutral adjusting screws (T015) clockwise until cover can be turned off without interference from housing.

4. Remove gaskets (F009). Clean gasket sealing surfaces.
5. If so equipped, NFPH orifice plugs (E051 and E052) are located beneath the servo covers. If necessary, use a 3 mm internal hex to remove the orifices and clean them.

**Assembly**

1. If previously removed, replace the NFPH orifice plugs (E051, E052). Torque to 2-4 Nm [1.5-3 lbf·ft].
2. Install new gaskets (L002/M002).
3. On the right side, thread the servo piston cover (L001) onto the neutral adjustment screw. Then, while holding the cover, turn the neutral adjustment screw (T015) counter-clockwise to run the cover down the screw threads.
4. Using a T30 Torx driver, install the servo piston cover screws (L005/M005). Torque to 16 N·m [12 lbf·ft] in the pattern shown.

*Bolt torque pattern*

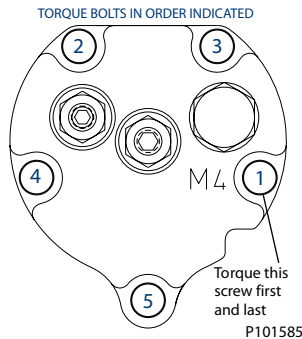

5. Use an 8 mm wrench to secure neutral adjusting screw. Install a new seal lock nut (T060) onto the neutral adjustment screw (T015). Do not torque at this time.
6. Perform pump neutral adjustment and control neutral adjustment procedures. Refer to [Control neutral adjustment for MDC and EDC](#) on page 22.


Removal of the servo covers may change the position of optional displacement limiters; readjust if necessary (see [Displacement limiter adjustment](#) on page 19).

*Wrench size for locknut (T060) and neutral adjust screw (T015)*

Frame size cm <sup>3</sup>	41/51	
Control	MDC/EDC	NFPE/NFPH
Lock nut (T060)	17 mm	17 mm
Neutral adjust screw (T015)	7 mm	7 mm


**Minor repair**

*Servo piston covers*

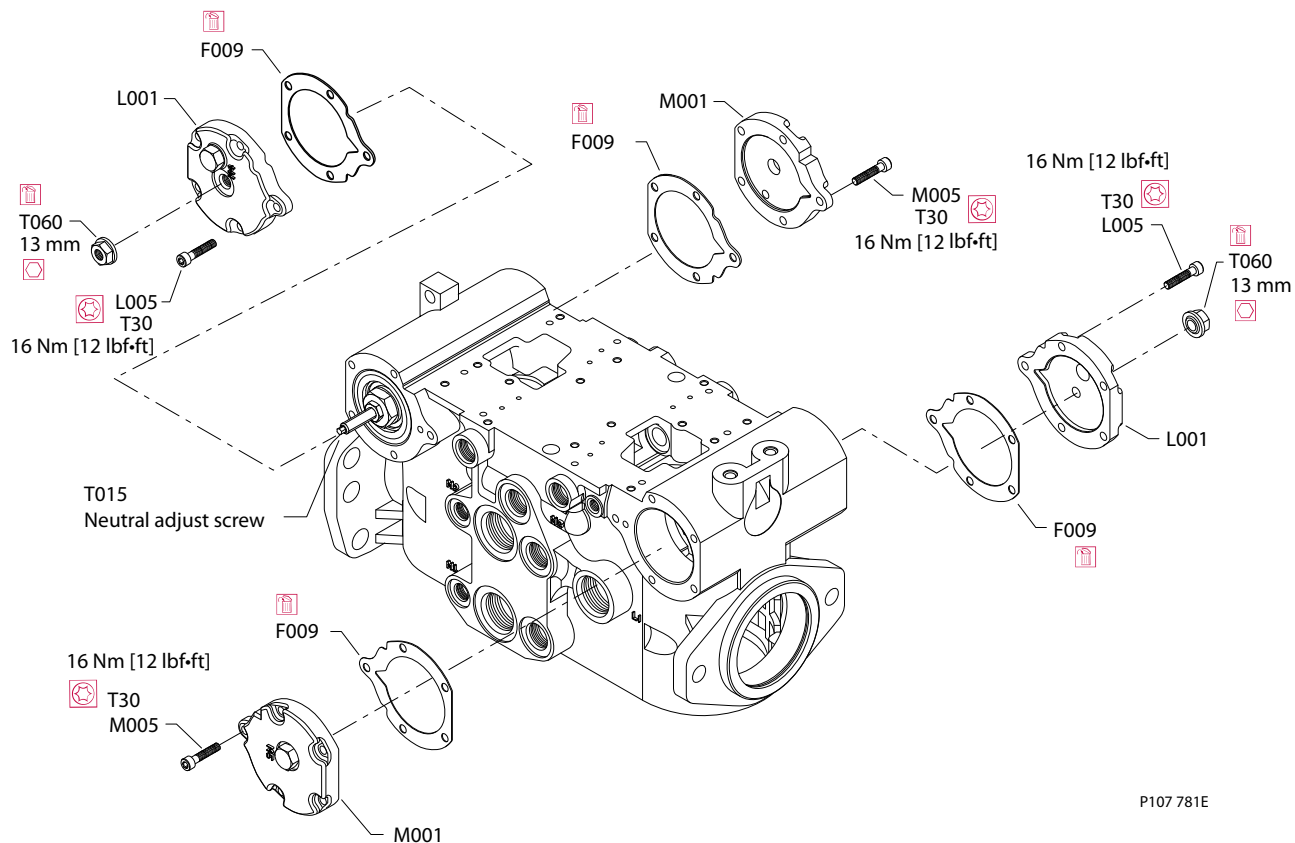

P107 781E

*Removing NFPH orifices - single pumps shown*

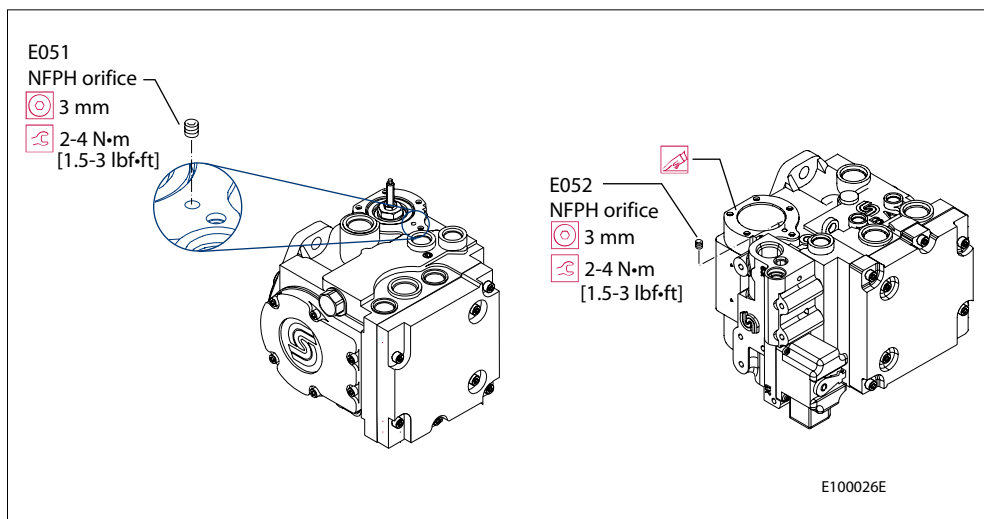

E100026E

**Shafts**

Orient housing so shaft to be replaced is on top. Do not move the pump until the shaft has been replaced.

## Minor repair

### Remove rear shaft

1. Remove retaining ring (C012). Remove bearing (C009).
2. Pull shaft (C006) from housing. If necessary, use a snap ring pliers to pull shaft.


 **Caution**

---


Do not damage machined surfaces of pump when removing shaft.

---

### Remove front shaft (with seal carrier)

1. Remove retaining ring (F096). Remove shaft seal carrier (C020).
2. Remove shaft seal carrier (C020). Remove and discard O-ring (C017).
3. Press seal out of carrier and discard it.
4. Remove shaft with bearing from housing. 
5. If replacing bearing, use a snap-ring pliers to remove retaining ring (C002 or C010). Remove roller bearing (C003 or C008).


### Remove front shaft (without seal carrier)

1. Remove shaft with bearing from housing. 
2. If replacing bearing, use a snap-ring pliers to remove retaining ring (C010). Remove roller bearing (C008).

### Inspect shafts

Check to see that the shaft and its splines are straight and free of damage or heavy wear. Inspect the shaft sealing surface. Replace the shaft if a groove exists at the sealing land. Clean the sealing area with a nonabrasive material.

### Install rear shaft

1. Lubricate and install bearing (C009) onto shaft (U001).
2. Install shaft with bearing into housing.  Install retaining ring (C012).


 **Caution**

---

Do not damage machined surfaces of pump when removing shaft.

---

### Install front shaft (with seal carrier)


1. Lubricate and install bearing (C003) onto shaft.
2. Use a snap ring pliers to install retaining ring (C002). Install shaft with bearing into housing. 
3. Lubricate and install seal (C018) into seal carrier (C020). Lubricate and install O-ring (C017).
4. Install seal carrier into housing. Install retaining ring (F096).

### Install front shaft (without seal carrier)


1. Lubricate and install roller bearing (C008).



Minor repair


2. Install shaft with bearing into housing. Install retaining ring (C010). 

Replace shafts

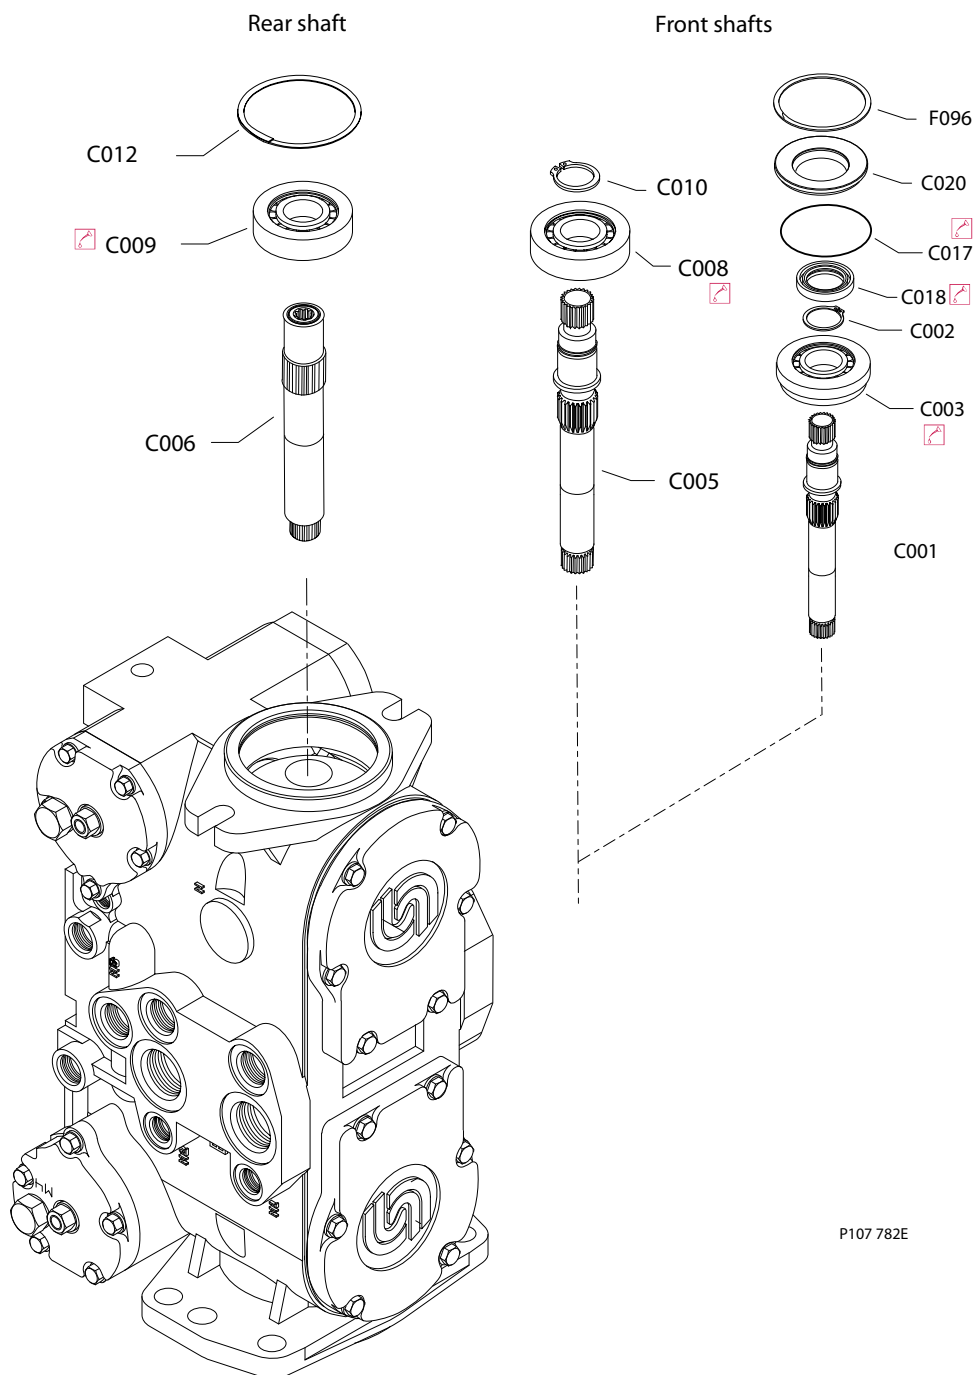

Minor repair

Seal carrier assembly

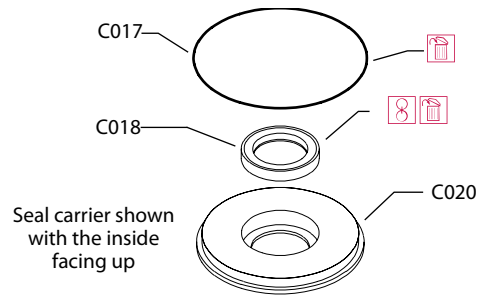

Press seal to bottom of carrier

P107 783E

## Port locations and torque chart

### Fastener, plug and port locations and gauge installation

The following table shows the fastener, plug and port locations and gauge sizes needed.

#### Port information

Port identifier	Port size	Wrench size	Pressure obtained	Gauge size, bar [psi]
L1, L2	1 5/16-12 UN	15 mm internal hex	Case drain	10 [100]
M1, M2	9/16-18 UNF	7 mm internal hex	System pressure	600 [10,000]
M4, M5	9/16-18 UNF	11/16 inch hex	Servo pressure	50 [1000]

#### System ports

Port identifier	
A, B	1 5/16-12 UN
C, D	1 5/16-12 UN

### Fastener size and torque chart


Item	Fastener	Wrench size	Torque
D081	EDC/MDC kit screws (not shown)	5 mm internal hex/T30 Torx	16 N•m [12 lbf•ft]
F007	Side cover screws	13 mm hex	39 N•m [29 lbf•ft]
D002	Control cover screws	5 mm internal hex/T30 Torx	16 N•m [12 lbf•ft]
L020	Displacement limiter adjustment screws	4 mm internal hex	N/A
M005	Servo cover screws	5 mm internal hex/T30 Torx	16 N•m [12 lbf•ft]
T060	Seal nut	13 mm hex	23 Nm [17 lbf•ft]

### Plug size and torque chart

Item	O-ring plug	Wrench size	Torque
D032	3/4-16 UNF	7/8 inch hex	65 N•m [48 lbf•ft]
F093	9/16-18 UNF	11/16 inch hex / 1/4 inch internal hex	40 N•m [30 lbf•ft]
L010	9/16-18 UNF	11/16 inch hex	35 N•m [26 lbf•ft]
K001	3/4-16 UNF	8 mm internal hex	82 Nm [60 lbf•ft]
F030	7/8-14 UNF	3/8 inch internal hex	90 N•m [66 lbf•ft]
F035	3/4-16 UNF	5/16 inch internal hex	82 Nm [60 lbf•ft]
F091	1 5/16-12 UNF	5/8 inch internal hex	200 Nm [150 lbf•ft]

**Port locations and torque chart**

*Fastener, plug and Port locations*

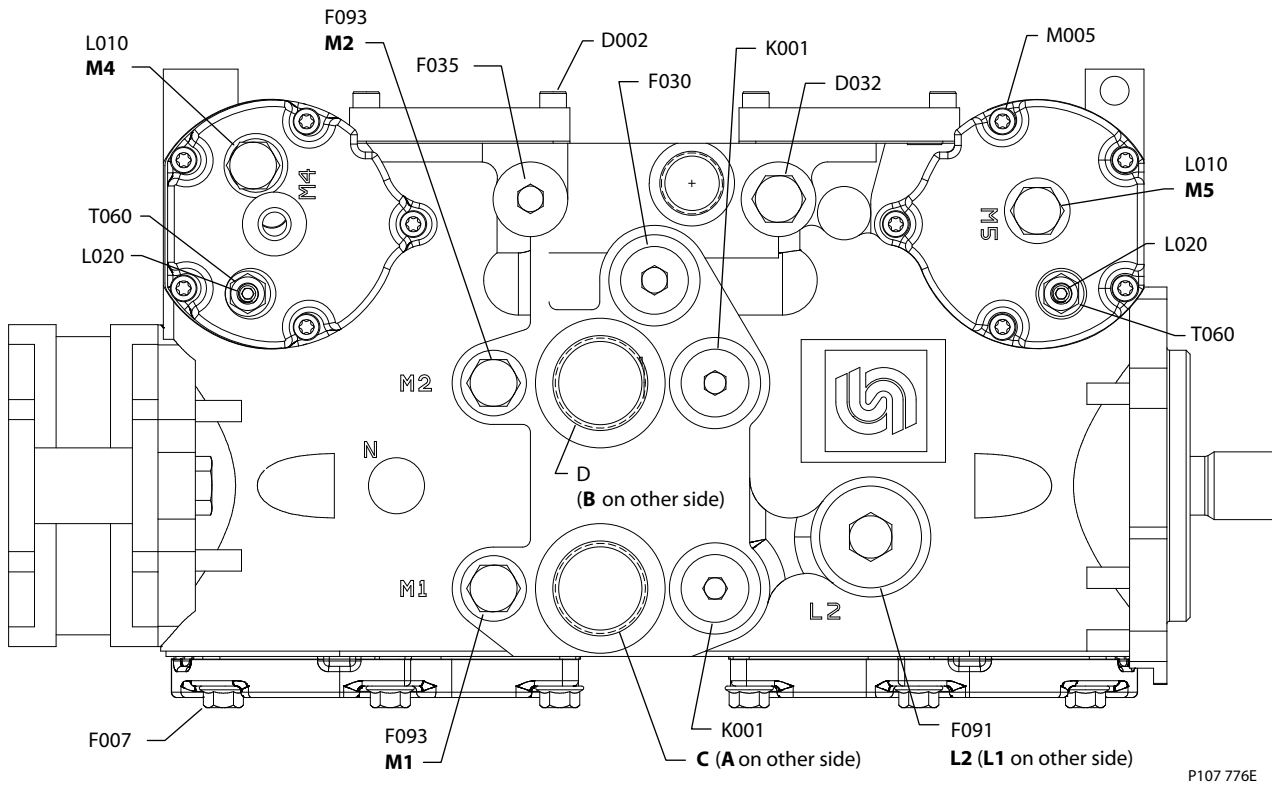

P107 776E

### Products we offer:

- DCV directional control valves
- Electric converters
- Electric machines
- Electric motors
- Gear motors
- Gear pumps
- Hydrostatic motors
- Hydrostatic pumps
- Orbital motors
- PLUS+1® controllers
- PLUS+1® displays
- PLUS+1® joysticks and pedals
- PLUS+1® operator interfaces
- PLUS+1® sensors
- PLUS+1® software
- PLUS+1® software services, support and training
- Position controls and sensors
- PVG proportional valves
- Steering components and systems
- Telematics

**Danfoss Power Solutions** is a global manufacturer and supplier of high-quality hydraulic and electric components. We specialize in providing state-of-the-art technology and solutions that excel in the harsh operating conditions of the mobile off-highway market as well as the marine sector. Building on our extensive applications expertise, we work closely with you to ensure exceptional performance for a broad range of applications. We help you and other customers around the world speed up system development, reduce costs and bring vehicles and vessels to market faster.

Danfoss Power Solutions – your strongest partner in mobile hydraulics and mobile electrification.

### Go to [www.danfoss.com](http://www.danfoss.com) for further product information.

We offer you expert worldwide support for ensuring the best possible solutions for outstanding performance. And with an extensive network of Global Service Partners, we also provide you with comprehensive global service for all of our components.

### Hydro-Gear

[www.hydro-gear.com](http://www.hydro-gear.com)

### Daikin-Sauer-Danfoss

[www.daikin-sauer-danfoss.com](http://www.daikin-sauer-danfoss.com)

Local address:

**Danfoss  
Power Solutions (US) Company**  
2800 East 13th Street  
Ames, IA 50010, USA  
Phone: +1 515 239 6000

**Danfoss  
Power Solutions GmbH & Co. OHG**  
Krokamp 35  
D-24539 Neumünster, Germany  
Phone: +49 4321 871 0

**Danfoss  
Power Solutions ApS**  
Nordborgvej 81  
DK-6430 Nordborg, Denmark  
Phone: +45 7488 2222

**Danfoss  
Power Solutions Trading  
(Shanghai) Co., Ltd.**  
Building #22, No. 1000 Jin Hai Rd  
Jin Qiao, Pudong New District  
Shanghai, China 201206  
Phone: +86 21 2080 6201

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequent changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.