

Programming Guide


# Circuit setup with **Suction EEPR** and **solenoid valve**



**Configuration**


- Circuit setup with stepper valve used as EEPR and liquid solenoid valve
- Stepper EEPR: Controls temperature of case and shuts down for defrost
- Liquid solenoid valve: No temperature control, only shuts off for defrost

**Step 1:** Configure standard Circuit setup. Under Config → Control → Refrigeration → Circuits → Setup, configure circuit for desired settings. Ensure temperature control is set to “EEPR”. If circuit has electric defrost, set defrost type to “Electric”. For time-off defrosts, set defrost type to “Air”.

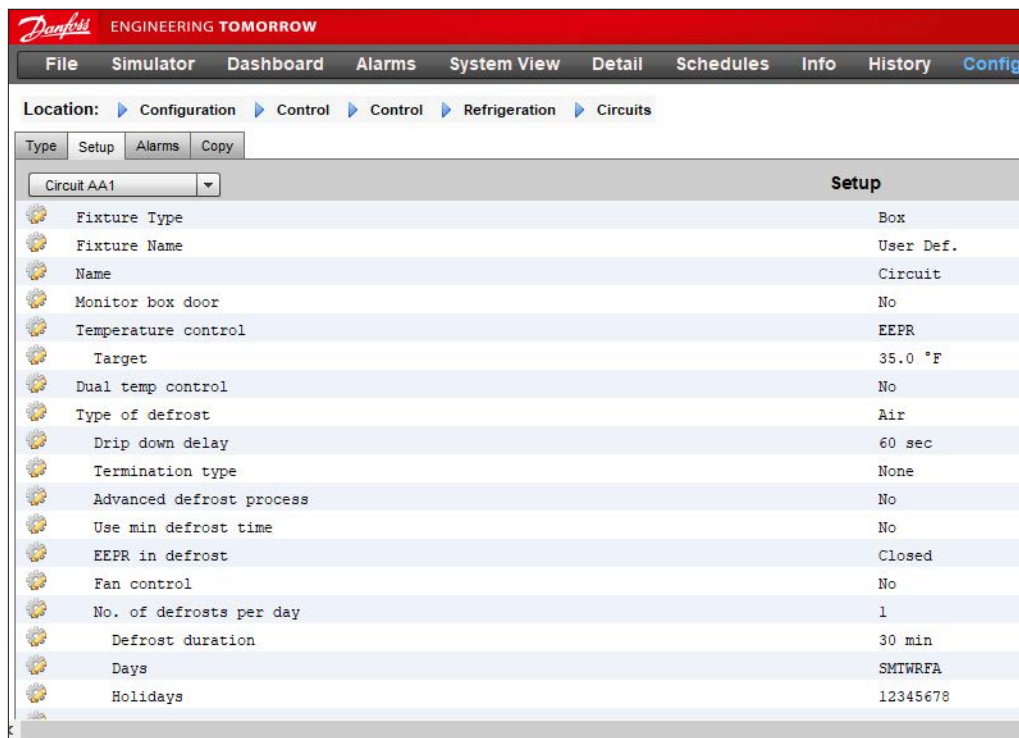





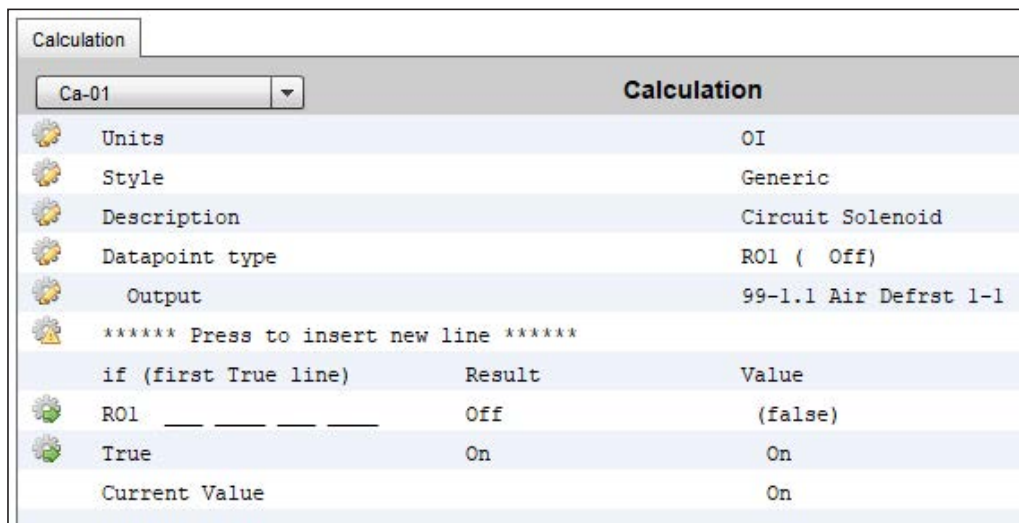






**Step 2:** Configure Addresses. Under Config → Control → Refrigeration → Addresses, assign EEPR output under Variable Outputs tab. Under Relay tab, assign defrost relay. For electric defrost, physical relay should exist. For time-off defrost, assign virtual relay to “Air” Defrost (i.e. 99-1.1).

**Step 3:** Configure Calculation for Solenoid. Under Config → Control → Miscellaneous → Calculations, add new calc and double-click calculation from list to enter setup. Configure calculation as shown below, with relay selected being the electric/air defrost relay from steps above. Logic allows calculation to turn on any time defrost relay is off, and vice versa.



**Step 4:** Assign calc to solenoid relay. Under Configuration → Control, increase number of miscellaneous relay outputs by 1. Proceed to Configuration → Control → Miscellaneous. Select new relay from drop-down menu on Relays tab. Assign relay for solenoid valve and select calculation from step 3 as control input.

Location: Configuration Control Misc

Relays	Sensors	On/Off Inputs	Variable Outputs	Conv Factors	Calculations
	Name	Al Solenoid			
	Bd-Pt	01-2.1			
	Broadcast	No			
	Type	N-Closed			
	Control Input	Ca-01 Circuit Solenoid			
	Minimum OFF	0 min			
	Pre delay	0 min			
	Minimum ON	0 min			
	Post delay	0 min			
	Load Shed Level	0			
***** Warning *****					
Deleting any configured Alarm will clear all Alarm Logs					
(disabling a configured Alarm will NOT clear Alarm Logs).					
***** Warning *****					
	Number of alarms	0			

ENGINEERING  
TOMORROW



---

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

---