ENGINEERING TOMORROW

Danfoss

**Data Sheet** 

# Solenoid valve Type **EV220B** and **EV220BW**

#### EV220B 6-22 and EV220BW 12 NO:

General purpose valves for water, brine, air and oil applications



EV220B 6 - EV220B 22 and EV220BW 12 NO is a direct servo-operated 2/2-way solenoid valve program with connections from 1/4" to 1". This program is especially for OEM applications demanding a robust solution and moderate flow rates.

#### Features

- For water, oil, compressed air and similar neutral media
- Clip on coil
- Ambient temperature: Up to 80 °C
- · Coil enclosure: Up to IP67



# **1 Portfolio overview**

## Table 1: Portfolio overview

Features	EV220B 6 - 22	EV220B 6-10	EV220B 6-12	EV220BW 12
Body material	Brass	DZR Brass	Brass	DZR brass
DN [mm]	6 - 22	6 - 10	6 - 12	12
Connection	G1/4" - G1"	G3/8" - G1/2"	G3/8" - G1/2"	G1/2"
Sealing material	EPDM, FKM	EPDM	EPDM, FKM	EPDM
Function	NC	NC	NO	NO
K <sub>v</sub> [m³/h]	0.7 - 6	0.7 - 1.5	0.7 - 2.5	2.5
Differential pressure range [bar]	0.1 - 20	0.1 - 20	0.1 - 10	0.3 - 10
Temperature range [°C]	-30 - 100	-30 - 100	-30 - 100	-30 - 100



# 2 Function

# 2.1 Function NC


## Coil voltage disconnected (closed)

When the supply voltage to the coil (8) is disconnected, the valve plate (3) is pressed down against the pilot orifice (6) by the armature spring (1). The pressure across the diaphragm (7) is built up via the equalizing orifice (4). The diaphragm closes the main orifice (5) as soon as the pressure across the diaphragm is equivalent to the inlet pressure. The valve will be closed for as long as the voltage to the coil is disconnected.

### Coil voltage connected (open)

When voltage is applied to the coil, the pilot orifice (6) is opened. As the pilot orifice is larger than the equalizing orifice (4), the pressure across the diaphragm (7) drops and therefore it is lifted clear of the main orifice (5). The valve is now open and will be open for as long as the minimum differential pressure across the valve is maintained, and for as long as there is voltage to the coil.

#### Figure 1: Function NC

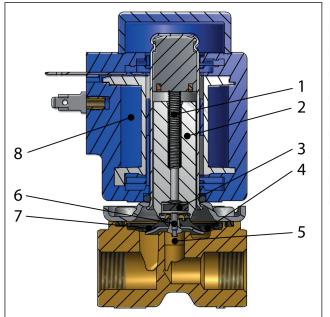

- 1. Armature spring
- 2. Armature
- 3. Valve plate
- 4. Equalizing orifice
- 5. Main orifice
- 6. Pilot orifice
- 7. Diaphragm
- 8. Coil

## 2.2 Function NO

## Coil voltage disconnected (open)


When the voltage to the coil (8) is disconnected, the pilot orifice (6) is open. As the pilot orifice is larger than the equalizing orifice (4), the pressure across the diaphragm (7) drops and therefore it is lifted clear of the main orifice (5). The valve will be open for as long as the minimum differential pressure across the valve is maintained, and for as long as the voltage to the coil is disconnected.

## Coil voltage connected (closed)

When voltage is applied to the coil, the valve plate (3) is pressed down against the pilot orifice (6). The pressure across the diaphragm (7) is built up via the equalizing orifice (4). The diaphragm closes the main orifice (5) as soon as the pressure across the diaphragm is equivalent to the inlet pressure. The valve will be closed for as long as there is voltage to the coil.



## Figure 2: Function NO

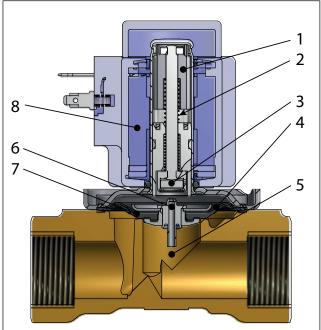


- 1. Armature
- 2. Opening spring
- 3. Valve plate
- 4. Equalizing orifice
- 5. Main orifice
- 6. Pilot orifice
- 7. Diaphragm
- 8. Coil



# **3 Applications**


It is recommended to use a filter in front of the valve. Recommended filter 50 mesh (297 microns).

#### Figure 3: Filter

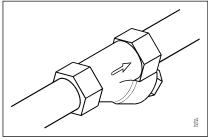

In water applications, exercise the valves at least once every 24 hours, meaning change the state of the valve. The valve exercise will minimize the risk of the valve sticking due to calcium carbonate, zinc or iron oxide build-up.

#### Figure 4: Exercise: Valve on/off

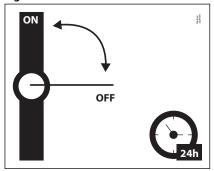

To minimize scaling, and corrosion attack it is recommended that the water passing the valve have the following values:

- Hardness 6-18 °dH to avoid scaling (chalk / lime stone build up).
- Conductivity 50 800  $\mu$ S/cm to avoid brass dezincification and corrosion.
- Above 25°C media temperature avoid stagnant water inside the valve to avoid dezincification and corrosion attack.



# **4 Product specification**

# 4.1 Technical data

Media	EPDM	Water		
Media	FKM	Oil and air		
	EPDM	-30-100 °C		
Media temperature [°C]	FKM	0-100 °C (Water max 60 °C)		
	EPDM WRAS	0-90 °C		
	BA	Up 40 °C		
Ambient temperature [°C]	BD/BE DC/BB DC	Up 50 °C		
	BB/BE AC/ BG	Up 80 °C		
	DN6	0.7m³/h		
	DN10 NC	1.5 m³/h		
	DN10 NO	1.0 m <sup>3</sup> /h		
K <sub>v</sub> value [m <sup>3</sup> /h]	DN11.5	2.3 m³/h		
	DN12	2.5 m³/h		
	DN18	6.0 m³/h		
	DN22	6.0 m³/h		
	NC	DN6-10	0.1 bar	
Min. Opening differential pressure [bar]	NC	DN11.5-22	0.3 bar	
mini. Opening unrerential pressure [bar]	NO	DN6-10	0.1 bar	
	NO	DN12	0.3 bar	
Max. Opening differential pressure [bar]	NC	Up to 20 bar		
Max. Opening unreferitial pressure [bar]	NO	10 bar		
Max. working pressure [bar]	NC	Up to 20 bar (Equal to max. diffe	erential pressure)	
Max. working pressure [bar]	NO	10 bar		
Max. test pressure [bar]	DN6 - 10	50 bar		
	DN11.5 - 22	16 bar		
Viscosity [cSt]	Max. 50 cSt			

# Differential pressure range

#### Table 3: Differential pressure range


		Differential pressure, min. to max [bar]									
Connection	Orifice size	NC					NO				
ISO228/1	[mm]	BA/BD	BE/BE/BR/BY	BB/BE/BR/BY	BG	BA/BD	BE/BE/BR/BY	BB/BE/BR/BY	BG		
		9 [W AC]	10 [W AC]	18 [W DC]	12 [W AC]/ 20 [W DC]	9 [W AC]	10 [W AC]	18 [W DC]	12 [W AC] / 20 [W DC]		
G1/4"	6	0.1 - 20		0.1 - 10	0.1 - 20	0.1 - 10					
G¾"	6	0.1 - 20		0.1 - 10	0.1 - 20	0.1 - 10					
G¾"	10	0.1 - 20		0.1 - 10	0.1 - 20	0.1 - 10					
G1⁄2"	10	0.1 - 20		0.1 - 10	0.1 - 20	0.1 - 10					
G1⁄2"	11.5	0.1	- 10	0.1 - 10	0.1 - 10						
G1⁄2"	12	0.3 - 10			0.3 - 10	0.3 - 10					
G¾"	18	0.3 - 10			0.3 - 10						
G1"	22	0.3	- 10		0.3 - 10						

# Capacity diagram

Example, water: EV220B 10 NC, at 4 bar diff. pressure: Approx: 3 m<sup>3</sup>/h



#### Figure 5: Capacity diagram

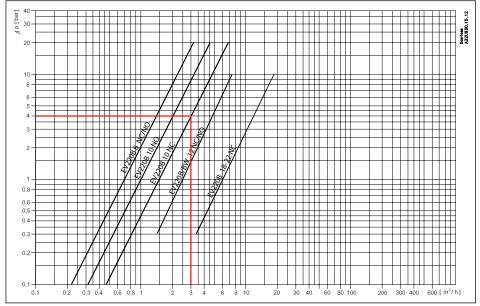

# Time to open/close

#### Table 4: Time to open/close

Туре	EV220B 6	EV220B 10	EV220B / BW 12	EV220B 18	EV220B 22
Time to open [ms] <sup>(1)</sup>	40	50	60	200	200
Time to close [ms] <sup>(1)</sup>	250	300	300	500	500

<sup>(1)</sup> The times are indicative and apply to water. The exact times will depend on the pressure conditions.

## Materials

#### Table 5: Materials

Components	Materials	Specifications
Valve body	Brass	W.no.2.0402
valve body	DZR Brass	CNZn36Pb2AS (CZ132)
Armature	Stainless steel	W.no. 1.4105 / AISI 430FR
Armature tube	Stainless steel	W.no. 1.4306 / AISI 304L
Armature stop	Stainless steel	W.no. 1.4105 / AISI 430FR
Springs	Stainless steel	W.no. 1.4310 / AISI 301
O-rings	EPDM or FKM	
Valve plate	EPDM or FKM	
Diaphragm	EPDM or FKM	


# 4.2 Dimensions and weight

#### Table 6: Dimensions and weight: Brass, DZR brass, NC and NO

	Weight gross			B <sub>1</sub> [mm] / Coil type				
Type with	valve body without coil [kg]	vithout coil [mm]	L [mm]	ВА	BB / BE	BG	H [mm]	H <sub>1</sub> [mm]
EV220B 6B	0.22	45.5	43.5	32	46	68	78	13
EV220B 10B	0.29	51.5	48	32	46	68	81	13
EV220B 11.5B	0.29	51.5	48	32	46	68	81	13
EV220B 12	0.35	58	54	32	46	68	81	13
EV220BW 12	0.35	58	54	32	46	68	81	13
EV220B 18B	0.65	90	60	32	46	68	87	22
EV220B 22B	0.65	90	60	32	46	68	91	22




## Figure 6: Dimensions

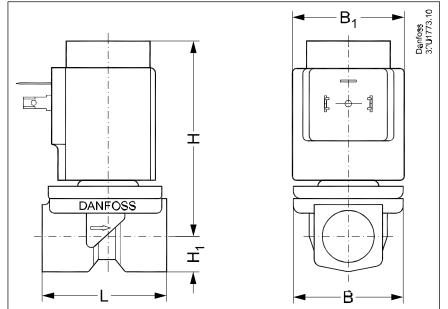

# 4.3 Mounting



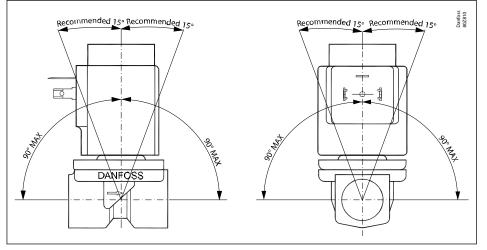



# 5 Ordering

# 5.1 Parts program

## Table 7: Brass/DZR brass, valve body NC and NO

120000/4	a :c	K			Function				
ISO228/1 connection	Orifice [mm]	K <sub>v</sub> value [m³/h]			ass	DZR b			
				NC	NO	NC	NO		
G1/4			EPDM	032U1236					
01/4	6	0.7	FKM	032U1237					
	0	0.7	EPDM	032U1241	032U1238	032U5807			
G3/8			FKM	032U1242	032U1239				
03/0			EPDM	032U1246		032U5809			
		1.15	FKM	032U1247					
	10		EPDM	032U1251		032U5810			
			FKM	032U1252					
G1/2		1.0	FKM		032U1249				
61/2	11.5	2.3	EPDM	032U1279					
	12	2.5	EPDM	032U1256	132U1261		132U1267		
	12	2.5	FKM	032U1255					
G3/4	18		EPDM	032U1261					
63/4	35/4 18	6.0	FKM	032U1260					
G1	22	6.0	EPDM	032U1263					
01	22		FKM	032U1266					

# 5.2 Accessories

# Coils

## Table 8: Coils used with EV220B 6 - EV220B 22

Coil	Туре	Power consumption	Enclosure	Features
	BA / BD, screw on	8.5 - 15 W AC 14 W DC	IP00 with spade connector	IP20 with protective cap, IP67 with cable plug
A MARKET	BB /BY, clip on	11 - 16 W AC 14 - 16 W DC	IP00 with spade connector	IP20 with protective cap, IP67 with cable plug
	BR, clip on	12 - 14 W AC 16 W DC	IP00 with spade connector	IP20 with protective cap, IP67 with cable plug Design for marine application
· · ·	BE, clip on	11 - 17 W AC 15 - 16 W DC	IP67	With terminal box
Aliterit	BF, clip on	11 - 15 W AC 14 - 16 W DC	IP67	With 1 m cable



## Solenoid valve, Type EV220B and EV220BW

Coil	Туре	Power consumption	Enclosure	Features
A CONTRACTOR	BG, clip on	11 - 16 W AC IP67 16 - 20 W DC IP67		With terminal box
	BN, clip on	22 W AC 20 W DC	IP67	Hum free With terminal box and 1 m cable
	BO, screw on	10 W AC 10 W DC	IP67 only including seal kit 018Z0090	For explosion-risk environment zone 1. With terminal box and 5 m cable

For further information and for ordering, see separate data sheet for coils.

# Cable plug

# Figure 8: Cable plug



#### Table 9: Cable plug

Cable plug size	Description	Code no
DIN 18	Cable plug IP67	042N1256

## Universal electronic multi-timer, type ET20M

## Figure 9: Universal electronic multi-timer, type ET20M



## Table 10: Universal electronic multi-timer

Application	Voltage [V AC]	To use with coil	Ambient temperature [°C]	Code number
External adjustable timing from 1 to 45 minutes with 1 to 15 seconds drain open. With manual override (test button). Electrical connection DIN 43650 A / EN 175 301-803-A	24 - 240.	BA, BD, BB	-10 - 50	042N0185



# Spare part

## Table 11: Actuator kit NC brass

	Actuator kit NC Sealing			
Туре				
	EPDM	FKM	EPDM	FKM
EV220B 6B	032U1062	032U1063		
EV220B 10B-11.5B	032U1065			
EV220B 10B		032U1066		
EV220B 12B			032U1068	032U1067
EV220B 18B-22B			032U1070	032U1069
	1. Locking button 2. Nut for the coil 3. Armature with valve plate ar 4. Diaphragm 5. O-ring	$ \frac{1}{2} $	1. Locking button 2. Nut for the coil 3. Armature with valve plate ar 4. Diaphragm	and spring

#### Table 12: Assembled NO unit

	Assembled NO unit			
Туре	Sealing			
	EPDM	FKM		
EV220B 6B	032U0165	032U0166		
EV220B 10B		032U0167		
	1. Locking button 2. Locking nut 3. NO actuator unit 4. O-ring			

# 6 Online support

Danfoss offers a wide range of support along with our products, including digital product information, software, mobile apps, and expert guidance. See the possibilities below.

#### **The Danfoss Product Store**



The Danfoss Product Store is your one-stop shop for everything product related—no matter where you are in the world or what area of the cooling industry you work in. Get quick access to essential information like product specs, code numbers, technical documentation, certifications, accessories, and more.

Start browsing at store.danfoss.com.

#### Find technical documentation



Find the technical documentation you need to get your project up and running. Get direct access to our official collection of data sheets, certificates and declarations, manuals and guides, 3D models and drawings, case stories, brochures, and much more.

Start searching now at www.danfoss.com/en/service-and-support/documentation.

#### **Danfoss Learning**



Danfoss Learning is a free online learning platform. It features courses and materials specifically designed to help engineers, installers, service technicians, and wholesalers better understand the products, applications, industry topics, and trends that will help you do your job better.

Create your Danfoss Learning account for free at www.danfoss.com/en/service-and-support/learning.

#### Get local information and support



Local Danfoss websites are the main sources for help and information about our company and products. Find product availability, get the latest regional news, or connect with a nearby expert—all in your own language.

Find your local Danfoss website here: www.danfoss.com/en/choose-region.

#### **Spare Parts**



Get access to the Danfoss spare parts and service kit catalog right from your smartphone. The app contains a wide range of components for air conditioning and refrigeration applications, such as valves, strainers, pressure switches, and sensors.

Download the Spare Parts app for free at www.danfoss.com/en/service-and-support/downloads.

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product. All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.

Danfoss

ENGINEERING TOMORROW