



Gear actuators

AME 685

Actuator for modulating & 3-point control

Description

The actuator is designed to control the valve in response to the demand of a controller in District Heating/cooling, Heating, Ventilating and Air conditioning systems.

The AME 685 can be controlled by electronic controllers with modulating or 3-point control output.

The actuator can be used in combination with valve type VF 3 (DN 200-300).

Features & benefits

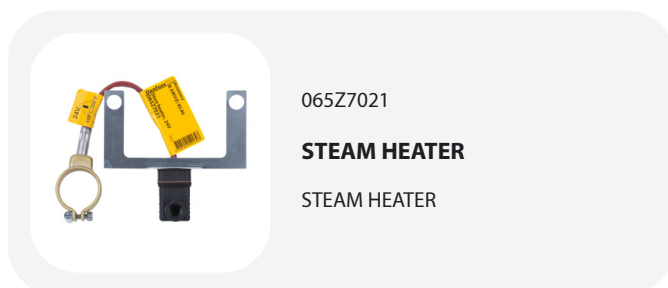
- Manual operation mechanical and/or electrical
- Position indication, LED signalization
- Automatic adaptation of stroke to valve's end positions that reduce commissioning time (self stroking)
- Integrated auxiliary switch
- Adjustable stroke limitation
- Anti-oscillation function
- Voltage or current output signal X
- 3-point or modulating control selection
- External reset button

Ordering

Product code numbers

Type	Supply voltage [V]	Code number
AME 685	24 V AC/DC	082G3500
AME 685	230 V AC	082G3501


Accessories code numbers



Overview

Product portfolio

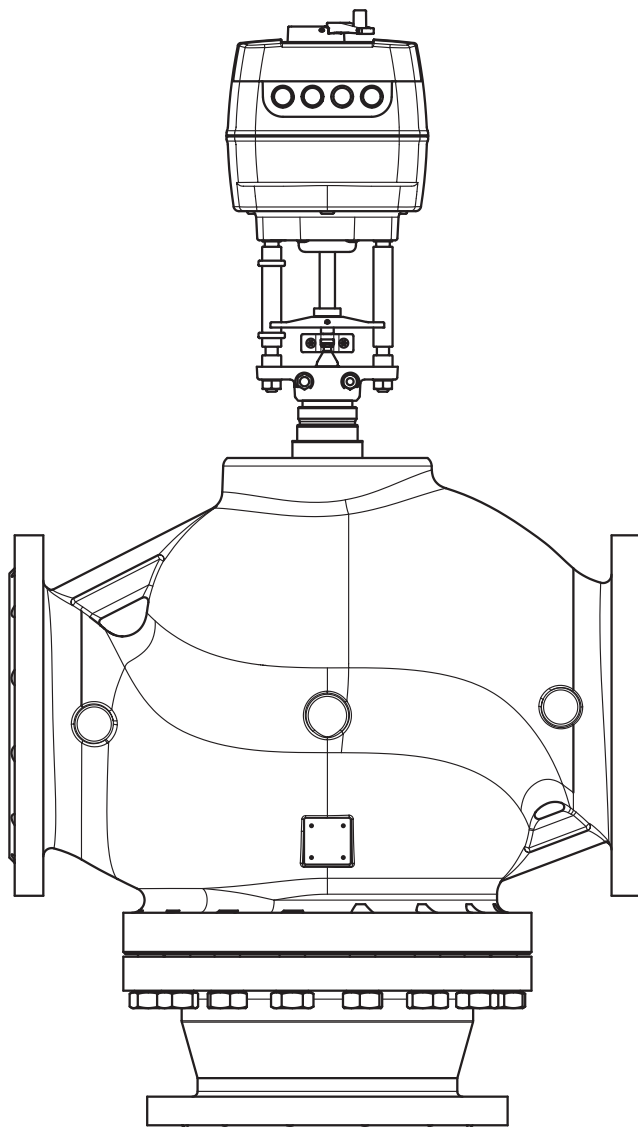Actuator – valves combinations



AME 685 + VF3 200 - 300

Functions

Operation

Commissioning

Complete the mechanical and electrical installation (*see instructions*) and perform the necessary checks and tests:

- Turn on the power
- Set the appropriate control signal and check that the valve stem direction is correct for the application.

The unit is now fully commissioned.

Actuator operating modes

LED operating mode indicator

The three-colour (*green/yellow/red*) LED function indicators are located on the actuator cover. They indicate different operating modes.

RESET button

Actuator have external RESET button which is located on top cover of the actuator next to LED indicators. With this button you can enter or exit Stand-By mode (*press once*) or Self stroking mode (*press and hold for 5 seconds*). See next paragraph for mode details.

Operating modes

• Self stroking mode

Self stroking mode starts automatically the first time when power supply is applied to the actuator. To start self stroking procedure **press and hold RESET button for 5 seconds** until the green light starts flashing. End positions of the valve are automatically set and the actuator goes to stationary mode and starts responding to the control signal.

• Stand-By mode

Press the RESET button for 1 sec. to enter Stand-By mode. The actuator stops in current position and stops responding to any control signal. Red light is constantly lit. You can manually operate the actuator with mechanical handle or control buttons. This mode can be very useful during the commissioning of other equipment, or for service purposes. In this mode you can also set positions of the additional switches. To exit Stand-By mode press the RESET button again.

• Positioning mode

The actuator is operating automatically. The stem is extending or retracting according to the control signal. When positioning is finished the actuator goes to stationary mode. If for one or another reason 3-point signal (terminals 1 and 3) and Y signal would be present at the same time, 3-point signal would prevail.

• Stationary mode


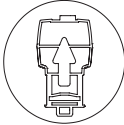

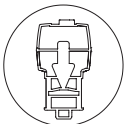
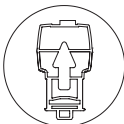
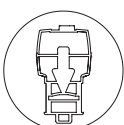

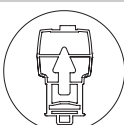
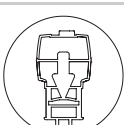
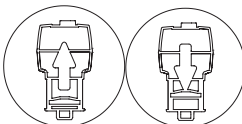

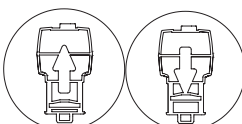
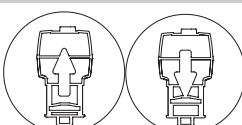
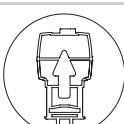
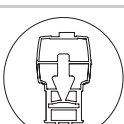
The actuator is operating without errors.

• Error mode

Working temperature is too high - check the ambient temperature.

Stroke is too short - check the connection with valve and valve operation, or check if valve is blocked.

LED signalling

LED	Indication type			Operating mode
Green LED:			Constantly lit	Positioning mode - Actuator is retracting the stem
			Constantly lit	Positioning mode - Actuator is extending the stem
			Flashing (1 s cycle)	Self stroking mode - Actuator is retracting the stem
			Flashing (1 s cycle)	Self stroking mode - Actuator is retracting the stem
Yellow LED:			Constantly lit	Stationary mode - Actuator has reached upper end position (retracted stem)
			Constantly lit	Stationary mode - Actuator has reached bottom end position (extended stem)
			Flashing	Stationary mode - Single blink when Y signal is presents and double blinks when Y signal is not connected)
Red LED:			Constantly lit	Stand-By mode
			Flashing	Error Mode
Red/ Yellow LED			Flashing (1 s cycle)	Set up stroke limitation (retracted stem)
			Flashing (1 s cycle)	Set up stroke limitation (extended stem)
Dark	No indication			No power supply


Manual operation



Mechanical and electrical operation are not allowed to be used at the same time!

The actuator can be manually positioned when in Stand-By mode or when there is no power supply (*mechanically*).


Actuator type	Mechanical operation	Electrical operation
AME 685	✓	✓

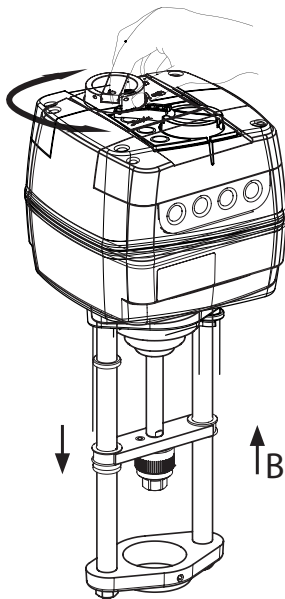

Mechanical manual operation

The actuator has a knob & crank on the top of the housing which enables manual positioning of the actuator.

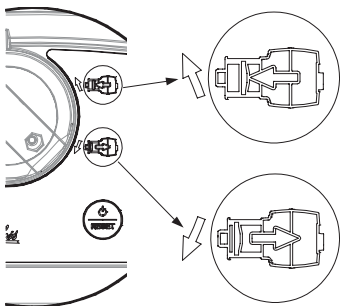Use Mechanical manual operation only when the power is disconnected.



Electrical manual operation

The actuator has two buttons on the top of the housing that are used for electrical manual positioning (up or down) if the actuator is in Stand-By mode. First press the RESET button until the actuator goes to Stand-By mode (red LED is lit). By pressing the upper button the stem will be extended and by pressing the lower button the stem will be retracted.

Settings

DIP switch setting

The actuator has a selection of DIP switches (*Fig. 1*) under the service cover.

DIP1: FAST/SLOW – Speed selection

- FAST; 2,7 s/mm
- SLOW; 6 s/mm

DIP2: DIR/INV – Direct or inverse acting selector (*Fig. 2*):

- DIR: The actuator is direct acting to input signal
- INV: The actuator is inverse (reverse) acting to control signal

DIP3: 2-10 V / 0-10 V – Input/output

- 2-10 V; the input signal is in the range from 2-10 V (*voltage input*) or from 4-20 mA (*current input*)
- 0-10 V; the input signal is in the range from 0-10 V (*voltage input*) or from 0-20 mA (*current input*)

Signal range selector sets Y and X signal.

DIP4: LIN/MDF – Characteristic modification function (*Fig. 3*):

- LIN; Linear correlation between Y signal and stem position
- MDF (Modified); Enables modified correlation between Y signal and stem position. Degree of modification depends on setting of potentiometer CM. The function enables to change MCV (Motorised Control Valve) characteristic (for example linear to logarithmic and logarithmic to linear) and works with all combinations of DIP switch settings.

DIP5: 100%/95% – Stroke limitation (*Fig. 4*):

- Set new maximum retracted position of the actuator
- Set new minimum extended position of the actuator.

DIP6: C/P – Output signal mode selector (*Fig. 5*, see next page) :

- An output signal is present on terminal 4 when the position of the actuator is equal to or lower than the S4 set point. An output signal is present on terminal 5 when the position of the actuator is equal to or higher than the S5 set point.
- DIP6 C provides a constant output signal on terminals 4 or 5, regardless of the input signal.
- DIP6 P provides a pulse signal through parallel or cascade electrical wiring
- Input 1 and 3 depends from the controller to output terminals 4 or 5.

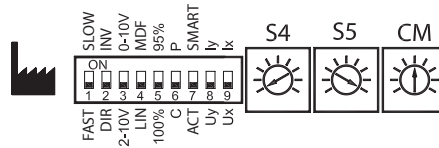


Fig. 1

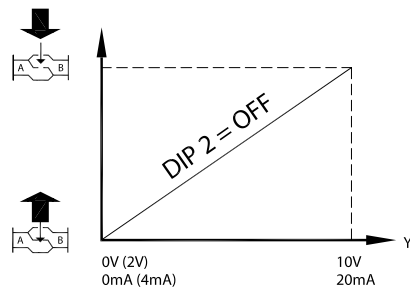
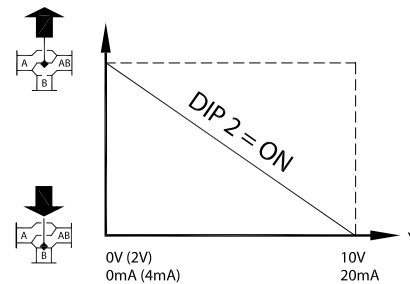


Fig. 2

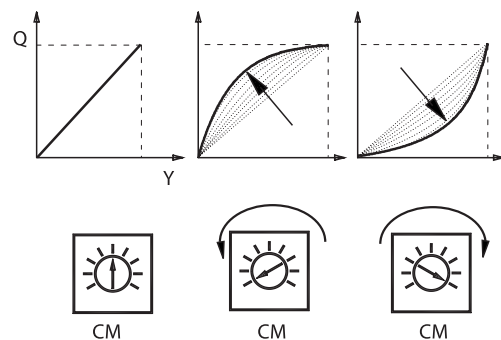


Fig. 3

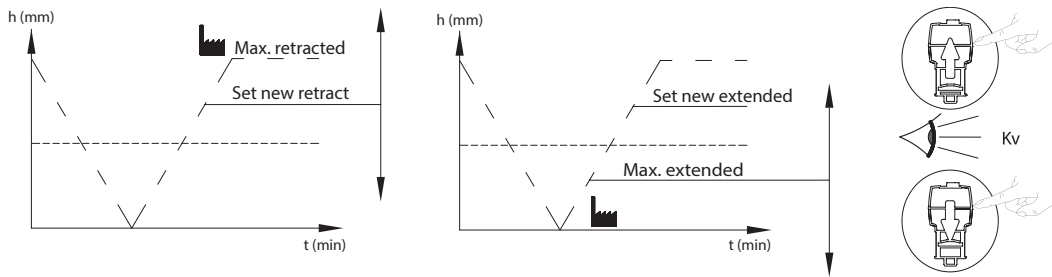


Fig. 4 (For more details see instructions document)

DIP7: Smart function selector:

- OFF; the actuator does not try to detect oscillations in the system
- ON; actuator enables special anti-oscillation algorithm – see section on anti-oscillation algorithm

DIP8: Uy/Iy –Input signal type selector:

- Uy; input signal Y is set to voltage (V)
- Iy; input signal Y is set to current (mA)

NOTE:

Y detection is disabled if DIP8 is set to ON positions and DIP3 is set to OFF position.

DIP9: Ux/Ix –Output signal type selector:

- Ux; output signal X is set to voltage (V)
- Ix; output signal X is set to current (mA)

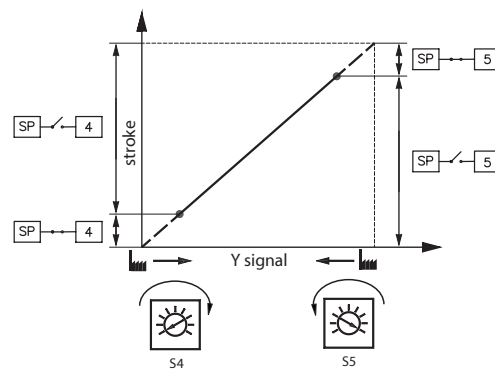


Fig. 5

Anti oscillations algorithm

(SW 7 in position ON)

The actuator has special anti oscillations algorithm. In case control signal Y on certain point oscillates (Fig. 6) - looking from time perspective, algorithm starts to lower the amplification of the output to the valve. Instead of having static characteristics actuator changes to dynamic characteristics. After the control signal does not oscillate anymore output to the valve slowly returns back to static characteristics.

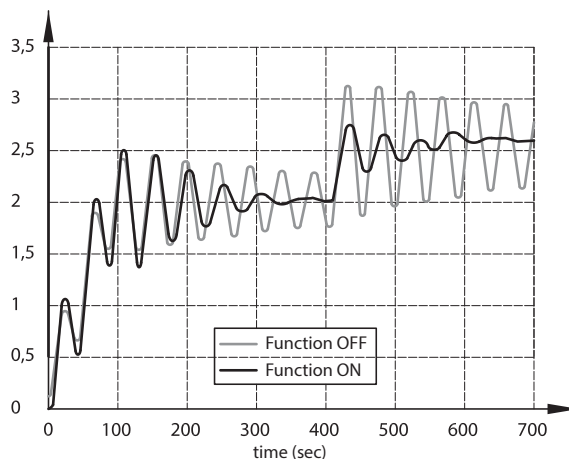



Fig. 6

Oscillation

Harmonic oscillations are high frequency oscillations with low amplitude that vary around its own equilibrium value and not around set-point temperature. They can appear in up to 70 % of control time, even though the system is properly commissioned. Harmonic oscillations have negative influence on control stability, and lifetime of the valve and actuator.

Smoothing function

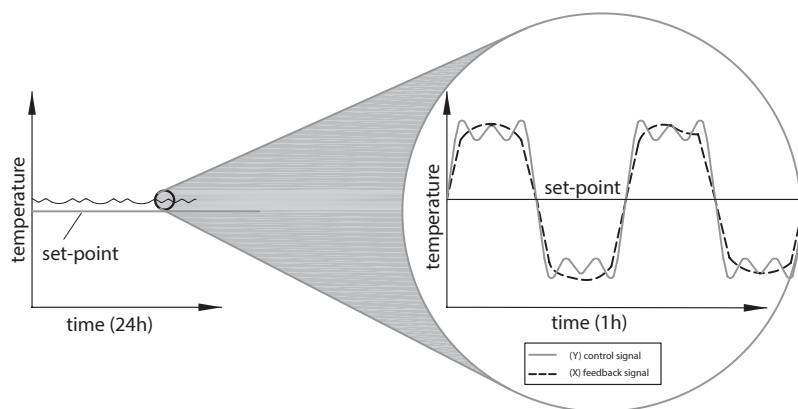The smoothing function implemented in the new 2nd generation of anti-oscillation function reduces harmonic oscillations; the actual temperature is closer to the set-point (desired temperature). Smoother operation increases lifetime of the valve and actuator. This saves energy and reduces costs in general.



Product details

General data

Technical Data




Please check power supply and power consumption prior connection!


Power supply	V	24 or 230; +10 ... -15 %; AC or DC
Power consumption	VA	35 (24 V); 50 (230 V)
Signal	mA	10
Frequency	Hz	50/60
Control input Y	V	0-10 (2-10) [Ri = 100 kΩ]
	mA	0-20 (4-20) [Ri = 500 Ω]
		3-point (wiring auto-detection)
Control output X	V	0-10 (2-10) [Ri = 2 kΩ]
	mA	0-20 (4-20) [Ri = 550 Ω]
Closing force	N	5000
Max. stroke	mm	80
Speed (selectable)	s/mm	2,7 or 6
Max. medium temperature	°C	200
Ambient temperature		0 ... + 55
Storage and transport temperature		-40 ... +70 (storing for 3 days)
Humidity		5-95%
Protection class		II
Grade of enclosure		IP 54
Weight	kg	7,5
Manual operation		Electrical and mechanical
Power failure response		Stem remains in last position

Design

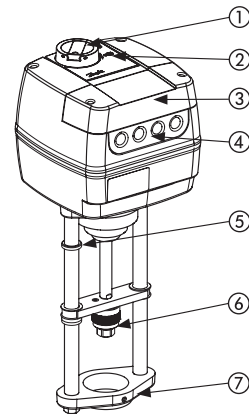1. Manual operation knob
2. Function buttons
3. Service cover
4. Removable gland support
5. End position indication ring
6. Stem connector
7. Valve connector (yoke)




Dimensions

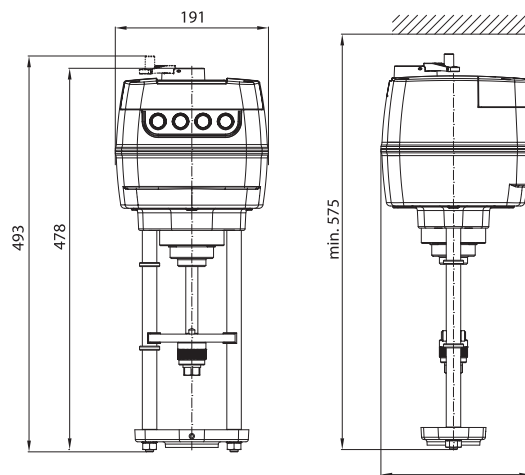

Installation

Mechanical

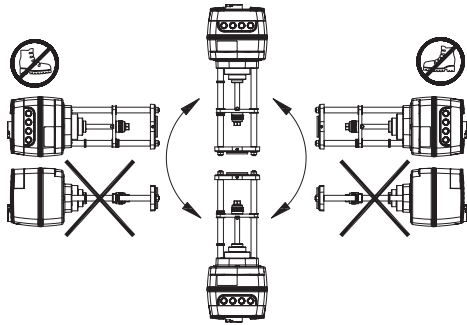Please check the allowed installation positions for the valve and actuator. The actuator can be installed in following positions (*see below*).



Use hook spanner NH10 key (*not supplied*) to fit the actuator to the valve body. Allow for necessary clearance for maintenance purposes. To link valve and actuator stems use a 20 mm wrench key and 5 mm Allen key (*not supplied*).

The actuator has position indication rings which should be pushed together before electrical connection; after self-stroking they indicate end positions of the stroke.

Electrical connection

Electrical connections can be accessed by removing the service cover. Four cable entries on removable gland support are provided for M 16×1,5 or M 20×1,5 cable glands. Note that in order to maintain the enclosure's IP rating, appropriate cable glands must be used.

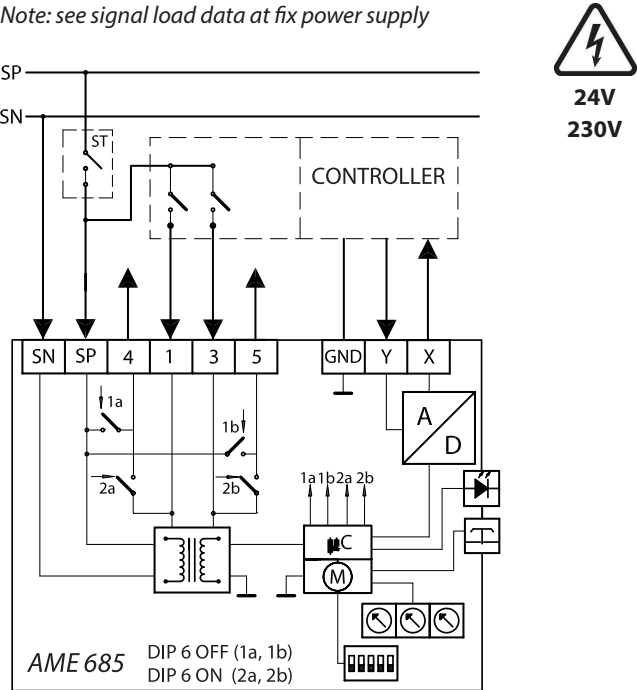
Wiring




Do not touch anything on the PCB!
Do not remove the service cover before the power supply is fully switched off.
Max. allowed current output on terminals 4 and 5 is 4A. Min. power is 3W.
Recommended cross-sectional area of the wiring is 1.5 mm².

AME 685 wiring for modulating mode


Note: see signal load data at fix power supply





SN	0 V	Neutral
SP	24, 230 V AC/DC	Power supply
4, 5	SP(AC)	SP output -max 4A -min 3W
1	 SP	Input
3		
GND	0 V	Neutral
Y	0(2)-10 V 0(4)-20 mA 0(4)-20 mA	Input
X	0(2)-10 V 0(4)-20 mA	Output

AME 685 wiring for 3-point floating mode

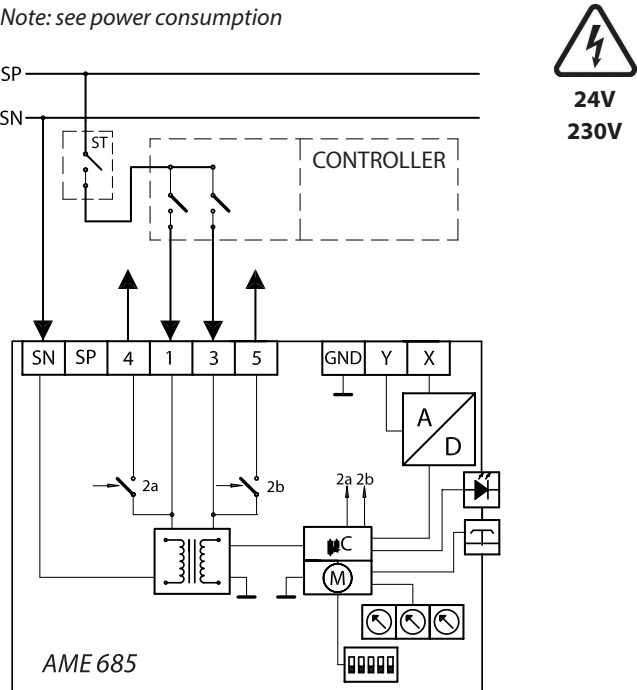Note: see power consumption



SN	0 V	Neutral
SP	24, 230 V AC/DC	Power supply
4, 5	SP(AC) 	SP output -max 4A -min 3W
1	 SP	Input
3		

Certificates, declarations and approvals

The list contains all certificates, declarations, and approvals for this product type. Individual code number may have some or all of these approvals, and certain local approvals may not appear on the list.

When you click on the link you will be directed to the latest version of the 'Declaration of Conformity'. Products developed and sold before this date of issue conform to the directives/standards in force at the time of their sale.

Approval type	Title	Certification body	Approval topic
Export Control Declaration	Gear and Thermal actuators	Danfoss	
EU Declaration	Danfoss EU 221011EN0815101.04	Danfoss	LVD

Contact details

Online support

Danfoss offers a wide range of support along with our products, including digital information, software, mobile apps and expert guidance. See the possibilities below.



The Danfoss Design center

Discover the Design Center, our advanced digital platform that streamlines product selection. With integrated tools and enhanced type pages, it's simpler than ever to access product information and documentation, and to select the right products. Check the availability of Danfoss products at partner locations and enjoy seamless transitions from selection to purchase with our basket-to-basket functionality. Whether you're buying from our distributors or directly from the Product Store, the Design Center simplifies your experience. Learn more at: designcenter.danfoss.com.



The Danfoss product store

The Danfoss Product Store is a one-stop shop available 24/7 for our customers, no matter where you are in the world or what area of industry you work in. Browse our catalog, check product details and documentation, view your prices and product availability, and quickly finalize your purchase. Start browsing at: store.danfoss.com.



Danfoss Partner Portal/Product Data tool

Designed to support you with easy access to product data extracts, essential resources, tools, and information. The Partner Portal provides a centralized hub for product documentation, training materials, marketing assets, and technical support, ensuring you have everything you need to succeed and grow your business with Danfoss. The Partner Portal is available 24/7 at: partner.danfoss.com and is ready to support your business.



Find technical documentation

Find technical documentation you need to get your project up running. Get direct access to our official collection of data sheets, certificates and declarations, manuals and guides, 3D models and drawings, case stories, brochures, and much more. Start searching now at: documentation.danfoss.com.



Danfoss Learning

Danfoss Learning is a free online learning platform. It features courses and materials specifically designed to help engineers, installers, service technicians, and wholesalers better understand the products, applications industry topics, and trends that will help you do your job better. Find your local Danfoss website here: learning.danfoss.com.



Get local information and support

Local Danfoss websites are the main sources for help and information about our company and products. Find product availability, get the latest regional news, or connect with a nearby expert - all in your own language. Find your local Danfoss website here: danfoss.com.

Danfoss A/S

Climate Solutions . danfoss.com . +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues description, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the products. All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.
