



Electrical actuators

AME 655(GA)/ 658 SU / 658
SD/ 659 SD

Description

Actuators are primarily designed to regulate valve in the respond to the demand of a controller in District Heating/cooling, Heating, Ventilating and Air conditioning systems.

Actuators AME 655, 658 and 659 can be controlled by electronic controllers with modulating or 3-point control output.

Actuators can be used without any adapter in combination with:

- Valve types VFM, VFS (DN 65-100), VF (DN 100-150) and VL (DN 100)
- Self-acting flow controller AFQM 6* and AFQM 2

* With adapter **065B3527** for AFQM 6 or AFQM PN 25, if produced before March 2015.

Used with adapter **065B3527** in combination with:

- Valve types VFG(S) and VFU.

Features & benefits

- Manual operation mechanical and/or electrical
- Position indication, LED signalization
- Selectable speed 2 or 6 s/mm
- Automatic adaptation of stroke to valve's end positions that reduces commissioning time (self stroking)
- Integrated auxilliary switch
- Characteristic optimization
- Adjustable stroke limitation
- Anti-oscillation function
- Pulse or continuous output signal (4&5)
- Special feature for AME 655GA and AME 659SD:
 - Potential free terminal
 - Able to connect wires as were connect by AMV(E 41X or 61X)
 - Equipped with cable glands


Ordering

Product code numbers

Type	Supply voltage [V] AC	Code number	VVS DK
AME 655 GA	230	082G3438	460947529
AME 655 GA	24	082G3439	460947528
AME 655	24	082G3442	460947520
AME 655	230	082G3443	460947521
AME 658 SD	24	082G3448	460947524
AME 658 SD	230	082G3449	460947525
AME 658 SU	24	082G3450	460947522
AME 658 SU	230	082G3451	460947523
AME 659 SD	24	082G3454	460947526
AME 659 SD	230	082G3455	460947527



Accessories code numbers

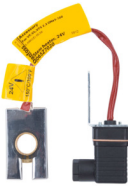

065Z7022

**Stem heater
AMV55/56**

Stem heater AMV55/56



065B3527

**Adapter 3 VFG(S),
AFQM6, AFQM
PN25**

Adapter 3 VFG(S),
AFQM6, AFQM PN25



003G6398

**Spare part Clutch
for AMV(E) 55,
AMV(E) 56, AMV(E)
65x**

Spare part Clutch for
AMV(E) 55, AMV(E) 56,
AMV(E) 65x



003G6336

**Electrical act. -
Service kits**

Spare part PCB for AME
65x GA module 24V



003G6337

**Electrical act. -
Service kits**

Spare part PCB for AME
65x GA module 230V


Accessory code numbers only for Danish market:

Code number	VVS-nr.
065Z7022	46 1006.904
065B3527	46 0947.967


Overview

Product portfolio


Actuator – valve combinations

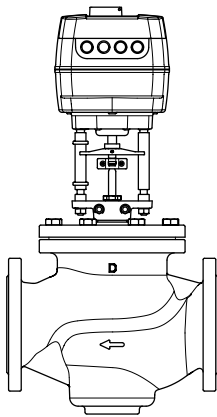


AME 65x + VFM 2

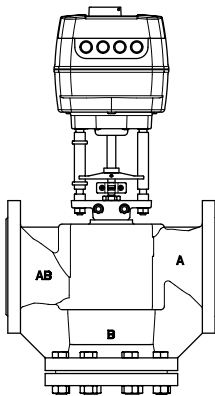


AME 65x + VF 2 (DN 100-150)
VL 2 (DN 100)
VFS 2 (DN 65-100)

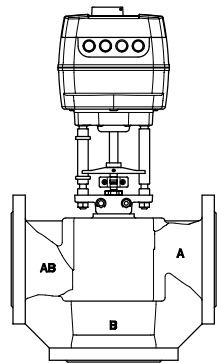


AME 65x + VF 3 (DN 100-150)
VL 3 (DN 100)

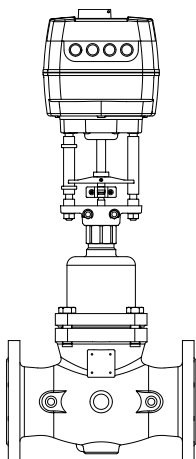


AME 65x + VFG + adapter **065B3527** +
ZF 4/5
VFGS + adapter **065B3527** + ZF5 (DN
15-125)

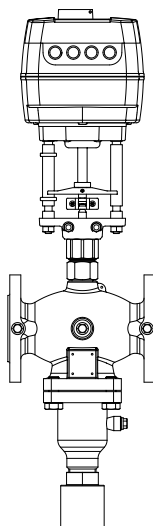


AME 65x + VFU +
adapter: **065B3527** (DN 15-125)

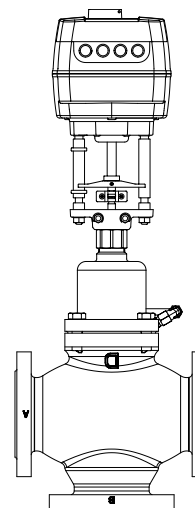


AME 65x + VFG 3 +
adapter: **065B3527** (DN 25-125)

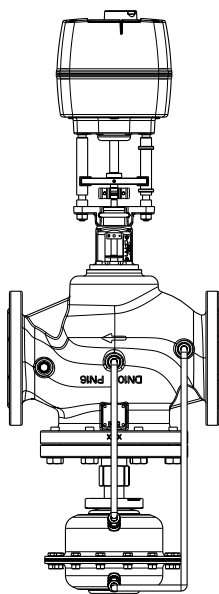


AMV(E) 65x/AFQM 2 DN 65-
250, PN 16/25/40

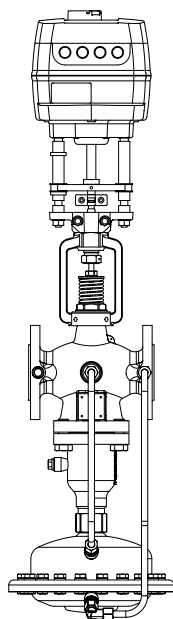

AME 65x + AFQM 6 *

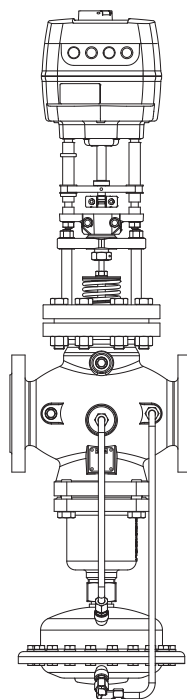

AME 65x + AFQM PN 16 (DN
65-125)

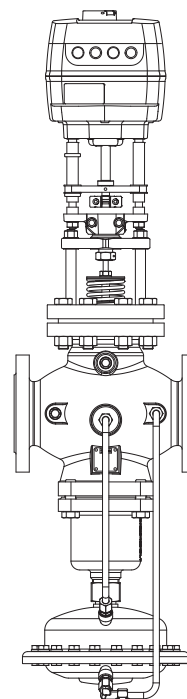

AME 65x + AFQM PN 25 *

* Please use adapter 065B3527 for combination with AFQM PN25 & AFQM 6 if produced before March 2015.

Functions

Operation Commissioning

Complete the mechanical and electrical installation (see instructions) and perform the necessary checks and tests:

- Turn on the power.
- Set the appropriate control signal and check that the valve stem direction is correct for the application.

The unit is now fully commissioned.

Manual operation



Mechanical and electrical operation are not allowed to be used at the same time!


Actuators AME 655/658 can be manually positioned when in Stand-By mode or when there is no power supply (mechanically).
The actuator AME 659 can be manually positioned only in Stand-By mode.

Actuator type	Mechanical operation	Electrical operation
AME 655	Yes	Yes
AME 658	Yes	Yes
AME 659	No	Yes

Mechanical manual operation


Actuators AME 655/658 have a knob & crank on the top of the housing which enables manual positioning of the actuator.

Use Mechanical manual operation only when the power is disconnected.

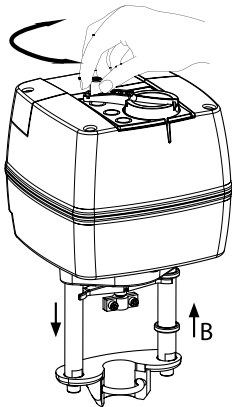

Electrical manual operation

Actuators AME 655, 658/659 have two buttons on the top of the housing that are used for electrical manual positioning (up or down) if the actuator is in Stand-By mode. First press the RESET button until the actuator goes to Stand-By mode (red LED is lit). By pressing the upper button  the stem will be extended and by pressing the lower button  the stem will be retracted.

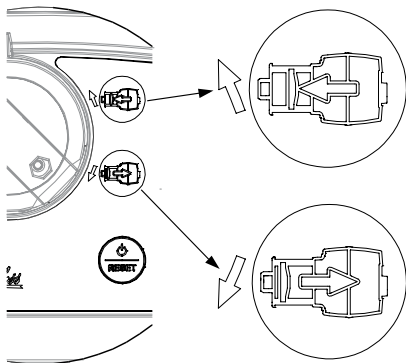

Actuator operating modes

LED operating mode indicator: The three-colour (green/yellow/red) LED function indicators are located on the actuator cover. They indicate different operating modes.

RESET button: Actuators AME 655/658/659 have external RESET button which is located on top cover of the actuator next to LED indicators. With this button you can enter or exit Stand-By mode (press once) or Self stroking mode (press and hold for 5 seconds). See *Led signalling* for mode details.

Operating modes:

- Self stroking mode

Self stroking mode starts automatically the first time when power supply is applied to the actuator. To start self stroking procedure **press and hold RESET button for 5 seconds** until the green light starts flashing. End positions of the valve are automatically set and the actuator goes to stationary mode and starts responding to the control signal.

- Stand-By mode (versions AME 655/658/659)

Press the RESET button for 1 sec. to enter Stand-By mode. The actuator stops in current position and stops responding to any control signal. Red light is constantly lit. You can manually operate the actuator with mechanical handle (versions AME 655/658) or control buttons (versions AME 655/658/659). This mode can be very useful during the commissioning of other equipment, or for service purposes. In this mode you can also set positions of the additional switches. To exit Stand-By mode press the RESET button again.

- Positioning mode

The actuator is operating automatically. The stem is extending or retracting according to the control signal. When positioning is finished the actuator goes to stationary mode. If for one or another reason 3-point signal (terminally 1 and 3) and Y signal would be present at the same time, 3-point signal would prevail.


















- Stationary mode

The actuator is operating without errors.

- Error mode

Working temperature is too high - check the ambient temperature. Stroke is too short - check the connection with valve and valve operation, or check if valve is blocked.

LED signalling

LED	Indication type			Operating mode
Green LED:			Constantly lit	Positioning mode - Actuator is retracting the stem
Green LED:			Constantly lit	Positioning mode - Actuator is extending the stem
Green LED:			Flashing (1 s cycle)	Self stroking mode - Actuator is retracting the stem
Green LED:			Flashing (1 s cycle)	Self stroking mode - Actuator is extending the stem
Yellow LED:			Constantly lit	Stationary mode - Actuator has reached upper end position (retracted stem)
Yellow LED:			Constantly lit	Stationary mode - Actuator has reached bottom end position (extended stem)
Yellow LED:		 	Flashing	Stationary mode - Single blink when Y signal is present and double blinks when Y signal is not connected
Red LED:		 	Constantly lit	Stand-By mode
Red LED:		 	Flashing	Error Mode
Red/Yellow LED:			Flashing (1 s cycle)	Set up stroke limitation (retracted stem)
Red/Yellow LED:			Flashing (1 s cycle)	Set up stroke limitation (extended stem)
Dark	No indication			No power supply

Settings

DIP switch setting

The actuator has a selection of DIP switches (Fig. 1) under the service cover.

DIP1: FAST/SLOW – Speed selection

- FAST; 2 s/mm
- SLOW; 6 s/mm

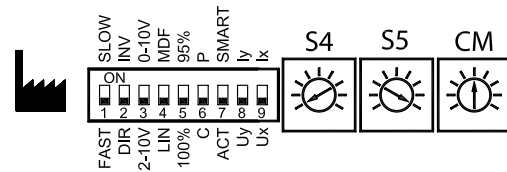


Fig. 1

DIP2: DIR/INV – Direct or inverse acting selector (Fig. 2):

- DIR; the actuator is direct acting to input signal.
- INV; the actuator is inverse (reverse) acting to control signal.

DIP3: 2-10 V/0-10 V – Input/output

- 2-10 V; the input signal is in the range from 2-10 V (voltage input) or from 4-20 mA (current input).
- 0-10 V the input signal is in the range from 0-10 V (voltage input) or from 0-20 mA (current input). Signal range selector sets Y and X signal.

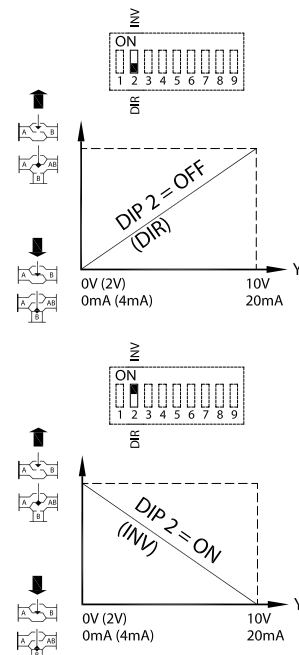


Fig. 2

DIP4: LIN/MDF – Characteristic modification function (Fig. 3):

- LIN ; Linear correlation between Y signal and stem position
- MDF (Modified) position; Enables modified correlation between Y signal and stem position. Degree of modification depends on setting of potentiometer CM.

The function enables to change **MCV** (**M**otorised **C**ontrol **V**alve) characteristic (for example linear to logarithmic and logarithmic to linear) and works with all combinations of DIP switch settings.

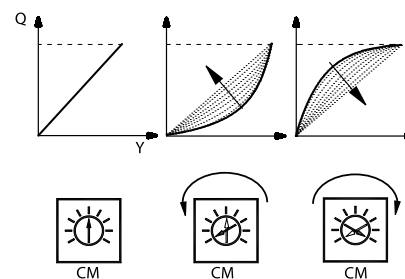


Fig. 3

DIP5: 100%/95% – Stroke limitation (Fig.4):

- Set new maximum retracted position of the actuator
- Set new minimum extended position of the actuator.

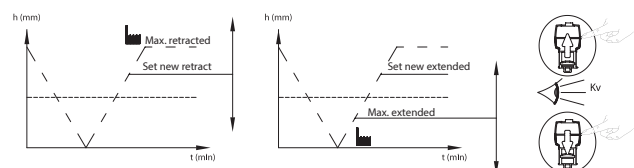


Fig. 4 (For more details see instructions document)

DIP6: C/P – Output signal mode selector (Fig. 5):

- An output signal is present on terminal 4 when the position of the actuator is equal to or lower than the S4 set point. An output signal is present on terminal 5 when the position of the actuator is equal to or higher than the S5 set point.
- DIP6 position C provides a constant output signal on terminals 4 or 5, regardless of the input signal.
- DIP6 position P provides a pulse signal through parallel or cascade electrical wiring input 1 and 3 depends from the controller to output terminals 4 and 5.

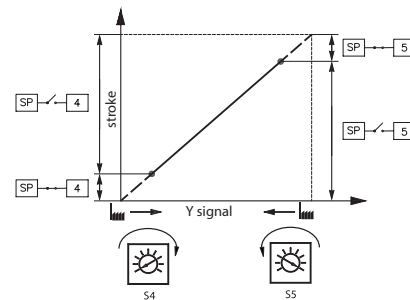


Fig. 5

DIP7: Smart function selector:

- OFF ; the actuator does not try to detect oscillations in the system
- ON ; actuator enables special anti-oscillation algorithm – see section on anti-oscillation algorithm

DIP8: Uy/ly –Input signal type selector:

- Uy; input signal Y is set to voltage (V)
- ly; input signal Y is set to current (mA)

Note: If DIP3 and DIP8 are both set to ON position Y detection is disabled.

DIP9: Ux/lx –Output signal type selector:

- Ux; output signal X is set to voltage (V)
- lx; output signal X is set to current (mA)

Anti oscillations algorithm (SW 7 in position ON)

The actuator has special anti oscillations algorithm. In case control signal Y on certain point oscillates (Fig. 7) - looking from time perspective, algorithm starts to lower the amplification of the output to the valve. Instead of having static characteristics actuator changes to dynamic characteristics. After the control signal does not oscillate anymore output to the valve slowly returns back to static characteristics.

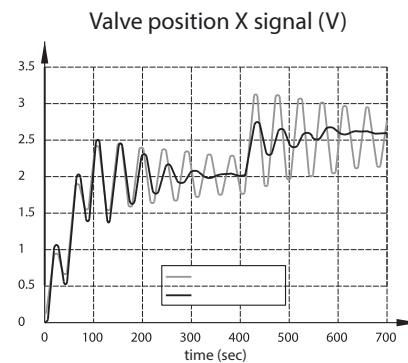


Fig. 7

Oscillation

Harmonic oscillations are high frequency oscillations with low amplitude that vary around its own equilibrium value and not around set-point temperature. They can appear in up to 70 % of control time, even though the system is properly commissioned. Harmonic oscillations have negative influence on control stability, and lifetime of the valve and actuator.

Smoothing function

The smoothing function implemented in the new 2nd generation of anti-oscillation function reduces harmonic oscillations; the actual temperature is closer to the set-point (desired temperature). Smoother operation increases lifetime of the valve and actuator. This saves energy and reduces costs in general.

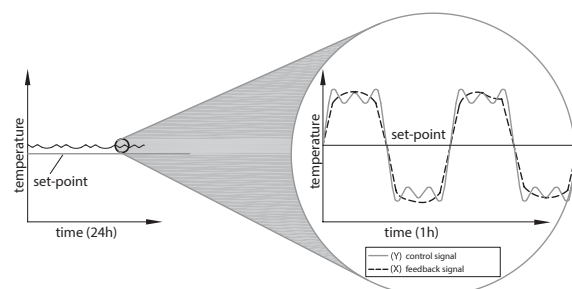


Fig. 8

Product details

General data

Technical data



Please check power supply and power consumption prior connection!


Note: Do not use safety activations for ON/OFF regulation.

Actuator type	Unit	AME 655/655 GA	AME 658 SD	AME 658 SU	AME 659 SD
Power supply	V	24 or 230; +10 ... -15 %; ac or dc	24 or 230; +10 ... -15 %; ac or dc	24 or 230; +10 ... -15 %; ac or dc	24 or 230; +10 ... -15 %; ac or dc
Power consumption	VA	12 (24 V) 21 (230 V)	19 (24 V) 28 (230 V)	19 (24 V) 28 (230 V)	19.2 (24 V) 35.7 (230 V)
Frequency	Hz	50/60	50/60	50/60	50/60
Control input Y	V	0-10 (2-10) [Ri = 40 kΩ]	0-10 (2-10) [Ri = 40 kΩ]	0-10 (2-10) [Ri = 40 kΩ]	0-10 (2-10) [Ri = 40 kΩ]
Control input Y	mA	0-20 (4-20) [Ri = 500 Ω]	0-20 (4-20) [Ri = 500 Ω]	0-20 (4-20) [Ri = 500 Ω]	0-20 (4-20) [Ri = 500 Ω]
Control input Y	-	3-point (wiring auto-detection)	3-point (wiring auto-detection)	3-point (wiring auto-detection)	3-point (wiring auto-detection)
Control output X	V	0-10 (2-10) [Ri = 10 kΩ]	0-10 (2-10) [Ri = 10 kΩ]	0-10 (2-10) [Ri = 10 kΩ]	0-10 (2-10) [Ri = 10 kΩ]
Control output X	mA	0-20 (4-20) [Ri = 510 Ω]	0-20 (4-20) [Ri = 510 Ω]	0-20 (4-20) [Ri = 510 Ω]	0-20 (4-20) [Ri = 510 Ω]
Closing force	N	2000	2000	2000	2000
Max. stroke	mm	50	50	50	50
Speed (selectable)	s/mm	2 or 6	2 or 6	2 or 6	2 or 6
Max. medium temperature	°C	Depends on valve type. No limitations for 150°C, for higher temperature see Installation			
Ambient temperature	°C	0 ... +55	0 ... +55	0 ... +55	0 ... +55
Storage and transport temperature	°C	-40 ... +70 (storing for 3 days)	-40 ... +70 (storing for 3 days)	-40 ... +70 (storing for 3 days)	-40 ... +70 (storing for 3 days)
Humidity		5-95% (no condensing)	5-95% (no condensing)	5-95% (no condensing)	5-95% (no condensing)
Protection class		II	II	II	II
Grade of enclosure		IP 54	IP 54	IP 54	IP 54
Weight	kg	5.3	8.6	8.6	8.6
Safety function		-	Yes	Yes	Yes (DIN EN 14597)
Safety function runtime/50 mm stroke	s	-	120	120	120
Manual operation		Electrical and mechanical	Electrical and mechanical	Electrical and mechanical	Electrical
Power failure response		Stem remains in last position	Safety function extends the stem	Safety function retracts the stem	Safety function extends the stem


Design

- 1 Manual operation knob
- 2 Function buttons
- 3 Service cover
- 4 Removable gland support *
- 5 End position indication ring
- 6 Stem connector
- 7 Valve connector (yoke)

* additional gland support with one M16 and one M20 gland added with AME 655GA and AME 659SD actuators only.

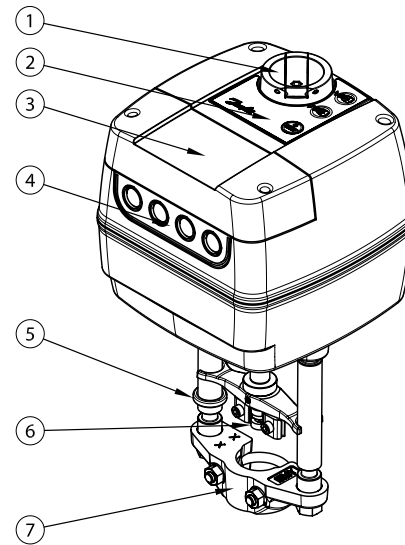

Dimensions

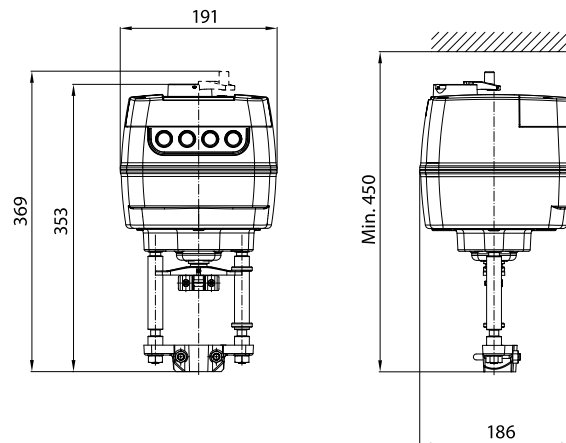


Installation

Mechanical

Please check the allowed installation positions for the valve and actuator. The actuator can be installed in all positions.

Use a M8/SW13 key (not supplied) to fit the actuator to the valve body. Allow for necessary clearance for maintenance purposes. To link valve and actuator stems use a 4mm Allen key (not supplied). The actuator has position indication rings which should be pushed together before el. connection; after self-stroking they indicate end positions of the stroke.

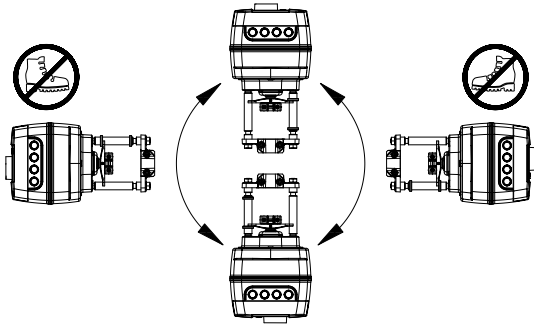

Electrical connection


Electrical connections can be accessed by removing the service cover.

AME 655GA / 659SD: Four cable entries are supplied with actuator.


AME 655 / 658: Four cable entries are provided for M 16×1.5 or M 20×1.5 cable glands. Note that in order to maintain the enclosure's IP rating, appropriate cable glands must be used.

	Code No.
ZF 4	003G1394
ZF 5	003G1396

< 150 °C

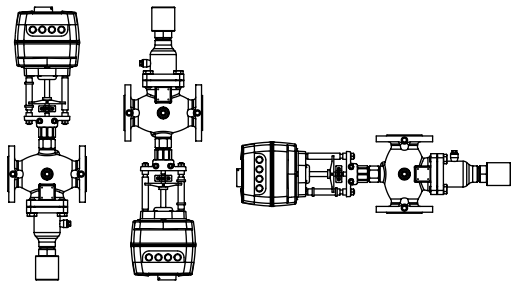


VFU 2 + adapter **065B3527**

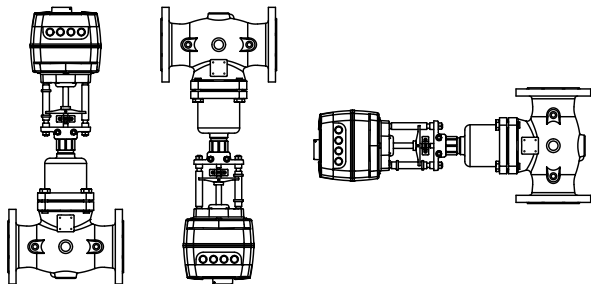


VFG/S + adapter **065B3527**

150 – 200 °C ZF4
200 – 350 °C ZF5

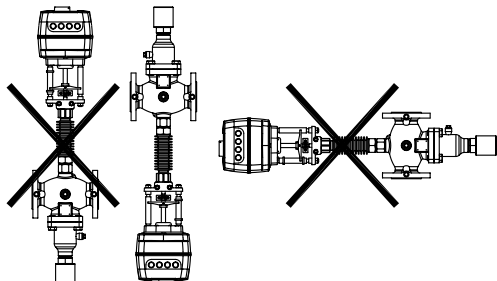

VFU 2 + adapter **065B3527** + ZF4/5

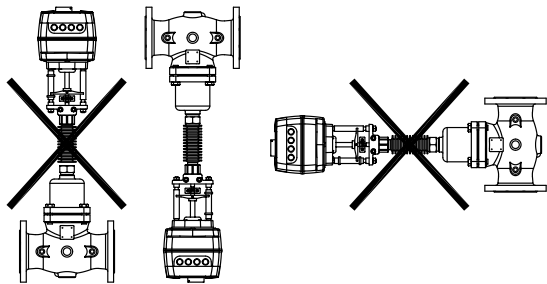


VFG/S + adapter **065B3527** + ZF4/5
VFGS + adapter **065B3527** + ZF5 (DN 15-125)




Wiring
AME 655; AME 658 SU/SD

Do not touch anything on the PCB! Do not remove the service cover before the power supply is fully switched off.
Max. allowed current output on terminals 4 and 5 is 4A. Min. power is 3W. Recommended cross-sectional area of the wiring is 1.5 mm².

AME 658 wiring for modulating mode

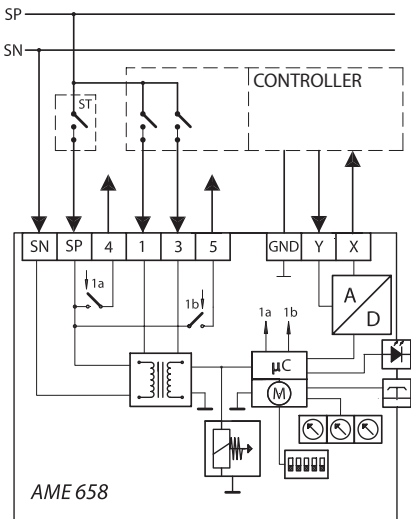






AME 655 wiring for modulating mode

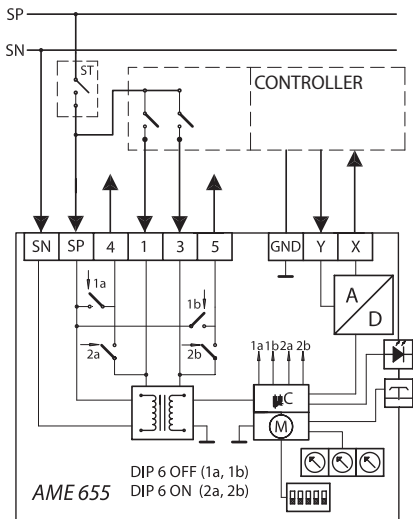

SN	0 V			Neutral
SP	24, 230 V ac/dc			Power supply
4, 5	SP(ac) *			SP output - max 4A - min 3W
1	SP			Input
3				Input
GND	0 V			Neutral
Y	0(2)-10 V 0(4)-20 mA			Input
X	0(2)-10 V 0(4)-20 mA			Output

Optional: **AME 655** connected as 3-point version

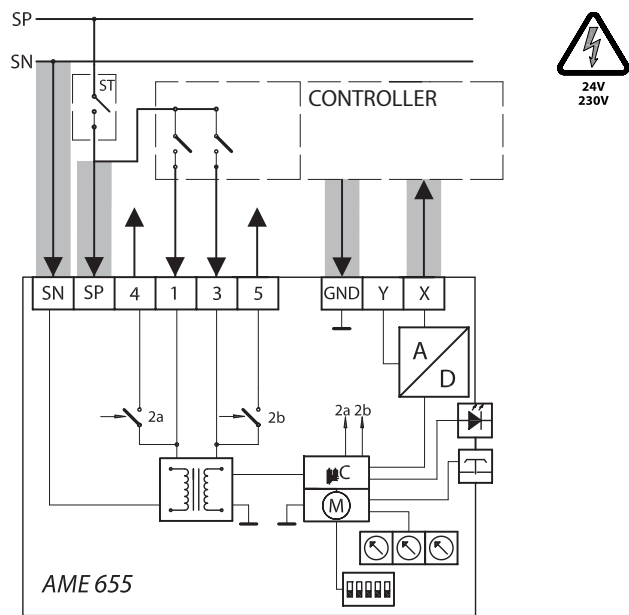

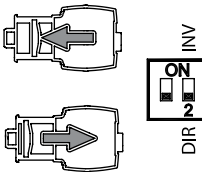SN	0 V			Neutral
SP	24, 230 V ac/dc			Power supply
4, 5	SP(ac) * 			SP output - max 4A - min 3W
1	SP			Input
3				Input
X	Ix 0(4)-20mA		 9 Ux	X output possible only when power supply is connected to the SN & SP. GND must be as well connected.
	Ux 0(2)-10V		 9 Ux	

* Outputs 4&5 can operate only with AC power supply. If outputs are needed at DC power supply it is recommended to use external comparator module that is connected to X-feedback signal.


Wiring

AME 659 SD; AME 655 GA


 Do not touch anything on the PCB! Do not remove the service cover before the power supply is fully switched off.

Max. allowed current output on terminals 4nc and 5nc is 4A. Min. power is 3W. Recommended cross-sectional area of the wiring is 1.5 mm².

AME 659 SD wiring for modulating mode

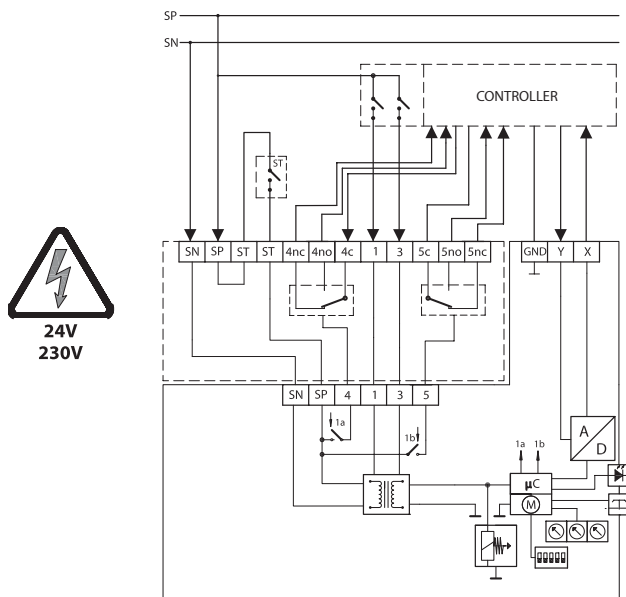

AME 655 GA wiring for modulating mode

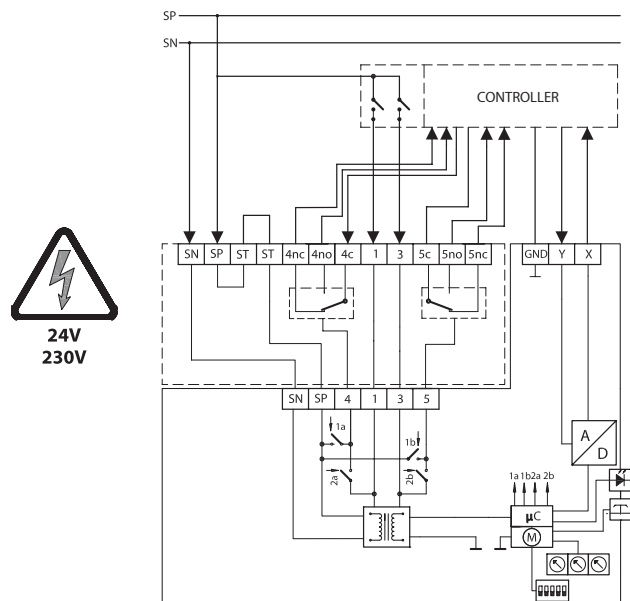

Certificates, declarations and approvals

The list contains all certificates, declarations, and approvals for this product type. Individual code number may have some or all of these approvals, and certain local approvals may not appear on the list.

When you click on the link you will be directed to the latest version of the 'Declaration of Conformity'. Products developed and sold before this date of issue conform to the directives/standards in force at the time of their sale.

Approval type	Title	Certification body	Approval topic
UA Declaration	UA Actuators 2024-06-27	Danfoss	LVD
Export Control Declaration	Electrical actuators	Danfoss	
Export Control Declaration	Actuators pressure flow and temperature	Danfoss	
EU Declaration	Danfoss EU 221011EN0815101	Danfoss	LVD
EU Declaration	Danfoss EU declaration 250609EN0820101	Danfoss	LVD
EU Declaration	EU Declaration of conformity 260619EN2801	Danfoss	Packaging

Contact details

Online support

Danfoss offers a wide range of support along with our products, including digital information, software, mobile apps and expert guidance. See the possibilities below.



The Danfoss Design center

Discover the Design Center, our advanced digital platform that streamlines product selection. With integrated tools and enhanced type pages, it's simpler than ever to access product information and documentation, and to select the right products. Check the availability of Danfoss products at partner locations and enjoy seamless transitions from selection to purchase with our basket-to-basket functionality. Whether you're buying from our distributors or directly from the Product Store, the Design Center simplifies your experience. Learn more at: designcenter.danfoss.com.



The Danfoss product store

The Danfoss Product Store is a one-stop shop available 24/7 for our customers, no matter where you are in the world or what area of industry you work in. Browse our catalog, check product details and documentation, view your prices and product availability, and quickly finalize your purchase. Start browsing at: store.danfoss.com.



Danfoss Partner Portal/Product Data tool

Designed to support you with easy access to product data extracts, essential resources, tools, and information. The Partner Portal provides a centralized hub for product documentation, training materials, marketing assets, and technical support, ensuring you have everything you need to succeed and grow your business with Danfoss. The Partner Portal is available 24/7 at: partner.danfoss.com and is ready to support your business.



Find technical documentation

Find technical documentation you need to get your project up running. Get direct access to our official collection of data sheets, certificates and declarations, manuals and guides, 3D models and drawings, case stories, brochures, and much more. Start searching now at: documentation.danfoss.com.



Danfoss Learning

Danfoss Learning is a free online learning platform. It features courses and materials specifically designed to help engineers, installers, service technicians, and wholesalers better understand the products, applications industry topics, and trends that will help you do your job better. Find your local Danfoss website here: learning.danfoss.com.



Get local information and support

Local Danfoss websites are the main sources for help and information about our company and products. Find product availability, get the latest regional news, or connect with a nearby expert - all in your own language. Find your local Danfoss website here: danfoss.com.

Danfoss A/S

Climate Solutions . danfoss.com . +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues description, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the products. All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.
