

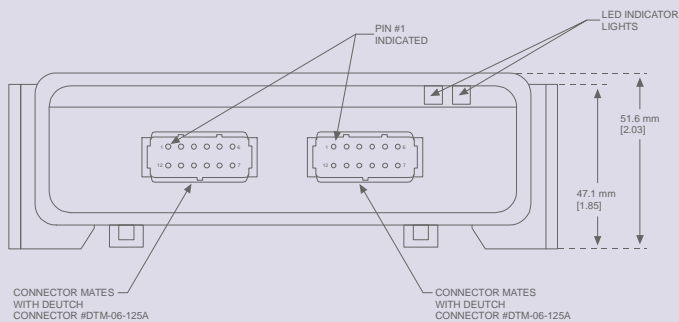
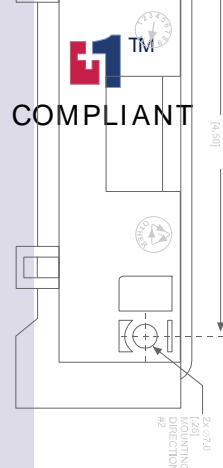
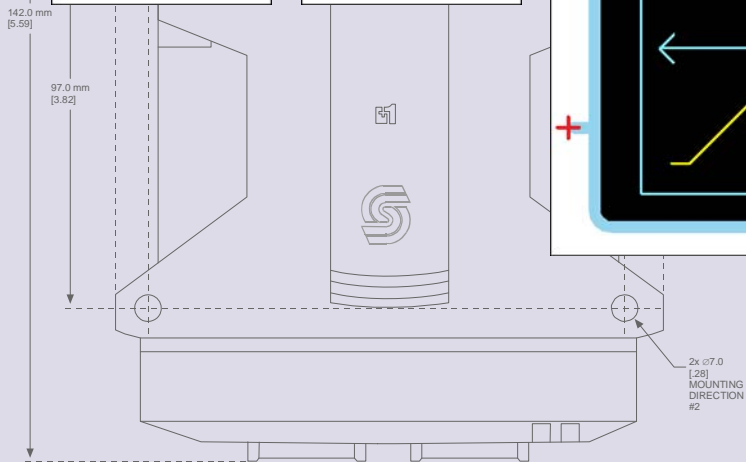
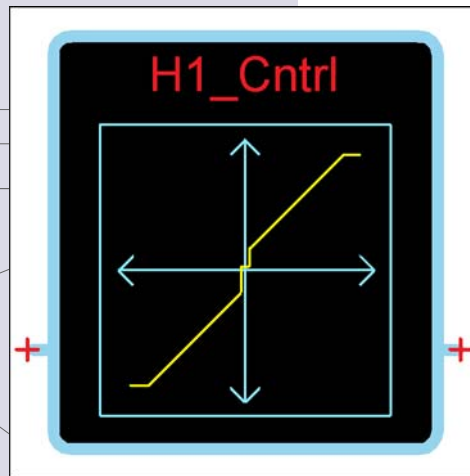


PLUS+1 Compliant H1  
EDC/NFPE Control  
Function Block  
User Manual

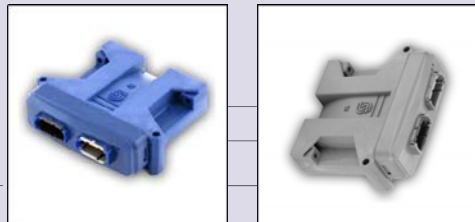

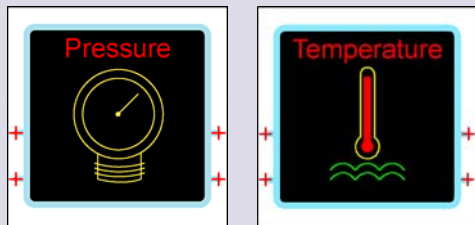

# PLUS+1 Compliant H1 EDC/NFPE Control Function Block User Manual

## About this Manual

### Organization and Headings

To help you quickly find information in this manual, the material is divided into sections, topics, subtopics, and details, with descriptive headings set in **red type**. Section titles appear at the top of every page in **large red type**.

In the PDF version of this document, clicking an item *underlined in blue italic type* jumps you to the referenced page in the document.

### Special Text Formatting

Controls and indicators are set in **bold black type**.

### Table of Contents

A Table of Contents (TOC) appears on the next page. In the PDF version of this document, the TOC entries are hyperlinked.

### *Revision History*

Revision	Date	Comment
Rev CA	October 2011	

©2011 Sauer-Danfoss. All rights reserved.

Sauer-Danfoss accepts no responsibility for possible errors in catalogs, brochures and other printed material. Sauer-Danfoss reserves the right to alter its products without prior notice. This also applies to products already ordered provided that such alterations can be made without affecting agreed specifications.

All trademarks in this material are properties of their respective owners.

PLUS+1, GUIDE, and Sauer-Danfoss are trademarks of the Sauer-Danfoss Group. The PLUS+1 GUIDE, PLUS+1 Compliant, and Sauer-Danfoss logotypes are trademarks of the Sauer-Danfoss Group.




PLUS+1 Compliant H1 EDC/NFPE Control Function Block  
User Manual

Contents

H1\_12V\_CTRL and H1\_24V\_CTRL Function Blocks ..... 4

- Overview ..... 4
- Inputs..... 5
- Function Block Internal Constants..... 6
- Function Block Parameters ..... 6
- Outputs..... 8
- About Function Block Connections ..... 9
- Status and Fault Logic..... 10
- Configuration Values..... 12
- About Modifying the Config\_Data Page ..... 15
- About the Relationship between Function Block Input and Output Signals..... 16
- MC Controller—Output Configuration ..... 17
  - How to Configure an MFOut ..... 17
- SC Controller—Output Configuration ..... 19
  - How to Configure an MFOut ..... 19
- How to Calibrate the Function Block..... 20
  - How to Calibrate an Individual Parameter..... 22
  - About Manual Calibration with the Service Tool Program ..... 23
- About the Name Space Feature ..... 24
- How to Enter a Name Space Value ..... 24

H1\_12V\_CTRL and H1\_24V\_CTRL Function Blocks

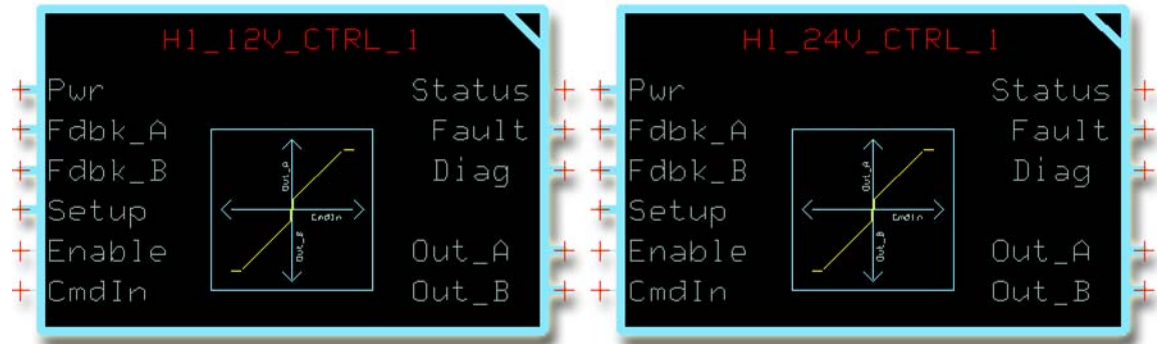


**Overview**

The **H1\_12V\_CTRL** function block interfaces between your application and a Sauer-Danfoss H1 12 VDC EDC (Electric Displacement Control) or a 12 VDC NFPE (Non-Feedback Proportional Electronic Control) that is used with Sauer-Danfoss pumps. This function block's output drives the coils that control flow direction and flow magnitude through the A and B ports of the pump.

The **H1\_24V\_CTRL** function block interfaces between your application and a Sauer-Danfoss H1 24 VDC EDC (Electric Displacement Control) or a 24 VDC NFPE (Non-Feedback Proportional Electronic Control) that is used with Sauer-Danfoss Pumps. This function block's output drives the coils that control flow direction and flow magnitude through the A and B ports of the pump.

These function blocks only differ in their operating voltages and configuration values.

---

 PLUS+1 I/O modules do not have the fault-checking feedback signals that are needed by these function blocks. An application that uses these function blocks to control an I/O module will fail to compile.

---

See:

- [About Function Block Connections](#) on page 9 for more about these function blocks' connections and signals.
- [About the Name Space Feature](#) on page 24 if you are using more than one of these function blocks in your application.

## Inputs

### H1\_12V\_CTRL and H1\_24V\_CTRL Function Block Inputs

Input	Type	Range	Description
<b>Pwr</b>	---	---	Reports controller power supply voltage. The function block uses this voltage when it calculates the measured resistance of the control circuit.
<b>Fdbk_A</b>	---	---	Reports the status of the <b>MFOut</b> (Multifunction Output) block that receives the function block's <b>Out_A</b> (Output A) bus. Each <b>MFOut</b> block in the <b>Outputs</b> page has a corresponding <b>MFOut</b> block in the <b>Inputs</b> page that reports on its status through a <b>Status</b> bus. The <b>Inputs</b> bus on the <b>Application</b> page contains these <b>Status</b> buses.
<b>Fdbk_B</b>	---	---	Reports the status of the <b>MFOut</b> (Multifunction Output) block that receives the function block's <b>Out_B</b> (Output B) bus. Each <b>MFOut</b> block in the <b>Outputs</b> page has a corresponding <b>MFOut</b> block in the <b>Inputs</b> page that reports on its status through a <b>Status</b> bus. The <b>Inputs</b> bus on the <b>Application</b> page contains these <b>Status</b> buses.
<b>Setup</b>	---	---	Allows common configuration values to be applied to multiple function blocks. See <a href="#">About Modifying the Config Data Page</a> on page 15 for more information.
<b>Enable</b>	BOOL	---	Enables the <b>OutputValue</b> signals in the <b>Out_A</b> and <b>Out_B</b> buses. <ul style="list-style-type: none"> <li>- T = <b>OutputValue</b> signals follow the <b>CmdIn</b> signal.</li> <li>- F = Holds both <b>OutputValue</b> signals at zero.</li> <li>- F/T = Clears latched faults if <b>CmdIn</b> is zero.</li> </ul>
<b>CmdIn</b>	S16	±10000	Specifies the requested speed and direction. <ul style="list-style-type: none"> <li>- +10000 = Requests maximum <b>Out_A</b> speed.</li> <li>- 0 = Requests neutral (stop).</li> <li>- -10000 = Requests maximum <b>Out_B</b> speed.</li> </ul>

### Function Block Internal Constants

The following table lists constant values that are provided in the function blocks for setting limits. These constants cannot be edited.

#### *H1\_12V\_CTRL and H1\_24V\_CTRL Internal Constants*

Constant	H1_12V_CTRL	H1_24V_CTRL	Description
MaxCrnt	1800 mA	920 mA	The maximum current for displacement or proportional control.
Nominal $\Omega$	3.66 $\Omega$	14.2 $\Omega$	The resistance of the load normally connected to <b>Out_A</b> and <b>Out_B</b> .

### Function Block Parameters

#### **Warning**

Using the PLUS+1 Service Tool program to download new parameter values to an application can result in unexpected and sudden machine movements.

Unexpected and sudden machine movements can result in personal injury and equipment damage.

Always secure your machine against unexpected and sudden movements before you use the Service Tool program to download new parameter values.

The following table lists function block parameters that are stored in the controller's non-volatile memory.

You can change these values by:

- Execution of the calibration process.
- Direct access to serial EE memory using the PLUS+1 Service Tool.
- Recalling default values.

#### *H1\_12V\_CTRL and H1\_24V\_CTRL Function Block Parameters*

Parameter	Type	Range	Description
A.EE_Thld, B.EE_Thld	U16	CalThldMin to CalThldMax	Calibrated threshold values for <b>Out_A</b> and <b>Out_B</b> .
A.EE_EndCrnt B.EE_EndCrnt	U16	Thld + 1 to MaxCurrent	Calibrated end current values for <b>Out_A</b> and <b>Out_B</b> .
A.EE_CalFlg, B.EE_CalFlg	U8	—	Calibration flags for <b>Out_A</b> and <b>Out_B</b> . – Bit 1 = 1 (0x0001)—Threshold is not calibrated. – Bit 2 = 1 (0x0002)—End current is not calibrated. The <b>CalFlg</b> signal in the <b>Diag</b> bus contains both pairs of flags, with the <b>Out_B</b> bits shifted to positions 3 and 4.

These parameters determine the values used as threshold and end current for each direction during normal operation. However, the values actually applied might be different because:

- **Thld** and **EndCrnt** are both subject to range limits.
- **Thld** is modified by the **ThldMult** value.

The following intermediate values represent the values that are actually applied:

- **EndCrntApplied** = MIN (**EE\_EndCrnt**, **MaxCrnt**).
- **ThldApplied** = MIN(**(EE\_Thld × ThldMult)**, **EndCrntApplied**).

This assures that:

- **EndCrntApplied** never exceeds **MaxCrnt**.
- **ThldApplied** never exceeds **EndCrntApplied**.

Also note that, while the **CalTask** value is set to select a calibration task:

- **EndCrntApplied** = **MaxCrnt**.
- **ThldApplied** = 1.

The applied values are available in the **Diag** bus as **Thld\_A**, **Thld\_B**, **EndCrnt\_A**, and **EndCrnt\_B**.

## Outputs

### H1\_12V\_CTRL and H1\_24V\_CTRL Function Block Outputs


Output	Type	Range	Description
<b>Status</b>	U16	—	Reports the function block's status. This output uses the standard bitwise scheme described in the <i>Basic Function Blocks Library User's Manual</i> .
<b>Fault</b>	—	—	Reports the function block's faults. This output uses the standard bitwise scheme described in the <i>Basic Function Blocks Library User's Manual</i> .
<b>Fault_A</b>	U16	—	Reports fault conditions for the A output.
<b>Fault_B</b>	U16	—	Reports fault conditions for the B output.
<b>Diag</b>	—	—	Outputs a bus with these signals: <ul style="list-style-type: none"> <li>– <b>CalFlg</b> (Calibration Flag).</li> <li>– <b>EndCrnt_A</b> (End Current A).</li> <li>– <b>FltTmr_A</b> (Fault Timer A).</li> <li>– <b>MeasOhm</b> (Ohm A).</li> <li>– <b>Thld_A</b> (Threshold A).</li> <li>– <b>EndCrnt_B</b> (End Current B).</li> <li>– <b>FltTmr_B</b> (Fault Timer B).</li> <li>– <b>MeasOhm_B</b> (Ohm B).</li> <li>– <b>Thld_B</b> (Threshold B).</li> </ul> <p>The <b>Diag</b> bus also has <b>Config</b> and <b>Define</b> sub-buses with signals that report the configuration and setup values used by the function blocks.</p> <p>Use these signals for troubleshooting.</p>
<b>CalFlg</b>	U8	—	The <b>CalFlg</b> signal is a bitmask value that indicates the state of calibration values. <ul style="list-style-type: none"> <li>– Bit 1 = 1 (0x0001)—Threshold A is not calibrated.</li> <li>– Bit 2 = 1 (0x0002)—End current A is not calibrated.</li> <li>– Bit 3 = 1 (0x0004)—Threshold B is not calibrated.</li> <li>– Bit 4 = 1 (0x0008)—End current B is not calibrated.</li> </ul> <p>Use these flags to manage the calibration process.</p>
<b>EndCrnt_A, EndCrnt_B</b>	U16	—	Report the active end current value for the A and B outputs. During: <ul style="list-style-type: none"> <li>– Normal operation, end current values equal <b>A.EE_EndCrnt</b> and <b>B.EE_EndCrnt</b>.</li> <li>– Calibration, the active end current values equal <b>MaxCrnt</b>.</li> </ul>
<b>FltTmr_A, FltTmr_B</b>	U16	—	Report the values of the fault delay timers.
<b>Thld_A, Thld_B</b>	U16	—	Report the active threshold values for the forward and reverse directions. During: <ul style="list-style-type: none"> <li>– Normal operation, the forward threshold value equals <b>A.EE_Thld</b> x <b>ThldMult</b> and the reverse threshold value equals <b>B.EE_Thld</b> x <b>ThldMult</b>.</li> <li>– During calibration, threshold values equal 1.</li> </ul>



*H1\_12V\_CTRL and H1\_24V\_CTRL Function Block Outputs*

Output	Type	Range	Description
<b>MeasOhm_A</b> , <b>MeasOhm_B</b>	U16	---	Indicate the measured resistance of the control circuits that drive the pump's coils.
<b>Out_A</b>	---	---	Has <b>OutputValue</b> signal that drives the A coil.
<b>Out_B</b>	---	---	Has <b>OutputValue</b> signal that drives the B coil.

**About Function Block Connections**

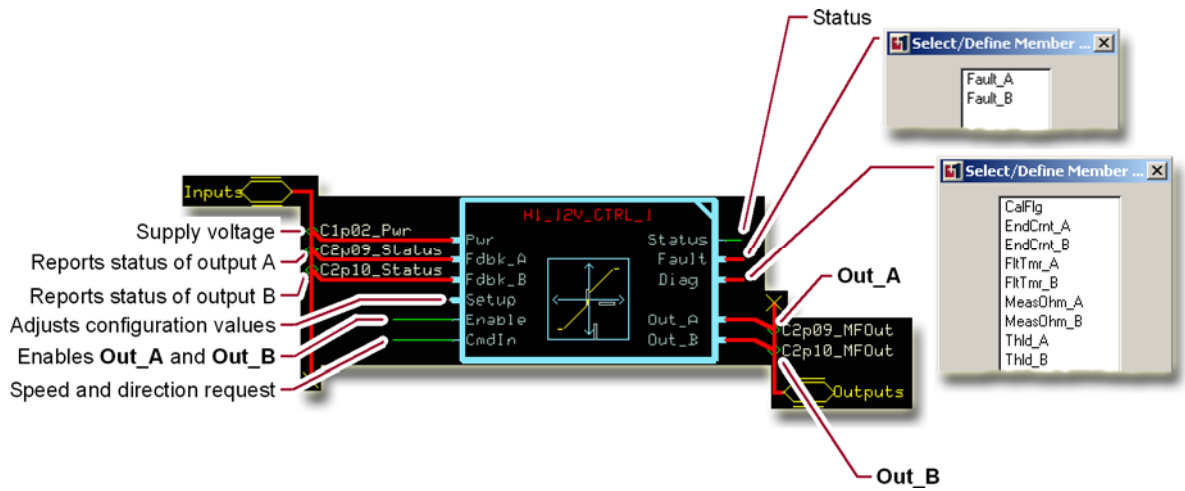

Connections for both function blocks are the same. These function blocks only differ in operating voltage and configuration values.

### Status and Fault Logic

The following table lists function block status codes. These codes indicate the calibration state of the function block.

#### Status Logic

Status	Bit*	Reported While
Block is not calibrated.	1	Any <b>CalFlag</b> bit is set to 1.
Calibration active.	2	<b>Enable</b> is T and the <b>CalTask</b> = -2, -1, +1, or +2.
Parameters are corrupt.	3	( <b>EE_EndCrnt</b> > <b>MaxCrnt</b> ) or ( <b>EE_Thld</b> × <b>ThldMult</b> ) > <b>EndCrntApplied</b> ) for either direction A or direction B. The actual tests in the software are: - ( <b>EndCrntApplied</b> ≠ <b>EE_EndCrnt</b> )—this happens when ( <b>EE_EndCrnt</b> > <b>MaxCrnt</b> ). It means that <b>EndCrntApplied</b> = <b>MaxCrnt</b> . - ( <b>ThldApplied</b> = <b>EndCrntApplied</b> )—This happens when (( <b>EE_Thld</b> × <b>ThldMult</b> ) ≥ <b>EndCrntApplied</b> ).
Invalid setup/calibration.	4	Any of the following setup and configuration values are not within their valid ranges: - <b>CalThldMin</b> (for either direction). - <b>CalThldMax</b> (for either direction). - <b>ThldMult</b> . - <b>FltDelay</b> . - <b>CalTask</b> . Also reported while <b>PinStatus</b> reports a configuration error (value =1) for either direction A or direction B.
Value too low.	7	Threshold calibration is active and the <b>OutputValue</b> < <b>CalThldMin</b> for the calibration direction.
Value too high.	8	Threshold calibration is active and the <b>OutputValue</b> > <b>CalThldMax</b> for the calibration direction.

\*Position of set bit in a 16 bit fault or status code. Bit 1 is the least significant bit. Bit 16 set to 1 identifies a standard Sauer-Danfoss status code or fault code.

The function block's **Out\_A** and **Out\_B** buses each contain an **OutputValue** signal that drives the forward and reverse coils on the EDC and MFPE controls. The following table lists function block faults and how they affect the **OutputValue** signals.

*Fault Logic*

Fault	Cause	Bit*	Response	Delay <sup>†</sup>	Latch <sup>‡</sup>	Correction
Input value too low.	<b>CmdIn</b> < -100000	1	<b>OutputValue</b> held at 0	No	No	Fix <b>CmdIn</b>
Input value too high.	<b>CmdIn</b> > +10000	2		No	No	Fix <b>CmdIn</b>
Open circuit.	Measured $\Omega$ > (Nominal $\Omega \times 3$ ) <sup>§</sup>	3		Yes	Yes	Check for open circuit or high resistance between output pin and ground. See <a href="#">Function Block Internal Constants</a> on page 6 for more about Nominal $\Omega$ .
Short circuit.	Measured $\Omega$ < (Nominal $\Omega \div 3$ ) <sup>§</sup>	4				Check for short circuit or low resistance between output pin and ground. See <a href="#">Function Block Internal Constants</a> on page 6 for more about Nominal $\Omega$ .
Hardware.	Current exceeds continuous or peak rating	6				Correct cause of overload
General.	Current flow between <b>Out_A</b> and <b>Out_B</b> . Possible cause is loss of a common ground connection.	7				Correct open ground connection



\*Position of set bit in a 16 bit status or fault code. Bit 1 is the least significant bit. Bit 16 set to 1 identifies a standard Sauer-Danfoss status code or fault code.

<sup>†</sup> A delayed fault gets reported if the detected fault condition persists for a specified delay time. A delayed fault cannot be cleared until the fault condition remains undetected for the delay time.

<sup>‡</sup> A latched fault report maintains until the latch is released. A release is attempted each time that **Enable** becomes **T** while **CmdIn** is 0.

<sup>§</sup> The nominal  $\Omega$  value is an internal constant of each function block. It can be viewed, with other defined constants, in the **Define** sub-bus of the **Diag** bus. The other constants specify the maximum current and the range limits for configuration values.

**Configuration Values**

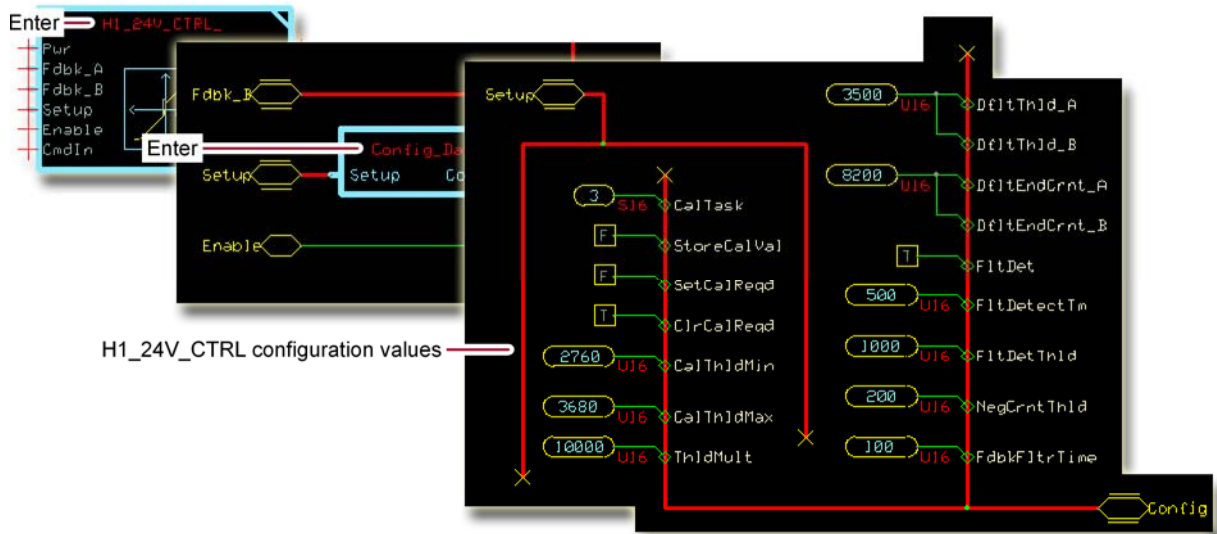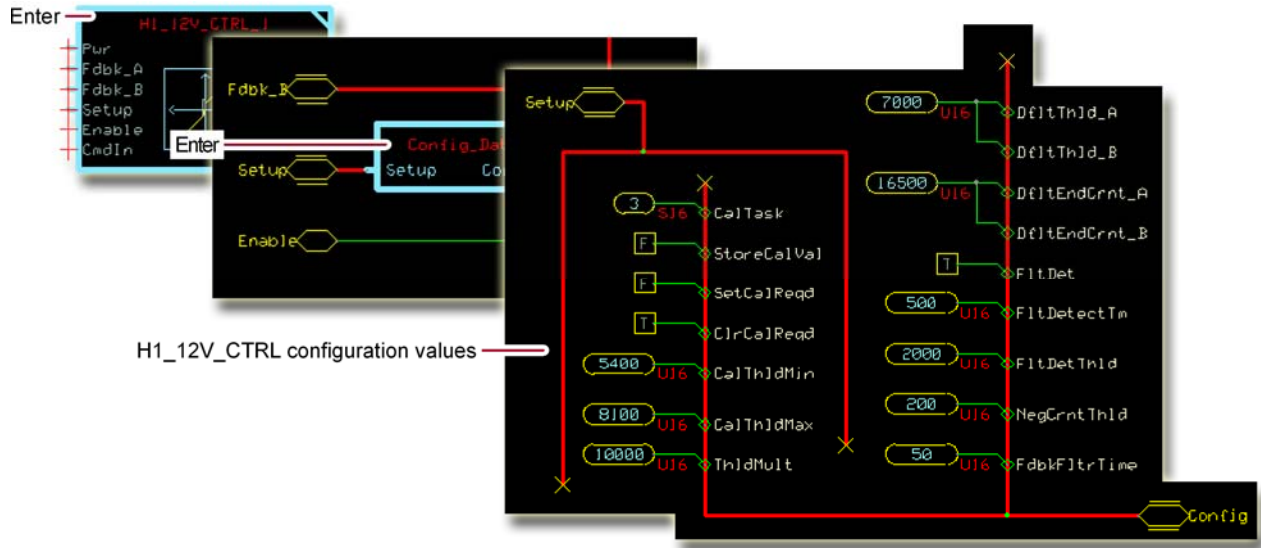

The default **Config\_Data** page contains constant values that set the function block's operating characteristics. Typically, you do not have to change any of these values for the correct operation of the function block.

Optionally, you can:

- Modify the constant values on this page.
- Replace some or all the constant values on this page with signals brought in on the **Setup** bus, which is connected to the function block's **Setup** input. For more information, see [About Modifying the Config\\_Data Page](#) on page 15.

*H1\_12V\_CTRL and H1\_24V\_CTRL Function Block Configuration Values*

Input	Type	12V Range	24V Range	Description
<b>CalTask</b>	S16	-2 to +3	-2 to +3	<p><b>CalTask</b> (Calibration Task) selects a calibration process.</p> <ul style="list-style-type: none"> <li>- -2 = Calibrate the B end current.</li> <li>- -1 = Calibrate the B threshold.</li> <li>- 0 = Not in the calibration mode.</li> <li>- +1 = Calibrate the A threshold.</li> <li>- +2 = Calibrate the A end current.</li> <li>- +3 = Applies default calibration values for both outputs on a transition to +3. The default value of +3 applies default values each time the controller powers up, and allows normal operation.</li> </ul>
<b>StoreCalVal</b>	BOOL	---	---	<p>While calibration is active, a <b>StoreCalVal</b> (Store Calibration Value) F/T transition writes the selected calibration value to memory and sets the <b>CalFlg</b> to indicate this value as calibrated.</p> <p>The <b>CalFlg</b> in the <b>Diag</b> bus reports the status of each calibration value.</p> <ul style="list-style-type: none"> <li>- T = Not calibrated.</li> <li>- F = Calibrated.</li> </ul>
<b>SetCalReqd</b>	BOOL	---	---	A F/T transition sets all <b>CalFlg</b> bits to 1 to mark all calibration values as uncalibrated.
<b>ClrCalReqd</b>	BOOL	---	---	A F/T transition clears all <b>CalFlg</b> bits to 0 to mark all calibration values as calibrated.
<b>CalThldMin</b>	U16	0-7199	0-3679	Sets the lower limit of the valid range for the threshold parameters. 10000 = 1000 mA.
<b>CalThldMax</b>	U16	7200-10800	3680-5520	Sets the upper limit for of the valid range for the threshold parameters. 10000 = 1000 mA.
<b>ThldMult</b>	U16	0-10000	0-10000	The function block multiplies the <b>Out_A</b> and <b>Out_B</b> thresholds by the <b>ThldMult</b> (Threshold Multiplier) to calculate the applied threshold. Enter a value of less than 10000 to reduce the applied threshold. For example, a value of 7500 reduces both the <b>Out_A</b> and <b>Out_B</b> thresholds by 25%. 10000 = 100.00%.
<b>DfltThld_A</b>	U16	<b>CalThldMin</b> to <b>CalThldMax</b>	<b>CalThldMin</b> to <b>CalThldMax</b>	When the <b>CalTask</b> becomes +3, the <b>Out_A</b> threshold parameter resets to equal the <b>DfltThld_A</b> (Default Threshold A). 10000 = 1000 mA.
<b>DfltThld_B</b>	U16	<b>CalThldMin</b> to <b>CalThldMax</b>	<b>CalThldMin</b> to <b>CalThldMax</b>	When the <b>CalTask</b> becomes +3, the <b>Out_B</b> threshold parameter resets to equal the <b>DfltThld_B</b> (Default Threshold B). 10000 = 1000 mA.
<b>DfltEndCrnt_A</b>	U16	0-1800	0-920	When the <b>CalTask</b> becomes +3, the <b>Out_A</b> end current parameter resets to equal the <b>DfltEndCrnt_A</b> (Default End Current A). 10000 = 1000 mA.


*H1\_12V\_CTRL and H1\_24V\_CTRL Function Block Configuration Values*

Input	Type	12V Range	24V Range	Description
<b>DfltEndCrnt_B</b>	U16	0–1800	0–920	When the <b>CalTask</b> becomes +3, the <b>Out_B</b> end current parameter resets to equal the <b>DfltEndCrnt_B</b> (Default End Current B). 10000 = 1000 mA.
<b>FltDet</b>	BOOL	---	---	The <b>FltDet</b> (Fault Detection) signal enables detection of open and short conditions, based on the measured resistance of the EDC control circuit. – T = Enable fault detection. – F = Disable fault detection.
<b>FltDetectTm</b>	T	100–2000	100–2000	Sets the time before the fault detection logic reports or clears fault conditions. This value specifies how long a fault condition must be detected before it is reported. It also specifies how long the fault condition must remain undetected before the report can be cleared. 1000 = 1000 ms.
<b>FltDetThld</b>	U16	---	---	For each direction, the open and short faults are only detected while the <b>OutputValue</b> exceeds the <b>FltDetThld</b> (Fault Detect Threshold). Typically, set this value below the <b>Out_A</b> and <b>Out_B</b> threshold values. If you set the value too: – Low, you get nuisance faults. – High, you turn off fault detection for some or all of the output range.
<b>NegCrntThld</b>	U16	---	---	Negative feedback current in an uncommanded direction must be greater than the <b>NegCrntThld</b> (Negative Current Threshold) value to set a fault. Typically, this fault results when the A and B outputs drive coils that share a common ground and their connection to the controller ground is lost.
<b>FdbkFiltrTime</b>	U16	---	---	Sets the time constant for the exponential filtering applied to the current measurement used to detect a fault caused by negative feedback in an uncommanded direction.


H1\_12V\_CTRL and H1\_24V\_CTRL Function Blocks

About Modifying the Config\_Data Page

Modify the **Config\_Data** page to control the configuration process with signals routed into the function block from an application.

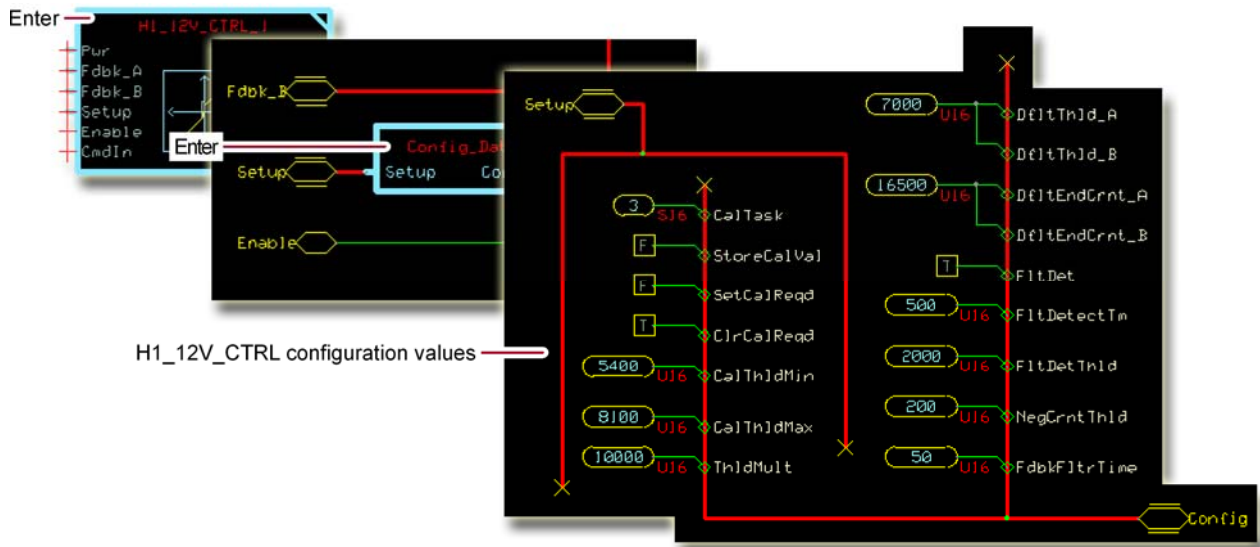

The preceding figure shows an unmodified **Config\_Data** page. This **Config\_Data** page has all the values that are needed to configure the function block.

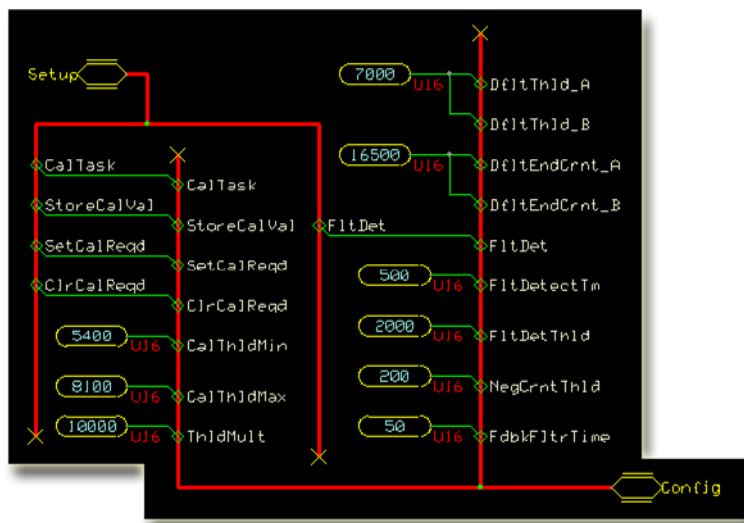


The preceding figure shows the changes made to a **Config\_Data** page to allow an application to control the configuration process using signals routed via the **Setup** bus.

**About the Relationship between Function Block Input and Output Signals**

The function block's **Out\_A** and **Out\_B** buses each contain an **OutputValue** signal.

The following figure plots the relationship between the function block's **CmdIn** and **OutputValue**.

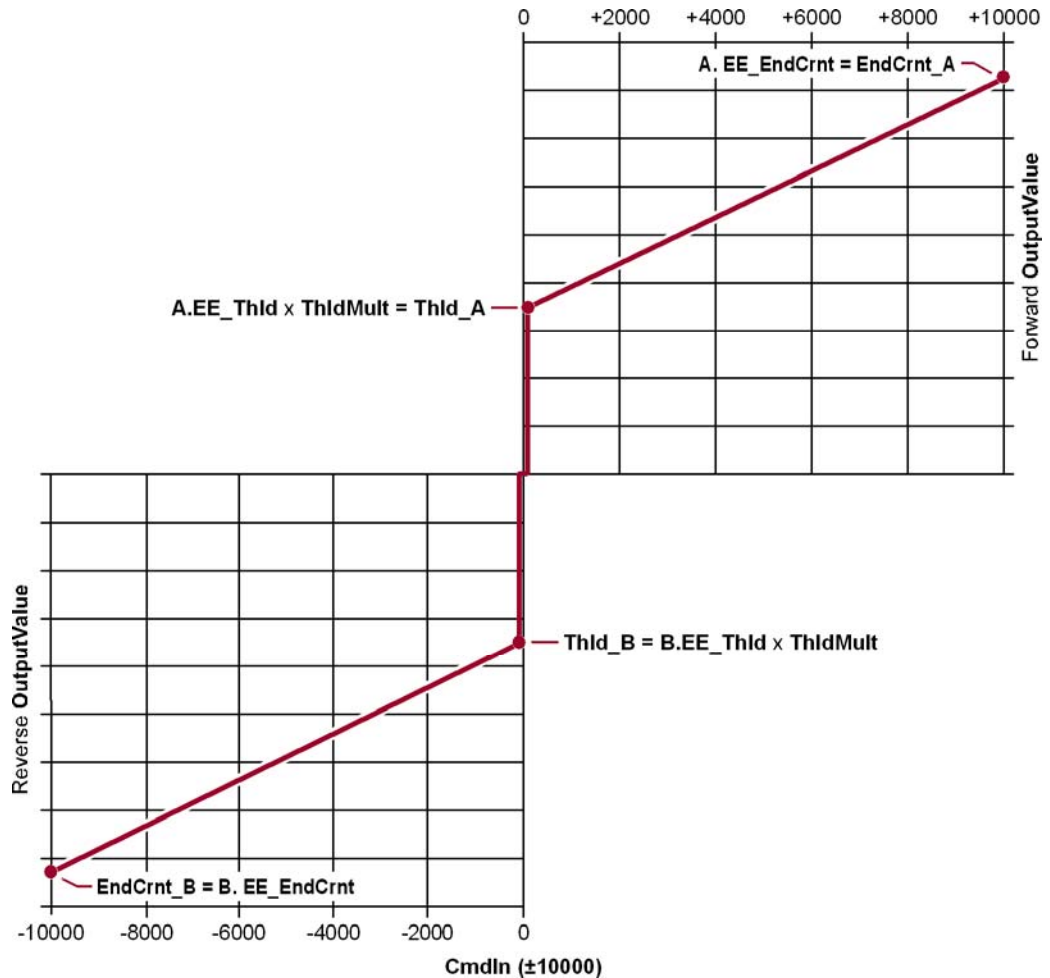

- The **Thld\_A** value sets the **Out\_A OutputValue** of the block when it receives a **CmdIn** of +1.
- The **Thld\_B** value sets the **Out\_B OutputValue** of the block when it receives a **CmdIn** of -1.
- The **EndCrnt\_A** value sets the **Out\_A OutputValue** of the block when it receives a **CmdIn** of +10000.
- The **EndCrnt\_B** value sets the **Out\_B OutputValue** of the block when it receives a **CmdIn** of -10000.




**MC Controller—Output Configuration**

If you have an SC controller, see [SC Controller—Output Configuration](#) on page 19.


You route the function block’s **Output** bus or buses to an **MFOut**.

**How to Configure an MFOut**


You must configure the **MFOut** to receive the signals in an **Output** bus.

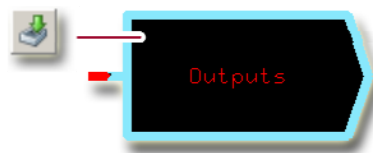

1. In the GUIDE template, enter the **Outputs** block.

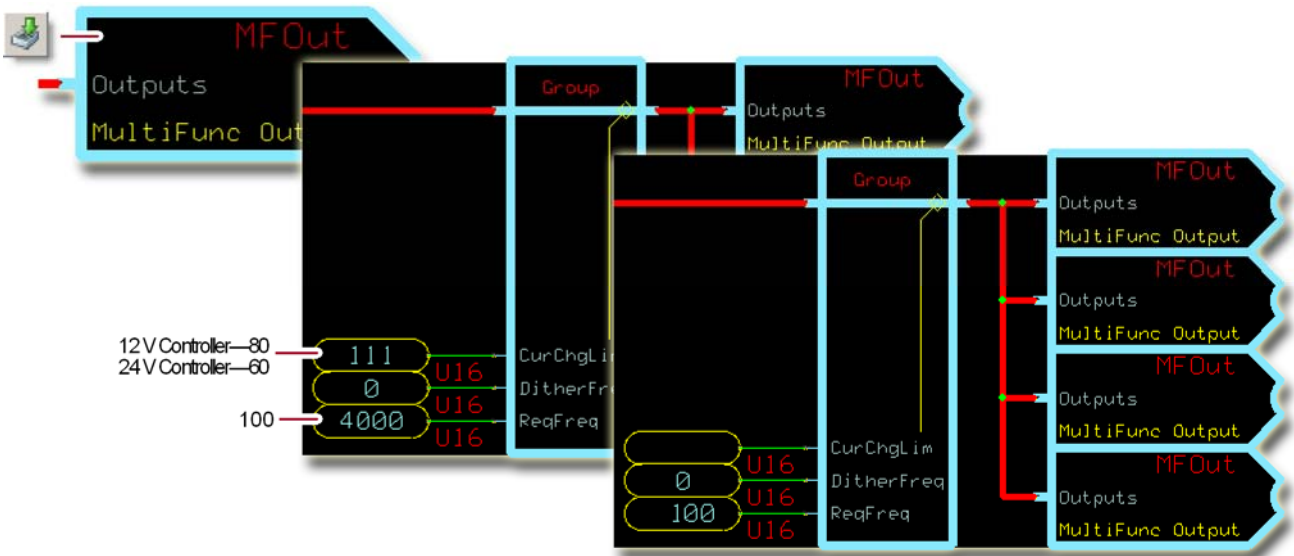

2. In the **Group** that receives the signals in an **Output** bus, make the changes that are shown in the preceding figure.

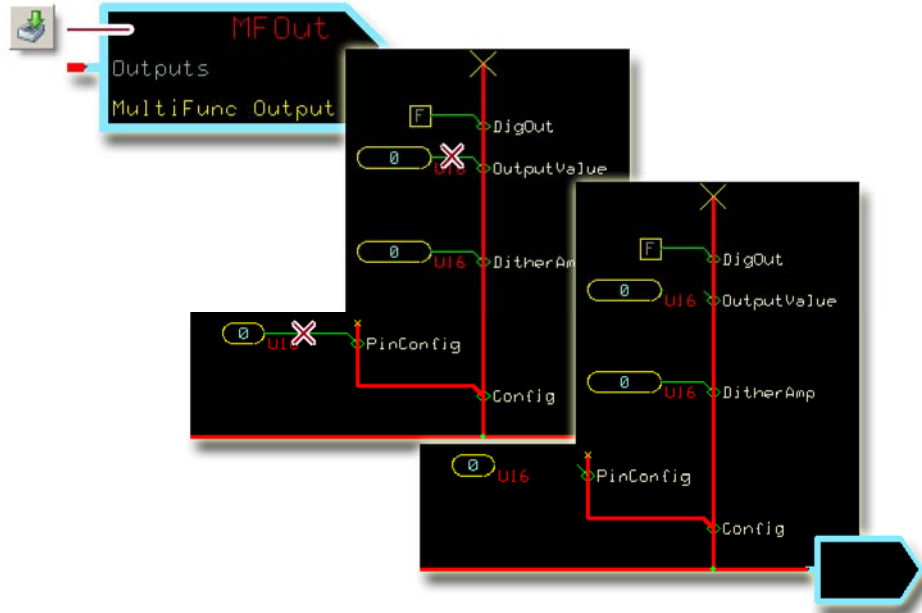

3. In the individual **MFOut** that receives the signals in an **Output** bus, make the changes that are shown in the preceding figure.


**SC Controller—Output Configuration**

If you have an MC controller, see [MC Controller—Output Configuration](#) on page 17.


You route the function block’s **Output** bus or buses to an **MFOut**.

**How to Configure an MFOut**

You must configure an **MFOut** to receive the signals in an **Output** bus.

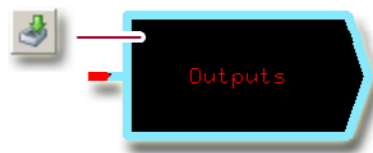

1. In the GUIDE template, enter the **Outputs** block.

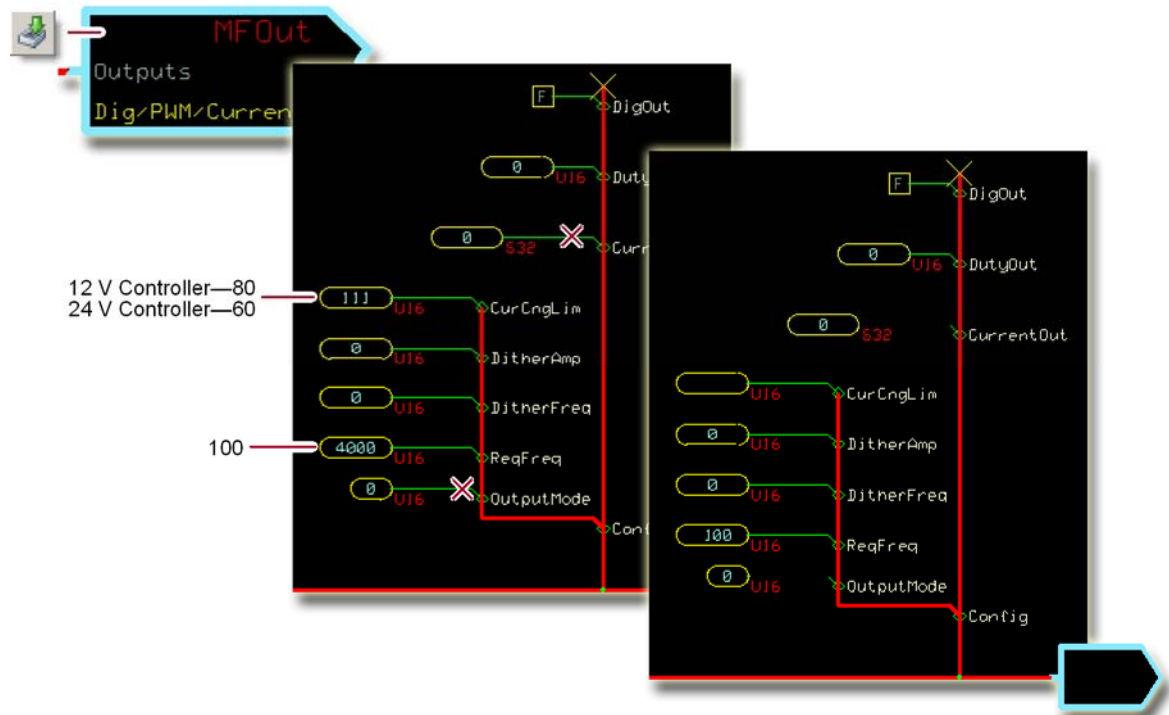

2. In the **MFOut** that receives the signals in an **Output** bus, make the changes that are shown in the preceding figure.

### How to Calibrate the Function Block

See [About Modifying the Config Data Page](#) on page 15 for an example of a **Config Data** page that has been modified to allow an application to control the calibration process.

1. Prepare to calibrate.
  - A. Set the **SetCalReq** signal to F.
  - B. Set the **ClrCalReq** signal to F.
  - C. Set the **StoreCalVal** signal to F.
  - D. Toggle the **SetCalReq** signal from F to T.

    Toggling sets the “not calibrated” bits in the **CalFlag** signal to 1.
2. Set the **Enable** signal to T.
3. Calibrate the **Out\_A** threshold parameter.
  - A. Set the **CalTask** signal to +1.
  - B. Gradually modify the **CmdIn** signal in a positive (0 to +10000) direction to find the minimum command that causes motion.

    In the **Status** signal, monitor bit 7—**Value too low** and bit 8—**Value too high** to make sure that the **OutputValue** signal is within the valid threshold range.
  - C. Toggle the **StoreCalVal** signal from F to T to write the **OutputValue** to memory.

    In the **CalFlag** signal, check that bit 1 clears to 0, to verify that the controller has written the **Out\_A** threshold parameter to memory.
4. Calibrate the **Out\_B** threshold parameter.
  - A. Set the **CalTask** signal to -1.
  - B. Gradually modify the **CmdIn** signal in a negative (0 to -10000) direction to find the minimum command that causes motion.

    In the **Status** signal, monitor bit 7—**Value too low** and bit 8—**Value too high** to make sure that the **OutputValue** signal is within the valid threshold range.
  - C. Toggle the **StoreCalVal** signal from F to T to write the **OutputValue** to memory.

    In the **CalFlag** signal, check that bit 3 clears to 0, to verify that the controller has written the **Out\_B** threshold parameter to memory.

5. Calibrate the **Out\_A** end current parameter.
  - A. Set the **CalTask** signal to +2.
  - B. Gradually modify the **CmdIn** signal in a positive direction to find the command that produces the desired maximum pump flow.
  - C. Toggle the **StoreCalVal** signal from F to T to write the **OutputValue** to memory.  
  
In the **CalFlag** signal, check that bit 2 clears to 0, to verify that the controller has written the **Out\_A** end current parameter to memory.
6. Calibrate the **Out\_B** end current parameter.
  - A. Set the **CalTask** signal to -2.
  - B. Gradually modify the **CmdIn** signal in a negative direction to find the command that produces the desired maximum pump flow.
  - C. Toggle the **StoreCalVal** signal from F to T to write the **OutputValue** to memory.  
  
In the **CalFlag** signal, check that bit 4 clears to 0, to verify that the controller has written the **Out\_B** end current parameter to memory.
7. End the calibration process.
  - A. Set the **CalTask** signal to 0.
  - B. In the **CalFlag** signal, verify that all bits are now 0.
  - C. Verify that no **Status** or **Fault** conditions are reported.
  - D. Set the **ThldMult** signal to the desired value.

### How to Calibrate an Individual Parameter

Partial calibration allows you to calibrate an individual parameter while leaving the values of other parameters unchanged.

1. Prepare to calibrate.
  - A. Set the **SetCalReq** signal to F.
  - B. Set the **ClrCalReq** signal to F.
  - C. Set the **StoreCalVal** signal to F.
  - D. Toggle the **SetCalReq** signal from F to T.

    Toggling sets all the “not calibrated” bits in the **CalFlag** signal to 1.
2. Set the **Enable** signal to T.
3. Use the **CalTask** signal to select the parameter to be calibrated.
4. Calibrate the parameter.
  - A. Toggle the **StoreCalVal** signal from F to T to write the **OutputValue** to memory.
  - B. In the **CalFlag** signal, check that the calibration bit for the selected parameter clears to 0, to verify that the controller has written the parameter to memory.
5. End the calibration process.
  - A. Set the **CalTask** signal to 0.
  - B. Toggle the **ClrCalReqd** signal from F to T.
  - C. In the **CalFlag** signal, verify that all bits are now 0.
  - D. Verify that no **Status** or **Fault** conditions are reported.

**About Manual Calibration with the Service Tool Program**

You can manually calibrate the function block using the PLUS+1 Service Tool to download calibration parameters.

 **Warning**

---

Using the PLUS+1 Service Tool program to download new parameter values to an application can result in unexpected and sudden machine movements.

Unexpected and sudden machine movements can result in personal injury and equipment damage.

Always secure your machine against unexpected and sudden movements before you use the Service Tool program to download new parameter values.

---

When you manually calibrate:

- Make sure that the calibration parameters are valid. If the values are out of range for a given direction, the block limits the values of **ThldApplied**, **EndCrntApplied** or both for that direction. This condition is indicated by the "Parameters are corrupt" Status, but it can produce unintended output commands.
- Verify that the **Status** signal indicates normal status conditions.


### About the Name Space Feature

If you use this function block more than once in an application, you must change each function block's **Name Space** value to avoid compiler errors.

These function blocks allocate memory using memory names ("aliases"). Identical function blocks have identical memory names. Identical memory names will cause a compiler error.

The **Name Space** value adds a unique prefix to each memory name to avoid memory allocation errors. Keep **Name Space** values short to save controller memory.

### How to Enter a Name Space Value

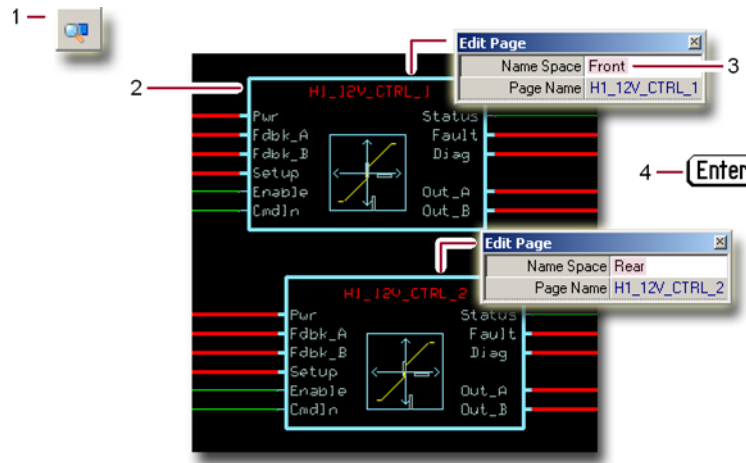

1. In the PLUS+1 GUIDE menu bar, click the Query/Change button.
2. Click the function block's page name to display the **Edit Page** window.
3. In the **Edit Page** window, enter a meaningful **Name Space** value.
4. Press **Enter**.
5. Repeat these steps to enter unique Name Space values for other identical function blocks.





# PLUS+1 Compliant H1 EDC/NFPE Control Function Block User Manual

(This page is intentionally blank.)



**Products we offer:**

- Bent Axis Motors
- Closed Circuit Axial Piston Pumps and Motors
- Displays
- Electrohydraulic Power Steering
- Electrohydraulics
- Hydraulic Power Steering
- Integrated Systems
- Joysticks and Control Handles
- Microcontrollers and Software
- Open Circuit Axial Piston Pumps
- Orbital Motors
- PLUS+1™ GUIDE
- Proportional Valves
- Sensors
- Steering
- Transit Mixer Drives

**Members of the Sauer-Danfoss Group:**

**Comatrol**

[www.comatrol.com](http://www.comatrol.com)

**Schwarz Müller-Inverter**

[www.schwarzmueller-inverter.com](http://www.schwarzmueller-inverter.com)

**Turolla**

[www.turollaocg.com](http://www.turollaocg.com)

**Hydro-Gear**

[www.hydro-gear.com](http://www.hydro-gear.com)

**Sauer-Danfoss-Daikin**

[www.sauer-danfoss-daikin.com](http://www.sauer-danfoss-daikin.com)

**Sauer-Danfoss** is a global manufacturer and supplier of high-quality hydraulic and electronic components. We specialize in providing state-of-the-art technology and solutions that excel in the harsh operating conditions of the mobile off-highway market. Building on our extensive applications expertise, we work closely with our customers to ensure exceptional performance for a broad range of off-highway vehicles.

We help OEMs around the world speed up system development, reduce costs and bring vehicles to market faster. Sauer-Danfoss—Your Strongest Partner in Mobile Hydraulics.

**Go to [www.sauer-danfoss.com](http://www.sauer-danfoss.com) for further product information.**

Wherever off-highway vehicles are at work, so is Sauer-Danfoss.

We offer expert worldwide support for our customers, ensuring the best possible solutions for outstanding performance. And with an extensive network of Global Service Partners, we also provide comprehensive global service for all of our components.

Please contact the Sauer-Danfoss representative nearest you.

Local address:  
Sauer-Danfoss Inc.  
3500 Annapolis Lane North  
Minneapolis, MN 55447, USA  
Phone: +1 763 509-2000  
Fax: +1 763 559-5769

Sauer-Danfoss (US) Company  
2800 East 13th Street  
Ames, IA 50010, USA  
Phone: +1 515 239-6000  
Fax: +1 515 239-6618

Sauer-Danfoss ApS  
DK-6430 Nordborg, Denmark  
Phone: +45 7488 4444  
Fax: +45 7488 4400

Sauer-Danfoss GmbH & Co. OHG  
Postfach 2460, D-24531 Neumünster  
Krokamp 35, D-24539 Neumünster,  
Germany  
Phone: +49 4321 871-0  
Fax: +49 4321 871 122

Sauer-Danfoss-Daikin LTD  
Shin-Osaka TERASAKI 3rd Bldg. 6F  
1-5-28 Nishimiyahara, Yodogawa-ku  
Osaka 532-0004, Japan  
Phone: +81 6 6395 6066  
Fax: +81 6 6395 8585