

#### **Data sheet**

# **Oil Motor Pump BFPM Controller**

## **Application**

The BFPM range is a series of Danfoss oil pumps in combination with a highly efficient permanent magnet motor, designed for use with small domestic oil burners.

**BFPM Electronic Controller** must be used for controlling the BFPM motor pumps (see separate data sheets for each BFPM oil motor pump).

#### **BFPM Electronic Controller features:**

- One control for all BFPM motor pumps
- Automatic recognition of connected BFPM motor pump
- · Built-in diagnostics
- · Programmable for specific applications
- PWM signal
- Suitable for connection to electronic compound

#### **Connections**

- Motor cable
- Signal cable
- Transducer signal cable
- 4 Transducer cable
- 6 Power cable


### Please notice:

- max. permitted cable length is 3000 mm.
- for EMC reason it might be necessary to add ferrite cores on the power supply cable and the motor cable.
- the controller must be mounted under a cover, where tools are needed to get access.





- P<sub>1</sub>: Pressure relief valve/regulator
- S: Suction inlet G1/4
- R: Return outlet G1/4
- E: Nozzle outlet G1/8
- **P:** Pressure gauge port G1/8
- V: Vacuum gauge port G1/8
- H: Filter
- PT: Pressure transmitter
- **O:** Constriction
- A: 2-pipe screw

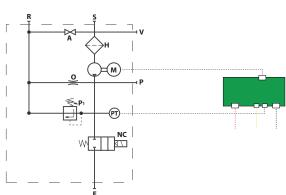

## **Technical Data**

Safety	Galvanic isolated from high voltage side (supply voltage and motor) to signal side
Humidity	Below 95% r.h. (non-condensing)
Lifetime	Min. 10 years operating, equal to 20,000 hours
Operating temperatures	0 to 60° C
Storage temperature	-20 to 60° C
TÜV approval	According to EN/IEC 60335-1


© Danfoss | 2019.05 VD.DK.P7.02| 1



# **Operating Mode**

# **Fixed Speed**


- Motor control box (MCB)
- 2 Motor cable
- **3** Power cable from Burner Control Box (BCB)

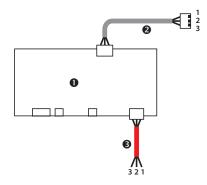

Cable	Terminal	Colour	Туре	Line	Description	Function	Remarks
	1	brown		L	230 V, 50 Hz	Power supply	From Burner Control Box (BCB)
Power <b>3</b>	2	yellow/green	Input	PE	Protection		
	3	blue		N	0		
	1	brown		W			
Motor 2	2	blue	Internal	V	230 VAC	Motor power supply and drive	
	3	black		U			

# Variable Speed

- Motor control box (MCB)
- 2 Motor cable
- Power cable from Electronic Control Box (ECB)
- Control signal cable from Electronic Control Box (ECB)

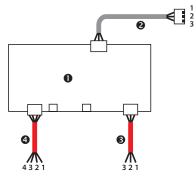

Cable	Terminal	Colour	Туре	Line	Description	Function	Remarks
	1	white	innut	+	4-12 VDC, 50 Hz PWM	Set point speed	Optocoupled, galvanic isolated
Control	2	yellow	input	-			
signal <b>4</b>	3	green		+	Open collector,	Feedback speed	Optocoupled*, RS 220 Ω, <25 mA
	4	brown	output	-	50 Hz PWM		
_	1	brown		L	230 V, 50 Hz	Power supply	From Electronic Control Box (ECB)
Power <b>6</b>	2	yellow/green	Input	PE	Protection		
	3	blue		N	0		
	1	brown		W		Motor power	
Motor 2	2	blue	Internal	V	230 VAC	supply and	
	3	black		U		drive	

<sup>\*</sup>SFH 6156-3


2 | © Danfoss | 2019.05 VD.DK.P7.02



## **Pressure Modulation**


- Motor control box (MCB)
- 2 Motor cable
- 3 Power cable from Electronic Control Box (ECB)
- Control signal cable from Electronic Control Box (ECB)
- Transducer signal cable from Electronic Control Box (ECB)



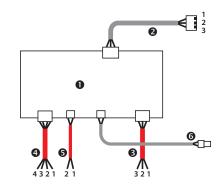

Cable	Terminal	Colour	Type	Line	Description	Function	Remarks
	1	white	:	+	4-12 VDC, 50 Hz PWM	Set point pressure	Optocoupled, galvanic isolated
Control	2	yellow	input	-			
signal <b>4</b>	3	green	output	+	Open collector,	Feedback speed	Optocoupled*, RS 220 Ω, <25 mA
	4	brown		-	50 Hz PWM		
Transducer signal	1	black	output	supply +	4-20 mA, max. 100 Ω	Transducer signal	Direct transducer signal
	2	red		supply -			
_	1	brown	Input	L	230 V, 50 Hz	Power supply	From Electronic Control Box (ECB)
Power <b>⑤</b>	2	yellow/green		PE	Protection		
	3	blue		N	0		
Transducer	1	yellow	Internal	supply +	9-28 V	Pressure measurement	0-28 bar, 4-20 mA,
6	2	blue		supply -			galvanic isolated
Motor ②	1	brown	Internal	W		Motor power	
	2	blue		V	230 VAC	supply and	
	3	black		U		drive	

<sup>\*</sup>SFH 6156-3

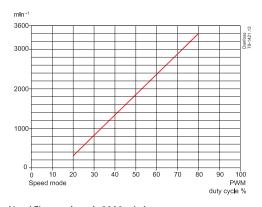



Note! Fix speed mode 2800 min<sup>-1</sup>

VD.DK.P7.02 © Danfoss | 2019.05 | 3

## **Data sheet**

# **Oil Motor Pump BFPM Controller**

# **Diagnostics**

The BFPM status is indicated by green, yellow and red LED's:  $\bullet$  = LED off,  $\circ$  = LED on ( $\bullet$ / $\circ$  = 250 ms)


Note! The LED's are placed under the cover.

Warning! 230 V on print circuit board.

	Green (power)	Yellow (motor OFF/motor ON)	Red (error)
Power OFF	•••••	••••••/••••••	•••••
Power ON	00000000	0 • • • 0 • • • / 0 • 0 • 0 • 0 •	see Error Indication

Error	Limits	Class B	Reaction	Error state	Output	Comment	Error indication
Under- voltage	<150 V	no	stop motor, restart > 160 V	1	25 Hz, 20% duty	Undervoltage	o••••o••••
Motor overload		yes	stop motor, wait 10 sec., restart	2	25 Hz, 30% duty	Motor overload	0000000000000
Rotor blocked		yes	stop motor, 5 start attempts, wait 10 sec., restart	2	25 Hz, 30% duty	Pump defect	0000000000000
Wrong offset value	Offset value for current measurement circuit must be in allowed range of 35-51 mV	no	check before motor start (motor will not start if value is outside allowed range)	2	25 Hz, 30% duty	Stator failure	0•0•••••
RAM failure							
ROM failure							
Register failure		yes	stop motor, wait for power down	3	25 Hz, 40% duty	Failure in electronics	0.00000000000000
Stack failure		-	Tor power down		40% duty	electronics	
CPU crystal failure							
Motor phase broken		yes	stop motor, wait for power down	4	25 Hz, 50% duty	Stator defect, check wiring	0000000000
Pressure transducer	Pump running current ranges outside 3.5 mA > current < 23mA	yes	stop motor, wait for power down	5	25 Hz, 60% duty	Transducer signal failure	0.0000000000000000000000000000000000000
Pressure transducer initialisation	Current range outside 3.5 mA > current < 5mA	yes	stop motor, wait for power down	5	25 Hz, 60% duty	Transducer defect / wiring problem	0.0000000000000
PWM input failure	< 47 Hz or > 53 Hz, < 10% or > 90% duty	yes	stop motor, wait for power down	6	25 Hz, 70% duty	If missing PWM signal, stop motor and wait for PWM burner control to start. PWM input signal failure.	000000000000000000000000000000000000000

### **Dimensions**

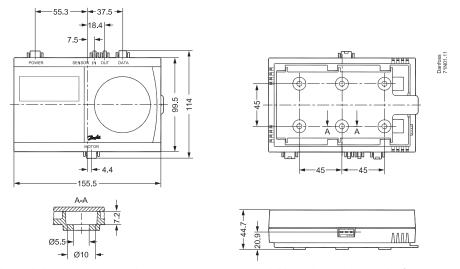

Additional documentation on burner components is available on http://heating.danfoss.com/

#### Danfoss A/S

Heating Segment • heating.danfoss.com • +45 7488 2222 • E-Mail: heating@danfoss.com

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed.

All trademarks in this material are property of the respective companies. Danfoss and all Danfoss logotypes are trademarks of Danfoss A/S. All rights reserved.