

Installation Guide

Sealing of holes in Prof1 PVRE and PVRET bases

11078864

11078864


Sealing kit:

The sealing kit is for more types of plastic covers used for Prof1, PVRE and PVRET.

Part A1 to C3 is for tightening holes in the plastic cover.

D1 is for types with SUB-D connector.

E1 to E4 is for types with wired connectors.

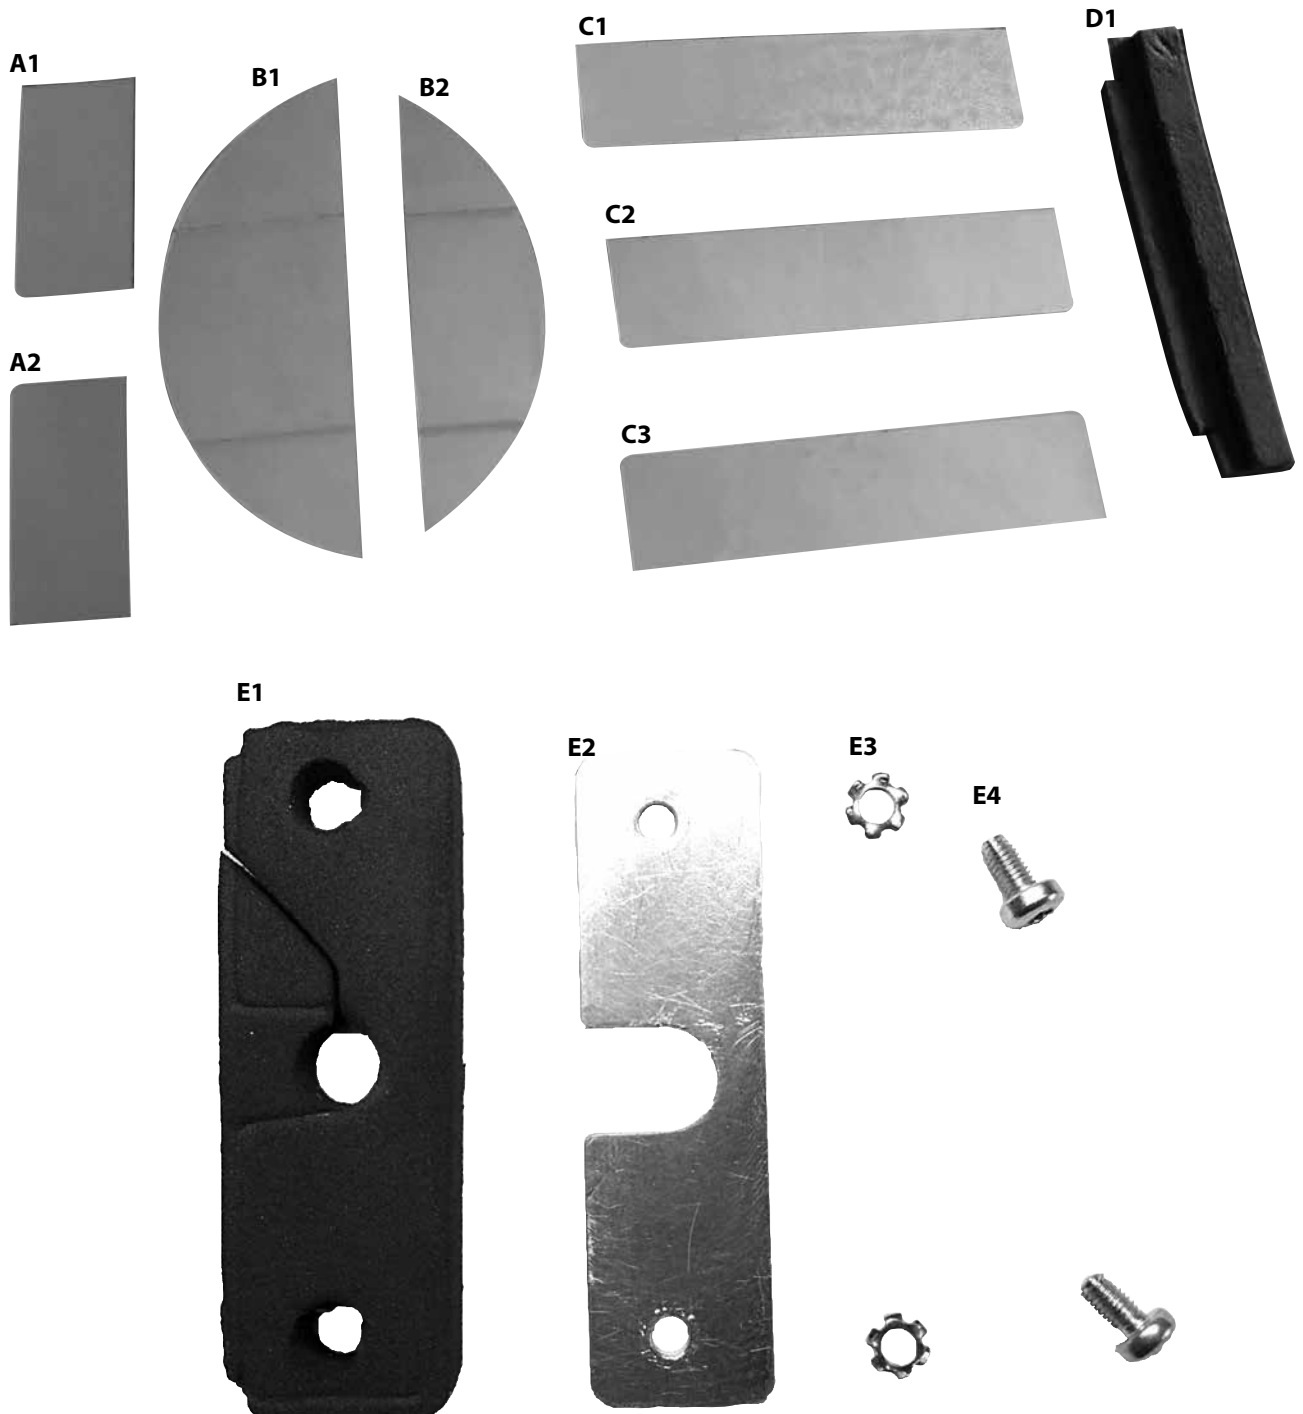

Sealing of plastic cover with holes

The amount of holes is pending the specific model of the joystick. You might not find all the holes in your joystick and therefore maybe not all stickers are needed.



Start by mounting A1 and A2



Mount B1 and B2



Mount C1 to C3 one sides.



Joysticks with SUB-D connectors must be sealed with D1

It is important that the sealing is mounted the right way



When the sealing is in place, the plug will lock its position.



Joysticks with wire connectors must be sealed with E

Mount sealing E1 around the wire.



E2 must be mounted to support the sealing E1

