

Installation Guide

Installation of BasicClip

1 Installation of BasicClip



Fig. 1: Attach the perimeter insulation with tape on wall.¹



Fig. 2: Begin laying insulation panels with the overlay flap upright against the wall.



Fig. 3: Observe the overlap throughout installation.



Fig. 4: Install insulation panels throughout all rooms.



Fig. 5: Attach perimeter insulation, tension free, by using the self adhesive strips.



Fig. 6: Joints without any overlap should be taped up. When using liquid screed tape overlapping joints.



Fig. 7: Tack down Danfoss composite pipe with two BasicClip clips per metre.



Fig. 8: Position tacker vertically over the required spot and fasten pipe by pushing down the tacker handle.

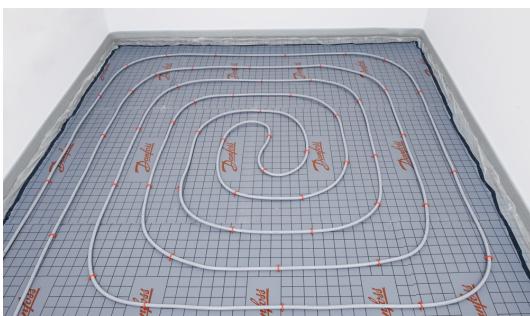


Fig. 9: Lay pipes in snail form throughout the room.



Fig. 10: Install expansion joint profile e.g. for door thresholds, as shown, using the Basic movement gap strip.

¹ If additional insulation is 5 cm thick or more, attach the perimeter insulation on the additional insulation.