


Installation guide – Spare parts and accessories

Overhaul kit | Code number 027F3380  
PM, size 5

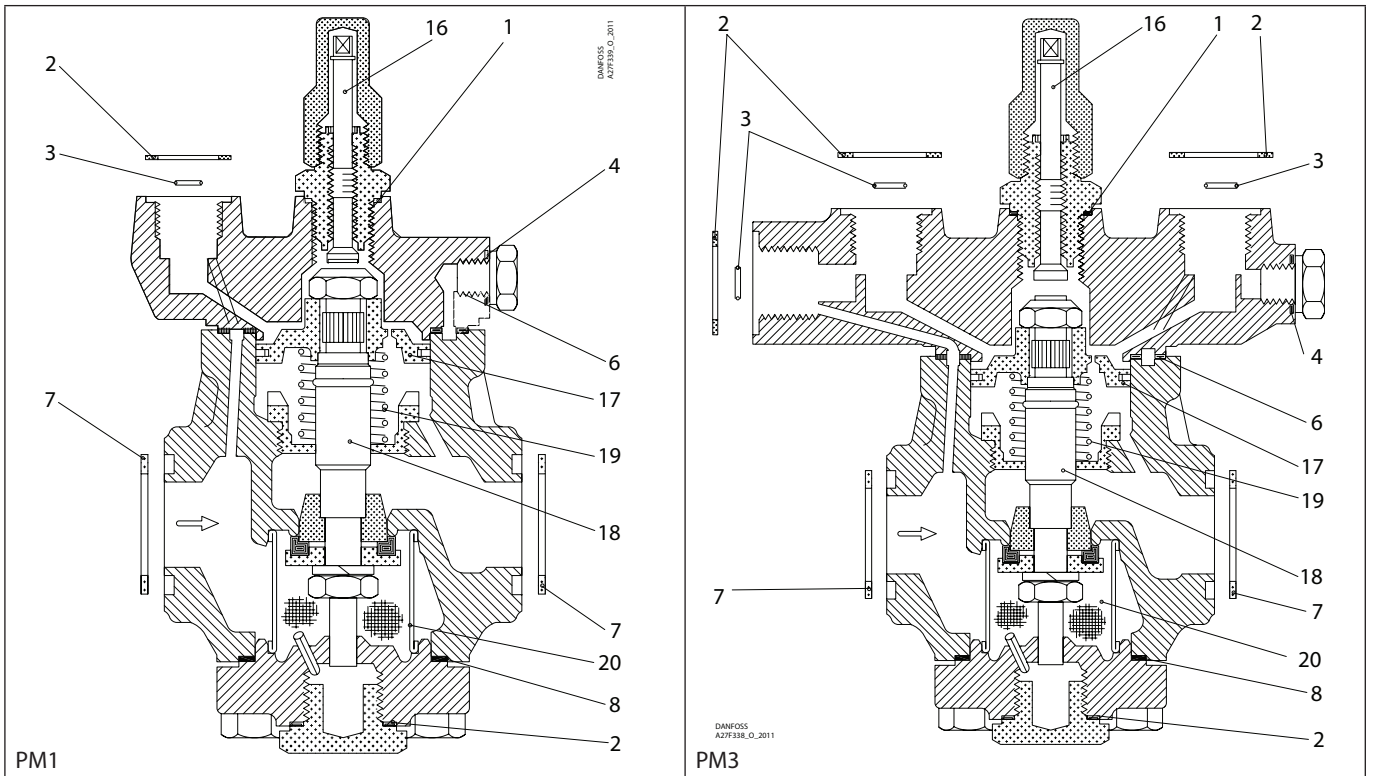

<p><b>1</b></p> <p> = Alu.</p> <p> <math>\frac{\text{Ø}26 \text{ mm}}{\text{Ø}1.02"}</math></p> <p>Total no. = 1</p>	<p><b>2</b></p> <p> = Fibre</p> <p> <math>\frac{\text{Ø}33 \text{ mm}}{\text{Ø}1.28"}</math></p> <p>Total no. = 4</p>	<p><b>3</b></p> <p> <math>\frac{\text{Ø}9 \text{ mm}}{\text{Ø}0.36"}</math></p> <p>Total no. = 3</p>	<p><b>4</b></p> <p> = Alu.</p> <p> <math>\frac{\text{Ø}18 \text{ mm}}{\text{Ø}0.70"}</math></p> <p>Total no. = 1</p>	<p><b>5*</b></p> <p> = Alu.</p> <p> <math>\frac{\text{Ø}14 \text{ mm}}{\text{Ø}0.55"}</math></p> <p>Total no. = 1</p>	<p><b>6</b></p> <p> = Fibre</p> <p> <math>\frac{\text{Ø}75 \text{ mm}}{\text{Ø}2.95"}</math></p> <p>Total no. = 1</p>
<p><b>7</b></p> <p> = Fibre</p> <p> <math>\frac{\text{Ø}39 \text{ mm}}{\text{Ø}1.54"}</math></p> <p>Total no. = 2</p>	<p><b>8</b></p> <p> = Fibre</p> <p> <math>\frac{\text{Ø}60 \text{ mm}}{\text{Ø}2.36"}</math></p> <p>Total no. = 1</p>	<p><b>9*</b></p> <p> = Alu.</p> <p> <math>\frac{\text{Ø}32 \text{ mm}}{\text{Ø}1.26"}</math></p> <p>Total no. = 1</p>	<p><b>10*</b></p> <p> = Alu.</p> <p> <math>\frac{\text{Ø}22 \text{ mm}}{\text{Ø}0.87"}</math></p> <p>Total no. = 1</p>	<p><b>16</b></p> <p></p>	<p><b>17</b></p> <p> <math>\frac{\text{Ø}50 \text{ mm}}{\text{Ø}1.97"}</math></p>
<p><b>18</b></p> <p> <math>\frac{\text{Ø}26 \text{ mm}}{\text{Ø}1.02"}</math></p>	<p><b>19</b></p> <p> <math>\frac{\text{Ø}26 \text{ mm}}{\text{Ø}1.04"}</math></p> <p>Total no. = 1</p>	<p><b>20</b></p> <p> <math>\frac{\text{Ø}44 \text{ mm}}{\text{Ø}1.73"}</math></p> <p>Total no. = 1</p>			

\* The spare part is included in the package but is not used for PM 1 or PM 3..