


Installation guide – Spare parts and accessories

Repair kit | Code number 027H7192  
ICS, size 100 / ICLX, size 100

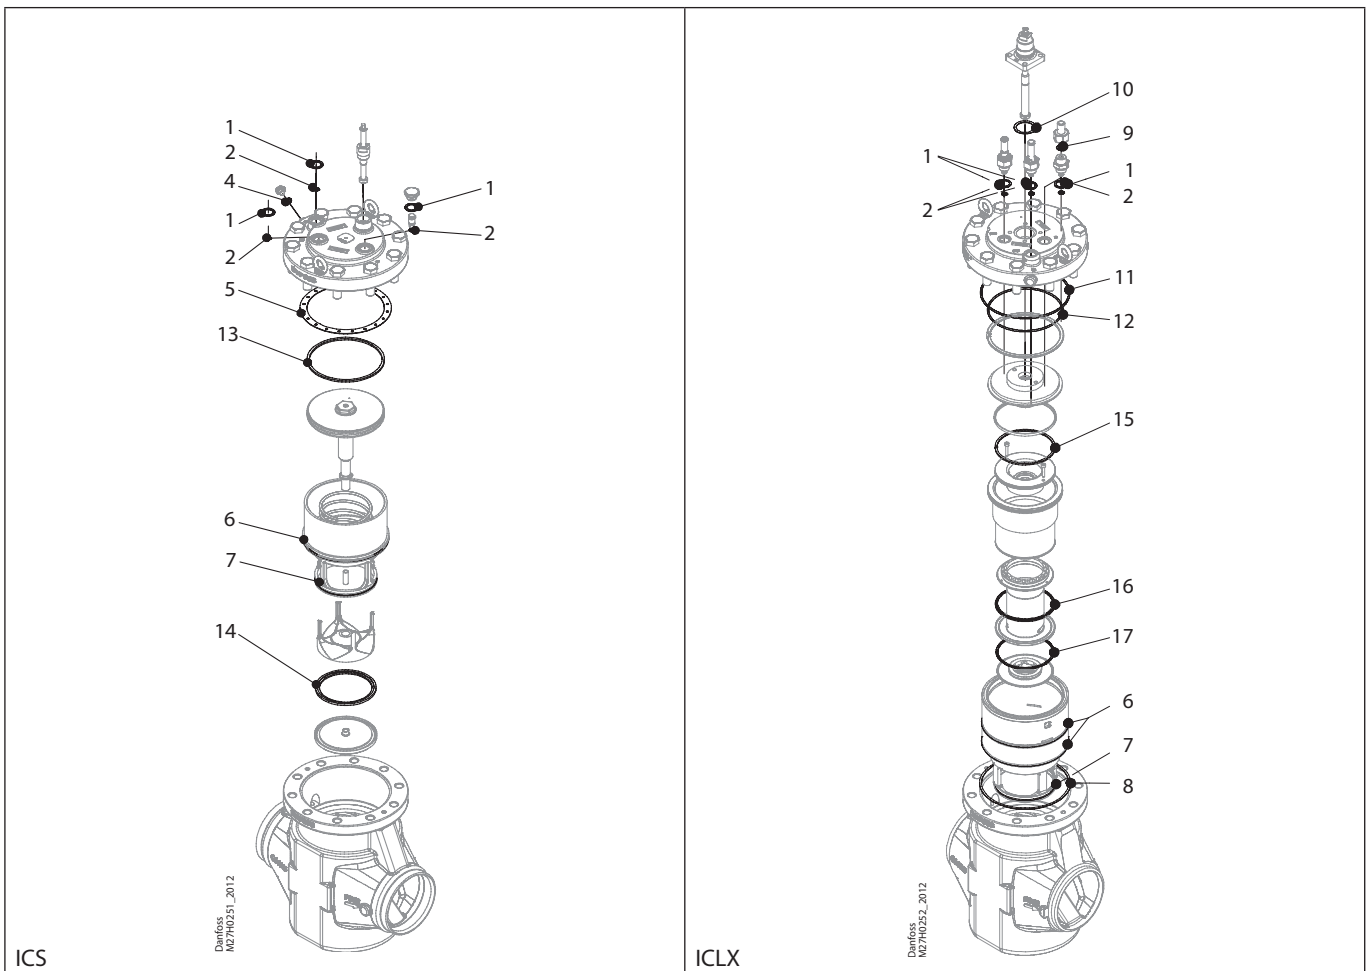

<p><b>1</b></p> <p> = Fibre</p> <p><math>\varnothing 32.5 \text{ mm}</math> <math>\varnothing 1.28''</math></p> <p>Total no. = 3</p>	<p><b>2</b></p> <p> = O-ring</p> <p><math>\varnothing 9 \text{ mm}</math> <math>\varnothing 0.36''</math></p> <p>Total no. = 3</p>	<p><b>4</b></p> <p> = Alu.</p> <p><math>\varnothing 18 \text{ mm}</math> <math>\varnothing 0.7''</math></p> <p>Total no. = 1</p>	<p><b>5</b></p> <p> = Fibre</p> <p><math>\varnothing 150 \text{ mm}</math> <math>\varnothing 5.91''</math></p> <p>Total no. = 1</p>	<p><b>6</b></p> <p> = O-ring</p> <p><math>\varnothing 133 \text{ mm}</math> <math>\varnothing 5.24''</math></p> <p>Total no. = 2</p>	<p><b>7</b></p> <p> = O-ring</p> <p><math>\varnothing 88 \text{ mm}</math> <math>\varnothing 3.46''</math></p> <p>Total no. = 1</p>
<p><b>8</b></p> <p> = Fibre</p> <p><math>\varnothing 150 \text{ mm}</math> <math>\varnothing 5.91''</math></p> <p>Total no. = 1</p>	<p><b>9</b></p> <p> = Alu.</p> <p><math>\varnothing 22 \text{ mm}</math> <math>\varnothing 0.87''</math></p> <p>Total no. = 1</p>	<p><b>10</b></p> <p> = Fibre</p> <p><math>\varnothing 39 \text{ mm}</math> <math>\varnothing 1.54''</math></p> <p>Total no. = 1</p>	<p><b>11</b></p> <p> = O-ring</p> <p><math>\varnothing 114 \text{ mm}</math> <math>\varnothing 4.5''</math></p> <p>Total no. = 1</p>	<p><b>12</b></p> <p> = O-ring</p> <p><math>\varnothing 142 \text{ mm}</math> <math>\varnothing 5.59''</math></p> <p>Total no. = 1</p>	<p><b>13</b></p> <p> = Steel</p> <p><math>\varnothing 120 \text{ mm}</math> <math>\varnothing 4.72''</math></p> <p>Total no. = 1</p>
<p><b>14</b></p> <p> = PTFE</p> <p><math>\varnothing 90 \text{ mm}</math> <math>\varnothing 3.54''</math></p> <p>Total no. = 1</p>	<p><b>15</b></p> <p> = Steel</p> <p><math>\varnothing 100 \text{ mm}</math> <math>\varnothing 3.94''</math></p> <p>Total no. = 1</p>	<p><b>16</b></p> <p> = PTFE</p> <p><math>\varnothing 88 \text{ mm}</math> <math>\varnothing 3.46''</math></p> <p>Total no. = 1</p>	<p><b>17</b></p> <p> = PTFE</p> <p><math>\varnothing 85 \text{ mm}</math> <math>\varnothing 3.33''</math></p> <p>Total no. = 1</p>		