



Installation guide – Spare parts and accessories

Repair kit | Code number 027F3155
 PM, PML/X, MRV, size 65 | MEV, PMFH, size 500

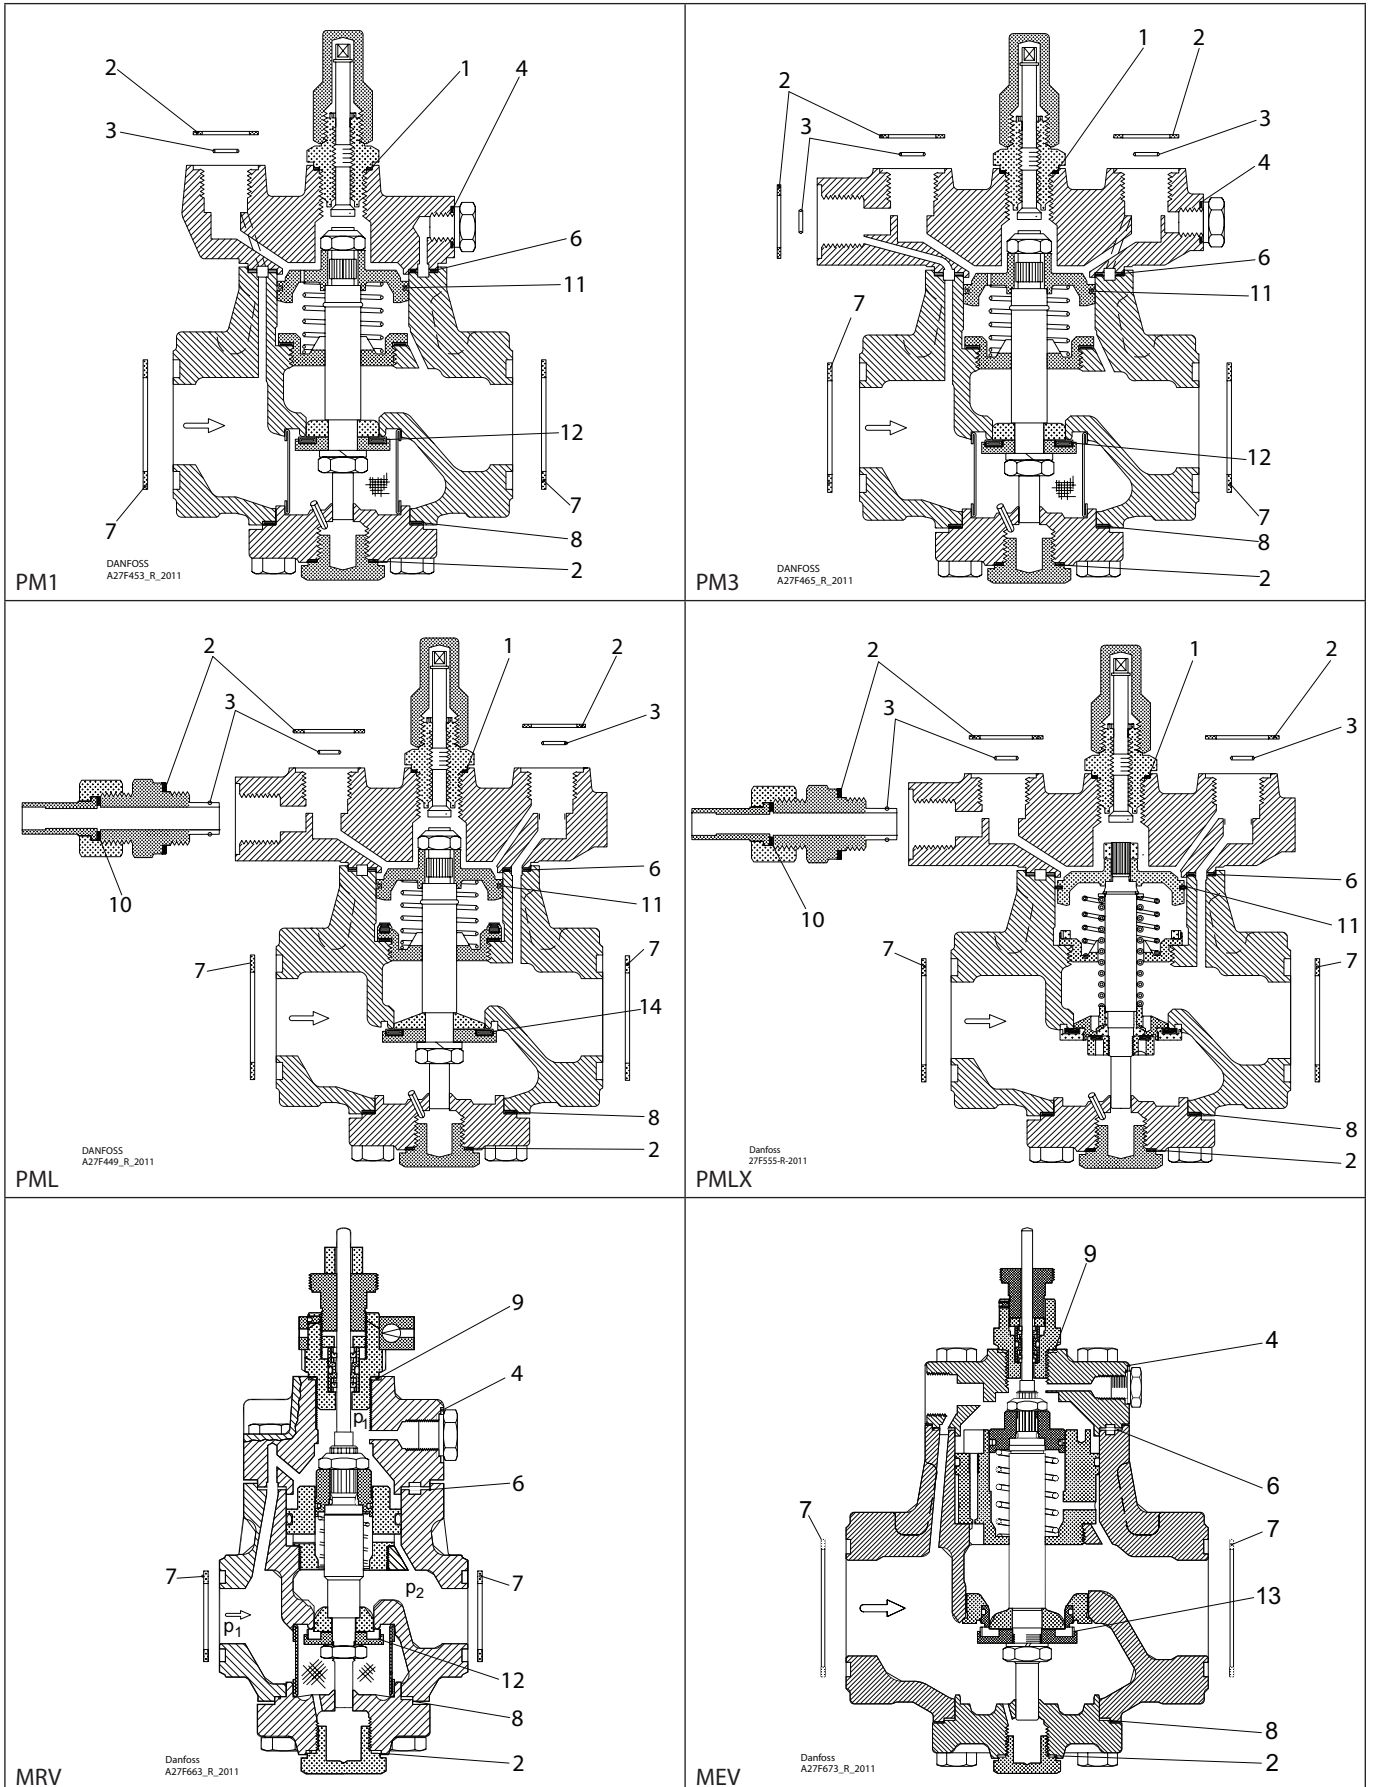

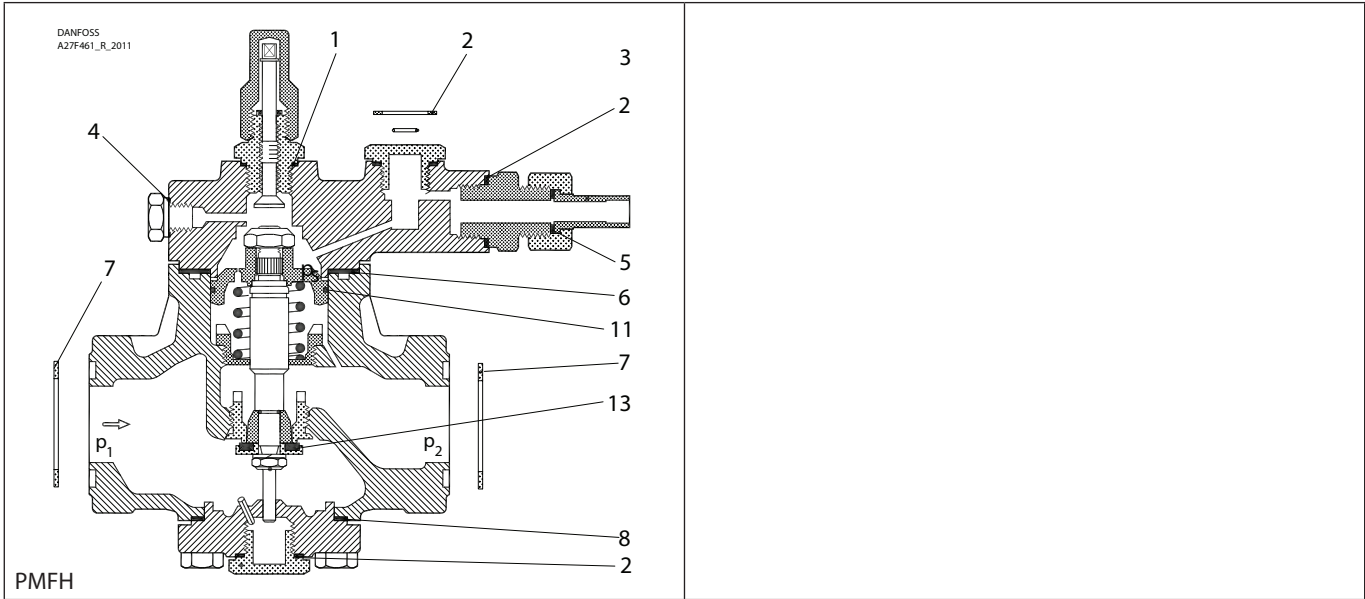

<p>1</p> <p> = Alu.</p> <p>$\varnothing 26 \text{ mm}$ $\varnothing 1.02''$</p> <p>Total no. = 1</p>	<p>2</p> <p> = Fibre</p> <p>$\varnothing 33 \text{ mm}$ $\varnothing 1.28''$</p> <p>Total no. = 4</p>	<p>3</p> <p> = Alu.</p> <p>$\varnothing 9 \text{ mm}$ $\varnothing 0.36''$</p> <p>Total no. = 3</p>	<p>4</p> <p> = Alu.</p> <p>$\varnothing 18 \text{ mm}$ $\varnothing 0.70''$</p> <p>Total no. = 1</p>	<p>5</p> <p> = Alu.</p> <p>$\varnothing 14 \text{ mm}$ $\varnothing 0.55''$</p> <p>Total no. = 1</p>	<p>6</p> <p> = Fibre</p> <p>$\varnothing 127 \text{ mm}$ $\varnothing 5''$</p> <p>Total no. = 1</p>
<p>7</p> <p> = Fibre</p> <p>$\varnothing 87 \text{ mm}$ $\varnothing 3.43''$</p> <p>Total no. = 2</p>	<p>8</p> <p> = Fibre</p> <p>$\varnothing 112 \text{ mm}$ $\varnothing 4.41''$</p> <p>Total no. = 1</p>	<p>9</p> <p> = Alu.</p> <p>$\varnothing 32 \text{ mm}$ $\varnothing 1.26''$</p> <p>Total no. = 1</p>	<p>10</p> <p> = Alu.</p> <p>$\varnothing 22 \text{ mm}$ $\varnothing 0.87''$</p> <p>Total no. = 1</p>	<p>11</p> <p> = Alu.</p> <p>$\varnothing 100 \text{ mm}$ $\varnothing 3.94''$</p> <p>Total no. = 1</p>	<p>12</p> <p> = Fibre</p> <p>$\varnothing 65 \text{ mm}$ $\varnothing 2.57''$</p> <p>$\varnothing 73 \text{ mm}$ $\varnothing 2.89''$</p> <p>Total no. = 1</p>
<p>13</p> <p> = Alu.</p> <p>$\varnothing 42 \text{ mm}$ $\varnothing 1.67''$</p> <p>$\varnothing 50 \text{ mm}$ $\varnothing 1.97''$</p> <p>Total no. = 1</p>	<p>14</p> <p> = Alu.</p> <p>$\varnothing 76 \text{ mm}$ $\varnothing 3.01''$</p> <p>$\varnothing 86 \text{ mm}$ $\varnothing 3.38''$</p> <p>Total no. = 1</p>				