


Installation Guide



AMB linkage kit 082H0250 (5 Nm)

for Esbe - old type, Seltron, Somatherm, Hora, WIP, PAW, Acaso, BRV, IMIT, IMP, IVAR


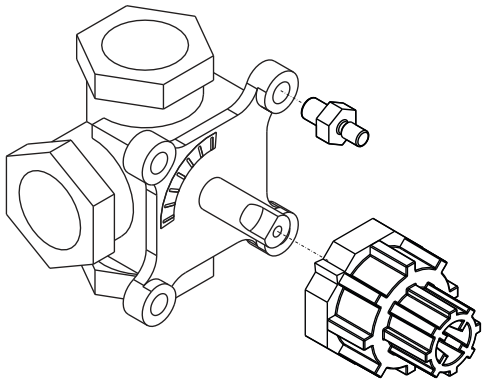


	1 ×	M8x20 / 36
	1 ×	M8x20 / 26
	1 ×	M5x60
	1 ×	
	1 ×	

1

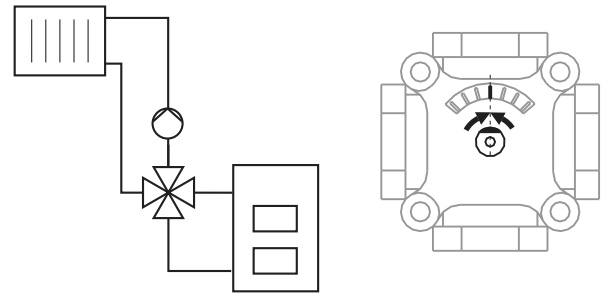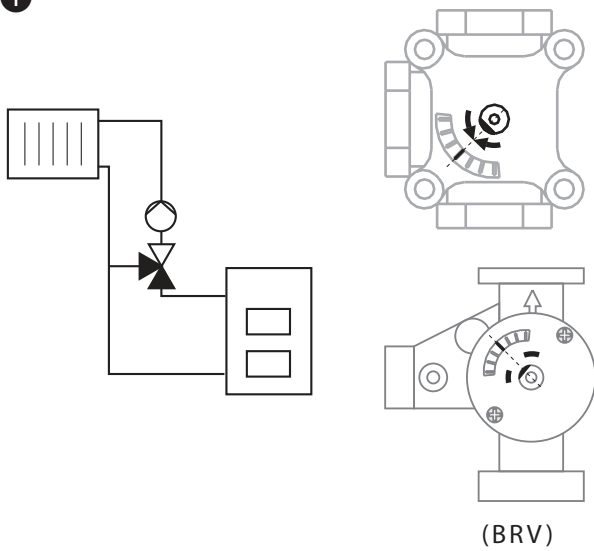

2

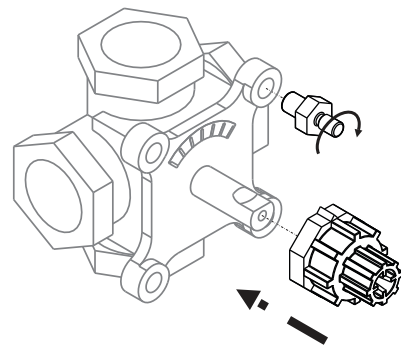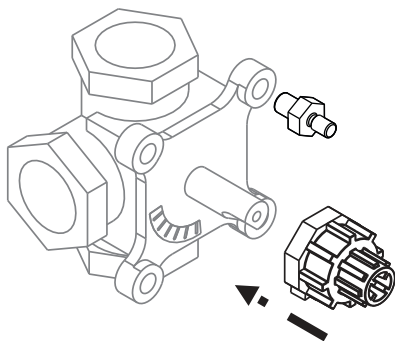

Installation Guide AMB linkage kit 082H0250 (5 Nm)

3

