

Installation guide

VDHT sealing kit

180R9321

This sealing kit covers various VDHT valves.
Below table shows which O-ring to use in a given position.


NB! One kit is needed for each armature!

180R9321


Description	Pcs.	Position in valve										
		VDH 2E 1/4"	VDHT 1/4"	VDHT 3/8"- 1/2"	VDHT 3/4"-1"	VDHT B	VDHT BL	VDHT 30 EC3	VDHT EAM BLM	VDHT 2E	VDHT 15E	VDHT 15EC
O-ring 19.4 x 2.1 mm	1	5	2	5	5	5	5	5	5	3	3	3
O-ring 6.2 x 1.5 mm	1	7		7	7	7	7	7	7	6	6	6
O-ring 23.3 x 2.4 mm	1			12		12						11
O-ring 5.0 x 1.5 mm	1				9		9					
O-ring 37.0 x 2.0 mm	1				12		12					
O-ring 17.5 x 2.4 mm	1							12			11	
O-ring 31.0 x 2.0 mm	1								12			
O-ring 11.0 x 2.0 mm	1								15			
2/2 way										3/2 way		

2/2-way valves


VDH 2E 1/4"

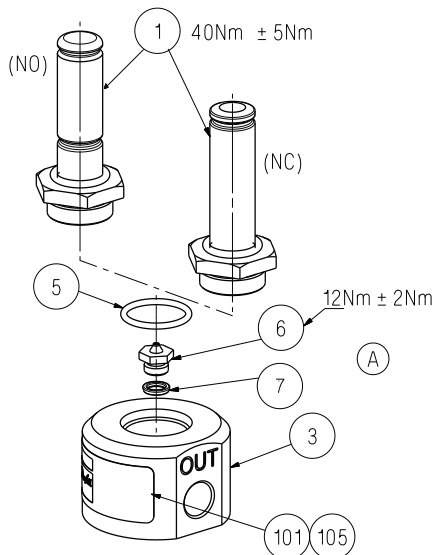


VDHT 1/4"

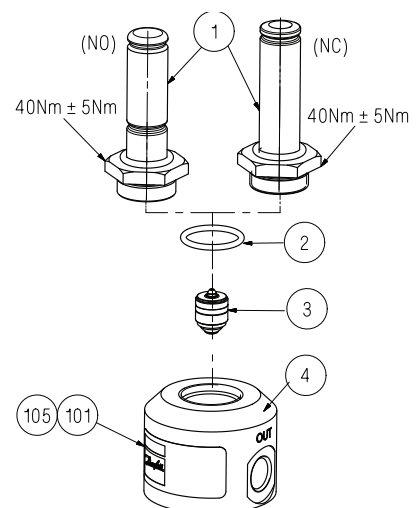


VDH 3/8"-1/2"

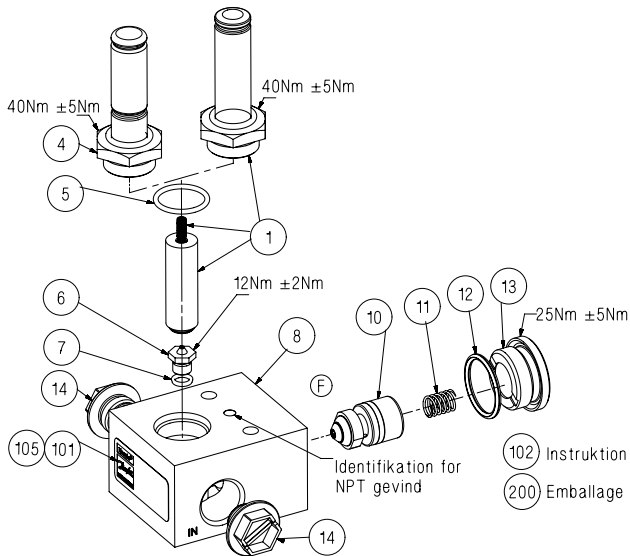


VDHT 3/4"-1"

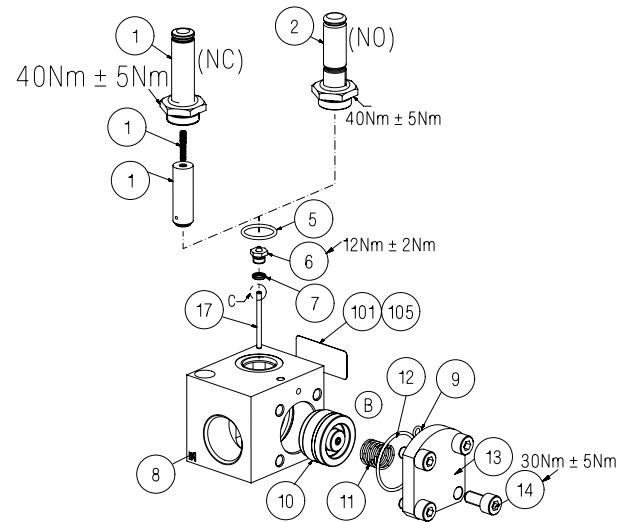


VDHT B

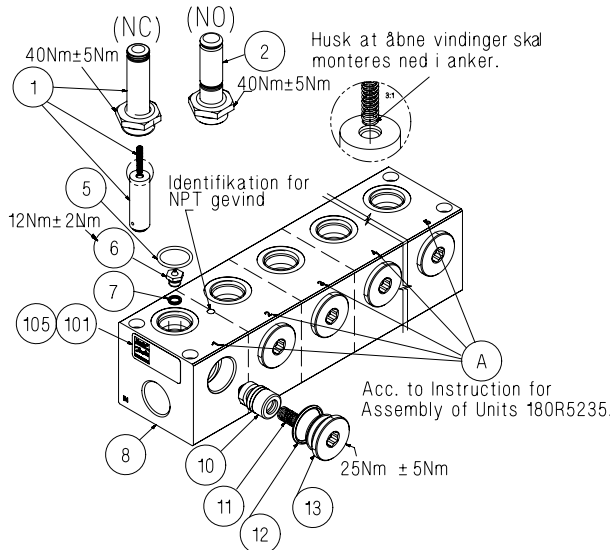


VDHT BL

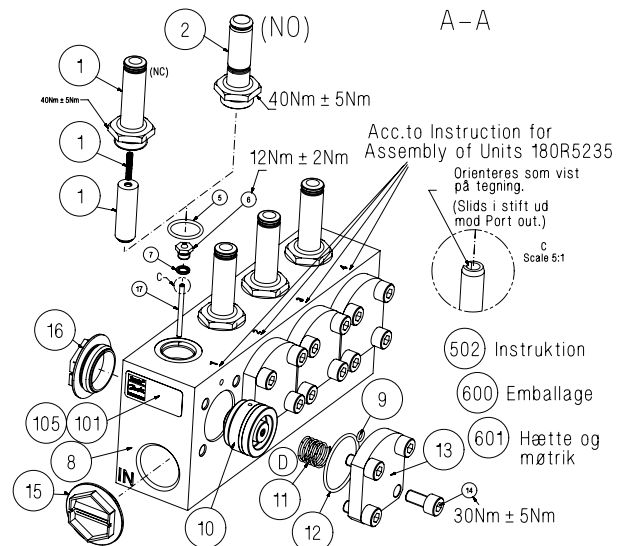

VDHT 30 EC3

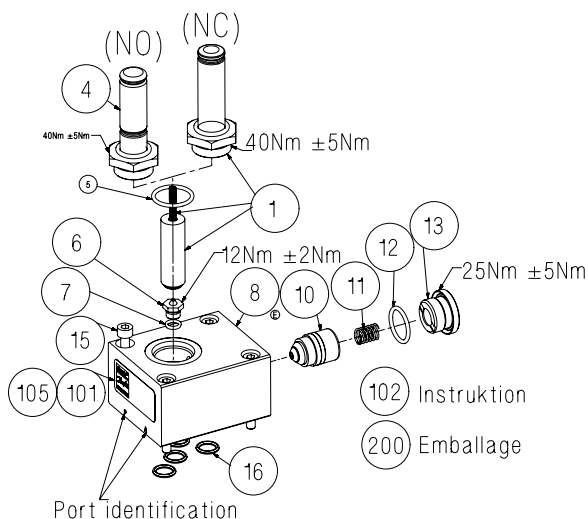


VDHT 2E

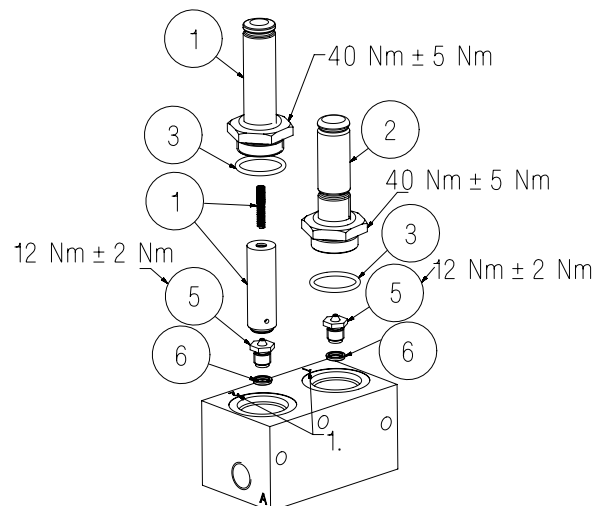

3/2-way valves

VDHT 15E

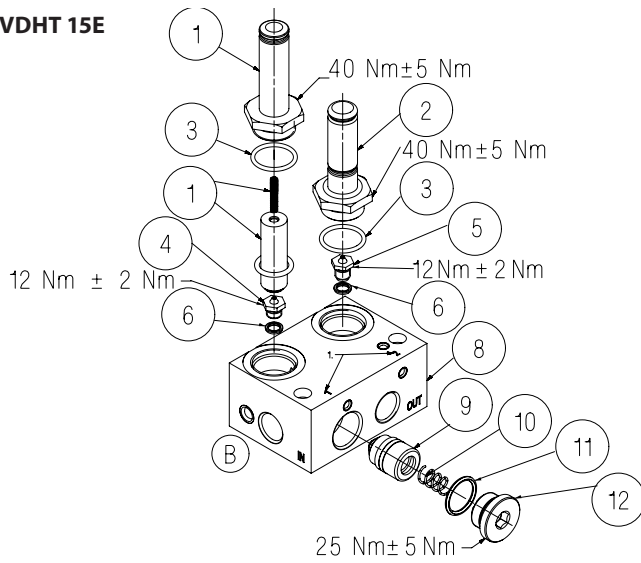

VDHT 15 EC

