



Radiator Sensors

Danfoss Aero[®] Thermostatic series

Description

The Danfoss Aero® series is a comprehensive portfolio of premium quality thermostatic sensors, produced in Denmark.

Danfoss Aero® thermostats use a unique gas filled technology, that gives the fastest reacting self-acting thermostat in the world.

Features & benefits

- Gas technology - fastest and most precise temperature control
- Highest-class Control Accuracy (CA 0.2 K) per amended EN215
- Danfoss RA Click mount - fast, save, tool-less
- Modern and user-friendly design
- Easy to operate, easy to clean
- Facilities designed for the visually impaired
- Facilities for limiting and locking temperature set-point, also available as accessory
- Frost protection setting
- A theft protection, from factory or available as accessory

Quality



Danfoss Aero® thermostatic sensors are certified according to the European standard EN 215.

All Danfoss radiator thermostats are manufactured in factories, assessed and certified by by BVC (Bureau Veritas Certification) against ISO 9001 and ISO 14001.

Applications

The Danfoss Aero® thermostat is compatible with all types of heating systems, and its compact design ensures an easy and discreet installation.

The use of Danfoss Aero® gas-filled thermostats is highly recommended for applications with small P-band (1K).

Danfoss Aero® series includes:

- Standard thermostats with built-in or remote sensor
- Variants with connection for radiator valves and radiators with integrated valves, type Danfoss RA
- Variants with connection for Danfoss valves, type Danfoss RA/V & RA/VL
- RA/V and RA/VL service kits including stuffing box

Ordering

Product code numbers

Type	Model	Sensor	Cap. tube	Set point range	Connection	Zero blocking	Limiter pins	Theft protection	EN215 Certified	Code no.
Aero RA	Standard	Built-in		7-28°C	RA		✓		✓	015G4590
Aero RA	Standard	Built-in		7-28°C	RA		✓		✓	015G4594
Aero RA	Standard	Remote	0-2m	7-26°C	RA		✓		✓	015G4592
Aero RA	Standard	Built-in		7-28°C	RA	✓	✓		✓	015G4595
Aero RA	Standard	Built-in		7-28°C	RA	✓	✓		✓	015G4598
Aero RA	Standard	Built-in		7-28°C	RA		✓	✓	✓	015G4580
Aero RA	Limited	Built-in		16-28°C	RA		✓		✓	015G4596
Aero RA	Limited	Built-in		16-28°C	RA		✓		✓	015G5200
Aero RA	Limited	Built-in		7-21°C	RA		✓	✓	✓	015G4680
Aero RA	Limited	Remote	0-2m	7-21°C	RA		✓	✓	✓	015G4682
Aero RA	Limited	Built-in		7-22°C	RA		✓	✓	✓	015G4622
Aero RA	Limited	Built-in		7-23°C	RA		✓	✓	✓	015G4623
Aero RA	Limited	Built-in		7-23°C	RA		✓	✓	✓	015G5205
Aero RA	Limited	Built-in		7-21°C	RA		✓		✓	015G4690
Aero RA	Limited	Remote	0-2m	7-21°C	RA		✓		✓	015G4692
Aero RA	Limited	Built-in		7-28°C	RA		✓			015G5201
Aero RA/VL	Service	Built-in		7-28°C	RA/VL		✓			015G4550
Aero RA/VL	Service	Remote	0-2m	7-26°C	RA/VL		✓			015G4552
Aero RA/V	Service	Built-in		7-28°C	RA/V					015G4560
Aero RA/V	Service	Remote	0-2m	7-26°C	RA/V					015G4562

Accessories code numbers

Accessories		Code no.
	Anti-theft plug for snap-lock sensors, white (20 pcs.)	013G5245
	Limiting pins for built-in, remote and service sensors (10 pcs.)	013G1246
	Toolkit comprising Allen key & locking pin tool	013G1236
	Protection cap, RA/VL	015G4950
	Protection cap, RA/V	015G4951
	Angle adapter for Danfoss RA sensors	013G1350



Functions

Thermostatic sensors are proportional controls, regulating the heat supply in relation to the difference between the temperature set on the sensor and the temperature of ambient air, detected by the thermostat.

The thermal expansion element (bellow) responds to room temperature by expanding or contracting proportionally. The movement is transmitted onto the control element of the thermostatic valve.

Danfoss Aero® series of thermostatic sensors are fitted with gas-filled bellows, ensuring fast response time to changing ambient temperature.

The Danfoss Aero® thermostat is installed onto a radiator valve. The combination of the thermostat and radiator valve, controls the amount of water which flows into radiator to the suitable flow level that is required to maintain the room temperature on the set level.

Settings

The required room temperature is set by turning the setting dial. The temperature scales below shows the correlation between scale values and the room temperature. The temperature values stated are for guidance only as the obtained room temperature will often be influenced by installation conditions.

Locking and limitation of the temperature set-point of the Danfoss Aero® thermostats are carried out using the limiter pins placed at the back of the sensor. The procedure is described in the instruction.

Danfoss Aero®



Setting position

✱	1	2		3		4	5	
7	14	17		20		23	26	°C

Room temperature

✱ = Frost protection setting

Danfoss Aero® 015G4680 & 015G4690



Setting position

✱	1	2		3				
7	14	17		20				°C

Room temperature

✱ = Frost protection setting

Danfoss Aero® 015G4622



Setting position

✱	1	2		3				
7	14	17		20				°C

Room temperature

✱ = Frost protection setting

Danfoss Aero® 015G4623



Setting position

✱	1	2		3		4		
7	14	17		20		23		°C

Room temperature

✱ = Frost protection setting

Danfoss Aero® 015G4596



Setting position

		2		3		4	5	
		17		20		23	26	°C

Room temperature




Product details

General data

Type	Sensor	Response time	Hysteresis (C)	Water temperature influence (W)	Control Accuracy (CA)
Aero RA	Built-in	10 mins	0.40 K	0.45 K	0.2 K
Aero RA	Remote	10 mins	0.40 K	0.20 K	0.2 K


Design

- 1. Actuator
- 2. Gas filled bellow
- 3. Setting handle
- 4. Setting spring
- 5. Pressure spindle
- 6. Capillary tube
- 7. Remote sensor

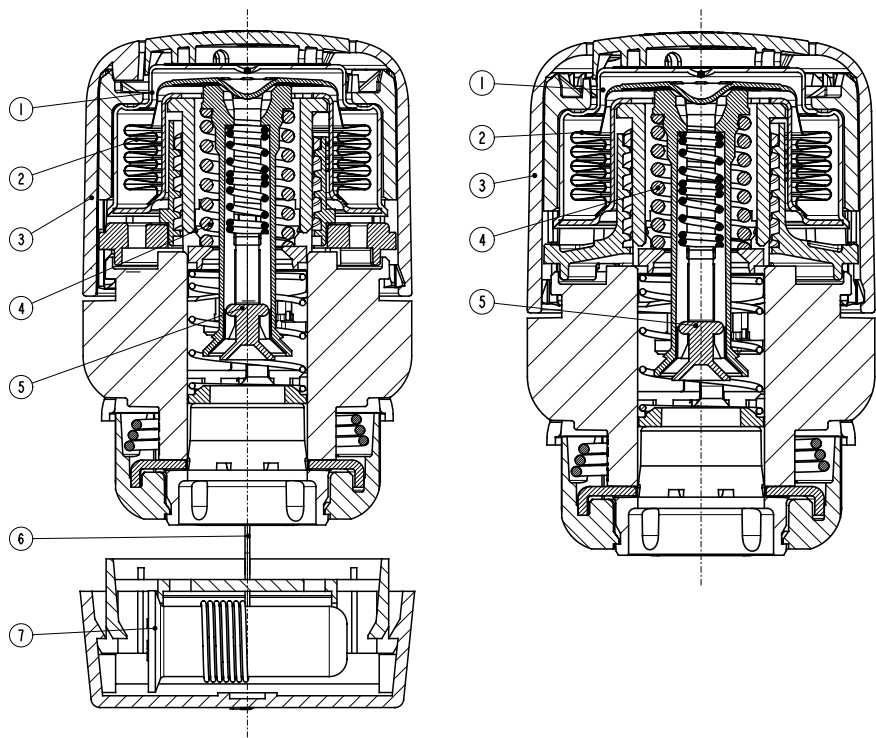


Dimensions


Danfoss Aero® RA

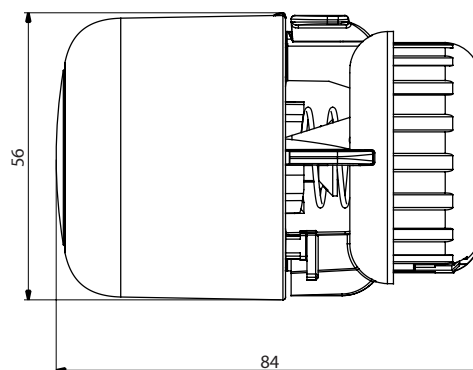


Danfoss Aero® RA with remote sensor

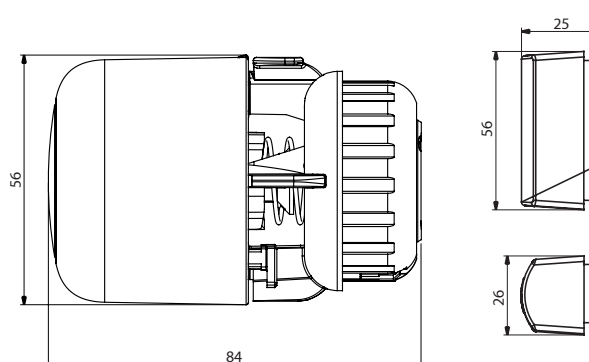

Danfoss Aero® RA/VL

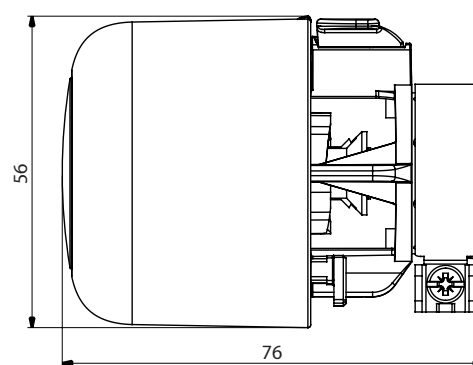

Danfoss Aero® RA/V

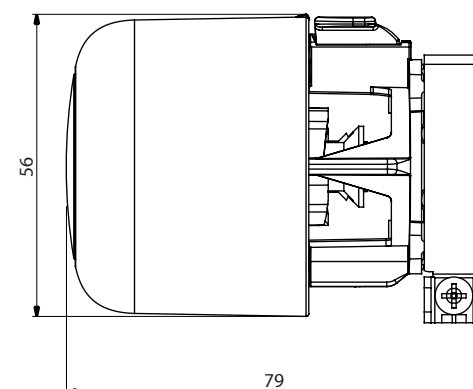


Installation

The thermostatic sensor should be selected on the basis of the following criteria:
The thermostat must always be able to register the temperature of the ambient air.

Radiator thermostats with built-in sensors


These should always be fitted horizontally so that the ambient air can pass freely over the sensor. Danfoss does not recommend the fitting of a built-in sensor in vertical position because heat effect from the valve body and possibly surface pipes will cause incorrect operation of the thermostat.

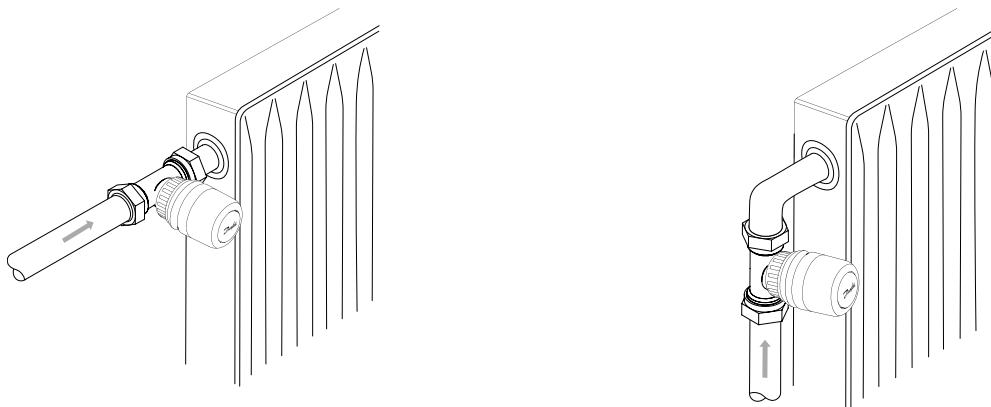

Radiator thermostats with remote sensor

These should be used when:

- Curtains cover the thermostat
- Thermostat is affected by surface pipes
- Thermostat is affected by draught
- It is necessary to mount the thermostat in vertical position if there are adjacent obstructions.

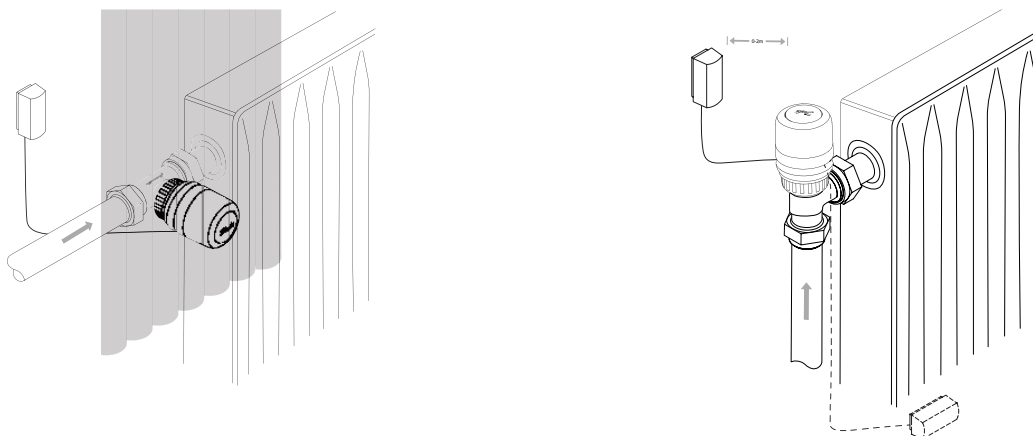

The remote sensor must be mounted on the wall, away from curtains, or on the skirting board beneath the radiator if free of surface pipes.

All remote sensors are now supplied with ultra-thin capillary tube. Simply pull out the length required (2 m maximum) and fix using clips provided or a special tacker gun.

Certificates, declarations and approvals

The list contains all certificates, declarations, and approvals for this product type. Individual code number may have some or all of these approvals, and certain local approvals may not appear on the list.

When you click on the link you will be directed to the latest version of the 'Declaration of Conformity'. Products developed and sold before this date of issue conform to the directives/standards in force at the time of their sale.

Approval type	Title	Certification body	Approval topic
Manufacturer's Declaration	Danfoss MD ID365946894767-0701	Danfoss	EU RoHS
Energy Performance Certificate	TÜV 268608738 10	TÜV Rheinland - Technischer ÜberwachungsVerein	
Export Control Declaration	Radiator sensors	Danfoss	
Manufacturer's Declaration	Declaration of Energy Classes (BACS) - EN ISO 52120-1 and EN ISO 16484-4	Danfoss	Compliance misc. Standards
Manufacturing Permission	DNV 7715-2016-PC-DEN-DANAK Rev. 9	DNV GL	
Energy Performance Certificate	TÜV 268608738 30	TÜV Rheinland - Technischer ÜberwachungsVerein	
Manufacturing Permission	DNV C606800 rev. 0	DNV GL	

Contact details

Online support

Danfoss offers a wide range of support along with our products, including digital information, software, mobile apps and expert guidance. See the possibilities below.



The Danfoss Design center

Discover the Design Center, our advanced digital platform that streamlines product selection. With integrated tools and enhanced type pages, it's simpler than ever to access product information and documentation, and to select the right products. Check the availability of Danfoss products at partner locations and enjoy seamless transitions from selection to purchase with our basket-to-basket functionality. Whether you're buying from our distributors or directly from the Product Store, the Design Center simplifies your experience. Learn more at: designcenter.danfoss.com.



The Danfoss product store

The Danfoss Product Store is a one-stop shop available 24/7 for our customers, no matter where you are in the world or what area of industry you work in. Browse our catalog, check product details and documentation, view your prices and product availability, and quickly finalize your purchase. Start browsing at: store.danfoss.com.



Danfoss Partner Portal/Product Data tool

Designed to support you with easy access to product data extracts, essential resources, tools, and information. The Partner Portal provides a centralized hub for product documentation, training materials, marketing assets, and technical support, ensuring you have everything you need to succeed and grow your business with Danfoss. The Partner Portal is available 24/7 at: partner.danfoss.com and is ready to support your business.



Find technical documentation

Find technical documentation you need to get your project up running. Get direct access to our official collection of data sheets, certificates and declarations, manuals and guides, 3D models and drawings, case stories, brochures, and much more. Start searching now at: documentation.danfoss.com.



Danfoss Learning

Danfoss Learning is a free online learning platform. It features courses and materials specifically designed to help engineers, installers, service technicians, and wholesalers better understand the products, applications industry topics, and trends that will help you do your job better. Find your local Danfoss website here: learning.danfoss.com.



Get local information and support

Local Danfoss websites are the main sources for help and information about our company and products. Find product availability, get the latest regional news, or connect with a nearby expert - all in your own language. Find your local Danfoss website here: danfoss.com.

Danfoss A/S

Climate Solutions . danfoss.com . +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues description, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the products. All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.
