

Operating Guide


MCXWeb

How to set up the overview page


Summary

An additional web page can be added to the standard pages in order to share the main information quickly and easily. This page can be customised easily.

Description

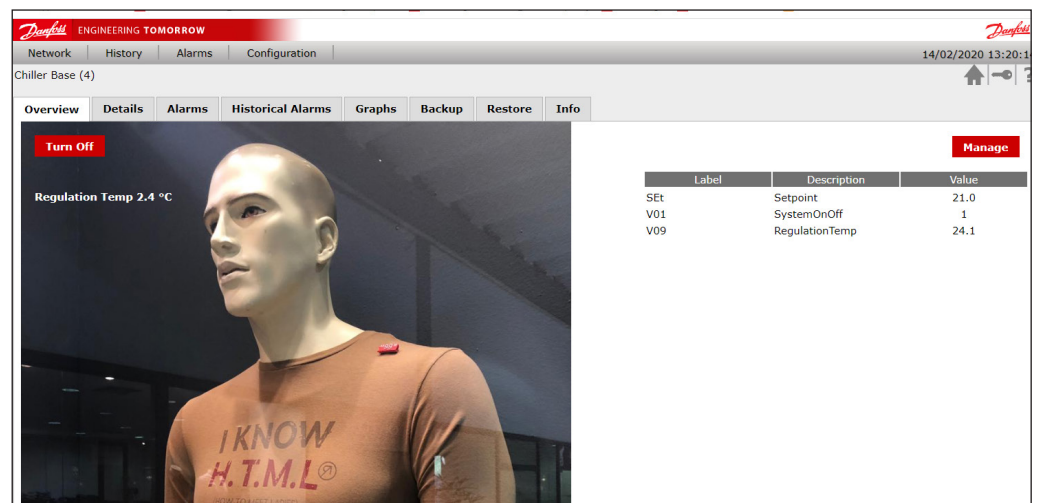


1. Save the overview image into the "http/Images" folder.

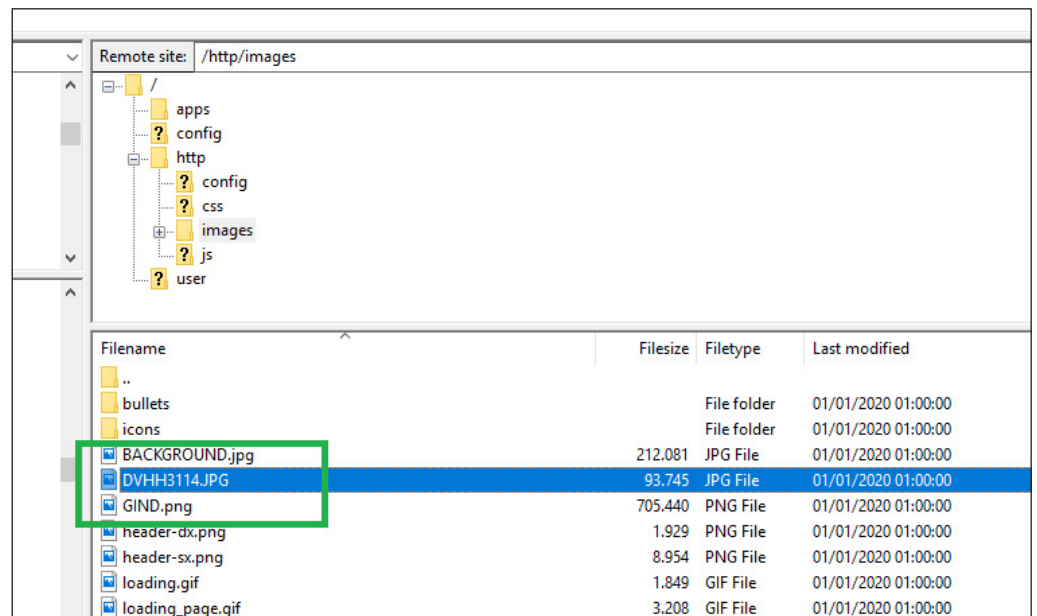


Note: Each MCX device in the CANBUS network can have an overview page and all the images (if different) must be located in the "http/Images" folder.

2. Rename the linked web page "DeviceOverview_NameSoftware.html" by giving the part "NameSoftware" the name of the software you are using.

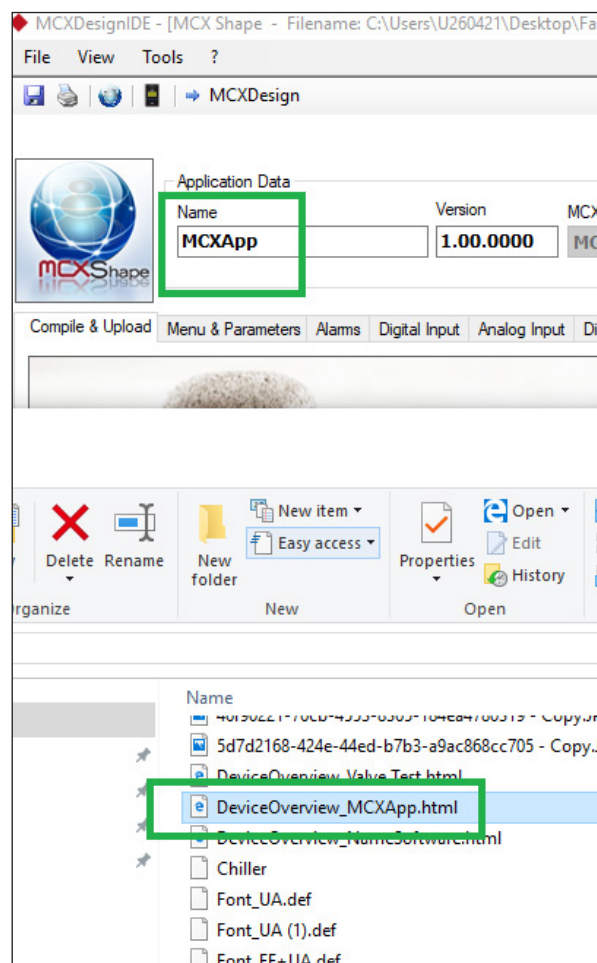

3. Open the .html file using a text editor and upgrade the image's name in the line shown below.

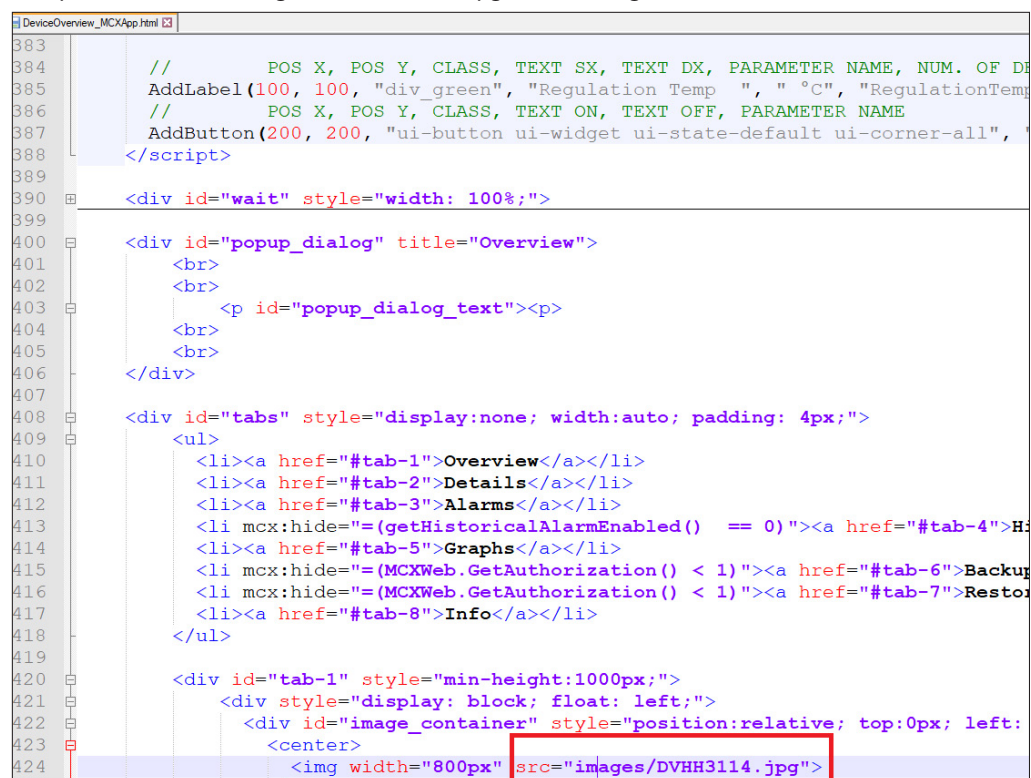

4. Display variables over the image by editing:
 - a. The style of the label

```


1 <style>
2 .table_selected_par_scroll {
3     margin:0px;
4     padding:0px;
5     height:200px;
6     overflow-x:hidden;
7     overflow-y:auto;"
8 }
9
10 .div_green {color:black; font-weight: bold; font-size:15px;}
11 </style>

```

- b. The position, additional text info plus which variable


Note: for displaying more variables, just duplicate the line.

5. Adding buttons by editing as shown below:

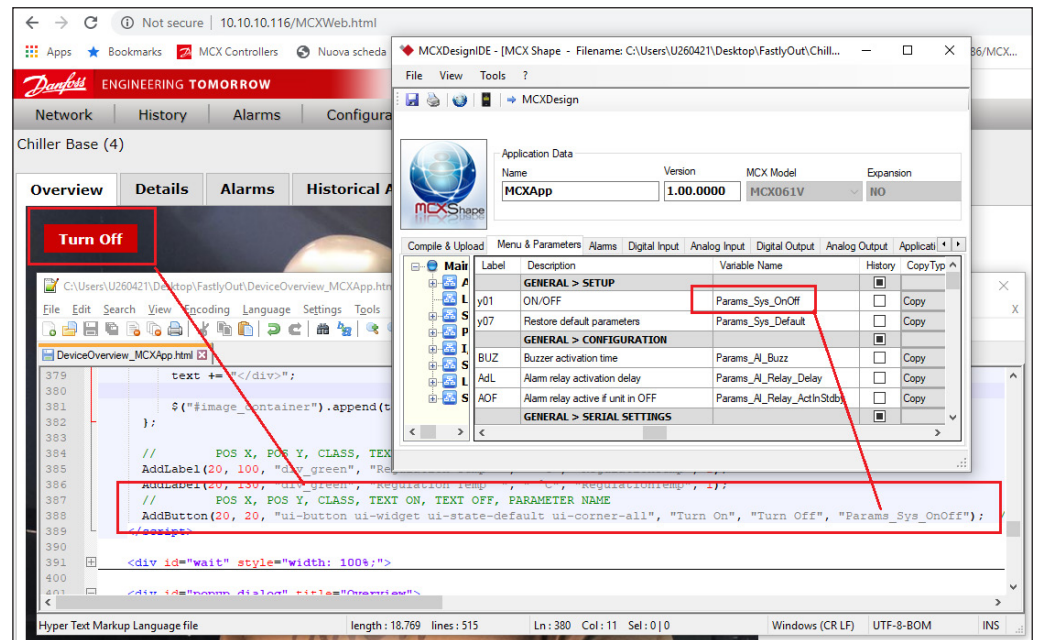

Note: for displaying more buttons, just duplicate the line.

6. Save the .html file in the "http" folder

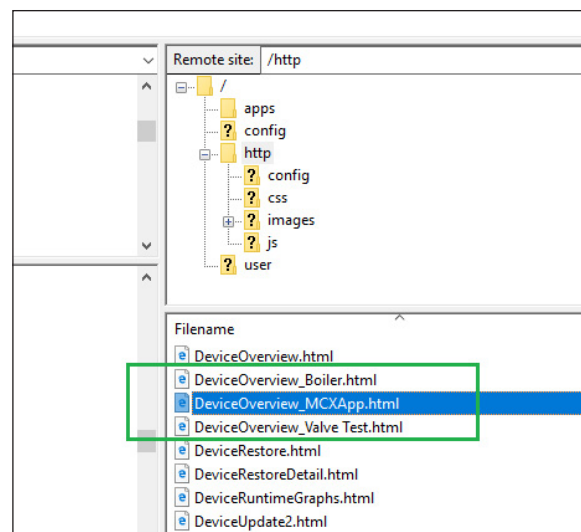

Note: the fitting of the writings could require a bit of testing.