

Service Guide

Configuration


AK-CC 750 to AK-SM 800

ADAP-KOOL® Refrigeration Control System



Local Configuration

1. Set 750 address with rotary switches.
2. Connect to 750 with PC using Service Tool.
3. Under Select Application, choose proper Quick Setup. This will disconnect you from Service Tool.

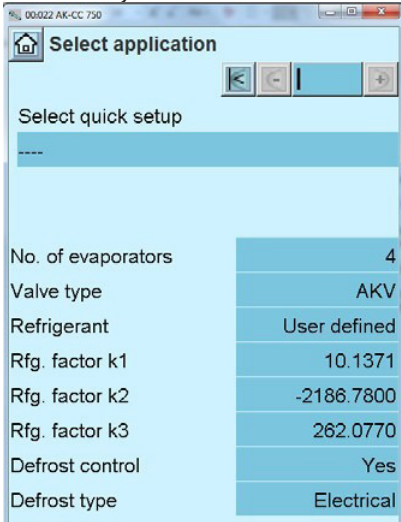


4. Reconnect, and go back to Select Application. Set 'No of evaporators' to proper #.


Setup at System Manager

***This section is detailed with the assumption that an existing program is in place including cases and addresses.**

1. At system manager, press Menu button and select '2' for Network Nodes

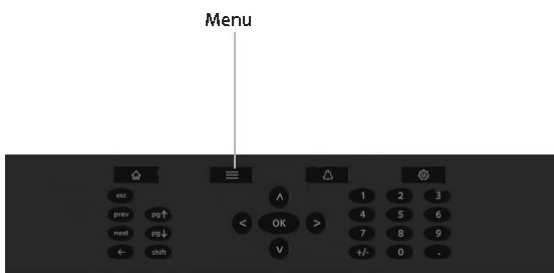

2. Confirm LON channel is enabled at top of screen. Once confirmed, highlight and select line 'Press for complete rescan'.

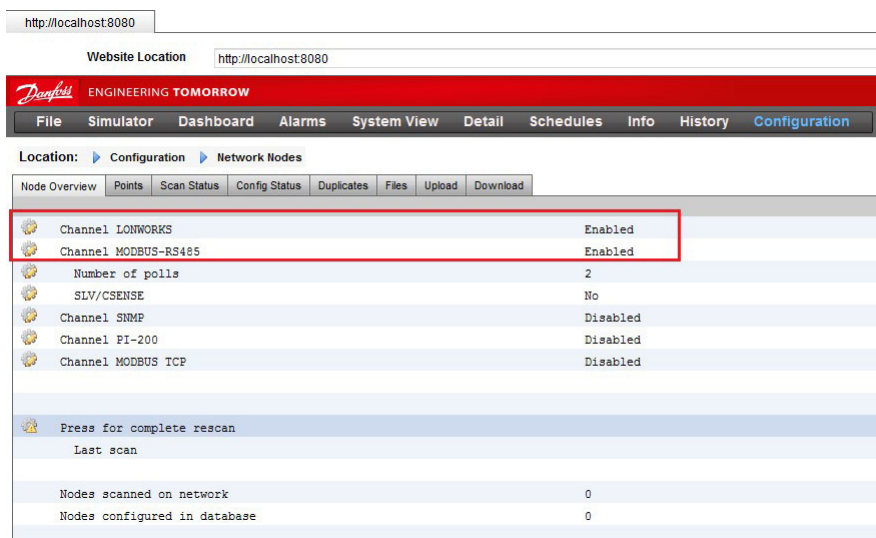


3. Once rescan is complete, navigate to Config Status tab to confirm case controller is online (will need to know address).


Downloading setpoints to AK-CC 750

1. In AK-SM 800, navigate to Configuration->Control->Refrigeration->Circuits->Setup->Download.

*If prompted at any point to 'retrieve configuration from device', select 'No'.

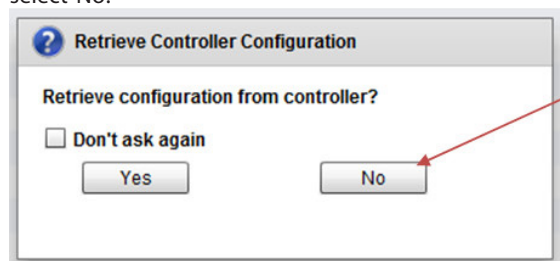

2. Select addresses of case controllers to be downloaded, so that check mark appears next to address. Then scroll to top of screen and select 'Press to download to selection'. Controller will timestamp each address after download completes successfully.

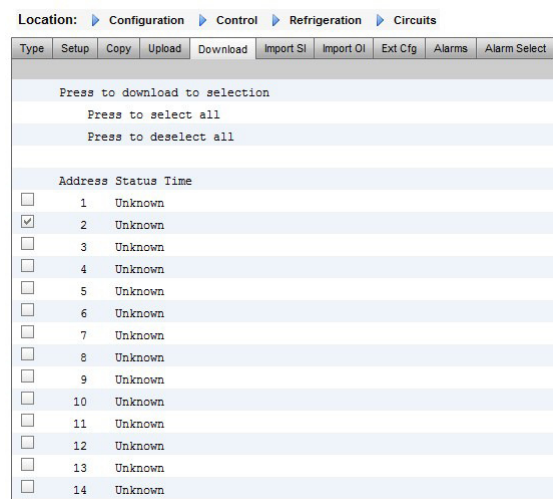

ENGINEERING
TOMORROW

Danfoss