

**Data sheet** 

# 



The KP Thermostats are single-pole, doublethrow (SPDT) temperature-operated electric switches.

DC motors and large AC motors.

They can be connected directly to a single-phase AC motor of up to approx.

2 kW or installed in the control circuit of

The KP Thermostats are used for regulation, but can also be seen in safety monitoring systems.

They are available with vapour charge or with adsorption charge.

With vapour charge the differential is very small. The KP Thermostats with adsorption charge are widely used to give frost protection.

#### **Features**

- · Wide regulating range
- Can be used for deep freeze, refrigeration and air conditioning plant
- Welded bellows elements mean increased reliability
- Small dimensions.
   Easy to install in refrigerated counters or cold rooms
- Ultra-short bounce times.
   This gives long operating life, reduces wear to a minimum and increases reliability
- Standard versions with changeover switch.
   Possible to obtain opposite contact function or to connect a signal
- Electrical connection at the front of the unit.
   Facilitates rack mounting
   Saves space
- Suitable for alternating and direct current
- Cable entry of soft thermoplastic for cables from 6 to 14 mm diameter
- Extensive and wide range

# **Approvals**

CE-marked in accordance with EN 60947-4/-5 for sale in Europe

China Compulsory Certificate, CCC Underwriters Laboratories Inc., US – UL GOST

# Ship approvals

Germanischer Lloyd, GL (excluding KP 98) Registro Italiano Navale, RINA Bureau Veritas, France, BV (excluding KP 98) Lloyd's Register, LR (excluding KP 79, KP 81, KP 98) Russian Maritime Register of Shipping, RMRS

**Note:** Marine Approvals do not cover KP 98 dual thermostat.

# Data sheet | Thermostat, type KP


# **Technical data**

Ambient temperature		-40 – 65 °C (80 °C for max. 2 hours).				
Switch		Single-pole, double-throw (SPDT) changeover switch.				
Contact load	Altographical automate	AC1 =16 A, 400 V				
	Alternating current	AC3 = 16 A, 400 V				
	Direct current	DC13: 12 W, 220 V control current				
Wire dimensions	solid / stranded	0.75 – 2.5 mm <sup>2</sup>				
	flexible, without ferrules	0.7 – 2.5 mm <sup>2</sup>				
	flexible, with ferrules	0.5 – 1.5 mm <sup>2</sup>				
Tightening torque		max. 2 Nm				
Rated impulse voltage		4 kV				
Pollution degree		3				
Short circuit protection, fo	use	16 A				
Insulation		400 V				
Enclosure		30/44				

Cable connection
Cable entry for cables 6 – 14 mm dia.
A Pg 13.5 screwed cable entry can be used for 6 – 14 mm dia. cables.
With 8 – 16 mm cables a standard Pg 16 screwed cable entry can be used.


Enclosure
IP30 to EN 60529 / IEC 529
This grade of enclosure is obtained when the unit is mounted on a flat surface or bracket.
The bracket must be fixed so that all unused holes are covered.

# **Contact systems**

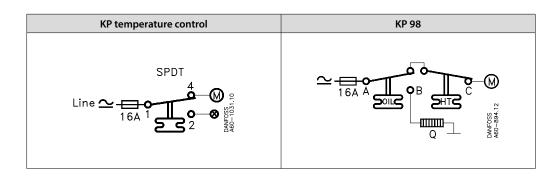



# Regulating range

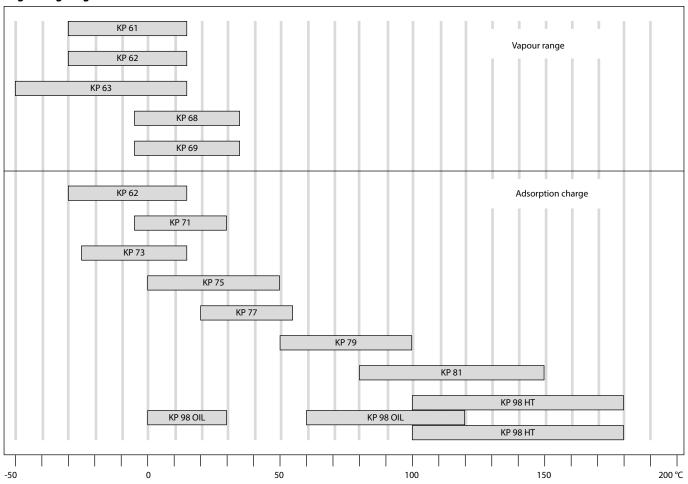



# Ordering









Charge	Туре	Bulb	Setting -	Differential Δt		Reset	Max.	Capillary-	Code no.
		type	range	Lowest temperature	Highest temperature		bulb temp.	tube length	
			[°C]	[°C]	[°C]		[°C]	[m]	
	KP 61	Α	-30 – 15	5.5 – 23	1.5 – 7	aut.	120	2	060L110066
	KP 61	Α	-30 – 15	5.5 – 23	1.5 – 7	aut.	120	5	060L110166
	KP 61	В	-30 – 13	4.5 – 23	1.2 – 7	aut.	120	2	060L110266
	KP 61	В	-30 – 15	5.5 – 23	1.5 – 7	aut.	120	2	060L110366 3)
	KP 61	В	-30 – 15	5.5 – 23	1.5 – 7	aut.	120	2	060L112866 3) 4)
Manager 1)	KP 61	Α	-30 – 15	Fixed 6	Fixed 2	min.	120	5	060L110466
Vapour 1)	KP 61	В	-30 – 15	Fixed 6	Fixed 2	min.	120	2	060L110566
	KP 62	C 1	-30 – 15	6.0 – 23	1.5 – 7	aut.	120	-	060L110666
	KP 63	Α	-50 — 10	10.0 – 70	2.7 – 8	aut.	120	2	060L110766
	KP 63	В	-50 – 10	10.0 – 70	2.7 – 8	aut.	120	2	060L110866
	KP 68	C 1	-5 – 35	4.5 – 25	1.8 – 7	aut.	120	-	060L111166
	KP 69	В	-5 – 35	4.5 – 25	1.8 – 7	aut.	120	2	060L111266
	KP 62	C 2	-30 – 15	5.0 – 20	2.0 – 8	aut.	80	-	060L111066 3) 4)
	KP 71	E 2	-5 – 20	3.0 – 10	2.2 –9	aut.	80	2	060L111366
	KP 71	E 2	-5 – 20	Fixed 3	Fixed 3	min.	80	2	060L111566
	KP 73	E 1	-25 – 15	12.0 – 70	8.0 – 25	aut.	80	2	060L111766
	KP 73	D1	-25 – 15	4.0 – 10	3.5 – 9	aut.	80	2	060L111866 3)
	KP 73	D1	-25 – 15	Fixed 3.5	Fixed 3.5	min.	80	2	060L113866
Adsorbtion <sup>2</sup> )	KP 73	D 2	-20 – 15	4.0 – 15	2.0 – 13	aut.	55	3	060L114066
	KP 73	D1	-25 – 15	3.5 – 20	3.25 – 18	aut.	80	2	060L114366
	KP 75	F	0 – 35	3.5 – 16	2.5 – 12	aut.	110	2	060L112066
	KP 75	E 2	0 – 35	3.5 – 16	2.5 – 12	aut.	110	2	060L113766
	KP 77	E 3	20 – 60	3.5 – 10	3.5 – 10	aut.	130	2	060L112166
	KP 77	E 3	20 – 60	3.5 – 10	3.5 – 10	aut.	130	3	060L112266
	KP 77	E 2	20 – 60	3.5 – 10	3.5 – 10	aut.	130	5	060L116866
	KP 79	E 3	50 – 100	5.0 – 15	5.0 – 15	aut.	150	2	060L112666
	KP 81	E 3	80 – 150	7.0 – 20	7.0 – 20	aut.	200	2	060L112566
	KP 81	E 3	80 – 150	Fixed 8	Fixed 8	max.	200	2	060L115566
	KP 98	E 2	OIL: 60 - 120	OIL: Fixed 14	OIL: Fixed 14	max.	150	1	060L113166
		E 2	HT: 100 – 180	HT: Fixed 25	HT: Fixed 25	max.	250	2	

<sup>1)</sup> Bulb must always be placed colder than the thermostat housing and capillary tube. The thermostat will then regulate independent of ambient temperature.
2) Bulb can be placed warmer or colder than thermostat housing and capillary tube, but variations from 20 °C ambient temperature will influence the scale accuracy.

<sup>3)</sup> With manual switch, not isolating switch.
4) Panel mounting model with top plate.



# Ordering

(continued)

# Thermostat bulb types

A		Straight capillary tube				
В		ø9.5 $ imes$ 70 mm remote air coil				
С		C1: ø40 × 30 mm air coil C2: ø25 × 67 mm air coil (integral with thermostat)				
D		D1: ø10 × 85 mm double contact remote bulb D2: ø16 × 170 mm double contact remote bulb Note! Cannot be used in sensor (bulb) pocket				
E		E1: ø6.4 × 95 mm remote bulb E2: ø9.5 × 115 mm remote bulb E3: ø9.5 × 85 mm remote bulb				
F	<del> </del> *******	ø25 × 125 mm remote duct coil				




# Design **Function**


- Temperature setting spindle
   Differential setting spindle
- Main arm
- Main spring
- 8. Differential spring
- 9. Bellows


- 12. Switch13. Terminals14. Earth terminal
- 15. Cable entry
- 16. Tumbler
- 17. Sensor


# Key sketch of KP thermostat

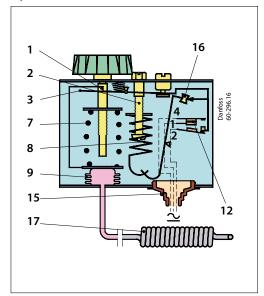


# KP thermostat

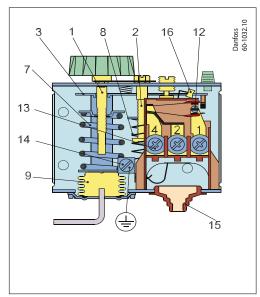

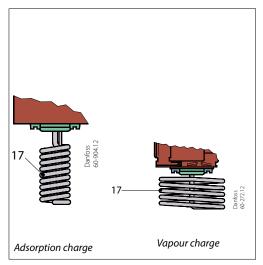



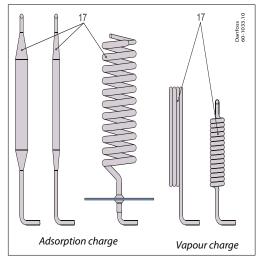

The design of the KP thermostats affords the following advantages:

- · high contact load,
- · ultra-short bounce time,
- vibration resistance up to 4 g, in the range 0 – 1000 Hz,
- long mechanical and electrical life.




# Design Function

(continued)

- 1. Temperature setting spindle, OIL
- 3. Main arm
- 5. Temperature setting spindle, HT
- 7. Main spring
- 9. Bellows
- 10. Capillary tube, OIL
- 11. Capillary tube, HT
- 12. Switch
- 13. Terminals
- 14. Earth terminal
- 15. Cable entry
- 16. Tumbler
- 17. Sensor (bulb)
- 18. Locking plate

KP thermostat, dual type

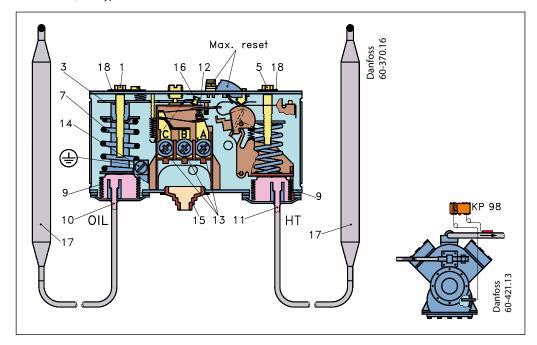

Dual thermostat KP 98 is used to provide protection against excessively high discharge gas temperature and to ensure a suitable oil temperature in the compressor.

temperature in the compressor.
To avoid the temperature of the hot gas exceeding the maximum permissible value during extreme operating conditions (low evaporating pressure, high condensing pressure, high suction vapour superheat) a KP 98 thermostat can be used on the high temperature side (HT). If the temperature of the hot gas becomes too high the refrigerant will break down and the compressor discharge valve will become damaged.

The risk is greatest in refrigeration systems that operate on a high compression ratio (e.g. in systems with NH₃ or R22) and in applications with hot gas bypass.

This unit has two separate thermostat functions. The HT sensor that controls the discharge gas temperature is fitted on the discharge tube immediately after the compressor.

For larger compressors, the sensor can be built into the discharge line.

The OIL sensor that controls the oil temperature is located in the compressor oil sump.

### **Terminology**

### Differential

The differential is the difference between the make and break temperatures.

A differential is necessary for satisfactory automatic operation of the plant.

Mechanical differential (intrinsic differential)
The mechanical differential is the differential set
by the differential spindle.

Operating differential (thermal differential)
The operating differential is the differential the plant operates on. Operating differential is the sum of the mechanical differential and the differential produced by the time constant.

#### Reset

#### 1. Manual reset:

Units with manual reset can only be restarted after the reset button has been activated. On min. reset units the set value is equal to the cut-out value for falling temperature. On max. reset units the set value is equal to the cut-out value for rising temperature.

#### 2. Automatic reset:

These units are automatically reset after operational stop.



#### Setting

Thermostats with automatic reset

Set the upper activating temperature on the range scale.

Set the differential on the "DIFF" scale.

The temperature setting on the range scale will then correspond to the temperature at which the refrigeration compressor will be started on rising temperature. The compressor will be stopped when the temperature has fallen in relation to the differential setting.

Note that the differential depends on the range setting. Therefore, the differential scale must only be used as guideline. If with low stop temperature settings the compressor will not stop, check whether the differential is set at too high a value!

Thermostats with minimum reset

Set the stop temperature on the range scale. The differential is a fixed setting. The compressor can be restarted by pressing the "Reset button" after the temperature on the thermostat sensor has risen by a value equal to the fixed differential setting.


Thermostats with maximum reset

Set the stop temperature on the range scale. The differential is a fixed setting. The compressor can be restarted by pressing the "Reset button" after the temperature on the thermostat sensor has fallen to a value equal to the fixed differential setting.

# Charges

- 9. Bellows element
- 17. Sensor (bulb)
- 19. Capillary tube

#### 1. Vapour charge

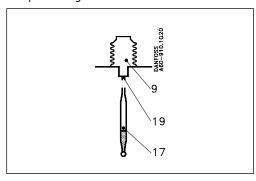

Here the interdependence between the pressure and temperature of saturated vapour is utilized, i.e. the element is charged with saturated vapour plus a small amount of liquid.


The charge is pressure-limited; a further increase in pressure after evaporation of all the liquid in the sensor (17) will only result in a small pressure increase in the element.

This principle can be utilized in thermostats for low temperature, etc. where evaporation must be able to take place from the free liquid surface in the sensor (within the operating range of the thermostat), and where at the same time, the bellows must be protected against deformation when kept at normal ambient temperatures. Since the pressure in the element depends on the temperature at the free liquid surface, the thermostat must always be placed so that the sensor is colder than the rest of the thermostatic element.

The evaporated liquid will recondense at the coldest point, i.e. the sensor. Thus, as intended, the sensor becomes the temperature-controlling part of the system.

**Note:** When the sensor is coldest, the ambient temperature has no effect on regulating accuracy.

#### 2. Adsorption charge

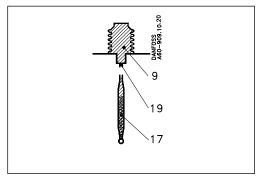

In this case the charge consists partly of a superheated gas and partly of a solid having a large adsorption surface.


The solid is concentrated in the sensor (17) and it is therefore always the sensor that is the temperature-controlling part of the thermostatic element.


The sensor can be placed warmer or colder than thermostat housing and capillary tube, but variations from 20 °C ambient temperature will influence the scale accuracy.


- 9. Bellows element
- 17. Sensor (bulb)
- 19. Capillary tube





# Dimensions [mm] and weights [kg]

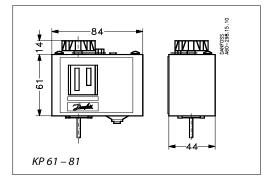


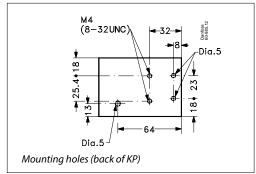


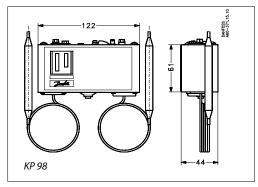


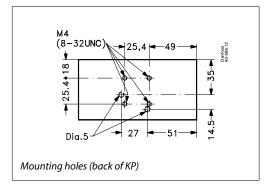


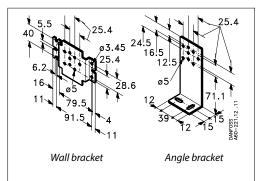

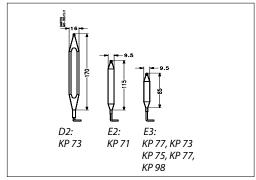

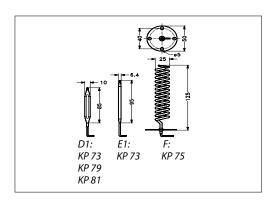

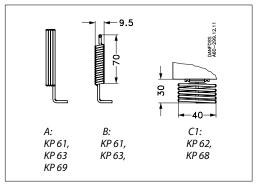

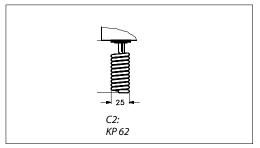

Net weight: KP 61 – 81: approx. 0.4 kg KP 98: approx. 0.6 kg

