

RA 2000

Thermostatic Radiator Valves

Application:

RA 2000 Thermostatic Radiator Valves regulate the flow of hot water or low pressure steam through free-standing radiators, baseboards, or convectors in hot water and two-pipe steam systems. Operators and valves are packaged separately to allow an installer to select a suitable combination for each application.

Operator Features:



Standard Valve Mounted Dial & Sensor



Standard Valve Mounted
Dial with Remote Sensor



Tamper Resist. Valve Mounted Dial & Sensor



Tamper Resist. Valve Mounted Dial w/ Remote Sensor



Combined Remote Mounted Dial & Sensor



Separate Remote Mounted Dial & Sensor

- Valve mounted operators provide fast acting modulating control of the space temperature through a patented vapor charge, ensuring the highest level of comfort control.
- Standard valve mounted operators are equipped with a "snap-action" mechanism that allows for easy installation and removal without the use of tools. Optional anti-theft protection clips are available.
- Standard valve mounted operators provide tactile feedback in the setting of the temperature. This subtle click sound and feedback provide 1°F (0.5°C) indication during temperature setting. alve mounted operators are
- Tamper resistant versions of the valve mounted operators are available to discourage unauthorized adjustment, vandalism and theft.
- Conforms to ASHRAE / ANSI Standard 102-1983.

Valve Features:



Straight FPT x MPT Union Tailpiece



Angle FPT x MPT Union Tailpiece



Side Mount Angle FPT x MPT Union Tailpiece



Straight Double Union Sweat

- RA 2000 valves are fitted with a packing gland assembly that is replaceable while the system is in operation.
- Sturdy EPDM rubber valve disc provides a seal against the valve seat at differential pressures of up to 15 PSI in hot water heating systems, while 15psig for low pressure steam systems.
- Manual Plastic cap supplied to protect the valve pushpin and provide manual control of the valve during installation. If manual operation is required, a seperate version of manual knob is available.
- Valves remain normally open with no operator mounted.
- Conforms to ASHRAE / ANSI Standard 102-1983.



RA2000 Thermostatic Radiator Valves

Technical Specifications:

Hydronic Hot Water Systems

Maximum Temperature: 250 °F					
Maximum Static Pressure: 145 psi					
Maximum Test Pressure: 232 psi					
Max. Diff. Pressure (water): 15 psi					
Max. Sensor Temperature: 140 °F					
Adjustable Temp. Range: 45-86°F (7-30°C)					

Two-Pipe Low-Pressure Steam Systems

Maximum Temperature: 250 °F
Maximum Test Pressure: 232 psig
Maximum Steam Pressure: 15 psig
Max. Sensor Temperature: 140 °F
Adjustable Temp. Range: 45-86°F (7-30°C)

Comfort Control:

Control of the space temperature at a comfortable level is easily accomplished by adjusting the dial clockwise or counterclockwise. The dial has a numbered scale of 1 to 5 corresponding to temperatures of approximately 57°F to 79°F (14°C to 26°C).

Integrated with the standard valve mounted operators is a tactile feedback when setting the temperature. The subtle click sound provides a 1°F (0.5°C) indication of temperature setting change when adjusting.

Should the space be unoccupied for an extended period, the dial can be set to the "*"symbol for freeze protection (50°F or 9°C) to save energy.



*	1	2 •	• 3 •	• 4	5			
45	57	63	68	73	79	°F		
7	14	17	20	23	26	°C		
Room temperature								

★ = Frost protection setting


Indicated temperatures are approximate.

Adjust the dial to the desired setting.

Design and Function:

The RA 2000 thermostatic operator consists of a saturated vapor charged bellows and a setting dial. The dial is set to the position equal to the desired temperature. When the ambient temperature lowers, the pressure from the bellows will reduce, allowing the valve to open. A rise of temperature increases the pressure

in the bellows closing the valve. The balanced pressures between the adjustment spring and the bellows ensure a smooth and modulating operation of the valve. Danfoss RA 2000 are manufactured to the highest quality standards in an ISO 9001 factory.

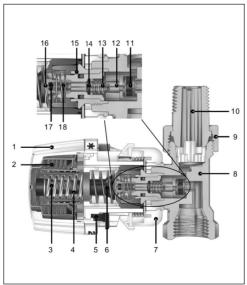

No. Description:

- 1- Operator setting dial (ABS)
- 2- Vapor charged bellows
- 3- Safety spring (steel)
- 4- Adjustment spring (steel)
- 5- Locking/limiting pin (steel)
- 6- Pressure spindle (plastic)
- 7- Snap-on mounting ring (plastic)
- 8- Valve body (nickel plated brass)
- 9- Union nut (nickel plated brass)
- 10- Tailpiece (nickel plated brass)
- 11- Valve disc (EPDM)
- 12- Valve spindle (brass)
- 13- Valve spring (stainless steel)
- 14- Back seat washer (EPDM)
- 15- Valve bonnet (brass)
- 16- Pressure pin (stainless steel)
- 17- Packing o-ring (EPDM)
- 18- Packing gland (DRZ brass)




Applications:

Typical Installation Configuration			Opera	tor Type	+	Valve Type
	Free-Standing Radiators The freestanding hot water or low-pressure steam radiator is located where air circulation is unobstructed and passes freely over the operator.	=	Donda Donda	Valve -mounted dial and sensor, standard or tamper resistant models. Always install these operators in a horizontal position.	+	Straight, Side-Mount Angle or Double Solder Union
	Free-Standing Radiators Freestanding hot water or low-pressure steam radiator. Air circulation does not pass freely over the operator due to furniture, drapes, coverings, etc.	=		Valve -mounted dial with remote sensor, standard or tamper-resistant models. The sensor can be mounted on a wall up to 6 feet away in a location free of drafts.	+	Straight, Angle, Side- Mount Angle or Double Solder Union
	Baseboards/Convectors The hot water or low-pressure steam fin-tube baseboard or convector is located where air circulation is unobstructed and passes freely over the operator.	=	Touches Touches	Valve -mounted dial and sensor, standard or tamper resistant Models. Always install these operators in a horizontal position.	+	Straight, Side- Mount Angle or Double Solder Union
	Baseboards/Convectors Hot water or low- pressure steam fin-tube baseboard or convector. Air circulation does not pass freely over the operator due to furniture, drapes, coverings, etc.	=		Combined remote mounted dial and sensor. The dial operators are wall mounted and are available with 6', 16' or 26' long capillary tubes.	+	Straight, Angle, Side- Mount Angle or Double Solder
	Baseboards/Convectors The hot water or low- pressure steam fin-tube baseboard or convector arrangement requires the dial and sensor to be mounted separately, away from the valve.	=		Separate remote mounted dial and sensor. The remote dial mounts on the wall or enclosure (max. 6' away). The sensor is mounted beneath the radiation or on a draft free wall 6'away from the dial.	+	Straight, Angle, Side- Mount Angle or Double Solder Union

Important!

Valve mounted dial and sensor operators should be installed horizontally. If mounted vertically, the operators will sense heat radiating upwards from the valve resulting in the premature closing of the valve. If this orientation is required consider the valve mounted dial with remote sensor.













Ordering Information:

RA 2000 Operators

Operator	Code No.	Description	Sensor	Capillary
0)	015G4290	Valve mounted dial and sensor	Built-in	-
	015G4292	Valve mounted dial with remote sensor	Remote	6′
	015G4240	Valve mounted dial and sensor, Tamper-resistant	Built-in	-
015G4042		Valve mounted dial with remote sensor, Tamper-resistant	Remote	6′
510	013G8562	Combined remote mounted dial and sensor*	Built-in	6′
	013G8565	Combined remote mounted dial and sensor*	Built-in	16′
	013G8568	Combined remote mounted dial and sensor*	Built-in	26′
	013G8564	Separate remote mounted dial and sensor*	Remote	6' + 6'
013G5002		Manual adjustment handle	-	-
	013G1350	Right angle operator adapter (for hot water applications)	-	-

^{*} Socket body to accommodate to older series of RAV valve body sold separately for remote mounted dial operators, Code No. 013G8593.


RA 2000 Valves

Valve	Code No.	Size	Valve Type	Cv*	Connections (inlet x outlet)
	013G8015	1/2"		1.6	
The state of the s	013G8020	3/4"	Chunimba	2.7	FPT x MPT
	013G8025	1"	Straight	2.8	Union Tailpiece
	013G8032	1-1/4"		2.8	,
	013G8014	1/2"		1.6	
	013G8019	3/4"] 	2.7	FPT x MPT Union
	013G8024	1"	Angle	2.8	Tailpiece
	013G8031	1-1/4"		2.8	'
	013G8013	1/2"		1.6	
	013G8018	3/4"	Side Mount	2.1	FPT x MPT Union
	013G8023	1"	Angle	2.8	Tailpiece
	013G8030	1-1/4"		2.8	'
	013G8042	1/2"		1.6	Double Solder
	013G8044	3/4"	Straight	2.7	Union

^{*} Cv is the water flow rate through the fully open valve at a pressure drop of 1psi. To determine the pressure drop through the valve at other flow rates use the formula: $\Delta P = (Q/Cv)^2$, where Q =water flow in GPM



Dimensions:

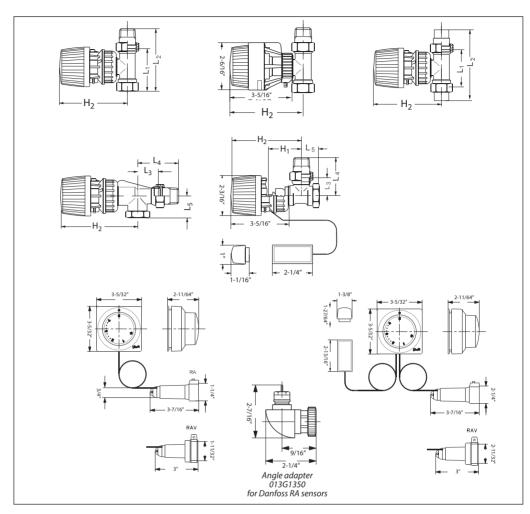

Valve Type	Connec- tion Type	L1	L2	L3	L4	L5	Н1	H2
	1/2" NPT	2-5/8"	3-3/4"				1-57/64"	3-3/4"
Caus:ba	3/4" NPT	2-29/32"	4-3/16"				2-1/16"	3-15/16"
Straight	1" NPT	3-17/32"	4-31/32				2-1/16"	3-15/16"
	1-1/4" NPT	4-1/4"	5-29/32"				2-9/64"	4-1/64"
	1/2" NPT			1-3/16"	2-9/32"	1-1/64"	1-57/64"	3-3/4"
Amada	3/4" NPT			1-11/32"	2-5/8"	1-9/64"	2-1/16"	3-15/16"
Angle	1" NPT			1-9/16"	3″	1-11/32"	2-1/16"	3-15/16"
	1-1/4" NPT			1-3/4"	3-3/8"	1-9/16"	2-1/16"	3-15/16"
	1/2" NPT			1-1/8"	2-1/4"	1-1/64"	2-3/8"	4-1/4"
Side	3/4" NPT			1-11/32"	2-5/8"	1-9/64"	2-7/16"	4-5/16"
Mount	1" NPT			1-9/16"	3″	1-11/32"	2-3/8"	4-1/4"
	1-1/4" NPT			1-3/4"	3-3/8"	1-9/16"	2-3/8"	4-1/4"
Double	1/2"	2-5/8"	3-15/16"				1-57/64"	3-3/4"
Solder	3/4"	2-15/16"	4-5/8"				2-1/16"	3-15/16"



RA2000 Thermostatic Radiator Valves

Capacity:

Hydronic Hot Water Applications

Example:


Flow Required: 0.65 US GPM Pipe Size: 1/2"

Solution:

Draw a line from 0.65 USgpm until it intersects with the dashed line for the 1/2" valve. Draw a vertical line down to find the additional system pressure drop due to the valve will be 0.6 psi.

Note: For best control, select valve based on 4°F P-deviation and maximum 5 psi pressure drop. P-deviation is the difference between the thermostat setting and the actual space temperature. For best comfort control and long life, valves should be selected to provide design flow at a 4°F P-deviation.

The shaded area represents differential pressure above those recommended for quiet operation. The maximum differential pressure ratings indicate the maximum pressure at which valves regulate satisfactorily. In order to prevent noise, pumps that provide only the required pressure should be recommended. Experience shows that in most systems a differential pressure of 0.5 - 2.5 psi across the valve is sufficient to provide the required flow.

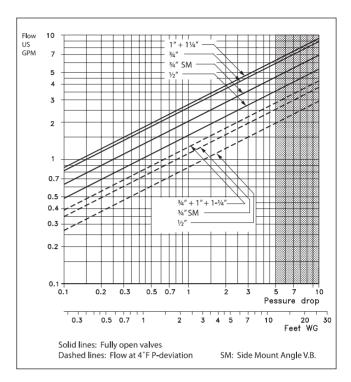

Low Pressure Steam Applications:

Step-by-step selection technique

- 1. Before selecting valves, consider P-deviation.
- 2. Check that system pressure is below 15psig.
- 3. Determine load requirements for each valve.

Example:

Design load: 28MBH Pipe Size: 3/4" P-deviation ≤ 4°F

Solution:

From the table below a 3/4" valve will provide 28MBH at a 4°F P-deviation at a pressure drop of 3psi. If the system pressure is 3psi or greater a 3/4" valve can be used.

Pressure Dro	p	1 psig 2 psig		2 psig	3 psig		4 psig		5 psig		
P-Deviation 6	°F	4	Fully open	4	Fully open	4	Fully open	4	Fully open	4	Fully open
Valve Size	Rating Code										
1/2"	MBH	10	16	14	22	16	28	20	32	35	62
3/4"	MBH	15	30	20	40	28	50	32	58	60	108
1" & 1-1/4"	МВН	18	40	25	52	30	60	36	72	66	140

Conversion Factors:

Sq. ft. EDR to $Btu/hr = Sq. ft. EDR \times 240 (steam)$

Btu/hr to Sq. ft. EDR = Btu/hr 240

1 MBH = 1,000 Btu/hr

Rating Abbreviations:

MBH = Thousands of Btu/hr.

EDR = Equivalent Direct Radiation

Important

P-deviation refers to the difference between the thermostat setting and the actual space temperature. For best comfort and long life, valves should be selected which provide the design heating load at approximately a 4°F P-deviation.

6

RA2000 Thermostatic Radiator Valves

Spare Parts and Accessories:

	Code No.	Description					
AVEO	013G1236	Screwdriver tool set for tamper resistant operators					
Valve Mount Operators	Valve Mount 013G1246 Limitation pins for Danfoss Aveo® 4290 / 4292 (10 pcs)						
Operators	013G1237 Limitation pins for tamper resistant operators Danfoss Aveo® 4240 / 4042 (30 pcs)						
015G4290	Anti-theft protection clips for Danfoss Aveo® 4290 / 4292 (20 pcs)						
015G4292 015G4042	015G4292 015G4042						
015G4240	013G1672	Cover plate for scale window of tamper resistant operators (20 pcs)					
	013G1350	Angle Adapter for RA 2000 valves & sensors					

RA Socket For RA 2000 Wall Mount Operators			2				
013G8562 013G8565	Code No.	Description	Position No.				
013G8564	013G8591	Socket Body for RA 2000	1				
013G8568	013G5503	Bellows Holder (set of 2 pcs)	2				

RA Socket For RA 2000 Wall Mount Operators								
013G8562 013G8565	Code No.	Description	Position No.					
013G8564	013G8593	Socket Body for RAV, VMT and KOVM	1					
013G8568	013G5503	Bellows Holder (set of 2 pcs)	2					

	Code No.		Description
	013G0290		Packing Gland
RA 2000	013-7045	0	Spare gasket for RA to RA2000 adapte
Valve Bodies	013G8070		RA to RA 2000 adapter
	013G8072		RAV to RA 2000 adapter



RA 2000 Valve Bodies	Code No.		Description
	013G8037		Insert, valve top & gland replacement, 1/2" NPT angle & straight valve
	013G8038		Insert, valve top & gland replacement, 1/2" NPT sidemount angle valve, , 1/2" straight double union sweat
	013G8039		Insert, valve top & gland replacement all 3/4", 1", 1-1/4"
	003L0213	THE	Demounting tool for valve tops RA 2000, RA-S, RA-N, FHV-A

Changing the Packing Gland:



Should the packing gland on the valve body show signs of weeping, it can be replaced in a few minutes with the system in operation.

If changing the packing gland on a steam system consider changing the packing gland during an off cycle.

Order packing gland 013G0290 for RA 2000 and FHV-A valves.

Warning:

Brass products such as Danfoss thermostatic radiator valves should not be installed in hydronic or steam heating systems that are being treated with medias that contain, or that during the process of treatment could develop, agents aggressive to brass. In concentrations larger than shown, agents such as Ammonia (0.2mg/l), Mercury (0.01mg/l), Oxygen (0.01mg/l), Carbon Dioxide (0.05mg/l), or Chloride (20mg/l) must be avoided. Further the pH-value of the medium in contact with the brass products should not exceed 9.5. Neglecting the above restrictions may in some

circumstances cause damage to the brass in the valve allowing the heating fluid to escape, possibly scalding any bystanders.

Note: To avoid internal damage and void the warranty, mineral oils must not come in contact with EPDM valve components.

Typical Specifications:

The thermostatic radiator valve assembly shall be a two part assembly consisting of the brass valve body and thermostatic operator. The brass valve body shall have a packing gland assembly capable of replacement while the system is in operation. The valve shall be available in a straight, angle, or side mount orientation. The thermostatic operator shall be available in either

a valve or wall mounted dial operator. The valve mounted dial shall be a vapor charged operator and installed via snap-action mechanism or Allen key and offered with an integrated tactile feedback in the setting of the temperature setting. Assembly shall conform to ASHREA / ANSI standard 102-1983 and certified according to EU standard EN215.

Danfoss

Tel.: 1-888-DANFOSS (326-3677) | Fax: 416-352-5981 | www.heating.danfoss.us

Danfoss can accept no responsibility for possible errors in printed materials and reserves the right to alter its products without notice.

All trademarks in this material are property of the respective companies. Danfoss and Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.