

# Remote Control R70 Receiver



## Revision history

*Table of revisions*

<b>Date</b>	<b>Changed</b>	<b>Rev</b>
March 2026	Updated Safety Instructions	0301
July 2024	Updated safety instructions, technical description, and installation content	0201
January 2019	Rebranded to Danfoss Power Solutions	0101

**Safety instructions**

FCC rules..... 4  
General safety..... 4  
Safety warnings..... 5  
RCT RED DA Applicability Receivers..... 5  
Data Encryption..... 6

**Technical description**

Dimensions..... 7  
Hardware description..... 8  
R70 detailed description..... 8

**Installation**

Receiver installation..... 10  
Recommended Mechanical Installation..... 10  
Recommended Wiring Dimensions..... 11  
Receiver Pin out..... 11

**Troubleshooting**

400-900MHz Receiver LED troubleshooting..... 13  
2.4GHz Receiver LED troubleshooting..... 13

## Safety instructions

### FCC rules

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules.

#### Note

Changes or modifications not expressly approved by the manufacturer can void the user's authority to operate the equipment.

#### Note

To comply with FCC RF exposure compliance requirements, this device and its antenna must not be collocated with, or operating in conjunction with, any other antenna or transmitter, may not cause harmful interference, and must accept any interference received, including interference that may cause undesired operation.

The limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

#### Warning

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. l'appareil ne doit pas produire de brouillage, et
2. l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

### R70 General Safety

The following safety instructions must be read carefully to install and use the product properly, and to keep it in perfect working condition, and to reduce the risk of miss use.

- **Danfoss recommends the use of ESD PPEs (electrostatic discharge personal protection equipment).**
- Strictly adhere to the installation instructions contained in this document.
- Make sure that professional and competent personnel carry out the installation.
- Ensure that all on site and prevailing safety regulations are fully respected.
- The Electrical Installation where it may be connected, The receiver may be connected through an automatic magneto thermic switch (with omnipolar cut capacitance: F+N) and differential with characteristics according to the Low Voltage Recommendations.
- Make sure that this document is permanently available to the operator and maintenance personnel.
- Keep the transmitter out of reach of non-authorized personnel.
- Remove the transmitter key when the set is not in use.
- Check each working day the STOP button and other safety features. When in doubt, press the STOP button.
- Whenever several sets have been installed, make sure the transmitter is the right one. Identify the machine controlled on the label for this purpose on the transmitter or by using the display (in case it does have one).
- Service the equipment periodically.
- Avoid High Pressure water Spraying to Receivers while cleaning the machine
- When carrying out repairs, use spare parts supplied by Danfoss only.

**Warning**

**Potential damage to the operator or the product.** Do not use this product on machines in potentially explosive atmospheres unless the model is ATEX/RATEX certified to work in such conditions.

### R70 Safety Warnings

Potential damage to operator and product.


Follow the guidelines below to reduce risk of injury to the operator and the product.

- Use the device with the manufacturer's battery and battery charger (if applicable).
- Only allow qualified personnel to operate the equipment.
- Always set the STOP button in the off position when not in use.
- Always press STOP before plugging in tether cable (if applicable).
- Remove the Tether connection on the transmitter First (if applicable).
- Do not operate product when visibility is limited.
- Make sure product is compatible with the machine.
- Avoid knocking or dropping the product.
- Do not use the product if a failure is detected.


**Note**

Changes or modifications not approved by Danfoss can void the user's authority to operate this product.


#### Quick reference precautions

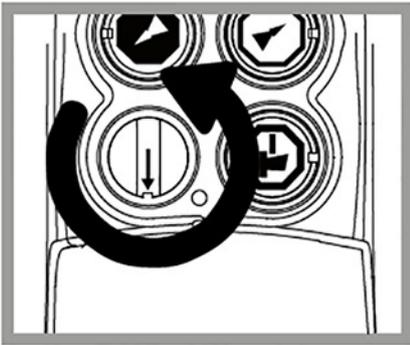


Remove the transmission key only when the set is not in use or to deny the access

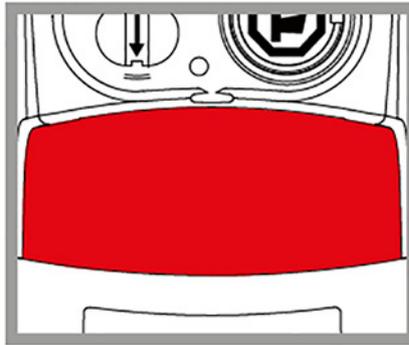


When in doubt, press the STOP button

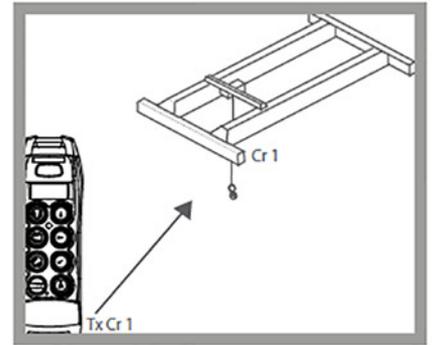

Make sure the transmitter works with the machine to be handled

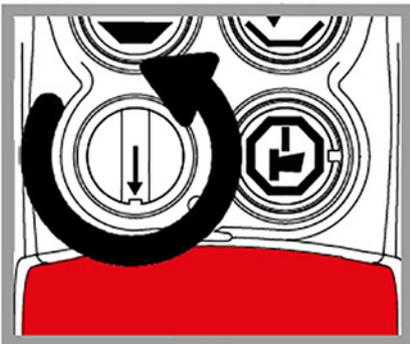

After use set the contact key and the STOP button

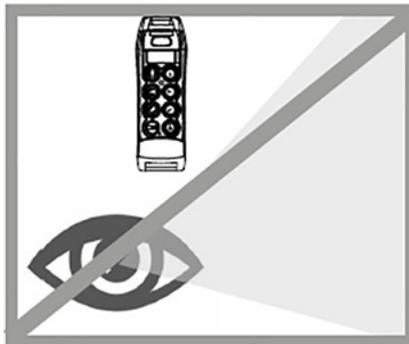

Do not use the set when visibility is limited



Avoid knocking or dropping the set

### RCT RED DA Applicability Receivers

TM70 and TM80 Receivers:

“The intended use of the PROFINET interface is to establish a **local, wired connection between the receiver and a central controller, ECU or PLC**, without the involvement of any other device or system capable of reading from or writing to the PROFINET interface. This dedicated link ensures controlled communication and preserves the integrity of the data exchange.

**Any deviation from this requirement is considered improper use, and the manufacturer assumes no responsibility for potential malfunctions, security risks, or data integrity issues resulting from such configurations.”**

## Data Encryption


In alignment with **Commission Delegated Regulation (EU) 2022/30**, supplementing the **Radio Equipment Directive (RED) 2014/53/EU**, we are introducing **encryption for radio communication** in TM80 2.4 GHz platform. This measure is designed to:

- Protect the integrity and confidentiality of transmitted data
- Prevent unauthorized access and misuse of network resources

## Technical description

### R70 dimensions


*Dimensions in mm*

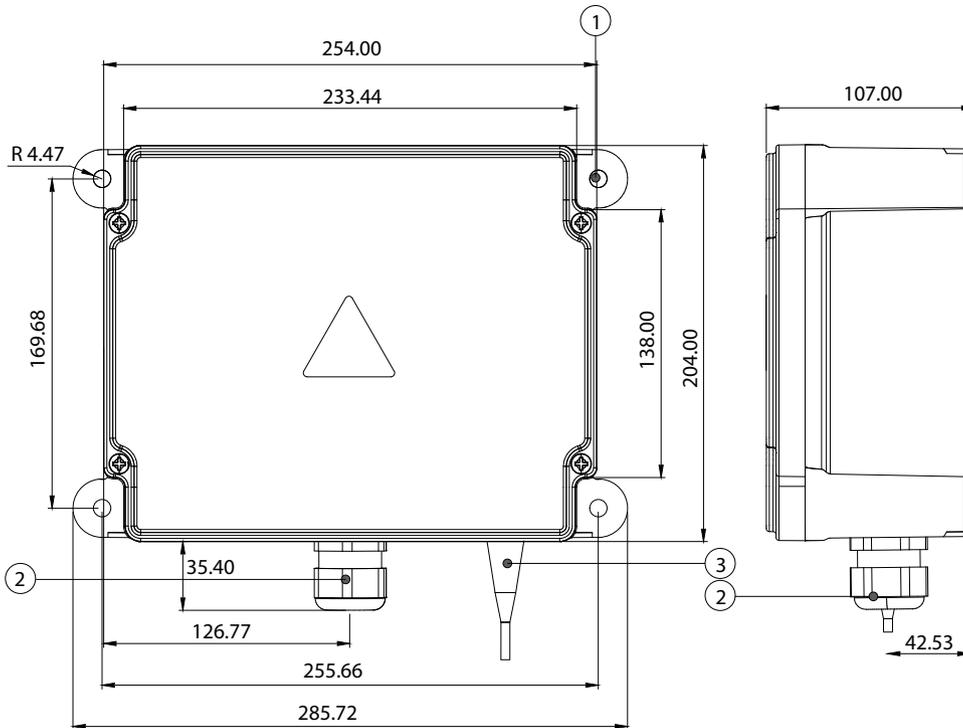

 **Note**

See next page for callout details.

## R70 hardware description

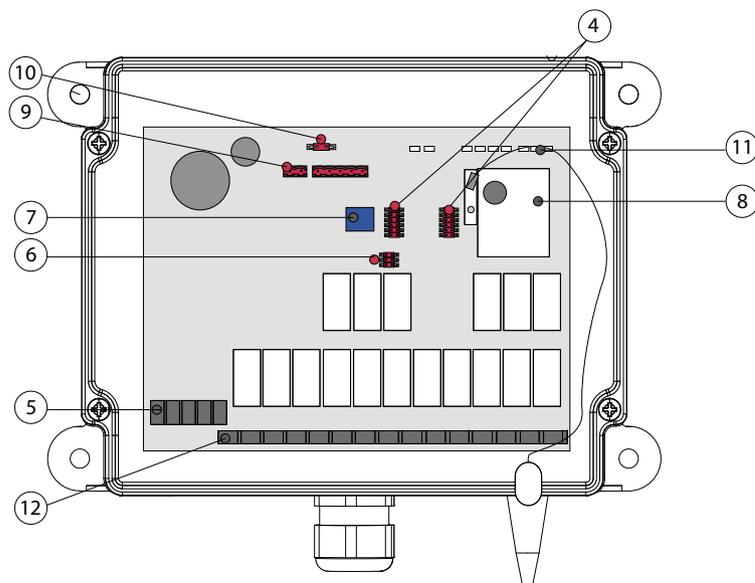

1. Fixing slots (fixed assembly or Shock Absorbers)
2. M32 cable gland
3. External antenna
4. RS232/RS485 socket
5. Switching Power supply
6. INXXX card socket
7. Internal removable EEPROM
8. RF Module
9. CAN BUS connection
10. CAN BUS termination
11. Signaling LEDs
12. Wiring connection

## R70 detailed description

### Technical data

Specification	Value
Stop Function (400-900 MHz)	Cat. 3 - PLd
Stop Function (2.4GHz)	Cat. 4 - PLe
Ingress Protection rating	IP65/NEMA4
Frequency band - ERP	433.050 to 434.040 MHz; ERP<1mW
	434.040 to 434.790 MHz; ERP<10mW
	869.700 to 870.000 MHz; ERP<5mW
	902.000 to 928.000 MHz; ERP<1mW
	2405MHz to 2475MHz 20dBm/100mW
Range Line of sight (guaranteed)	100m
AC power supply	48 - 240 Vac / 18 - 30 Vac (700mA)
DC power supply	8 - 36 Vdc (2A)

*Technical data (continued)*

Specification	Value
Antenna	External
Removable EEPROM	Internal
Signaling	Internal
STOP Outputs (400-900MHz)	1 (6A)
STOP Outputs (2.4GHz)	2 (6A)
Start Output	1 (8A)
Safety Relay	1 (8A)
ON/OFF outputs	13 (8A)
Proportional outputs	Option
CAN Bus Protocols	Option
ON/OFF inputs	Option
Proportional inputs (maximum)	Option
Maximum output current	8A
Response Time:	100ms
Operating Temperature Range	-20 °C to 70 °C (-4 °F to 158 °F)
Storage Temperature Range (24h)	-25°C to 75°C (-13°F to 167°F)
Storage Temperature Range (long periods)	-25°C to 55°C (-13°F to 131°F)
Relative Humidity	max. 95% without condensation
Weight	1350g
Dimensions (LxWxH mm)	245x160x80
Tether Connector	YES (M12 Connector)
Associated Transmitters (400-900 MHz)	Ikargo1, Ikargo2, T70/1, T70/2, T70/1 HALL, T70/2 HALL, IK2, IK3, IK4
Associated Transmitters (2.4 GHz)	Ikore, IkoreB, Icompact, IK2, IK3, IK4
<b>Options</b>	
CAN Bus Protocols	CANopen, Profibus DP, Profinet
ON/OFF outputs	16 (8A)
Proportional Outputs	8 (PWM or Voltage)
Inputs	44 ON/OFF Inputs or 11 Analog Inputs

## Installation

### R70 receiver installation

The below information describes hazards to be aware of during installation and steps to locate the receiver.

#### Risk of shock


Completely shut down the machine when installing the receiver.

Check the power supply and shut off the main switch to disconnect the interface cable between the receiver and the machine's electrical box.


1. Find an easily accessible and clear location with a direct vision between the receiver's antenna and the transmitter's working area.



2. Optional: If it is difficult to achieve direct vision between the receiver's antenna and the transmitter's working area, it is recommended to use an extended antenna in a clear location (only for models that allow an antenna). In areas of high vibration, the use of Shock Absorbers is advised.

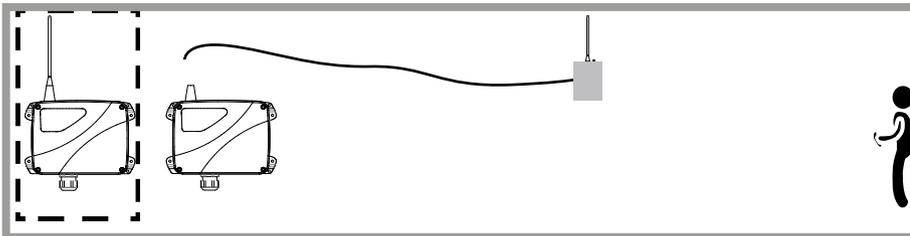

3. Proceed to connect the power supply. Use the connection block diagram provided with the system, where the correspondence between the transmitter maneuvers and the receiver's outputs are detailed.

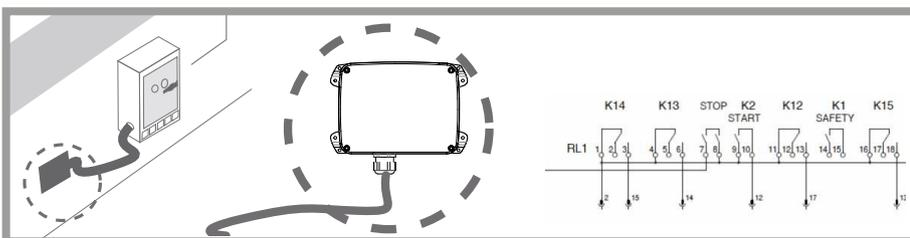

4. Check if the electrical installation and verify if there's an option to connect the neutral or the ground cable. In that case, don't forget to connect the ground cable.


The use of fireproof or flame retardant cables are recommended for the connection.

### Recommended Mechanical Installation

At the time of installing the Receiver on the structure of the machine the following mechanical installation is recommended depending on the type of Receiver Enclosure:

Receiver

Receiver Model	Hole Diameter(mm)	Recommended Screw	Comments
R06	5 mm	DIN 7985 M5x25	
R13, MP20	5 mm	DIN 7985 M5x25	
R11	5 mm	DIN 7985 M5x25	
R70	9 mm	DIN 7985 M8x25	M6 screw with washer could be used as well
MP08, MPCAN	5 mm	DIN 7985 M5x25	
MP15	5 mm	DIN 7985 M5x25	

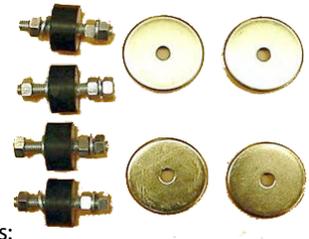

We do recommend to use Shock absorbers and Magnet Kit for the different Receivers:

Recommended Wiring Dimensions

Depending on the Destination country of the Receiver the wiring must comply with the corresponding international approvals. Our recommended wiring solution is an Oil Resistant Flexible Control Cable with International approvals, now with <HAR> approval for use as a Machinery Interconnection Cable.


Wiring section and Number of conductors

AWG	Number of Conductors	Nominal Outer Diameter	Approx weight
1.50 mm <sup>2</sup>	18	17.8mm	518kg/km
1.50 mm <sup>2</sup>	25	21.5mm	730kg/km



Receiver Pin out

R13F Receiver Pinout is as follows.

TM70 R13F Pin out

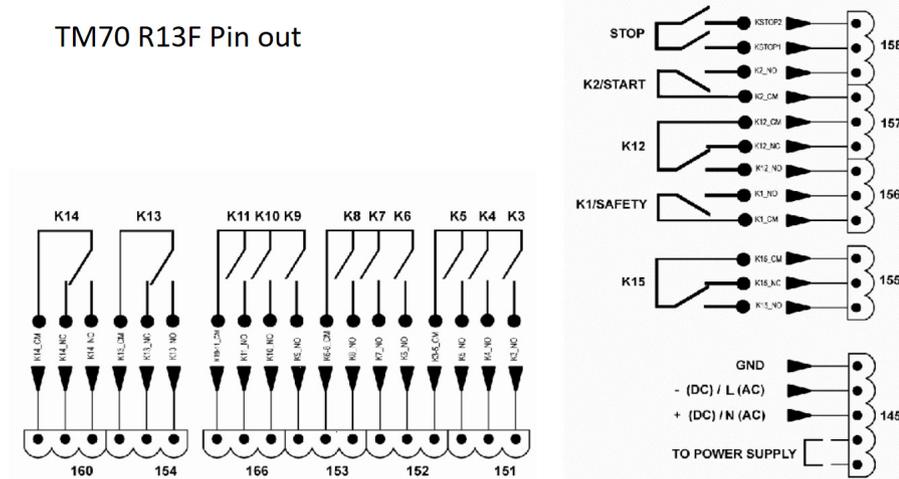

### TM80 R13F Pin out

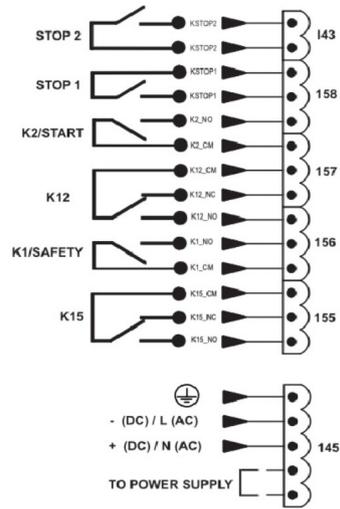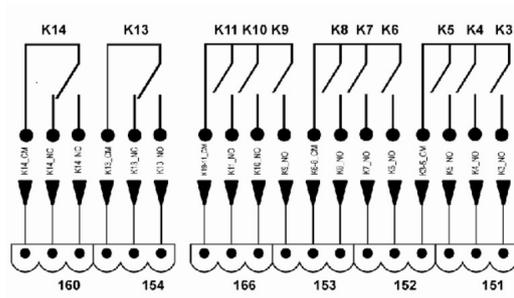

## Troubleshooting

### 400-900MHz Receiver LED troubleshooting

The troubleshooting LEDs are located on the receiver board. Use the following table to identify faults and corrective action.

In order to reach the signaling, the receiver must be accessible, connected, and the screws located on the receiver lid must be unscrewed using the proper screw driver whenever the LEDs are not externally visible.

The LEDs on the receiver board are POWER, HARDOK, SIGNAL, DATA, ID, ORDER and RELAY.

Please do check the following website for further information:

<https://troubleshooting.dps-rct.com/en/customer-service-center>

LED	Characteristic	Description	Action
POWER	Green; pulsing	Receiver is starting up	Wait until start-up process is finished
HARDOK	Green; continuous	Receiver hardware OK	Operate
	Red; pulsing	EEPROM error; data corruption; CAN bus error (if CANERR activates)	Reprogram EEPROM
	Red; other	Electronic board hardware breakdown	Replace device
SIGNAL	LED off	No radio signal detected	-
	LED on + transmitter switched off	Radio channel occupied	Change transmitter's frequency channel
	LED on + DATA switched off	Radio channel occupied by non Danfoss system	Change transmitter's frequency channel
DATA	LED off + SINGAL LED on	Radio error	Replace radio
	Green; pulse	Receiving good frames	OK
ID	LED off + DATA LED on	No valid ID; Danfoss system nearby	If channel not occupied, check chosen ID in the transmitter or reset the receiver
	LED on + SIGNAL LED on + DATA LED on	Valid frames received from the transmitter; correct link	OK
RELAY	Green	STOP relay activated	-
ORDER	Green	LED ON Whenever any output is ON	-
CANERR	Red   slow pulses	CAN Error, physical Layer	Verify Connections
	Red   double pulses	One expansion has Stopped working	Verify Expansion boards
	Red   4 pulses	A Transmitted CAN frame has been lost	N/A
	Red   5 pulses	A Received CAN Frame has been lost	N/A
	Red   continuous	CAN Bus OFF	Verify CAN connections and Status.
CANRUN	Blinking Green	Pre operational Status	The Controller must set the CAN Receiver to operational Status
	Solid Green	Operational Status	OK

### 2.4GHz Receiver LED troubleshooting

The troubleshooting LEDs are located on the receiver board or accessible on the outside. Use the following table to identify faults and corrective action.


In order to reach the internal signaling, the receiver must be accessible, connected and the screws located on the receiver lid must be unscrewed using the proper screw driver whenever the LEDs are not externally visible.

The LEDs on the receiver board are POWER, STATUS, DIAG1, DIAG2, ORDER, RELAY, CANERR and CANRUN in that order.

Please do check the following website for further information:

<https://troubleshooting.dps-rct.com/en/customer-service-center>

LED	Color and frequency	Pulse frequency	Description	Action
POWER	Green   continuous		Switched ON if powered	Check power supply if LED is switched off.
STATUS	Blue   fast pulses		System is starting; establishing connection with radio and EEPROM	Wait
	Blue   continuous		Waiting for transmitter communication, coming from ACTIVE STOP	Release STOP button and press START on the transmitter.
	Blue   slow pulses		Waiting for transmitter communication, coming from PASSIVE STOP	Press Start on the Transmitter
	Green   continuous		Working	Operate
	Red   slow pulses		EEPROM module missing or corrupt	Check EEPROM and reprogram if necessary
	Red   double pulses		Radio communication error	Replace receiver
	Red   triple pulses		Secondary micro error or error between micro communication	Replace receiver
	Red   4 pulses		ERROR	Check DIAG1 LED
	Red   5 pulses		After 15 sec Not all expansion boards have been initialized	Check CAN wiring and Configuration(EEP or Expansion ID#), Check Bus Termination.
	Red   1 Long + 1 short pulse		CAN Signature ERROR	Check Signature in Compliance Block and EEPROM are the same.
DIAG1	Orange   slow pulses		Low tension in the receivers power supply	Supply the system with the correct voltage
	Orange   double pulses		Hardware error	Replace receiver
	Orange   triple pulses			
	Orange   4 pulses			
	Green   slow pulses		Low link quality	N/A
	Green   double pulses		Medium link quality	N/A
	Green   triple pulses		High link quality	N/A
DIAG2	NOT USED	NOT USED	NOT USED	N/A
ORDER	Green   continuous		LED ON Whenever any output is ON	N/A
RELAY	Green   continuous		STOP relay activated	N/A

LED	Color and frequency	Pulse frequency	Description	Action
CANERR	Red   slow pulses		CAN Error, physical Layer	Verify Connections
	Red   double pulses		One expansion has Stopped working	Verify Expansion boards
	Red   4 pulses		A Transmitted CAN frame has been lost	N/A
	Red   5 pulses		A Received CAN Frame has been lost	N/A
	Red   continuous		CAN Bus OFF	Verify CAN connections and Status.
CANRUN	Green   fast pulses		Pre operational Status, Receiver waiting for the controller.	Controller must send the Operational code to the Receiver.
	Green   continuous		Receiver connected to the CAN network and operational	N/A



**Hydro-Gear**

www.hydro-gear.com

**Daikin-Sauer-Danfoss**

www.daikin-sauer-danfoss.com

Explore our solutions at [danfoss.com](http://danfoss.com).

Additional product literature is available at [powersource.danfoss.com](http://powersource.danfoss.com).

**Danfoss  
Power Solutions (US) Company**  
2800 East 13th Street  
Ames, IA 50010, USA  
Phone: +1 515 239 6000

**Danfoss  
Power Solutions GmbH & Co. OHG**  
Krokamp 35  
D-24539 Neumünster, Germany  
Phone: +49 4321 871 0

**Danfoss  
Power Solutions ApS**  
Nordborgvej 81  
DK-6430 Nordborg, Denmark  
Phone: +45 7488 2222

**Danfoss  
Power Solutions Trading  
(Shanghai) Co., Ltd.**  
Building #22, No. 1000 Jin Hai Rd  
Jin Qiao, Pudong New District  
Shanghai, China 201206  
Phone: +86 21 2080 6201

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequent changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.