

Installation Guide

ECL Comfort 210, application A266



1.0 Table of Contents

1.0 Table of Contents	1	6.0 Settings, circuit 2	79
1.1 Important safety and product information.....	2	6.1 Flow temperature.....	79
2.0 Installation	4	6.2 Return limit	80
2.1 Before you start	4	6.3 Flow / power limit	82
2.2 Identifying the system type.....	7	6.4 Control parameters.....	84
2.3 Mounting	10	6.5 Application	89
2.4 Placing the temperature sensors.....	13	6.6 Alarm	92
2.5 Electrical connections.....	15	6.7 Anti-bacteria.....	94
2.6 Inserting the ECL Application Key	26	7.0 Common controller settings.....	96
2.7 Check list	31	7.1 Introduction to 'Common controller settings'	96
2.8 Navigation, ECL Application Key A266	32	7.2 Time & Date	97
3.0 Daily use	42	7.3 Holiday	98
3.1 How to navigate	42	7.4 Input overview	100
3.2 Understanding the controller display	43	7.5 Log	101
3.3 What do the symbols mean?.....	46	7.6 Output override.....	102
3.4 Monitoring temperatures and system components	47	7.7 System	103
3.5 Influence overview	48	8.0 Miscellaneous	105
3.6 Manual control	49	8.1 Frequently asked questions.....	105
3.7 Schedule	50	8.2 Definitions	107
4.0 Settings overview	51		
5.0 Settings, circuit 1	54		
5.1 Flow temperature.....	54		
5.2 Room limit	56		
5.3 Return limit	58		
5.4 Flow / power limit	61		
5.5 Optimization.....	64		
5.6 Control parameters.....	69		
5.7 Application	72		
5.8 Alarm	75		

Installation Guide ECL Comfort 210, application A266

1.1 Important safety and product information

1.1.1 Important safety and product information

This Installation Guide is associated with ECL Application Key A266 (order code no. 087H3800).

The functions can be realized with ECL Comfort 210 and ECL Comfort 310.

Additional documentation for ECL Comfort 210 and 310, modules and accessories is available on <http://den.danfoss.com/>.



Safety Note

To avoid injury of persons and damages to the device, it is absolutely necessary to read and observe these instructions carefully.

Necessary assembly, start-up, and maintenance work must be performed by qualified and authorized personnel only.

The warning sign is used to emphasize special conditions that should be taken into consideration.



This symbol indicates that this particular piece of information should be read with special attention.



As this Installation Guide covers several system types, special system settings will be marked with a system type. All system types are shown in the chapter: 'Identifying your system type'.



°C (degrees Celsius) is a measured temperature value whereas K (Kelvin) is a number of degrees.



The ID no. is unique for the selected parameter.

Example	First digit	Second digit	Last three digits
11174	1	1	174
	-	Circuit 1	Parameter no.
12174	1	2	174
	-	Circuit 2	Parameter no.

If an ID description is mentioned more than once, it means that there are special settings for one or more system types. It will be marked with the system type in question (e.g. 12174 - A266.9).



Disposal Note

This product should be dismantled and its components sorted, if possible, in various groups before recycling or disposal.

Always follow the local disposal regulations.

Installation Guide ECL Comfort 210, application A266

2.0 Installation

2.1 Before you start

The application **A266.1** is very flexible. These are the basic principles:

Heating (circuit 1):

Typically, the flow temperature is adjusted according to your requirements. The flow temperature sensor (S3) is the most important sensor. The desired flow temperature at S3 is calculated in the ECL controller, based on the outdoor temperature (S1). The lower the outdoor temperature, the higher the desired flow temperature.

By means of a week schedule, the heating circuit can be in 'Comfort' or 'Saving' mode (two temperature levels).

The motorized control valve (M2) is opened gradually when the flow temperature is lower than the desired flow temperature and vice versa.

The return temperature (S5) to the district heating supply should not be too high. If so, the desired flow temperature can be adjusted (typically to a lower value), thus resulting in a gradual closing of the motorized control valve.

In boiler-based heating supply the return temperature should not be too low (same adjustment procedure as above).

Furthermore, the return temperature limitation can be dependent of the outdoor temperature. Typically, the lower the outdoor temperature, the higher the accepted return temperature.

If the measured room temperature does not equal the desired room temperature, the desired flow temperature can be adjusted.

The circulation pump, P2, is ON at heat demand or at frost protection.

The heating can be switched OFF when the outdoor temperature is higher than a selectable value.

DHW (circuit 2):

If the measured DHW temperature (S4) is lower than the desired DHW temperature, the motorized control valve (M1) is opened gradually and vice versa.


The return temperature (S6) can be limited to a fixed value.

By means of a week schedule, the DHW circuit can be in 'Comfort' or 'Saving' mode (two temperature levels).

An anti-bacteria function is available for activation on selected days of the week.

If the desired DHW temperature cannot be reached, the heating circuit can be closed gradually to allow more energy to the DHW circuit.

Typical A266.1 application:

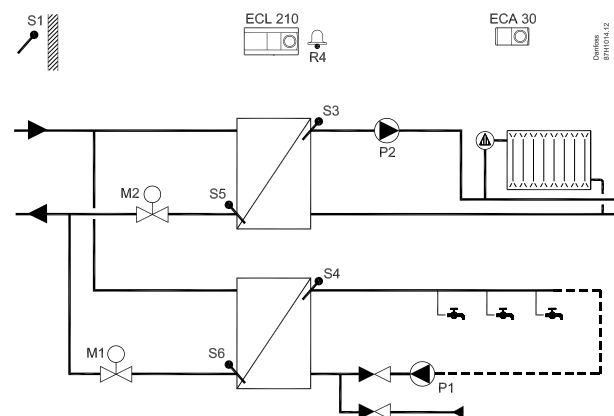

The shown diagram is a fundamental and simplified example and does not contain all components that are necessary in a system.

All named components are connected to the ECL Comfort controller.

List of components:

- S1 Outdoor temperature sensor
- (S2) ECA 30 / room temperature sensor
- S3 Flow temperature sensor, circuit 1
- S4 DHW flow temperature sensor, circuit 2
- S5 Return temperature sensor, circuit 1
- S6 DHW return temperature sensor, circuit 2
- P1 Circulation pump, DHW, circuit 2
- P2 Circulation pump, heating, circuit 1
- M1 Motorized control valve, circuit 2
- M2 Motorized control valve, circuit 1
- R4 Relay output, alarm



The A266.1 application can utilize a connected flow / heat meter to limit the flow / power.

Installation Guide ECL Comfort 210, application A266

The application **A266.2** is very flexible. These are the basic principles:

Heating (circuit 1):

Typically, the flow temperature is adjusted according to your requirements. The flow temperature sensor (S3) is the most important sensor. The desired flow temperature at S3 is calculated in the ECL controller, based on the outdoor temperature (S1). The lower the outdoor temperature, the higher the desired flow temperature.

By means of a week schedule, the heating circuit can be in 'Comfort' or 'Saving' mode (two temperature levels).

The motorized control valve (M2) is opened gradually when the flow temperature is lower than the desired flow temperature and vice versa.

The return temperature (S5) to the district heating supply should not be too high. If so, the desired flow temperature can be adjusted (typically to a lower value), thus resulting in a gradual closing of the motorized control valve.

In boiler-based heating supply the return temperature should not be too low (same adjustment procedure as above).

Furthermore, the return temperature limitation can be dependent of the outdoor temperature. Typically, the lower the outdoor temperature, the higher the accepted return temperature.

If the measured room temperature does not equal the desired room temperature, the desired flow temperature can be adjusted.

The circulation pump, P2, is ON at heat demand or at frost protection.

The heating can be switched OFF when the outdoor temperature is higher than a selectable value.

DHW (circuit 2):

The DHW circuit can operate with or without DHW circulation.

The DHW temperature at S4 is maintained at 'Comfort' level at a DHW tapping (the flow switch (S8) is activated). If the measured DHW temperature (S4) is lower than the desired DHW temperature, the motorized control valve (M1) is opened gradually and vice versa.


The DHW temperature control is in relation to actual supply temperature (S6). If the desired DHW temperature cannot be reached, the heating circuit can be closed gradually to allow more energy to the DHW circuit. In order to compensate for the reaction time, the motorized control valve can be pre-activated at the start of a DHW-tapping. An idle temperature can be maintained at either S6 or S4 when there is no DHW tapping.

The return temperature (S5) can be limited to a fixed value.

By means of a week schedule, the DHW circuit can be in 'Comfort' or 'Saving' mode (two temperature levels).

An anti-bacteria function is available for activation on selected days of the week.

Typical A266.2 application:

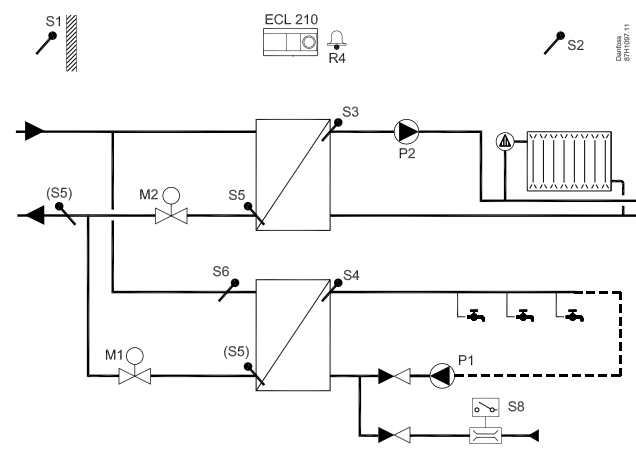

The shown diagram is a fundamental and simplified example and does not contain all components that are necessary in a system.

All named components are connected to the ECL Comfort controller.

List of components:

- S1 Outdoor temperature sensor
- (S2) ECA 30 / room temperature sensor
- S3 Flow temperature sensor, circuit 1
- S4 DHW flow temperature sensor, circuit 2
- S5 Return temperature sensor, circuit 1, circuit 2 or both circuits
- S6 Supply temperature sensor, circuit 2
- S8 Flow switch, DHW tapping, circuit 2
- P1 Circulation pump, DHW, circuit 2
- P2 Circulation pump, heating, circuit 1
- M1 Motorized control valve, circuit 2
- M2 Motorized control valve, circuit 1
- R4 Relay output, alarm



The A266.2 application can utilize a connected flow / heat meter to limit the flow / power.

Installation Guide ECL Comfort 210, application A266

The application **A266.9** is very flexible. These are the basic principles:

Heating (circuit 1):

Typically, the flow temperature is adjusted according to your requirements. The flow temperature sensor (S3) is the most important sensor. The desired flow temperature at S3 is calculated in the ECL controller, based on the outdoor temperature (S1). The lower the outdoor temperature, the higher the desired flow temperature.

By means of a week schedule, the heating circuit can be in 'Comfort' or 'Saving' mode (two temperature levels).

The motorized control valve (M2) is opened gradually when the flow temperature is lower than the desired flow temperature and vice versa.

The return temperature (S5) to the district heating supply should not be too high. If so, the desired flow temperature can be adjusted (typically to a lower value), thus resulting in a gradual closing of the motorized control valve. The secondary return temperature (S2) is used for monitoring. The pressure measuring is used to activate an alarm if the actual pressure is higher or lower than the chosen settings.

In boiler-based heating supply the return temperature should not be too low (same adjustment procedure as above).

Furthermore, the return temperature limitation can be dependent of the outdoor temperature. Typically, the lower the outdoor temperature, the higher the accepted return temperature.

The circulation pump, P2, is ON at heat demand or at frost protection.

The heating can be switched OFF when the outdoor temperature is higher than a selectable value.


DHW (circuit 2):

If the measured DHW temperature (S4) is lower than the desired DHW temperature, the motorized control valve (M1) is opened gradually and vice versa. If the desired DHW temperature cannot be reached, the heating circuit can be closed gradually to allow more energy to the DHW circuit.

The return temperature (S6) can be limited to a fixed value.

By means of a week schedule, the DHW circuit can be in 'Comfort' or 'Saving' mode (two temperature levels).

An anti-bacteria function is available for activation on selected days of the week.

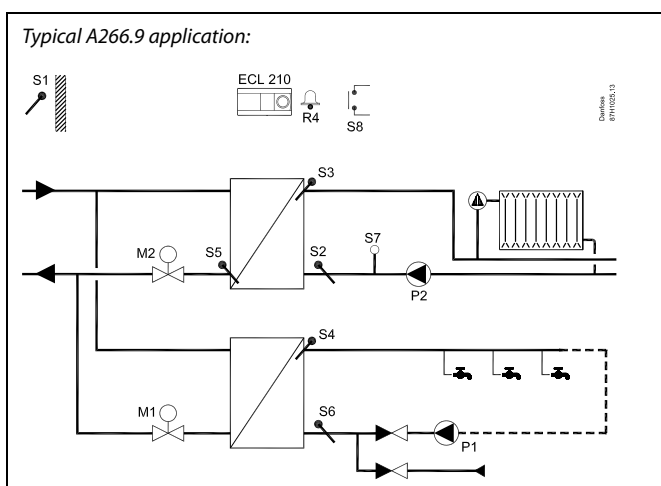

The shown diagram is a fundamental and simplified example and does not contain all components that are necessary in a system.

All named components are connected to the ECL Comfort controller.

List of components:

- S1 Outdoor temperature sensor
- S2 Return temperature sensor, circuit 1, for monitoring
- S3 Flow temperature sensor, circuit 1
- S4 DHW flow temperature sensor, circuit 2
- S5 Return temperature sensor, circuit 1
- S6 Return temperature sensor, circuit 2
- S7 Pressure transmitter, circuit 1
- S8 Alarm input
- P1 Circulation pump, DHW, circuit 2
- P2 Circulation pump, heating, circuit 1
- M1 Motorized control valve, circuit 2
- M2 Motorized control valve, circuit 1
- R4 Relay output, alarm



The controller is pre-programmed with factory settings that are shown in the relevant chapters of this guide.


Installation Guide ECL Comfort 210, application A266

2.2 Identifying the system type

Sketch your application

The ECL Comfort controller series is designed for a wide range of heating, domestic hot-water (DHW) and cooling systems with different configurations and capacities. If your system differs from the diagrams shown here, you may want to make a sketch of the system about to be installed. This makes it easier to use the Installation Guide, which will guide you step-by-step from installation to final adjustments before the end-user takes over.


The ECL Comfort controller is a universal controller that can be used for various systems. Based on the shown standard systems, it is possible to configure additional systems. In this chapter you find the most frequently used systems. If your system is not quite as shown below, find the diagram which has the best resemblance with your system and make your own combinations.

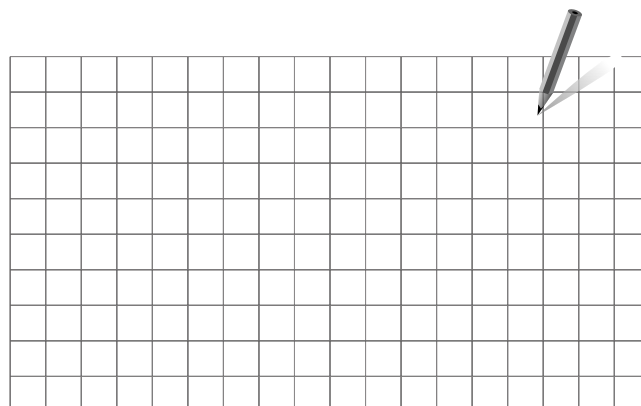

The circulation pump(s) in heating circuit(s) can be placed in the flow as well as the return. Place the pump according to the manufacturer's specification.

A266.1a


Indirectly connected heating and DHW system (typically district heating):

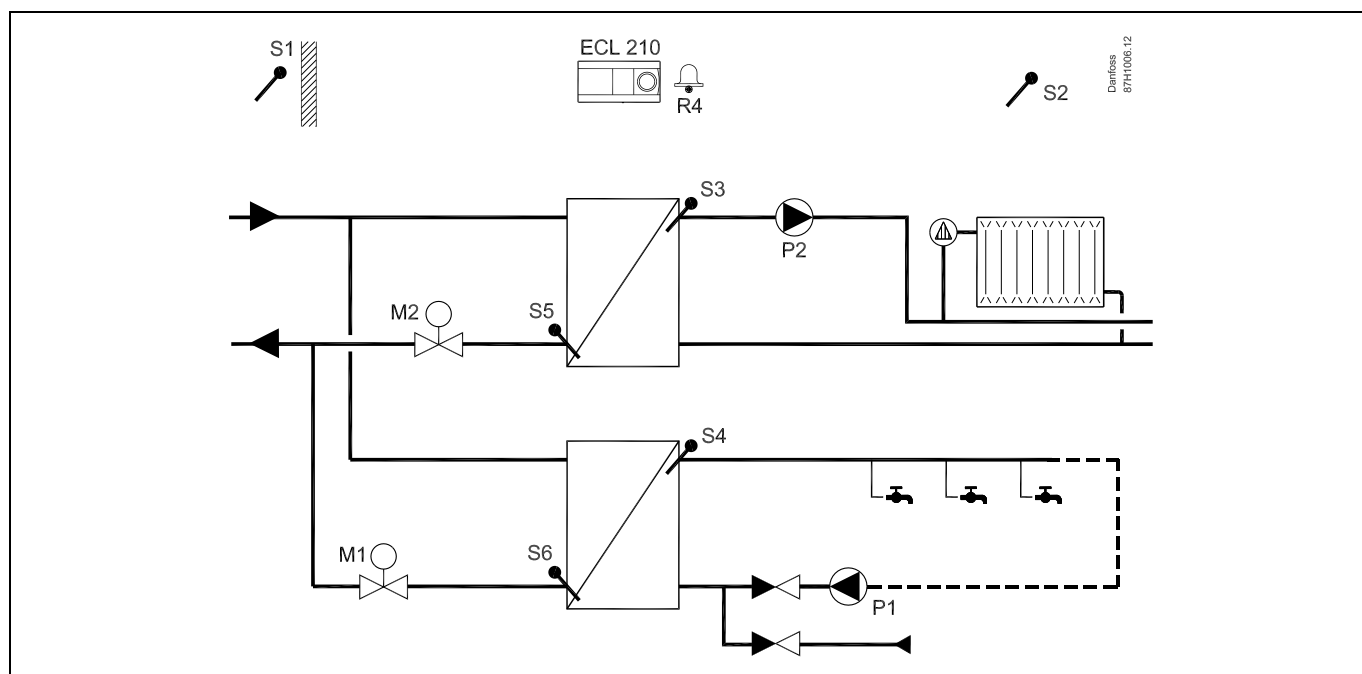

Installation Guide ECL Comfort 210, application A266


A266.1b

Directly connected heating and indirectly connected DHW system:

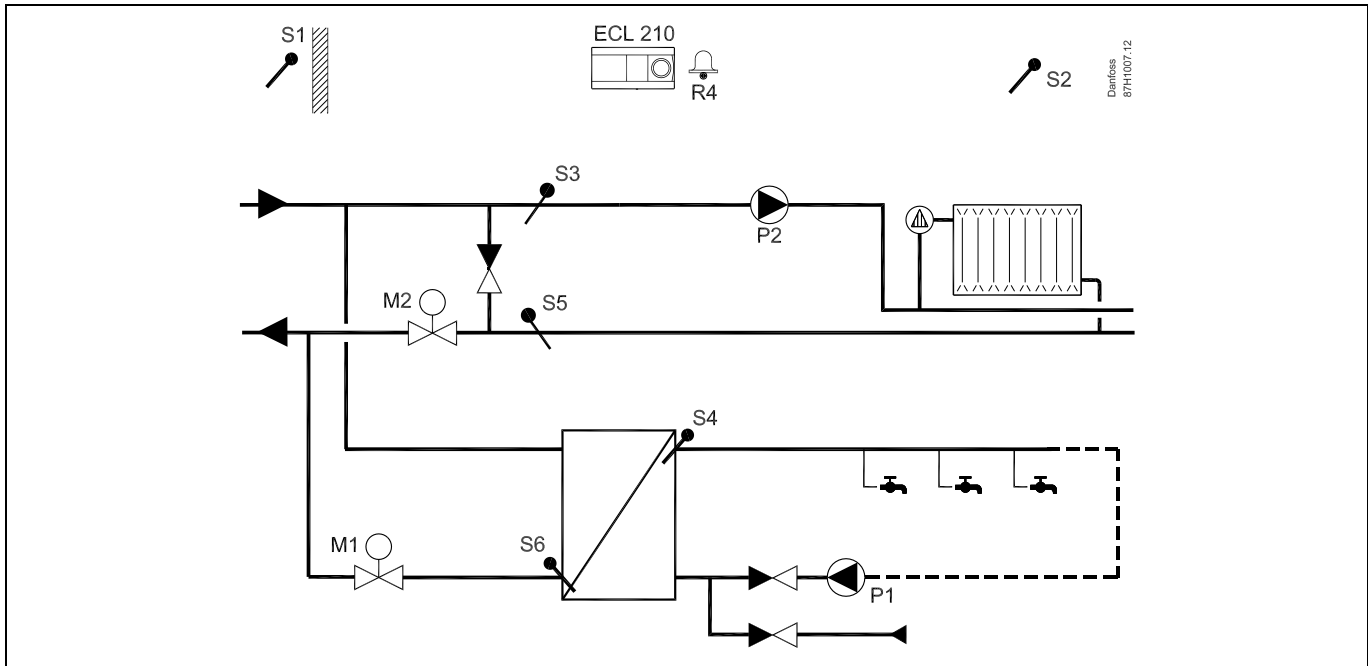

A266.2


Indirectly connected heating and DHW system with flow switch:

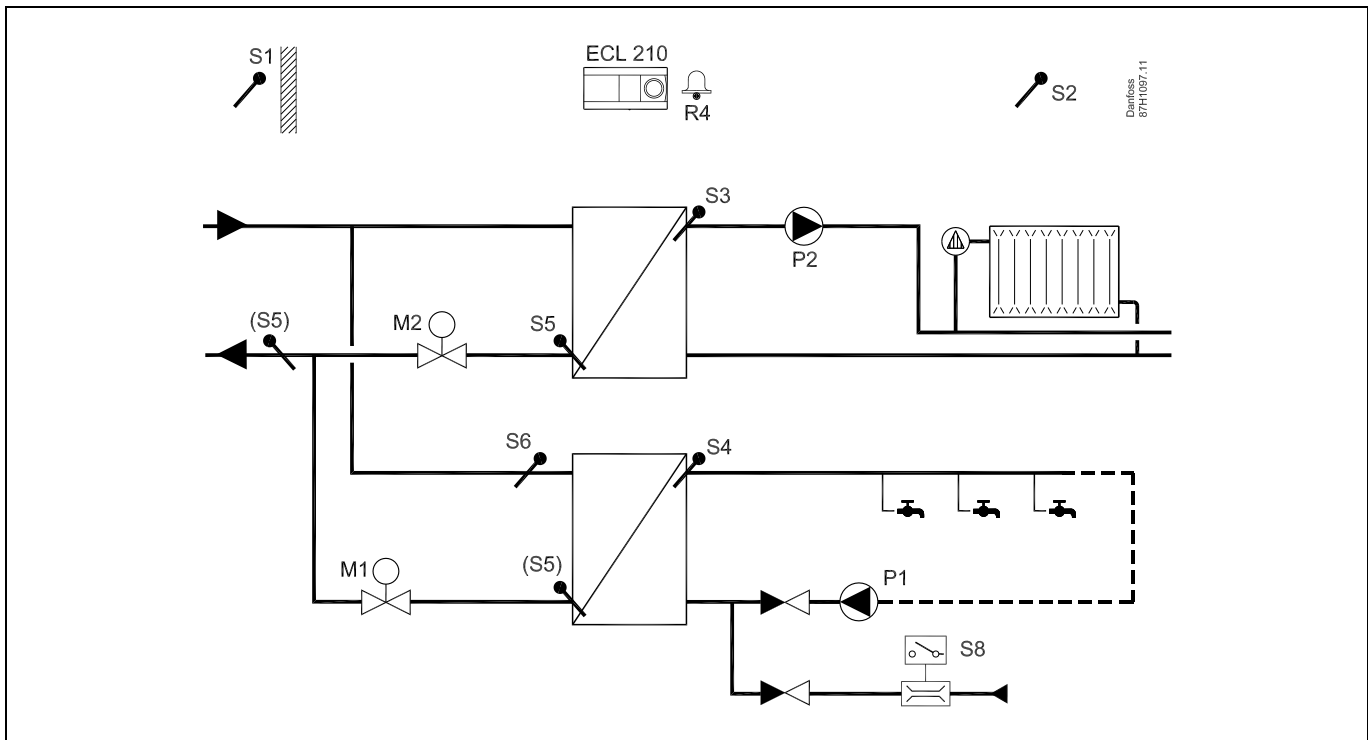

Installation Guide ECL Comfort 210, application A266

A266.9

Indirectly connected heating and DHW system with pressure transmitter and universal alarm switch:

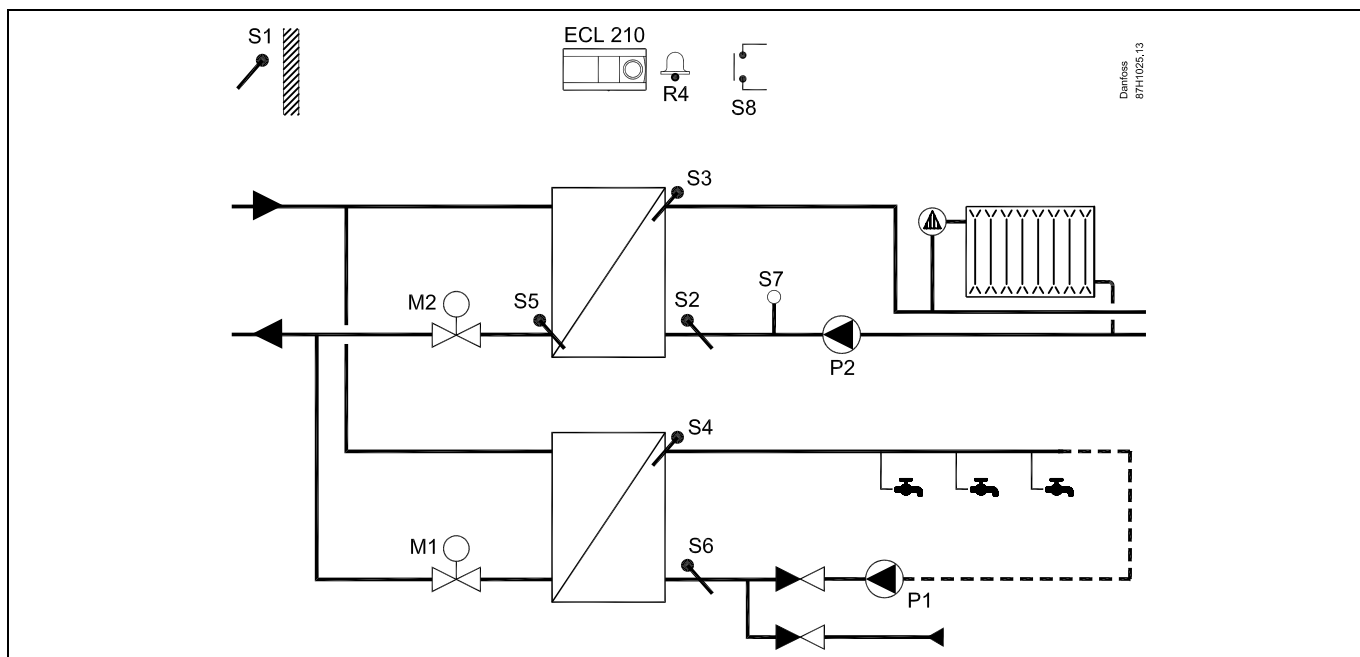

Installation Guide ECL Comfort 210, application A266

2.3 Mounting

2.3.1 Mounting the ECL Comfort controller

For easy access, you should mount the ECL Comfort controller near the system. Select one of the following methods using the same base part (code no. 087H3220):


- Mounting on a wall
- Mounting on a DIN rail (35 mm)

ECL Comfort 210 can be mounted in an ECL Comfort 310 base part (for future upgrade).

Screws, PG cable glands and rawlplugs are not supplied.


Locking the ECL Comfort controller

In order to fasten the ECL Comfort controller to its base part, secure the controller with the locking pin.

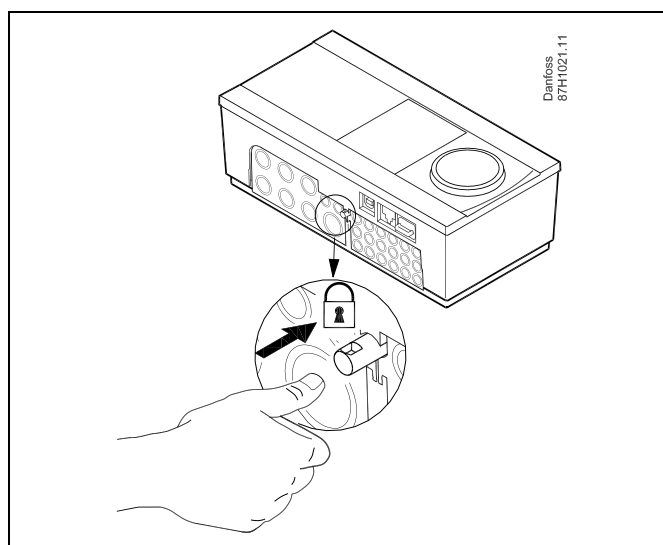

Mounting on a wall


Mount the base part on a wall with a smooth surface. Establish the electrical connections and position the controller in the base part. Secure the controller with the locking pin.

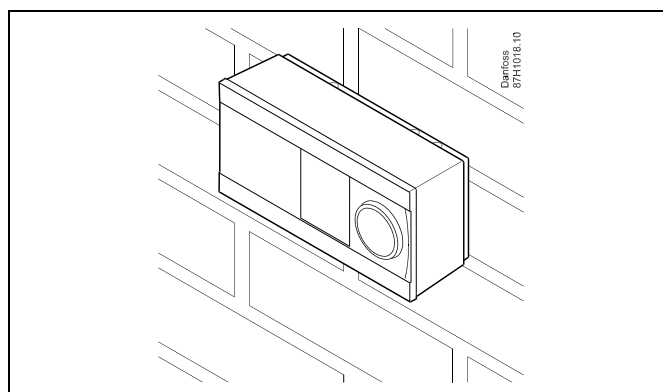

Installation Guide ECL Comfort 210, application A266


Mounting on a DIN rail (35 mm)

Mount the base part on a DIN rail. Establish the electrical connections and position the controller in the base part. Secure the controller with the locking pin.

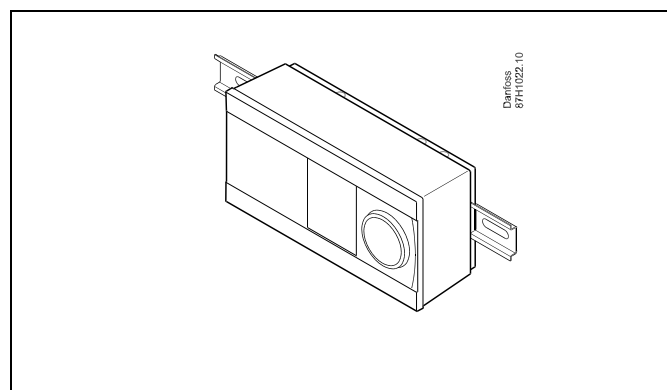

Dismounting the ECL Comfort controller

In order to remove the controller from the base part, pull out the locking pin by means of a screwdriver. The controller can now be removed from the base part.

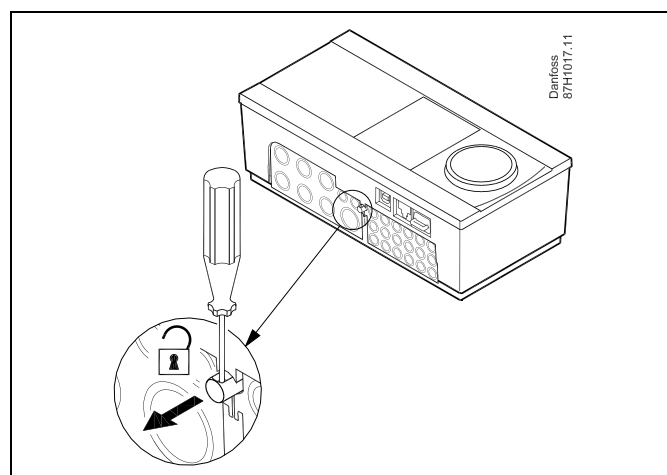

Installation Guide ECL Comfort 210, application A266

2.3.2 Mounting the Remote Control Units ECA 30/31


Select one of the following methods:

- Mounting on a wall, ECA 30 / 31
- Mounting in a panel, ECA 30

Screws and rawlplugs are not supplied.

Mounting on a wall


Mount the base part of the ECA 30 / 31 on a wall with a smooth surface. Establish the electrical connections. Place the ECA 30 / 31 in the base part.

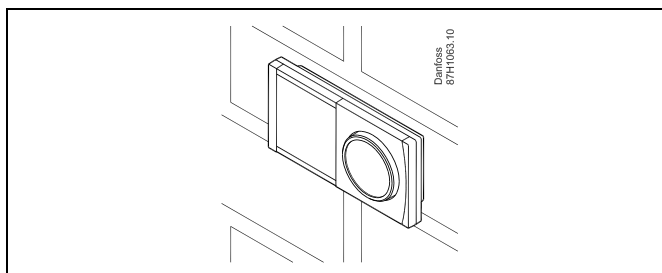

Mounting in a panel

Mount the ECA 30 in a panel using the ECA 30 frame kit (order code no. 087H3236). Establish the electrical connections. Secure the frame with the clamp. Place the ECA 30 in the base part. The ECA 30 can be connected to an external room temperature sensor.

The ECA 31 must not be mounted in a panel if the humidity function is to be used.

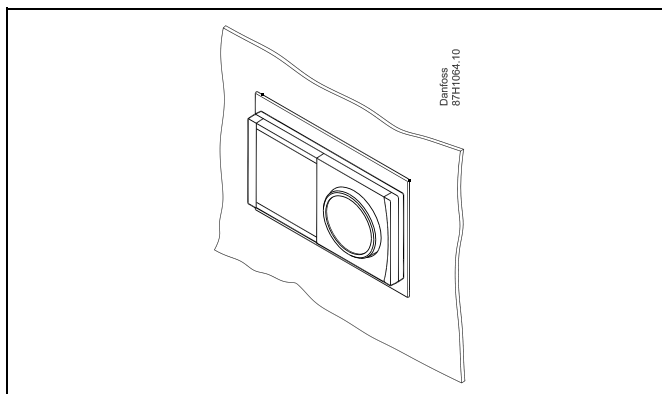

Installation Guide ECL Comfort 210, application A266

2.4 Placing the temperature sensors

2.4.1 Placing the temperature sensors

It is important that the sensors are mounted in the correct position in your system.

The temperature sensor mentioned below are sensors used for the ECL Comfort 210 and 310 series which not all will be needed for your application!

Outdoor temperature sensor (ESMT)

The outdoor sensor should be mounted on that side of the building where it is less likely to be exposed to direct sunshine. It should not be placed close to doors, windows or air outlets.


Flow temperature sensor (ESMU, ESM-11 or ESMC)

Place the sensor max. 15 cm from the mixing point. In systems with heat exchanger, Danfoss recommends that the ESMU-type to be inserted into the exchanger flow outlet.

Make sure that the surface of the pipe is clean and even where the sensor is mounted.


Return temperature sensor (ESMU, ESM-11 or ESMC)

The return temperature sensor should always be placed so that it measures a representative return temperature.

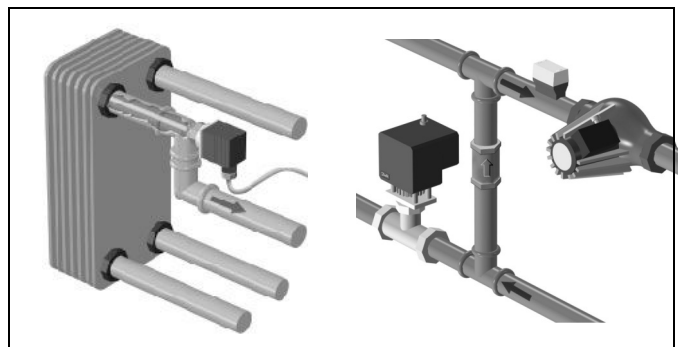

Room temperature sensor (ESM-10, ECA 30 / 31 Remote Control Unit)

Place the room sensor in the room where the temperature is to be controlled. Do not place it on outside walls or close to radiators, windows or doors.

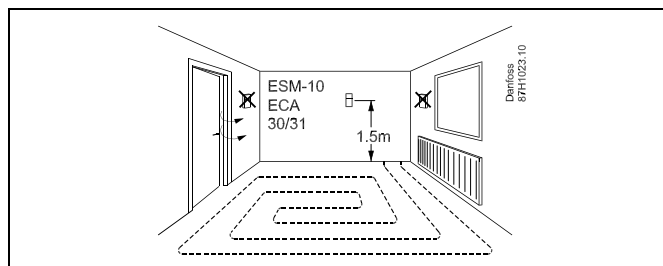

Boiler temperature sensor (ESMU, ESM-11 or ESMC)

Place the sensor according to the boiler manufacturer's specification.

Air duct temperature sensor (ESMB-12 or ESMU types)

Place the sensor so that it measures a representative temperature.

DHW temperature sensor (ESMU or ESMB-12)

Place the DHW temperature sensor according to the manufacturer's specification.

Slab temperature sensor (ESMB-12)

Place the sensor in a protection tube in the slab.




ESM-11: Do not move the sensor after it has been fastened in order to avoid damage to the sensor element.

Installation Guide ECL Comfort 210, application A266

Pt 1000 temperature sensor (IEC 751B, 1000 Ω / 0 °C)

Relationship between temperature and ohmic value:

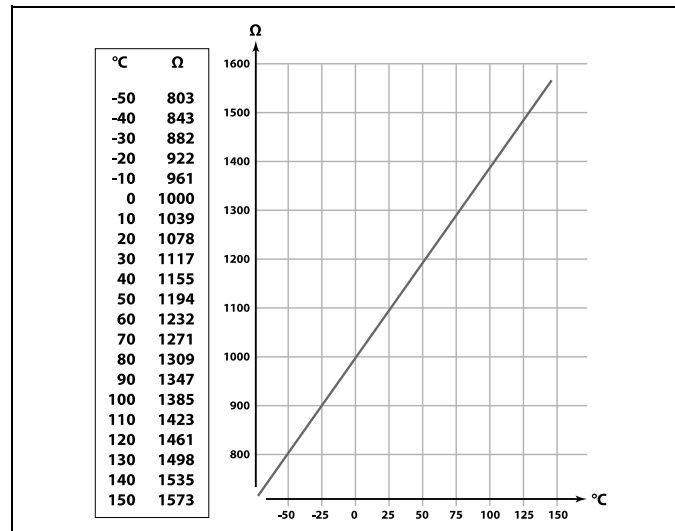


Installation Guide ECL Comfort 210, application A266

2.5 Electrical connections

2.5.1 Electrical connections 230 V a.c. in general


The common ground terminal is used for connection of relevant components (pumps, motorized control valves).

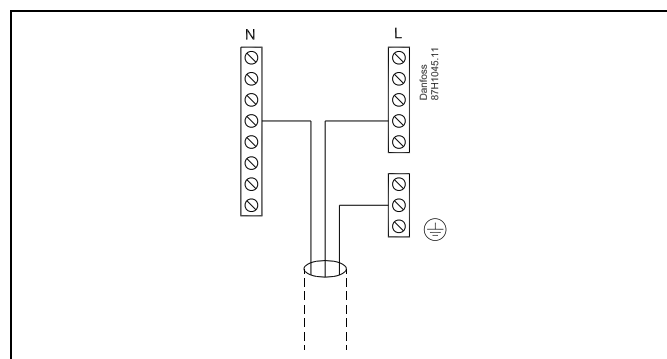

Installation Guide ECL Comfort 210, application A266

2.5.2 Electrical connections, 230 V a.c., power supply, pumps, motorized control valves etc.

Application A266.1 / A266.2 / A266.9

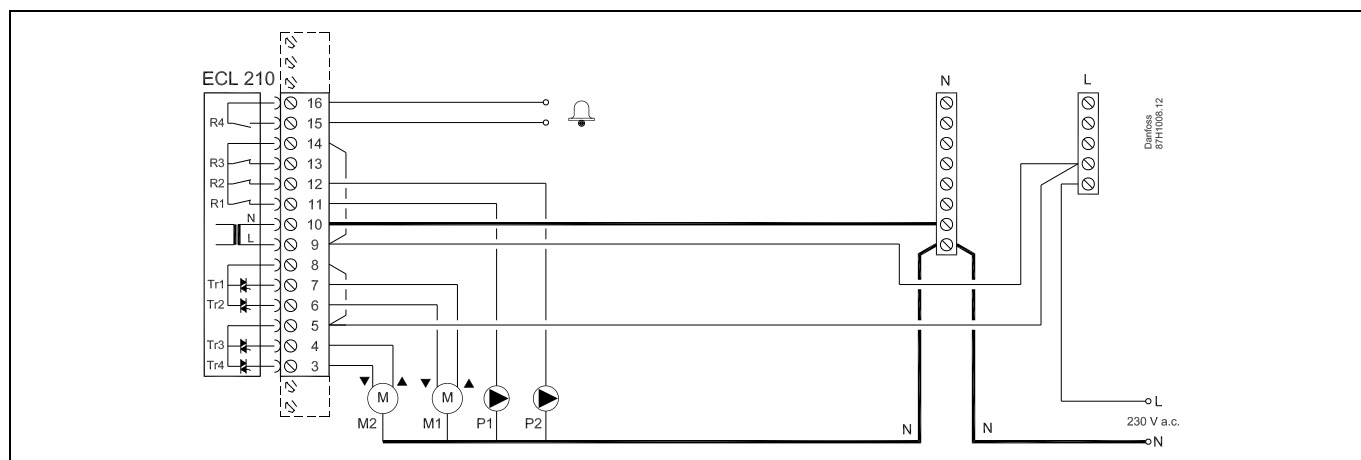

Terminal	Description	Max. load
16	Alarm	4 (2) A / 230 V a.c.*
15		
14	Phase for circulation pump	
13	Do not use	
12	P2 Circulation pump ON / OFF, circuit 1	4 (2) A / 230 V a.c.*
11	P1 Circulation pump ON / OFF, circuit 2	4 (2) A / 230 V a.c.*
10	Supply voltage 230 V a.c. - neutral (N)	
9	Supply voltage 230 V a.c. - live (L)	
8	M1 Phase for motorized control valve output, circuit 2	
7	M1 Actuator - opening	0.2 A / 230 V a.c.
6	M1 Actuator - closing	0.2 A / 230 V a.c.
5	M2 Phase for motorized control valve output, circuit 1	
4	M2 Actuator - opening	0.2 A / 230 V a.c.
3	M2 Actuator - closing	0.2 A / 230 V a.c.

* Relay contacts: 4 A for ohmic load, 2 A for inductive load

Factory established jumpers:

5 to 8, 9 to 14, L to 5 and L to 9, N to 10




Wire cross section: 0.5 - 1.5 mm²
 Incorrect connection can damage the electronic outputs.
 Max. 2 x 1.5 mm² wires can be inserted into each screw terminal.


Installation Guide ECL Comfort 210, application A266

2.5.3 Electrical connections, safety thermostats, 230 V a.c. or 24 V a.c.

With safety thermostat, circuit 1:

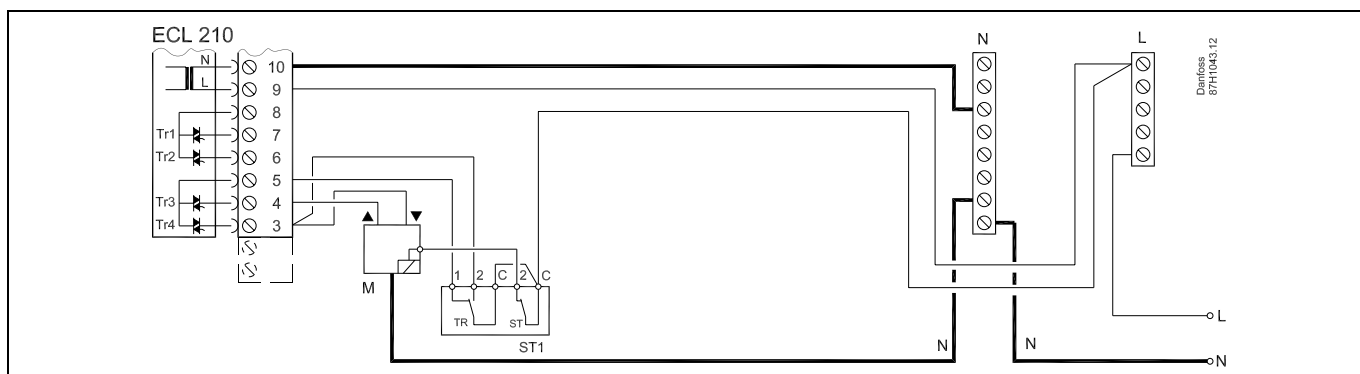

With safety thermostat, circuit 2:

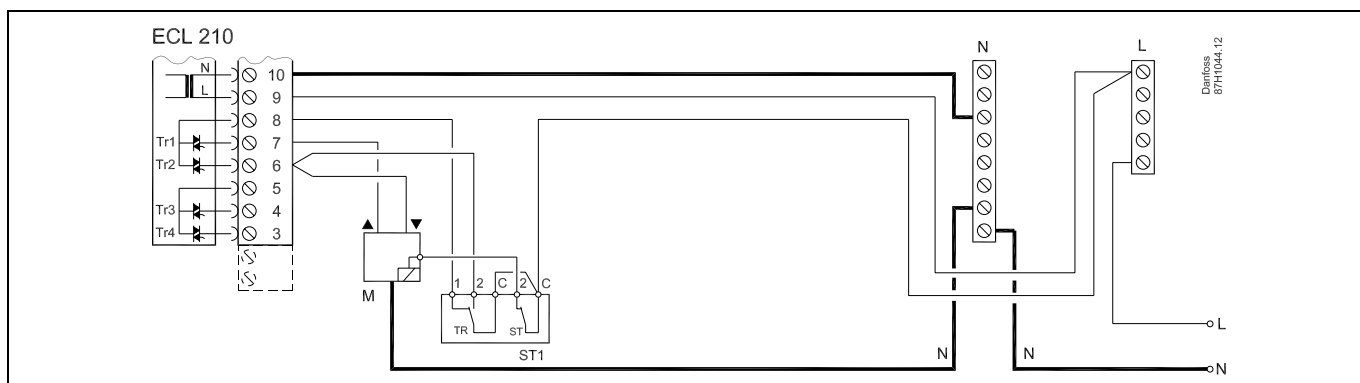


Wire cross section: 0.5 - 1.5 mm²
 Incorrect connection can damage the electronic outputs.
 Max. 2 x 1.5 mm² wires can be inserted into each screw terminal.

Installation Guide ECL Comfort 210, application A266

2.5.4 Electrical connections, 24 V a.c., power supply, pumps, motorized valves etc.

Application A266.1 / A266.2 / A266.9

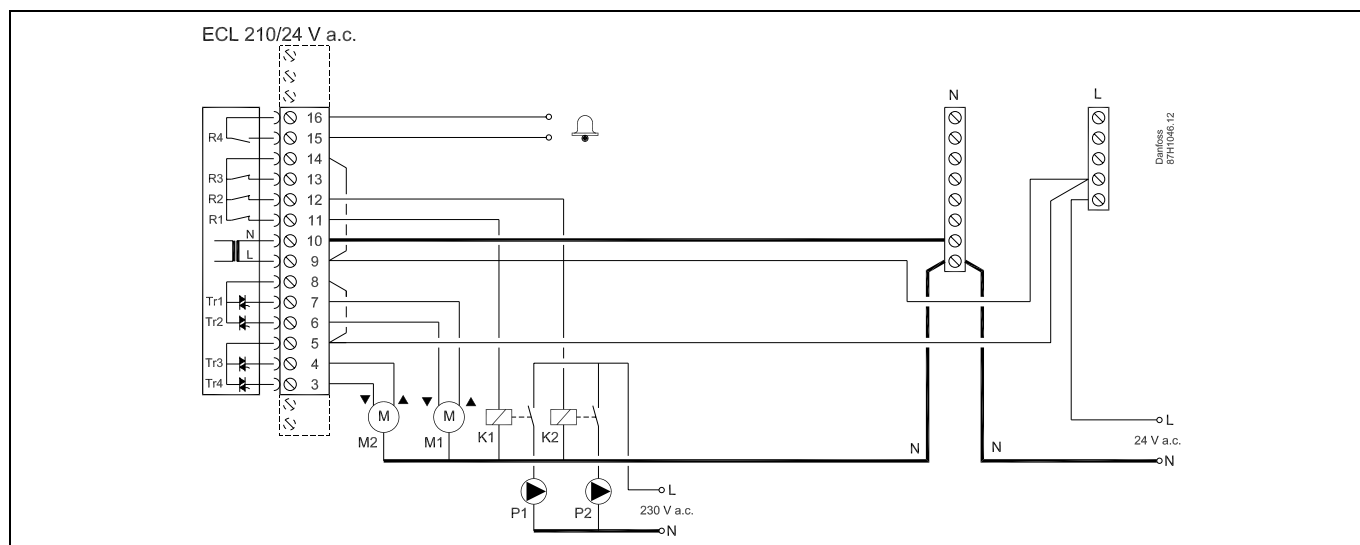

Terminal	Description	Max. load
16	Alarm	4 (2) A / 24 V a.c.*
15		
14	Phase for circulation pump	
13	Do not use	
12	K2 Relay for 230 V a.c. circulation pump, circuit 1	4 (2) A / 24 V a.c.*
11	K1 Relay for 230 V a.c. circulation pump, circuit 2	4 (2) A / 24 V a.c.*
10	Supply voltage 24 V a.c. - neutral (N)	
9	Supply voltage 24 V a.c. - live (L)	
8	M1 Phase for motorized control valve output, circuit 2	
7	M1 Actuator - opening	1 A / 24 V a.c.
6	M1 Actuator - closing	1 A / 24 V a.c.
5	M2 Phase for motorized control valve output, circuit 1	
4	M2 Actuator - opening	1 A / 24 V a.c.
3	M2 Actuator - closing	1 A / 24 V a.c.
* Relay contacts: 4 A for ohmic load, 2 A for inductive load Auxilliary relays K1 and K2 have a 24 V a.c. coil voltage		

Factory established jumpers:

5 to 8, 9 to 14, L to 5 and L to 9, N to 10



Do not connect 230 V a.c. powered components to a 24 V a.c. power supplied controller directly. Use auxilliary relays (K) to separate 230 V a.c. from 24 V a.c.



Wire cross section: 0.5 - 1.5 mm²

Incorrect connection can damage the electronic outputs.

Max. 2 x 1.5 mm² wires can be inserted into each screw terminal.

Installation Guide ECL Comfort 210, application A266


2.5.5 Electrical connections, Pt 1000 temperature sensors and signals

A266.1:


Terminal	Sensor / description	Type (recomm.)
29 and 30	S1 Outdoor temperature sensor*	ESMT
28 and 30	S2 Room temperature sensor**, circuit 1	ESM-10
27 and 30	S3 Flow temperature sensor***, circuit 1	ESM-11 / ESMB / ESMC / ESMU
26 and 30	S4 Flow temperature sensor***, circuit 2	ESM-11 / ESMB / ESMC / ESMU
25 and 30	S5 Return temperature sensor, circuit 1	ESM-11 / ESMB / ESMC / ESMU
24 and 30	S6 Return temperature sensor, circuit 2	ESM-11 / ESMB / ESMC / ESMU
23 and 30	S7 Flow / heat meter	
22 and 30	S8 Room temperature sensor**, circuit 2	ESM-10

- * If the outdoor temperature sensor is not connected or the cable is short-circuited, the controller assumes that the outdoor temperature is 0 (zero) °C.
- ** Only for room temperature sensor connection. The room temperature signal can also be available from a Remote Control Unit (ECA 30 / 31). See 'Electrical connections, ECA 30 / 31'.
- *** The flow temperature sensor must always be connected in order to have the desired functionality. If the sensor is not connected or the cable is short-circuited, the motorized control valve closes (safety function).

Factory established jumper:
30 to common terminal.

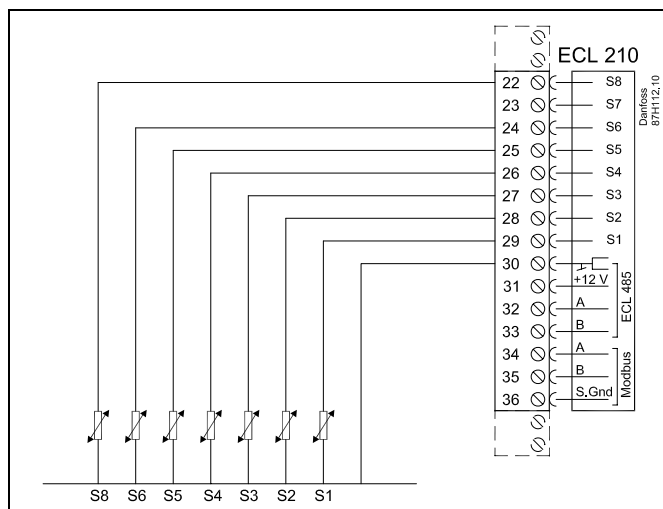

Connection of flow / heat meter with pulse signal

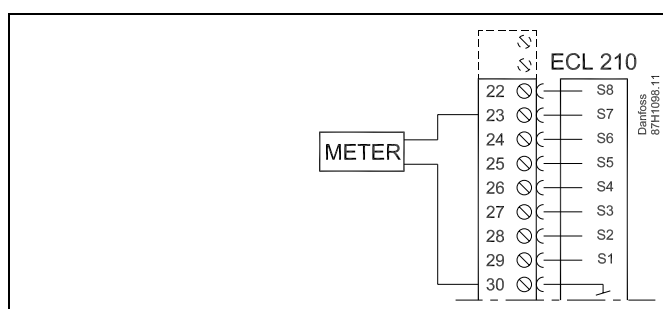

Wire cross section for sensor connections: Min. 0.4 mm².
Total cable length: Max. 200 m (all sensors incl. internal ECL 485 communication bus)
Cable lengths of more than 200 m may cause noise sensibility (EMC).


Installation Guide ECL Comfort 210, application A266

A266.2:


Terminal	Sensor / description	Type (recomm.)
29 and 30	S1 Outdoor temperature sensor*	ESMT
28 and 30	S2 Room temperature sensor**	ESM-10
27 and 30	S3 Flow temperature sensor***, heating	ESM-11 / ESMB / ESMC / ESMU
26 and 30	S4 Flow temperature sensor***, DHW	ESM-11 / ESMB / ESMC / ESMU
25 and 30	S5 Return temperature sensor, heating or	ESM-11 / ESMB / ESMC / ESMU
	(S5) Return temperature sensor, DHW or	ESM-11 / ESMB / ESMC / ESMU
	(S5) Common return temperature sensor	ESM-11 / ESMB / ESMC / ESMU
24 and 30	S6 Supply temperature sensor	ESM-11 / ESMB / ESMC / ESMU
23 and 30	S7 Flow / heat meter	
22 and 30	S8 Flow switch	

- * If the outdoor temperature sensor is not connected or the cable is short-circuited, the controller assumes that the outdoor temperature is 0 (zero) °C.
- ** Only for room temperature sensor connection. The room temperature signal can also be available from a Remote Control Unit (ECA 30 / 31). See 'Electrical connections, ECA 30 / 31'.
- *** The flow temperature sensor must always be connected in order to have the desired functionality. If the sensor is not connected or the cable is short-circuited, the motorized control valve closes (safety function).


Factory established jumper:
30 to common terminal.

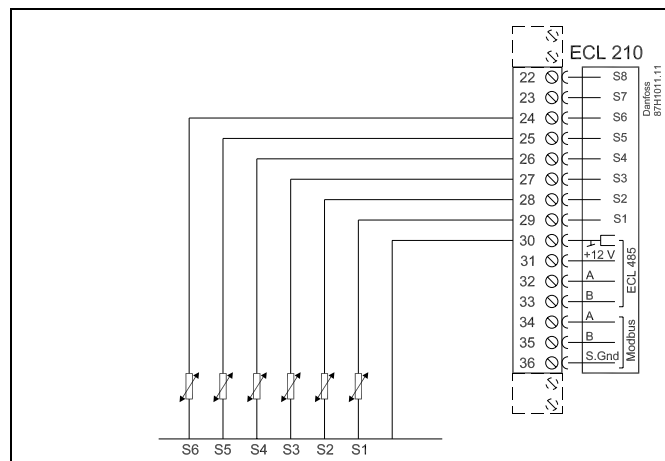

Connection of flow / heat meter with pulse signal

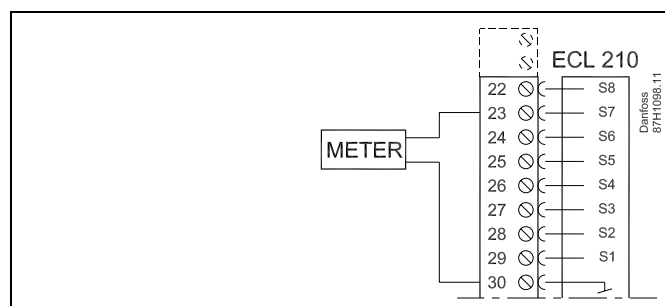

Connection of flow switch

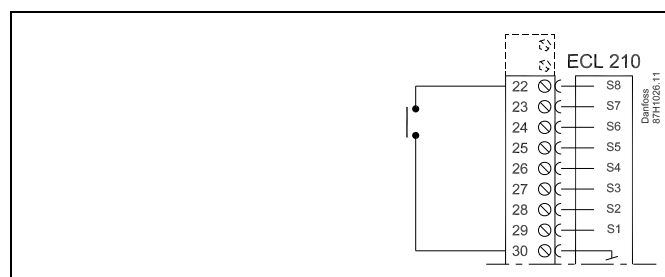



Wire cross section for sensor connections: Min. 0.4 mm².
Total cable length: Max. 200 m (all sensors incl. internal ECL 485 communication bus)
Cable lengths of more than 200 m may cause noise sensibility (EMC).


Installation Guide ECL Comfort 210, application A266

A266.9:


Terminal	Sensor / description	Type (recomm.)
29 and 30	S1 Outdoor temperature sensor*	ESMT
28 and 30	S2 Return temperature sensor, heating (secondary side)	ESM-11 / ESMB / ESMC / ESMU
27 and 30	S3 Flow temperature sensor**, heating	ESM-11 / ESMB / ESMC / ESMU
26 and 30	S4 Flow temperature sensor**, DHW	ESM-11 / ESMB / ESMC / ESMU
25 and 30	S5 Return temperature sensor, heating	ESM-11 / ESMB / ESMC / ESMU
24 and 30	S6 Return temperature sensor, DHW	ESM-11 / ESMB / ESMC / ESMU
23 and 30	S7 Pressure transmitter 0-10 V or 4-20 mA	
22 and 30	S8 Alarm switch	

- * If the outdoor temperature sensor is not connected or the cable is short-circuited, the controller assumes that the outdoor temperature is 0 (zero) °C.
- ** The flow temperature sensor must always be connected in order to have the desired functionality. If the sensor is not connected or the cable is short-circuited, the motorized control valve closes (safety function).


Factory established jumper:
30 to common terminal.

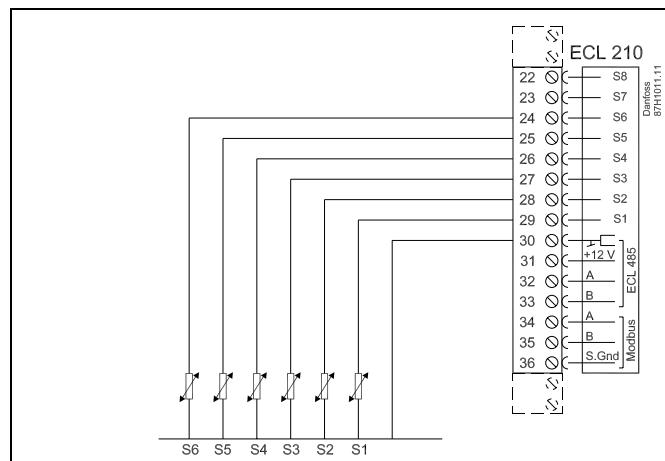

Connection of alarm switch

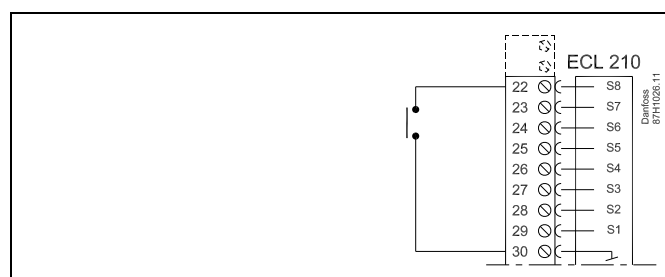


Connection of a pressure transmitter with 0-10 V output

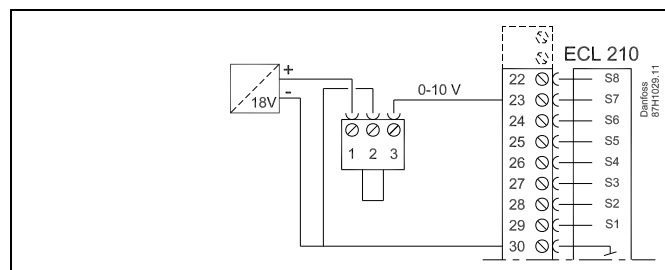

Installation Guide ECL Comfort 210, application A266

Connection of a pressure transmitter with 4-20 mA output

The 4-20 mA signal is converted to a 0-10 V signal by means of the 500 ohm resistor.

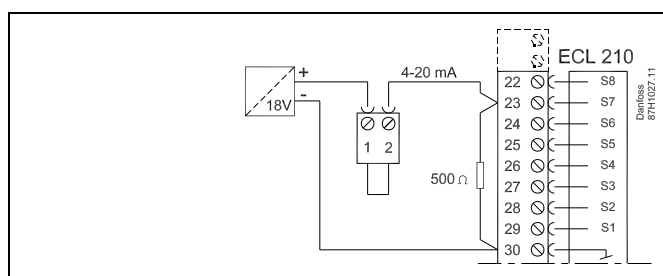

Wire cross section for sensor connections: Min. 0.4 mm².

Total cable length: Max. 200 m (all sensors incl. internal ECL 485 communication bus)

Cable lengths of more than 200 m may cause noise sensibility (EMC).

Installation Guide ECL Comfort 210, application A266

2.5.6 Electrical connections, ECA 30 / 31


Terminal ECL 210	Terminal ECA 30 / 31	Description	Type (recomm.)
30	4	Twisted pair	Cable 2 x twisted pair
31	1		
32	2	Twisted pair	
33	3		
	4	Ext. room temperature sensor*	ESM-10
	5		

* After an external room temperature sensor has been connected, ECA 30 / 31 must be repowered.

The communication to the ECA 30 / 31 must be set up in the ECL Comfort controller in 'ECA addr'.

The ECA 30 / 31 must be set up accordingly.

After application setup the ECA 30 / 31 is ready after 2–5 min. A progress bar in the ECA 30 / 31 is displayed.

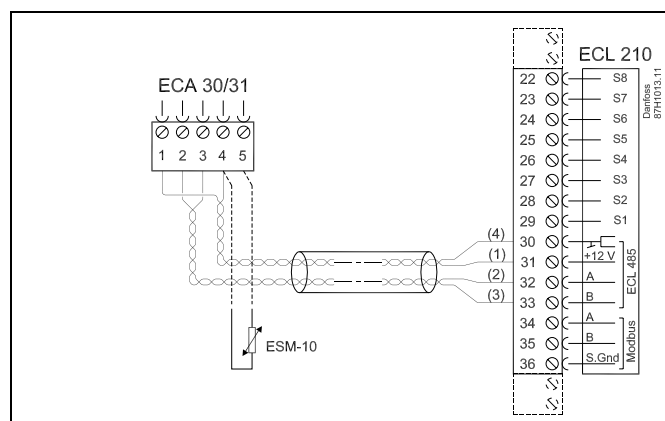


Total cable length: Max. 200 m (all sensors incl. internal ECL 485 communication bus).
Cable lengths of more than 200 m may cause noise sensibility (EMC).

2.5.7 Electrical connections, master / slave systems

The controller can be used as master or slave in master / slave systems via the internal ECL 485 communication bus (2 x twisted pair cable).

The ECL 485 communication bus is not compatible with the ECL bus in ECL Comfort 110, 200, 300 and 301!

Terminal	Description	Type (recomm.)
30	Common terminal	Cable 2 x twisted pair
31	+12 V, ECL 485 communication bus	
32	A, ECL 485 communication bus	
33	B, ECL 485 communication bus	

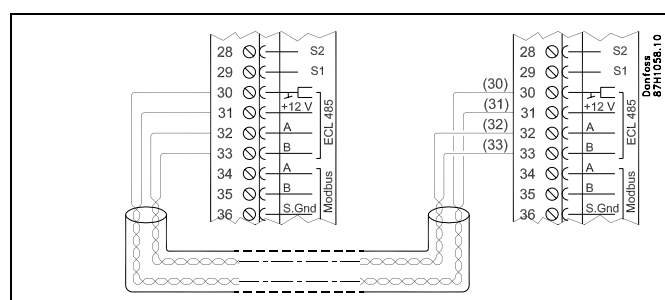

Total cable length: Max. 200 m (all sensors incl. internal ECL 485 communication bus).
Cable lengths of more than 200 m may cause noise sensibility (EMC).

Installation Guide ECL Comfort 210, application A266

2.6 Inserting the ECL Application Key



2.6.1 Inserting the ECL Application Key

The ECL Application Key contains

- the application and its subtypes,
- currently available languages,
- factory settings: e.g. schedules, desired temperatures, limitation values etc. It is always possible to recover the factory settings,
- memory for user settings: special user / system settings.

After having powered-up the controller, different situations might be existing:

1. The controller is new from the factory, the ECL Application Key is not inserted.
2. The controller already runs an application. The ECL Application Key is inserted, but the application needs to be changed.
3. A copy of the controllers settings is needed for configuring another controller.

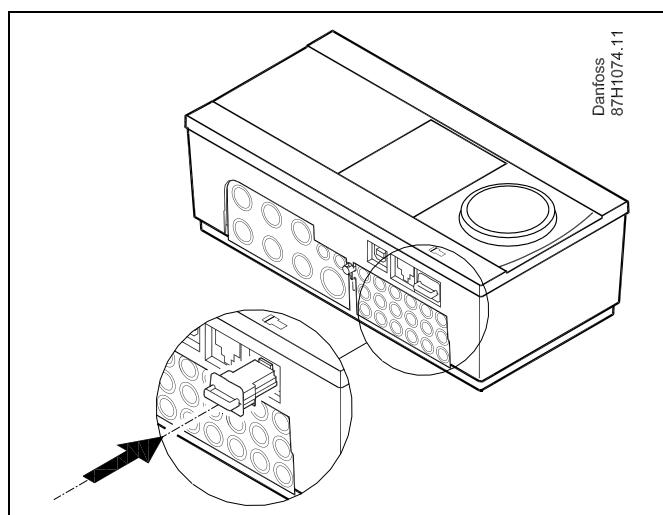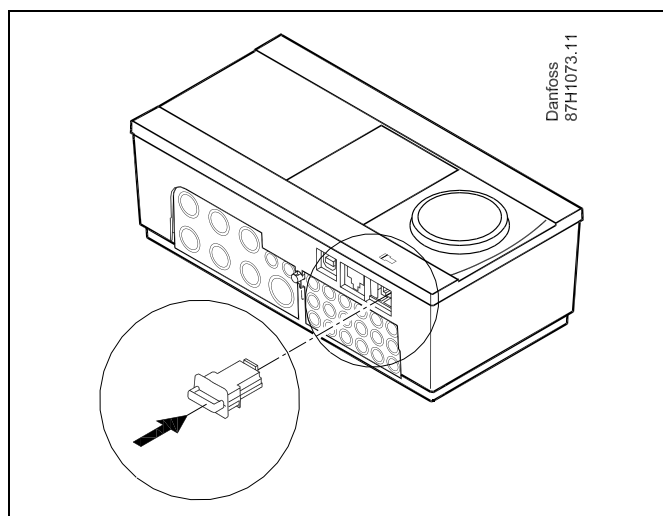

User settings are, among others, desired room temperature, desired DHW temperature, schedules, heat curve, limitation values etc.

System settings are, among others, communication set-up, display brightness etc.

Installation Guide ECL Comfort 210, application A266

Application Key: Situation 1

The controller is new from the factory, the ECL Application Key is not inserted.

An animation for the ECL Application Key insertion is displayed. Insert the Application Key .

Application Key name and Version is indicated (example: A266 Ver. 1.03).

If the ECL Application Key is not suitable for the controller, a "cross" is displayed over the ECL Application Key-symbol.

Action:	Purpose:	Examples:
	Select language	
	Confirm	
	Select application	
	Confirm with 'Yes'	
	Set 'Time & Date'	
	Turn and push the dial to select and change 'Hours', 'Minutes', 'Date', 'Month' and 'Year'.	
	Choose "Next"	
	Confirm with 'Yes'	
	Go to 'Aut. daylight'	
	Choose whether 'Aut. daylight' * should be active or not	YES or NO

* 'Aut. daylight' is the automatic changeover between summer and winter time.

Depending on the contents of the ECL Application Key, procedure A or B is taking place:

A

The ECL Application key contains factory settings:

The controller reads / transfers data from the ECL Application Key to ECL controller.

The application is installed, and the controller resets and starts up.

B

The ECL Application key contains changed system settings:

Push the dial repeatedly.

'NO': Only factory settings from the ECL Application Key will be copied to the controller.

'YES*': Special system settings (differing from the factory settings) will be copied to the controller.

If the key contains user settings:


Push the dial repeatedly.

'NO': Only factory settings from the ECL Application Key will be copied to the controller.

'YES*': Special user settings (differing from the factory settings) will be copied to the controller.

* If 'YES' cannot be chosen, the ECL Application Key does not contain any special settings.

Choose 'Start copying' and confirm with 'Yes'.

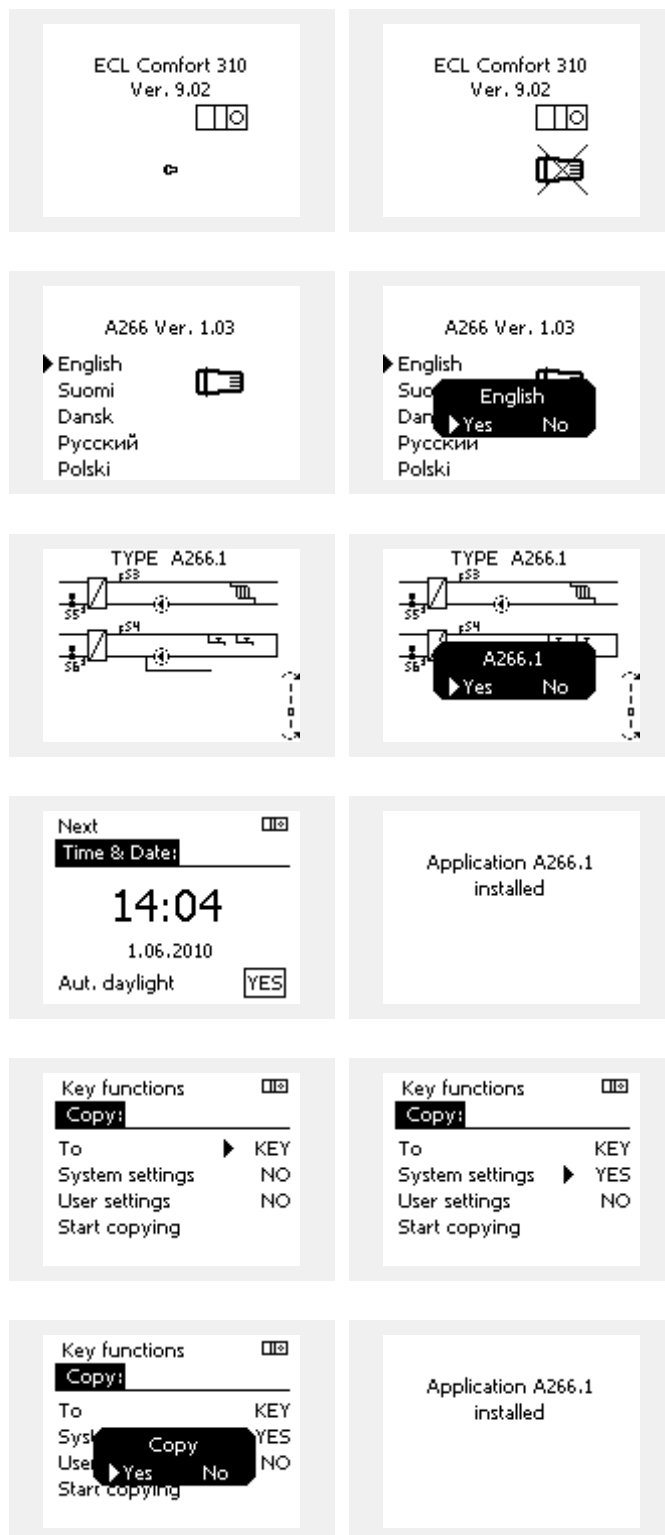












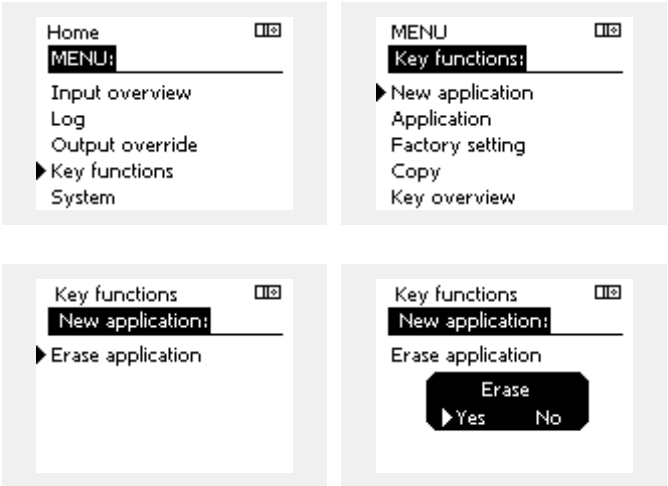
Installation Guide ECL Comfort 210, application A266

Application Key: Situation 2
The controller already runs an application. The ECL Application Key is inserted, but the application needs to be changed.

To change to another application on the ECL Application Key, the current application in the controller must be erased (deleted).

Be aware that the Application Key must be inserted.

Action:	Purpose:	Examples:
	Choose 'MENU' in any circuit	MENU
	Confirm	
	Choose the circuit selector at the top right corner in the display	
	Confirm	
	Choose 'Common controller settings'	
	Confirm	
	Choose 'Key functions'	
	Confirm	
	Choose 'Erase application'	
	Confirm with 'Yes'	



The controller resets and is ready to be configured.

Follow the procedure described in situation 1.

Installation Guide ECL Comfort 210, application A266


















Application Key: Situation 3

A copy of the controllers settings is needed for configuring another controller.

This function is used

- for saving (backup) of special user and system settings
- when another ECL Comfort controller of the same type (210 or 310) must be configured with the same application but user / system settings differ from the factory settings.

How to copy to another ECL Comfort controller:




Action:	Purpose:	Examples:
	Choose 'MENU'	MENU
	Confirm	
	Choose the circuit selector at the top right corner in the display	
	Confirm	
	Choose 'Common controller settings'	
	Confirm	
	Go to 'Key functions'	
	Confirm	
	Choose 'Copy'	
	Confirm	
	Choose 'To: 'ECL' or 'KEY' will be indicated. Choose 'ECL' or 'KEY'	* 'ECL' or 'KEY'
	Push the dial repeatedly to choose copy direction	
	Choose 'System settings' or 'User settings'	** 'NO' or 'YES'
	Push the dial repeatedly to choose 'Yes' or 'No' in 'Copy'. Push to confirm.	
	Choose 'Start copying'	
	The Application Key or the controller is updated with special system or user settings.	

*

'ECL': Data will be copied from the Application Key to the ECL Controller.
'KEY': Data will be copied from the ECL Controller to the Application Key.

**

'NO': The settings from the ECL controller will not be copied to the Application Key or to the ECL Comfort controller.
'YES': Special settings (differing from the factory settings) will be copied to the Application Key or to the ECL Comfort controller. If YES can not be chosen, there are no special settings to be copied.

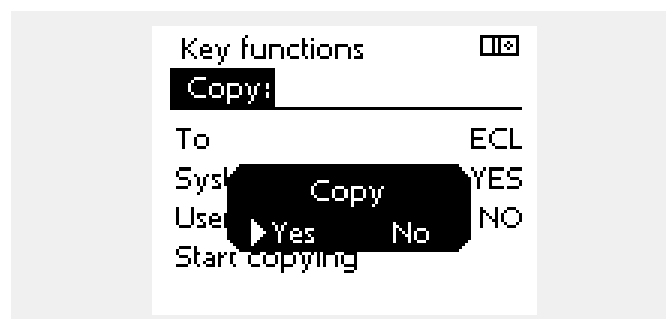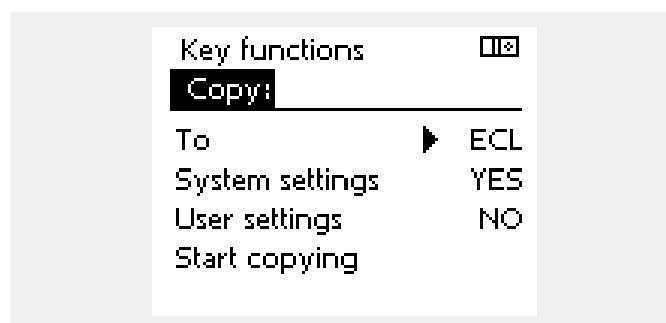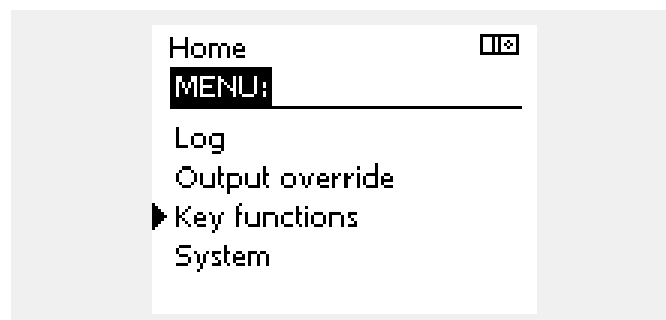

Installation Guide ECL Comfort 210, application A266

2.6.2 ECL Application Key, copying data

General principles

When the controller is connected and operating, you can check and adjust all or some of the basic settings. The new settings can be stored on the Key.

How to update the ECL Application Key after settings have been changed?

All new settings can be stored on the ECL Application Key.

How to store factory setting in the controller from the Application Key?

Please read the paragraph concerning Application Key, Situation 1: The controller is new from the factory, the ECL Application Key is not inserted.

How to store personal settings from the controller to the Key?

Please read the paragraph concerning Application Key, Situation 3: A copy of the controllers settings is needed for configuring another controller

As a main rule, the ECL Application Key should always remain in the controller. If the Key is removed, it is not possible to change settings.



Factory settings can always be restored.



Make a note of new settings in the 'Settings overview' table.



Do not remove the ECL Application Key while copying. The data on the ECL Application Key can be damaged!



It is possible to copy settings from one ECL Comfort controller to another controller provided that the two controllers are from the same series (210 or 310).

2.7 Check list



Is the ECL Comfort controller ready for use?

- ☐ Make sure that the correct power supply is connected to terminals 9 (Live) and 10 (Neutral).
- ☐ Check that the required controlled components (actuator, pump etc.) are connected to the correct terminals.
- ☐ Check that all sensors / signals are connected to the correct terminals (see 'Electrical connections').
- ☐ Mount the controller and switch on the power.
- ☐ Is the ECL Application Key inserted (see 'Inserting the Application Key').
- ☐ Is the correct language chosen (see 'Language' in 'Common controller settings').
- ☐ Is the time & date set correctly (see 'Time & Date' in 'Common controller settings').
- ☐ Is the right application chosen (see 'Identifying the system type').
- ☐ Check that all settings in the controller (see 'Settings overview') are set or that the factory settings comply with your requirements.
- ☐ Choose manual operation (see 'Manual control'). Check that valves open and close, and that required controlled components (pump etc.) start and stop when operated manually.
- ☐ Check that the temperatures / signals shown in the display match the actual connected components.
- ☐ Having completed the manual operation check, choose controller mode (scheduled, comfort, saving or frost protection).

Installation Guide ECL Comfort 210, application A266

2.8 Navigation, ECL Application Key A266

Navigation, A266.1, circuit 1 and 2

Home		Circuit 1, Heating		Circuit 2, DHW	
		ID no.	Function	ID no.	Function
MENU					
Schedule			Selectable		Selectable
Settings	Flow temperature		Heat curve		
		11178	Temp. max.	12178	Temp. max.
		11177	Temp. min.	12177	Temp. min.
	Room limit	11015	Adapt. time		
		11182	Infl. - max.		
		11183	Infl. - min.		
	Return limit	11031	High T out X1	12030	Limit
		11032	Low limit Y1		
		11033	Low T out X2		
		11034	High limit Y2		
		11035	Infl. - max.	12035	Infl. - max.
		11036	Infl. - min.	12036	Infl. - min.
		11037	Adapt. time	12037	Adapt. time
		11085	Priority	12085	Priority
	Flow / power limit		Actual		Actual
			Limit	12111	Limit
		11119	High T out X1		
		11117	Low limit Y1		
		11118	Low T out X2		
		11116	High limit Y2		
		11112	Adapt. time	12112	Adapt. time
		11113	Actual filter	12113	Actual filter
		11109	Input type	12109	Input type
		11115	Units	12115	Units
		11114	Pulse	12114	Pulse
	Optimization	11011	Auto saving		
		11012	Boost		
		11013	Ramp		
		11014	Optimizer		
		11026	Pre stop		
		11020	Based on		
		11021	Total stop		
		11179	Cut-out		
		11043	Parallel operation		

Installation Guide ECL Comfort 210, application A266

Navigation, A266.1, circuit 1 and circuit 2 continued

Home MENU Settings	Control par.	Circuit 1, Heating		Circuit 2, DHW	
		ID no.	Function	ID no.	Function
		11174	Motor pr.	12173	Auto tuning
		11184	Xp	12174	Motor pr.
		11185	Tn	12184	Xp
		11186	M run	12185	Tn
		11187	Nz	12186	M run
				12187	Nz
	Application	11010	ECA addr.		
		11022	P exercise	12022	P exercise
		11023	M exercise	12023	M exercise
		11052	DHW priority		
		11077	P frost T	12077	P frost T
		11078	P heat T	12078	P heat T
		11093	Frost pr. T	12093	Frost pr. T
		11141	Ext. input	12141	Ext. input
		11142	Ext. mode	12142	Ext. mode
		11189	Min. act. time	12189	Min. act. time
	Anti-bacteria				Day
					Start time
					Duration
					Desired T
	Holiday	Selectable		Selectable	
	Alarm	11147	Upper difference	12147	Upper difference
		11148	Lower difference	12148	Lower difference
		11149	Delay	12149	Delay
		11150	Lowest temp.	12150	Lowest temp.
	Alarm overview	Selectable		Selectable	
	Influence overview	Des. flow T			
		Return lim.		Return lim.	
		Room lim.			
		Parallel priority			
		Flow / power lim.		Flow / power lim.	
		Holiday		Holiday	
		Ext. override		Ext. override	
		ECA override		Anti-bacteria	
		Boost			
		Ramp			
		Master/slave			
		Heating cut-out			
		DHW priority			

Installation Guide ECL Comfort 210, application A266

Navigation, A266.1, Common controller settings

Home MENU		Common controller settings	
Time & Date		ID no.	Function
Holiday			Selectable
Input overview			Outdoor T Room T Heat flow T DHW flow T Heat return T DHW return T
Log (sensors)	Outdoor T		Log today
	Room T & desired		Log yesterday
	Heating flow T & des.		Log 2 days
	DHW flow T & des.		Log 4 days
	Heat return T & limit		
Output override			M1 P1 M2 P2 A1
Key functions	New application		Erase application
	Application		
	Factory setting		System settings User settings Go to factory
	Copy		To System settings User settings Start copying
	Key overview		
System	ECL version		Code no. Hardware Software Serial no. Production date
	Extension		
	Display	60058	Backlight
		60059	Contrast
	Communication	38	Modbus addr.
		2048	ECL 485 addr.
	Language	2050	Language

Installation Guide ECL Comfort 210, application A266

Navigation, A266.2, circuit 1 and 2

Home		Circuit 1, Heating		Circuit 2, DHW	
		ID no.	Function	ID no.	Function
MENU					
Schedule			Selectable		Selectable
Settings	Flow temperature		Heat curve		
		11178	Temp. max.	12178	Temp. max.
		11177	Temp. min.	12177	Temp. min.
	Room limit	11015	Adapt. time		
		11182	Infl. - max.		
		11183	Infl. - min.		
	Return limit	11031	High T out X1	12030	Limit
		11032	Low limit Y1		
		11033	Low T out X2		
		11034	High limit Y2		
		11035	Infl. - max.	12035	Infl. - max.
		11036	Infl. - min.	12036	Infl. - min.
		11037	Adapt. time	12037	Adapt. time
		11085	Priority	12085	Priority
	Flow / power limit		Actual		Actual
			Limit	12111	Limit
		11119	High T out X1		
		11117	Low limit Y1		
		11118	Low T out X2		
		11116	High limit Y2		
		11112	Adapt. time	12112	Adapt. time
		11113	Actual filter	12113	Actual filter
		11109	Input type	12109	Input type
		11115	Units	12115	Units
		11114	Pulse	12114	Pulse
	Optimization	11011	Auto saving		
		11012	Boost		
		11013	Ramp		
		11014	Optimizer		
		11026	Pre stop		
		11020	Based on		
		11021	Total stop		
		11179	Cut-out		
		11043	Parallel operation		

Installation Guide ECL Comfort 210, application A266

Navigation, A266.2, circuit 1 and circuit 2 continued

Home MENU Settings	Control par.	Circuit 1, Heating		Circuit 2, DHW	
		ID no.	Function	ID no.	Function
		11174	Motor pr.	12173	Auto tuning
		11184	Xp	12174	Motor pr.
		11185	Tn		Xp actual
		11186	M run	12185	Tn
		11187	Nz	12186	M run
				12187	Nz
				12097	Supply T (idle)
				12096	Tn (idle)
				12094	Open time
				12095	Close time
	Application	11010	ECA addr.		
		11022	P exercise	12022	P exercise
		11023	M exercise	12023	M exercise
		11052	DHW priority		
		11077	P frost T	12077	P frost T
		11078	P heat T	12078	P heat T
		11093	Frost pr. T	12093	Frost pr. T
		11141	Ext. input	12141	Ext. input
		11142	Ext. mode	12142	Ext. mode
		11189	Min. act. time	12189	Min. act. time
	Anti-bacteria				Day Start time Duration Desired T
Holiday		Selectable		Selectable	
Alarm	Temp. monitoring	11147	Upper difference	12147	Upper difference
		11148	Lower difference	12148	Lower difference
		11149	Delay	12149	Delay
		11150	Lowest temp.	12150	Lowest temp.
	Max. temperature	11079	Flow T		
		11080	Delay		
	Alarm overview	Selectable		Selectable	

Installation Guide ECL Comfort 210, application A266

Navigation, A266.2, circuit 1 and circuit 2 continued

Home MENU Influence overview Des. flow T	Circuit 1, Heating		Circuit 2, DHW	
	ID no.	Function	ID no.	Function
		Return lim.		Return lim.
		Room lim.		
		Parallel priority		
		Flow / power lim.		Flow / power lim.
		Holiday		Holiday
		Ext. override		Ext. override
		ECA override		Anti-bacteria
		Boost		
		Ramp		
		Master/slave		
		Heating cut-out		
		DHW priority		

Installation Guide ECL Comfort 210, application A266

Navigation, A266.2, Common controller settings

Home		Common controller settings	
MENU		ID no.	Function
Time & Date			Selectable
Holiday			Selectable
Input overview			Outdoor T Room T Heat flow T DHW flow T Return T Supply T
Log (sensors)	Room T & desired		Log today
	Heating flow & des.		Log yesterday
	DHW flow & des.		Log 2 days
	Heat return T & limit		Log 4 days
	DHW return T & limit		
Supply T			
Output override			M1 P1 M2 P2 A1
Key functions	New application		Erase application
	Application		
	Factory setting		System settings User settings Go to factory
	Copy		To System settings User settings Start copying
	Key overview		
System	ECL version		Code no. Hardware Software Serial no. Production date
	Extension		
	Display	60058	Backlight
		60059	Contrast
	Communication	38	Modbus addr.
Language		2048	ECL 485 addr.
		2050	Language

Installation Guide ECL Comfort 210, application A266

Navigation, A266.9, circuit 1 and 2

Home		Circuit 1, Heating		Circuit 2, DHW	
		ID no.	Function	ID no.	Function
MENU					
Schedule			Selectable		
Settings	Flow temperature		Heat curve		
		11178	Temp. max.	12178	Temp. max.
		11177	Temp. min.	12177	Temp. min.
	Return limit			12030	Limit
		11031	High T out X1		
		11032	Low limit Y1		
		11033	Low T out X2		
		11034	High limit Y2		
		11035	Infl. - max.	12035	Infl. - max.
		11036	Infl. - min.	12036	Infl. - min.
		11037	Adapt. time	12037	Adapt. time
		11085	Priority		
	Optimization	11011	Auto saving		
		11012	Boost		
		11013	Ramp		
		11014	Optimizer		
		11021	Total stop		
		11179	Cut-out		

Installation Guide ECL Comfort 210, application A266

Navigation, A266.9, circuit 1 and circuit 2 continued

Home MENU Settings	Control par.	Circuit 1, Heating		Circuit 2, DHW	
		ID no.	Function	ID no.	Function
	Control par.	11174	Motor pr.	12173	Auto tuning
		11184	Xp	12174	Motor pr.
		11185	Tn	12184	Xp
		11186	M run	12185	Tn
		11187	Nz	12186	M run
				12187	Nz
	Application	11022	P exercise	12022	P exercise
		11023	M exercise	12023	M exercise
		11052	DHW priority		
		11077	P frost T	12077	P frost T
		11078	P heat T	12078	P heat T
		11093	Frost pr. T	12093	Frost pr. T
		11189	Min. act. time	12189	Min. act. time
Alarm	Pressure	11614	Alarm high		
		11615	Alarm low		
		11617	Alarm time-out		
		11607	Low X		
		11608	High X		
		11609	Low Y		
		11610	High Y		
	Digital	11636	Alarm value		
		11637	Alarm time-out		
	Max. temperature	11079	Flow T		
		11080	Delay		
	Alarm overview		Selectable		
Influence overview	Des. flow T		Return lim.		Return lim.
			Boost		
			Ramp		
			Master/slave		
			Heating cut-out		
			DHW priority		

Installation Guide ECL Comfort 210, application A266

Navigation, A266.9, Common controller settings

Home		Common controller settings	
MENU		ID no.	Function
Time & Date		Selectable	
Input overview		Outdoor T Heat return T Heat flow T DHW flow T Prim. return T DHW return T Pressure Digital	
Log (sensors)	Heating flow & des.	Log today	
	Heating return	Log yesterday	
	DHW flow & des.	Log 2 days	
	DHW return	Log 4 days	
	Outdoor T		
	Heating pressure		
Output override		M1 P1 M2 P2 A1	
Key functions	New application	Erase application	
	Application		
	Factory setting	System settings User settings Go to factory	
	Copy	To System settings User settings Start copying	
	Key overview		
System	ECL version	Code no. Hardware Software Serial no. Production date	
	Extension		
	Display	60058	Backlight
		60059	Contrast
	Communication	38	Modbus addr.
		2048	ECL 485 addr.
	Language	2050	Language

Installation Guide ECL Comfort 210, application A266

3.0 Daily use

3.1 How to navigate


You navigate in the controller by turning the dial left or right to the desired position (↻).

The dial has a built-in accelerator. The faster you turn the dial, the faster it reaches the limits of any wide setting range.


The position indicator in the display (▶) will always show you where you are.

Push the dial to confirm your choices (⏏).


The display examples are from a two-circuit application: One heating circuit (🏠) and one domestic hot-water (DHW) circuit (🚿). The examples might differ from your application.

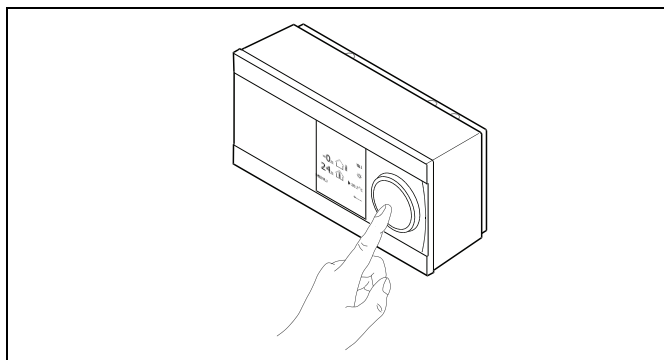

Heating circuit (🏠):

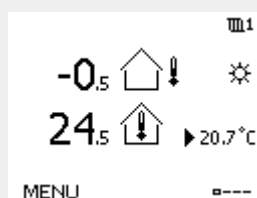

DHW circuit (🚿):

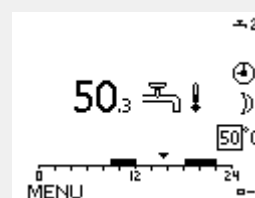

Some general settings which apply to the entire controller are located in a specific part of the controller.

To enter 'Common controller settings':

Action:	Purpose:	Examples:
↻	Choose 'MENU' in any circuit	MENU
⏏	Confirm	
↻	Choose the circuit selector at the top right corner in the display	
⏏	Confirm	
↻	Choose 'Common controller settings'	🏠🚿
⏏	Confirm	

Circuit selector



Installation Guide ECL Comfort 210, application A266

3.2 Understanding the controller display

Choosing a favorite display

Your favorite display is the display you have chosen as the default display. The favorite display will give you a quick overview of the temperatures or units that you want to monitor in general.

If the dial has not been activated for 20 min., the controller will revert to the overview display you have chosen as favorite.



Change between displays by turning the dial until you reach the display selector (---) at bottom right side of the display. Turn the dial and push to choose your favorite overview display.

Heating circuit

Overview display 1 informs about:
actual outdoor temperature, controller mode,
actual room temperature, desired room temperature.

Overview display 2 informs about:
actual outdoor temperature, trend in outdoor temperature,
controller mode, max. and min. outdoor temperatures since
midnight as well as desired room temperature.


Overview display 3 informs about:
date, actual outdoor temperature, controller mode, time, desired
room temperature as well as shows the comfort schedule of the
current day.

Overview display 4 informs about:
state of the controlled components, actual flow temperature,
(desired flow temperature), controller mode, return temperature
(limitation value).


Dependent on the chosen display, the overview displays for the
heating circuit inform you about:

- actual outdoor temperature (-0.5)
- controller mode (*)
- actual room temperature (24.5)
- desired room temperature (20.7 °C)
- trend in outdoor temperature (→)
- min. and max. outdoor temperatures since midnight (↕)
- date (23.02.2010)
- time (7:43)
- comfort schedule of the current day (0 - 12 - 24)
- state of the controlled components (M2, P2)
- actual flow temperature (49 °C), (desired flow temperature (31))
- return temperature (24 °C) (limitation temperature (50))


Overview display 1:

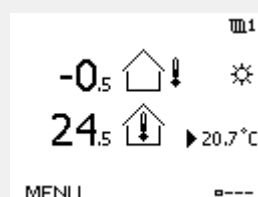


Overview display 2:

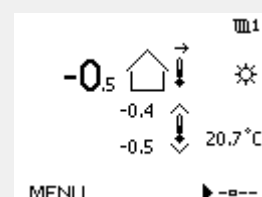

Overview display 3:

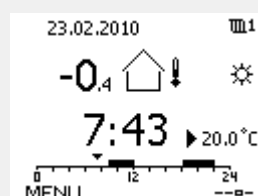

Overview display 4:

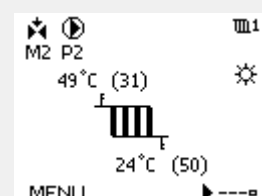

The setting of the desired room temperature is important even if a
room temperature sensor / Remote Control Unit is not connected.



If the temperature value is displayed as

"- -" the sensor in question is not connected.

"- - -" the sensor connection is short-circuited.

Installation Guide ECL Comfort 210, application A266

DHW circuit


Overview display 1 informs about:
actual DHW temperature, controller mode, desired DHW temperature as well as the comfort schedule of the current day.

Overview display 2 informs about:
state of the controlled components, actual DHW temperature, (desired DHW temperature), controller mode, return temperature (limitation value).


Dependent on chosen display, the overview displays for the DHW circuit inform you about:

- actual DHW temperature (50.3)
- controller mode (*)
- desired DHW temperature (50 °C)
- comfort schedule of the current day(0 - 12 - 24)
- state of the controlled components (M1, P1)
- actual DHW temperature (50 °C), (desired DHW temperature (50))
- return temperature (- °C) (limitation temperature (30))

Overview display 1:

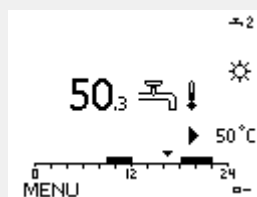

Overview display 2:

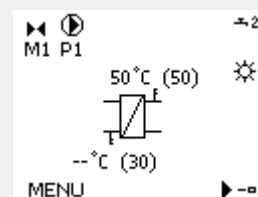






Setting the desired temperature

Depending on the chosen circuit and mode, it is possible to enter all daily settings directly from the overview displays (see also the next page concerning symbols).

Setting the desired room temperature

The desired room temperature can easily be adjusted in the overview displays for the heating circuit.

Action:	Purpose:	Examples:
	Desired room temperature	20.5
	Confirm	
	Adjust the desired room temperature	21.0
	Confirm	

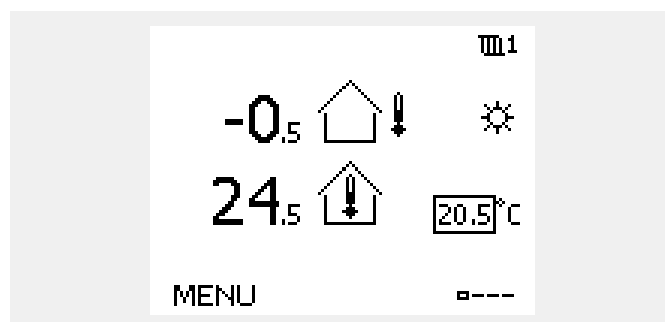

This overview display informs about outdoor temperature, actual room temperature as well as desired room temperature.

The display example is for comfort mode. If you want to change the desired room temperature for saving mode, choose the mode selector and select saving.








The setting of the desired room temperature is important even if a room temperature sensor / Remote Control Unit is not connected.

Installation Guide ECL Comfort 210, application A266

Setting the desired DHW temperature

The desired DHW temperature can easily be adjusted in the overview displays for the DHW circuit.

Action:	Purpose:	Examples:
	Desired DHW temperature	50
	Confirm	
	Adjust the desired DHW temperature	55
	Confirm	

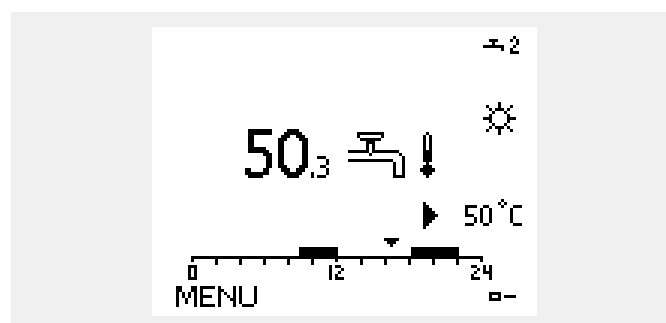


In addition to the information about desired and actual DHW temperature, the today's schedule is visible.

The display example indicates that the controller is in scheduled operation and in saving mode.

Setting the desired room temperature, ECA 30 / ECA 31

The room desired temperature can be set exactly as in the controller. However, other symbols can be present in the display (please see 'What do the symbols mean?').



With the ECA 30 / ECA 31 you can override the desired room temperature set in the controller temporarily by means of the override functions: 

Installation Guide ECL Comfort 210, application A266

3.3 What do the symbols mean?

Symbol	Description	
	Outdoor temp.	Temperature
	Room temp.	
	DHW temp.	
	Position indicator	
	Scheduled mode	Mode
	Comfort mode	
	Saving mode	
	Frost protection mode	
	Manual mode	
	Heating	Circuit
	DHW	
	Common controller settings	
	Pump ON	Controlled component
	Pump OFF	
	Actuator opens	
	Actuator closes	
	Alarm	
	Display selector	
	Max. and min. value	
	Trend in outdoor temperature	
	Wind speed sensor	

Symbol	Description
--	Sensor not connected or not used
---	Sensor connection short-circuited
	Fixed comfort day (holiday)
	Active influence
—	No influence

Additional symbols, ECA 30 / 31:

Symbol	Description
	ECA Remote Control Unit
	Relative humidity indoor
	Day off
	Holiday
	Relaxing (extended comfort period)
	Going out (extended saving period)

Installation Guide ECL Comfort 210, application A266


3.4 Monitoring temperatures and system components

Heating circuit

The overview display in the heating circuit ensures a quick overview of the actual and (desired) temperatures as well as the actual state of the system components.

Display example:

49 °C	Flow temperature
(31)	Desired flow temperature
24 °C	Return temperature
(50)	Return temperature limitation

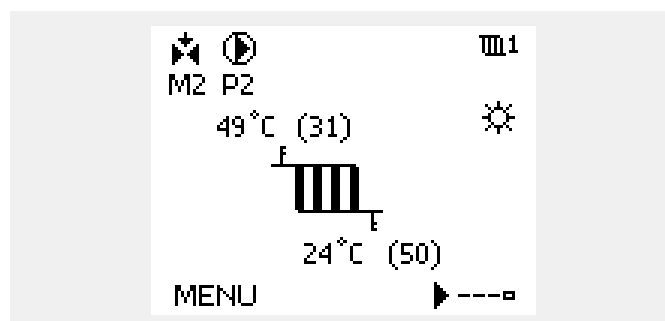


DHW circuit

The overview display in the DHW circuit ensures a quick overview of the actual and (desired) temperatures as well as the actual state of the system components.

Display example:


50 °C	Flow temperature
(50)	Desired flow temperature
- -	Return temperature: sensor not connected
(30)	Return temperature limitation

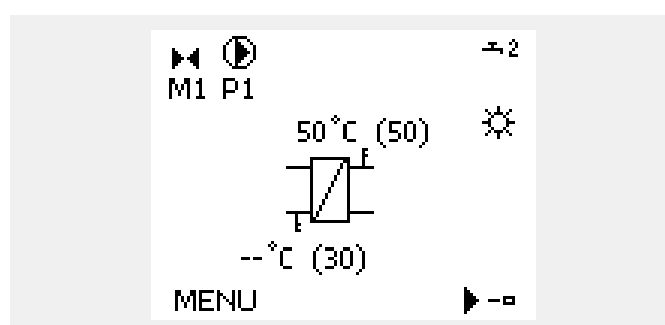

Input overview

Another option to get a quick overview of measured temperatures is the 'Input overview' which is visible in the common controller settings (how to enter the common controller settings, see 'Introduction to common controller settings')

As this overview (see display example) only states the measured actual temperatures, it is read-only.

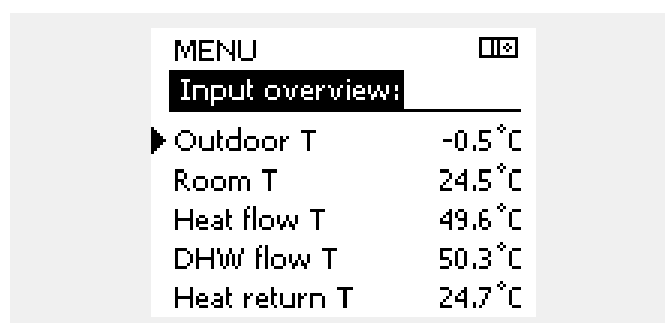

3.5 Influence overview

The menu gives an overview of the influences on the desired flow temperature. It differs from application to application which parameters are listed. It can be helpful in a service situation to explain unexpected conditions or temperatures among others.

If the desired flow temperature is influenced (corrected) by one or more parameters, it is indicated by a small line with arrow-down, arrow-up or double-arrow:

Arrow-down:

The parameter in question reduces the desired flow temperature.



Arrow-up:

The parameter in question increases the desired flow temperature.

Double-arrow:

The parameter in question creates an override (e.g. Holiday).

In the example, the arrow in the symbol points downwards for 'Room lim.'. This means that the actual room temperature is higher than the desired room temperature which again results in a decrease of the desired flow temperature.

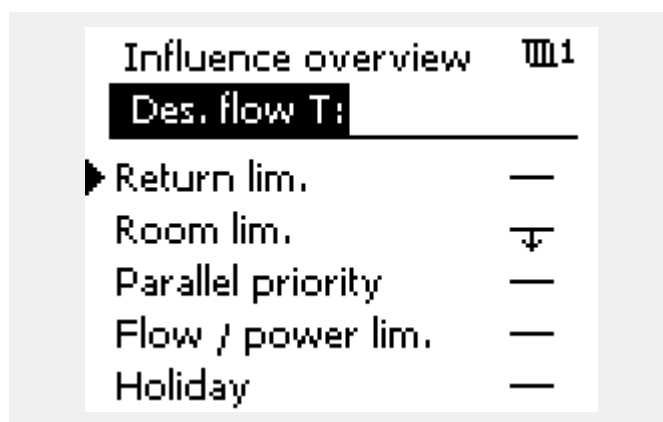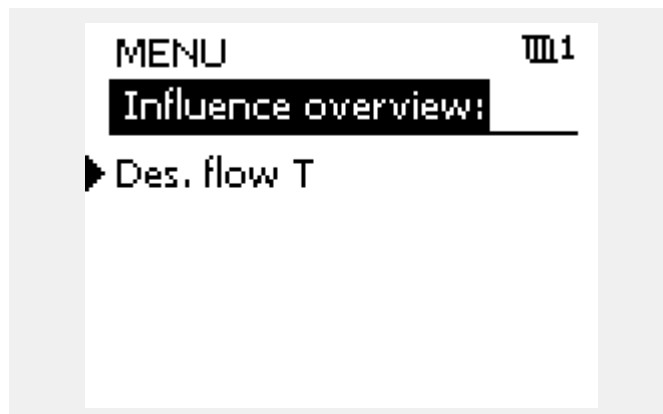


Installation Guide ECL Comfort 210, application A266

3.6 Manual control

It is possible to manually control the installed components.

Manual control can only be selected in favorite displays in which the symbols for the controlled components (valve, pump etc.) are visible.

Action:	Purpose:	Examples:
	Choose mode selector	
	Confirm	
	Choose manual mode	
	Confirm	
	Choose pump	
	Confirm	
	Switch ON the pump	
	Switch OFF the pump.	
	Confirm pump mode	
	Choose motorized control valve	
	Confirm	
	Open the valve	
	Stop opening the valve	
	Close the valve	
	Stop closing the valve	
	Confirm valve mode	

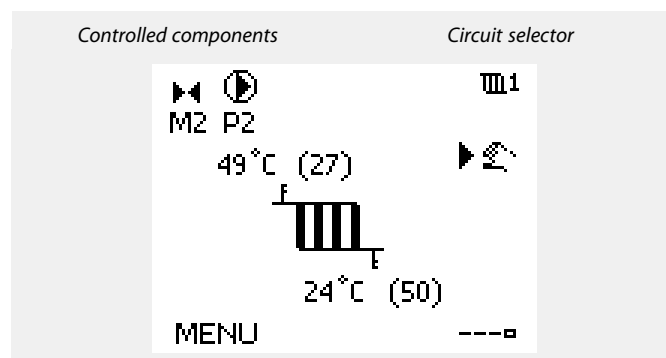

During manual operation, all control functions are deactivated. Frost protection is not active.



When manual control is selected for one circuit, it is automatically selected for all circuits!

To leave manual control, use the mode selector to select the desired mode. Push the dial.

Manual control is typically used when commissioning the installation. The controlled components, valve, pump etc., can be controlled for correct function.

Installation Guide ECL Comfort 210, application A266

3.7 Schedule















3.7.1 Set your schedule

The schedule consists of a 7-day week:

M = Monday
T = Tuesday
W = Wednesday
T = Thursday
F = Friday
S = Saturday
S = Sunday

The schedule will day-by-day show you the start and stop times of your comfort periods (heating / DHW circuits).




Changing your schedule:

Action:	Purpose:	Examples:
	Choose 'MENU' in any of the overview displays	MENU
	Confirm	
	Confirm the choice 'Schedule'	
	Choose the day to change	▶
	Confirm*	T
	Go to Start1	
	Confirm	
	Adjust the time	
	Confirm	
	Go to Stop1, Start2 etc. etc.	
	Return to 'MENU'	MENU
	Confirm	
	Choose 'Yes' or 'No' in 'Save'	
	Confirm	

* Several days can be marked

The chosen start and stop times will be valid for all the chosen days (in this example Thursday and Saturday).

You can set max. 3 comfort periods a day. You can delete a comfort period by setting start and stop times to the same value.

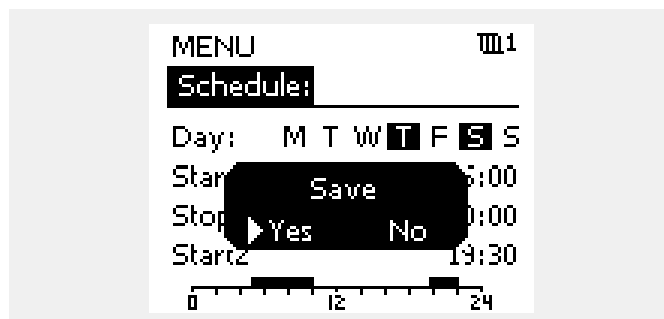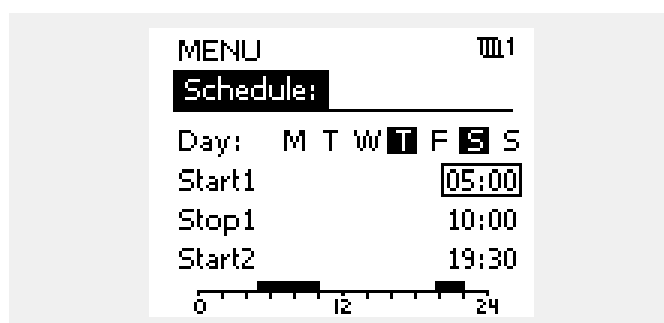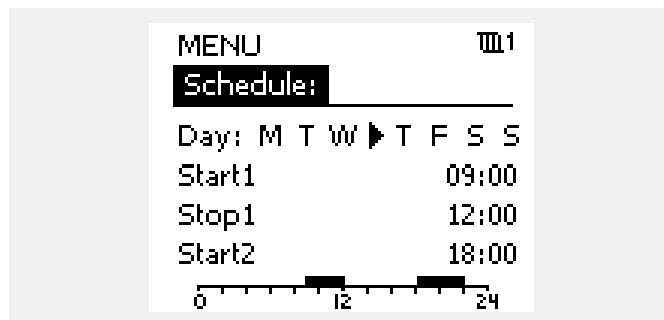

Each circuit has its own schedule. To change to another circuit, go to 'Home', turn the dial and choose the desired circuit.



The start and stop times can be set in half-hourly (30 min.) intervals.

Installation Guide ECL Comfort 210, application A266

4.0 Settings overview

It is recommendable to make a note of any changed settings in the empty columns.

Setting	ID	Page	Factory settings in circuit(s)						
			1	2	3				
Heat curve		54							
Temp. max. (flow temp. limit, max.)	11178	55	90 °C						
Temp. min. (flow temp. limit, min.)	11177	55	10 °C						
Adapt. time (adaption time)	11015	56	OFF						
Infl. - max. (room temp. limitation, max.)	11182	57	-4.0						
Infl. - min. (room temp. limitation, min.)	11183	57	0.0						
High T out X1 (return temp. limitation, high limit, X-axis)	11031	58	15 °C						
Low limit Y1 (return temp. limitation, low limit, Y-axis)	11032	58	40 °C						
Low T out X2 (return temp. limitation, low limit, X-axis)	11033	58	-15 °C						
High limit Y2 (return temp. limitation, high limit, Y-axis)	11034	59	60 °C						
Infl. - max. (return temp. limitation - max. influence)	11035	59	0.0						
Infl. - min. (return temp. limitation - min. influence)	11036	59	0.0						
Adapt. time (adaptation time)	11037	59	25 s						
Priority (priority for return temp. limitation)	11085	60	OFF						
High T out X1 (flow / power limitation, high limit, X-axis)	11119	61	15 °C						
Low limit Y1 (flow / power limitation, low limit, Y-axis)	11117	62	999.9 l/h						
Low T out X2 (flow / power limitation, low limit, X-axis)	11118	62	-15 °C						
High limit Y2 (flow / power limitation, high limit, Y-axis)	11116	62	999.9 l/h						
Adapt. time (adaptation time)	11112	62	OFF						
Actual filter	11113	62	10						
Input type	11109	63	OFF						
Units	11115	63	ml, l/h						
Pulse	11114	63	10						
Auto saving (saving temp. dependent on outdoor temp.)	11011	64	-15 °C						
Boost	11012	64	OFF						
Ramp (reference ramping)	11013	65	OFF						
Optimizer (optimizing time constant)	11014	65	OFF						
Pre-stop (optimized stop time)	11026	66	ON						
Based on (optimization based on room / outdoor temp.)	11020	66	OUT						
Total stop	11021	66	OFF						
Cut-out (limit for heating cut-out)	11179	67	20 °C						
Cut-out (limit for heating cut-out) — A266.9	11179	67	18 °C						
Parallel operation	11043	68	OFF						
Motor pr. (motor protection)	11174	69	OFF						
Xp (proportional band)	11184	69	80 K						
Xp (proportional band) — A266.9	11184	69	85 K						
Tn (integration time constant)	11185	69	30 s						
Tn (integration time constant) — A266.9	11185	69	25 s						
M run (running time of the motorized control valve)	11186	70	50 s						
M run (running time of the motorized control valve) — A266.9	11186	70	120 s						
Nz (neutral zone)	11187	70	3 K						

Installation Guide ECL Comfort 210, application A266

Setting	ID	Page	Factory settings in circuit(s)						
			1	2	3				
Nz (neutral zone) — A266.9	11187	70	2 K						
ECA addr. (choice of Remote Control Unit)	11010	72	OFF						
P exercise (pump exercise)	11022	72	ON						
M exercise (valve exercise)	11023	72	OFF						
DHW priority (closed valve / normal operation)	11052	72	OFF						
P frost T	11077	73	2 °C						
P heat T (heat demand)	11078	73	20 °C						
Frost pr. T (frost protection temperature)	11093	73	10 °C						
Ext. input (external override)	11141	73	OFF						
Ext. mode (external override mode)	11142	74	SAVING						
Min. act. time (min. activation time gear motor)	11189	74	10						
Upper difference	11147	75	OFF						
Lower difference	11148	75	OFF						
Delay	11149	75	10 m						
Lowest temp.	11150	76	30 °C						
Alarm high — A266.9	11614	76	2.3						
Alarm low — A266.9	11615	76	0.8						
Alarm time-out — A266.9	11617	76	30 s						
Low X — A266.9	11607	76	1.0						
High X — A266.9	11608	76	5.0						
Low Y — A266.9	11609	77	0.0						
High Y — A266.9	11610	77	6.0						
Alarm value — A266.9	11636	77	1						
Alarm time-out — A266.9	11637	77	30 s						
Flow T — A266.2 / A266.9	11079	77	90 °C						
Delay — A266.2	11180	77	5 s						
Delay — A266.9	11180	78	60 s						
Temp. max. (flow temp. limit, max.)	12178	79		90 °C					
Temp. max. (flow temp. limit, max.) — A266.9	12178	79		65 °C					
Temp. min. (flow temp. limit, min.)	12177	79		10 °C					
Temp. min. (flow temp. limit, min.) — A266.9	12177	79		45 °C					
Limit (return temp. limitation)	12030	80		30 °C					
Infl. - max. (return temp. limitation - max. influence)	12035	80		0.0					
Infl. - min. (return temp. limitation - min. influence)	12036	80		0.0					
Adapt. time (adaptation time)	12037	81		25 s					
Priority (priority for return temp. limitation)	12085	81		OFF					
Adapt. time (adaptation time)	12112	82		OFF					
Actual filter	12113	82		10					
Input type	12109	83		OFF					
Units	12115	83		ml, l/h					
Pulse	12114	83		10					
Auto tuning	12173	84		OFF					
Motor pr. (motor protection)	12174	84		OFF					
Xp (proportional band)	12184	84		40 K					

Installation Guide ECL Comfort 210, application A266

Setting	ID	Page	Factory settings in circuit(s)						
			1	2	3				
Xp actual — A266.2		85							
Xp (proportional band) — A266.9	12184	85			90 K				
Tn (integration time constant)	12185	85			20 s				
Tn (integration time constant) — A266.9	12185	85			13 s				
M run (running time of the motorized control valve)	12186	86			20 s				
M run (running time of the motorized control valve) — A266.9	12186	86			15 s				
Nz (neutral zone)	12187	86			3 K				
Supply T (idle)— A266.2	12097	87			OFF				
Tn (idle) — A266.2	12096	87			120 s				
Open time— A266.2	12094	88			4.0 s				
Close time— A266.2	12095	88			2.0 s				
P exercise (pump exercise)	12022	89			OFF				
P exercise (pump exercise) — A266.9	12022	89			ON				
M exercise (valve exercise)	12023	89			OFF				
P frost T	12077	89			2 °C				
P heat T (heat demand)	12078	89			20 °C				
Frost pr. T (frost protection temperature)	12093	90			10 °C				
Ext. input (external override)	12141	90			OFF				
Ext. mode (external override mode)	12142	90			SAVING				
Min. act. time (min. activation time gear motor)	12189	90			3				
Min. act. time (min. activation time gear motor) — A266.9	12189	91			10				
Upper difference	12147	92			OFF				
Lower difference	12148	92			OFF				
Delay	12149	92			10 m				
Lowest temp.	12150	93			30 °C				
Day		94							
Start time		94			00:00				
Duration		95			120 m				
Desired T		95			OFF				
Backlight (display brightness)	60058	103						5	
Contrast (display contrast)	60059	103						3	
Modbus addr.	38	103						1	
ECL 485 addr. (master / slave address)	2048	104						15	
Language	2050	104						English	

Installation Guide ECL Comfort 210, application A266

5.0 Settings, circuit 1

5.1 Flow temperature

The ECL Comfort controller determines and controls the flow temperature related to the outdoor temperature. This relationship is called the heat curve.

The heat curve is set by means of 6 coordinate points. The desired flow temperature is set at 6 pre-defined outdoor temperature values.

The shown value for the heat curve is an average value (slope), based on the actual settings.

Outdoor temp.	Desired flow temp.			Your settings
	A	B	C	
-30 °C	45 °C	75 °C	95 °C	
-15 °C	40 °C	60 °C	90 °C	
-5 °C	35 °C	50 °C	80 °C	
0 °C	32 °C	45 °C	70 °C	
5 °C	30 °C	40 °C	60 °C	
15 °C	25 °C	28 °C	35 °C	

Adjust the desired flow temperature at -30, -15, -5, 0, 5, and 15 °C, if required.

A: Example for floor heating

B: Factory settings

C: Example for radiator heating (high demand)




Heat curve		
Circuit	Setting range	Factory setting
1	Read-out only	

Push the dial to enter / change the coordinates of the heat curve.

The heat curve represents the desired flow temperatures at different outdoor temperature and at a desired room temperature of 20 °C.

If the desired room temperature is changed, the desired flow temperature also changes:

(Desired room T - 20) × HC × 2.5
where "HC" is the Heat Curve slope and "2.5" is a constant.

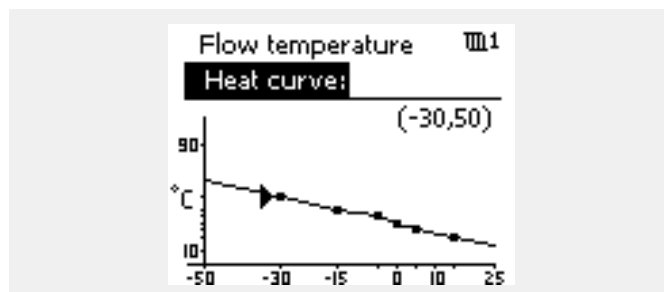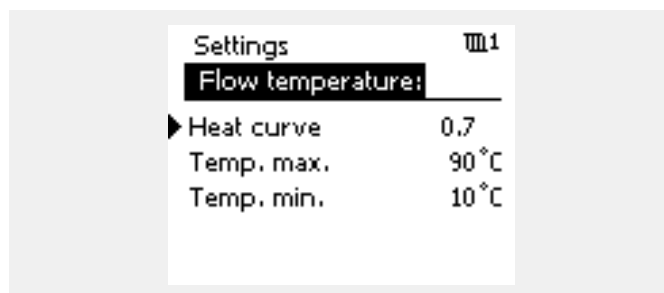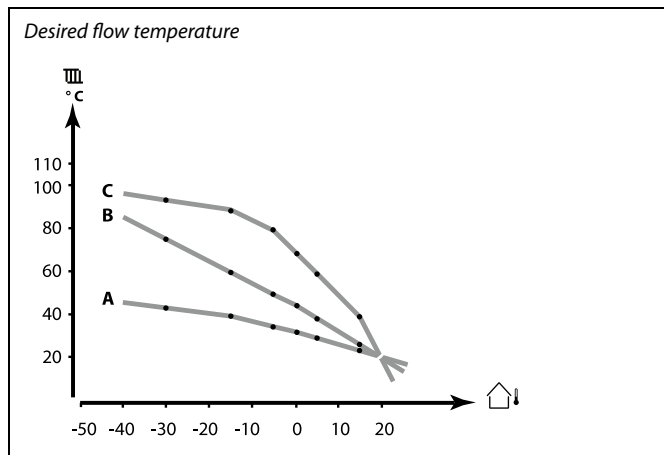

The calculated flow temperature can be influenced by the 'Boost' and 'Ramp' functions etc.

Example:

Heat curve: 0.7

Desired flow temp.: 50 °C

Desired room temp.: 22 °C

Calculation (22-20) × 0.7 × 2.5 = 3.5

Result:

The desired flow temperature will be corrected from 50 °C to 53.5 °C.

Installation Guide ECL Comfort 210, application A266

Temp. max. (flow temp. limit, max.) 11178		
Circuit	Setting range	Factory setting
1	10 ... 150 °C	90 °C



The setting for 'Temp. max.' has higher priority than 'Temp. min.'.

Set the max. flow temperature for the system. The desired flow temperature will not be higher than this setting. Adjust the factory setting, if required.

Temp. min. (flow temp. limit, min.) 11177		
Circuit	Setting range	Factory setting
1	10 ... 150 °C	10 °C



'Temp. min.' is overruled if 'Total stop' is active in Saving mode or 'Cut-out' is active.

'Temp. min.' can be overruled by the influence from the return temperature limitation (see 'Priority').

Set the min. flow temperature for the system. The desired flow temperature will not be lower than this setting. Adjust the factory setting, if required.



The setting for 'Temp. max.' has higher priority than 'Temp. min.'.

Installation Guide ECL Comfort 210, application A266

5.2 Room limit

This section is only relevant if you have installed a room temperature sensor or a Remote Control Unit.

The controller adjusts the desired flow temperature to compensate for the difference between the desired and the actual room temperature.

If the room temperature is higher than the desired value, the desired flow temperature can be reduced.

The 'Infl. -max.' (Influence, max. room temp.) determines how much the desired flow temperature should be reduced.


Use this influence type to avoid a too high room temperature. The controller will allow for free heat gains, i.e. solar radiation or heat from a fire place etc.

If the room temperature is lower than the desired value, the desired flow temperature can be increased.

The 'Infl. -min.' (Influence, min. room temperature) determines how much the desired flow temperature should be increased.

Use this influence type to avoid a too low room temperature. This could e.g. be caused by windy surroundings.

A typical setting will be -4.0 for 'Infl. -max.' and 4.0 for 'Infl. -min.'

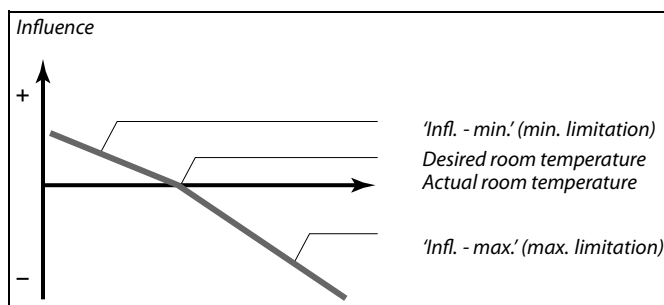

The 'Infl. - max.' and 'Infl. - min.' determine how much the room temperature should influence the desired flow temperature.



If the 'Infl.' factor is too high and / or the 'Adapt. time' too low, there is a risk of unstable control.

Example 1:

The actual room temperature is 2 degrees too high.
The 'Infl. - max.' is set to -4.0.
The 'Infl. - min.' is set to 0.0.
The slope is 1.8 (see 'Heat curve' in 'Flow temperature').
Result:
The desired flow temperature is decreased by $2 \times -4.0 \times 1.8 = 14.4$ degrees.

Example 2:

The actual room temperature is 3 degrees too low.
The 'Infl. - max.' is set to -4.0.
The 'Infl. - min.' is set to 2.0.
The slope is 1.8 (see 'Heat curve' in 'Flow temperature').
Result:
The desired flow temperature is increased by $3 \times 2.0 \times 1.8 = 10.8$ degrees.

Adapt. time (adaption time)		11015
Circuit	Setting range	Factory setting
1	OFF / 1 ... 50 s	OFF
Controls how fast the actual room temperature adapts to the desired room temperature (I control).		



The adaptation function can correct the desired flow temperature with max. $8 \text{ K} \times \text{heat curve value}$.

OFF: The control function is not influenced by the 'Adapt. time'.

1: The desired room temperature is adapted quickly.

50: The desired room temperature is adapted slowly.

Installation Guide ECL Comfort 210, application A266

Infl. - max. (room temp. limitation, max.)		11182
Circuit	Setting range	Factory setting
1	-9.9 ... 0.0	-4.0
Determines how much the desired flow temperature will be influenced (decreased) if the actual room temperature is higher than the desired room temperature (P control).		

-9.9: The room temperature has a big influence.

0.0: The room temperature has no influence.

Infl. - min. (room temp. limitation, min.)		11183
Circuit	Setting range	Factory setting
1	0.0 9.9	0.0
Determines how much the desired flow temperature will be influenced (increased) if the actual room temperature is lower than the desired room temperature (P control).		

0.0: The room temperature has no influence.

9.9: The room temperature has a big influence.

Installation Guide ECL Comfort 210, application A266



5.3 Return limit

The return temperature limitation is based on the outdoor temperature. Typically in district heating systems a higher return temperature is accepted at a decrease in outdoor temperature. The relationship between the return temperature limits and outdoor temperature is set in two coordinates.

The outdoor temperature coordinates are set in 'High T out X1' and 'Low T out X2'. The return temperature coordinates are set in 'High limit Y2' and 'Low limit Y1'.

The controller automatically changes the desired flow temperature to obtain an acceptable return temperature when the return temperature falls below or gets higher than the calculated limit.

This limitation is based on a PI regulation where P ('Infl.' factor) responds quickly to deviations and I ('Adapt. time') responds slower and over time removes the small offsets between the desired and actual values. This is done by changing the desired flow temperature.

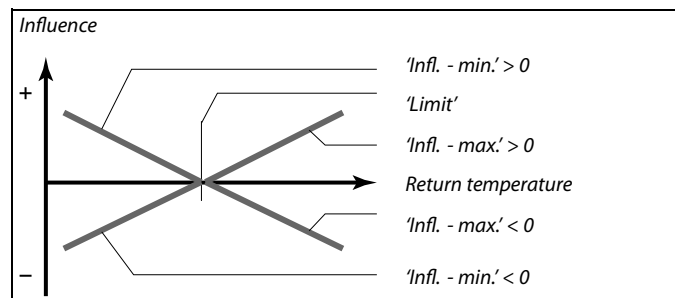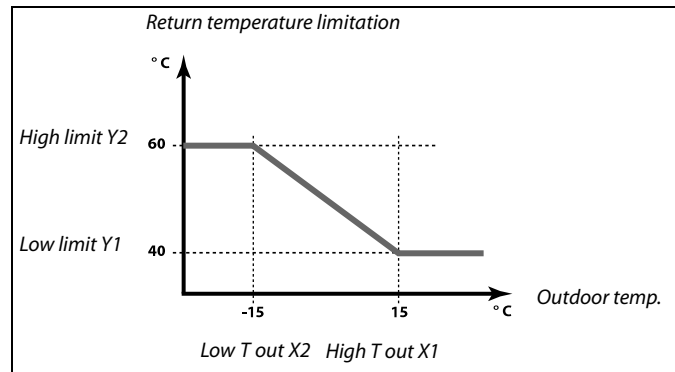

If the 'Infl.' factor is too high and / or the 'Adapt. time' too low, there is a risk of unstable control.

High T out X1 (return temp. limitation, high limit, X-axis) 11031		
Circuit	Setting range	Factory setting
1	-60 ... 20 °C	15 °C
Set the outdoor temperature for the low return temperature limitation.		

The corresponding Y coordinate is set in 'Low limit Y1'.

Low limit Y1 (return temp. limitation, low limit, Y-axis) 11032		
Circuit	Setting range	Factory setting
1	10 ... 150 °C	40 °C
Set the return temperature limitation referring to the outdoor temperature set in 'High T out X1'.		

The corresponding X coordinate is set in 'High T out X1'.

Low T out X2 (return temp. limitation, low limit, X-axis) 11033		
Circuit	Setting range	Factory setting
1	-60 ... 20 °C	-15 °C
Set the outdoor temperature for the high return temperature limitation.		

The corresponding Y coordinate is set in 'High limit Y2'.

Installation Guide ECL Comfort 210, application A266

High limit Y2 (return temp. limitation, high limit, Y-axis) 11034		
Circuit	Setting range	Factory setting
1	10 ... 150 °C	60 °C
Set the return temperature limitation referring to the outdoor temperature set in 'Low T out X2'.		

The corresponding X coordinate is set in 'Low T out X2'.

Infl. - max. (return temp. limitation - max. influence) 11035		
Circuit	Setting range	Factory setting
1	-9.9 ... 9.9	0.0
Determines how much the desired flow temperature will be influenced if the return temperature is higher than the calculated limit.		

Influence higher than 0:

The desired flow temperature is increased, when the return temperature gets higher than the calculated limit.

Influence lower than 0:

The desired flow temperature is decreased, when the return temperature gets higher than the calculated limit.

Example

The return limit is active above 50 °C.

The influence is set to -2.0.

The actual return temperature is 2 degrees too high.

Result:

The desired flow temperature is changed by $-2.0 \times 2 = -4.0$ degrees.



Normally, this setting is lower than 0 in district heating systems to avoid a too high return temperature.

Typically, this setting is 0 in boiler systems because a higher return temperature is acceptable (see also 'Infl. - min.').

Infl. - min. (return temp. limitation - min. influence) 11036		
Circuit	Setting range	Factory setting
1	-9.9 ... 9.9	0.0
Determines how much the desired flow temperature will be influenced if the return temperature is lower than the calculated limit.		

Influence higher than 0:

The desired flow temperature is increased, when the return temperature gets below the calculated limit.

Influence lower than 0:

The desired flow temperature is decreased, when the return temperature gets below the calculated limit.

Example

The return limit is active below 50 °C.

The influence is set to -3.0.

The actual return temperature is 2 degrees too low.

Result:

The desired flow temperature is changed by $-3.0 \times 2 = -6.0$ degrees.



Normally, this setting is 0 in district heating systems because a lower return temperature is acceptable.

Typically, this setting is higher than 0 in boiler systems to avoid a too low return temperature (see also 'Infl. - max.').

Adapt. time (adaptation time) 11037		
Circuit	Setting range	Factory setting
1	OFF / 1 ... 50 s	25 s
Controls how fast the return temperature adapts to the desired return temperature limit (I control).		



The adaptation function can correct the desired flow temperature with max. 8 K.

OFF: The control function is not influenced by the 'Adapt. time'.

1: The desired temperature is adapted quickly.

50: The desired temperature is adapted slowly.

Installation Guide ECL Comfort 210, application A266

Priority (priority for return temp. limitation)		11085
Circuit	Setting range	Factory setting
1	OFF / ON	OFF
Choose whether the return temperature limitation should overrule the set min. flow temperature 'Temp. min.'.		

ON: The min. flow temperature limit is overruled.

OFF: The min. flow temperature limit is not overruled.

Installation Guide ECL Comfort 210, application A266

5.4 Flow / power limit

A flow or heat meter can be connected to the ECL controller in order to limit the flow or consumed power. The signal from the flow or heat meter is a pulse signal.



The flow / power limitation can be based on the outdoor temperature. Typically, in district heating systems a higher flow or power is accepted at lower outdoor temperatures.

The relationship between the flow or power limits and the outdoor temperature is set in two coordinates.

The outdoor temperature coordinates are set in 'High T out X1' and 'Low T out X2'.

The flow or power coordinates are set in 'Low limit Y1' and 'High limit Y2'. Based on these settings, the controller calculates the limitation value.

When the flow / power gets higher than the calculated limit, the controller gradually reduces the desired flow temperature to obtain an acceptable max. flow or power consumption.

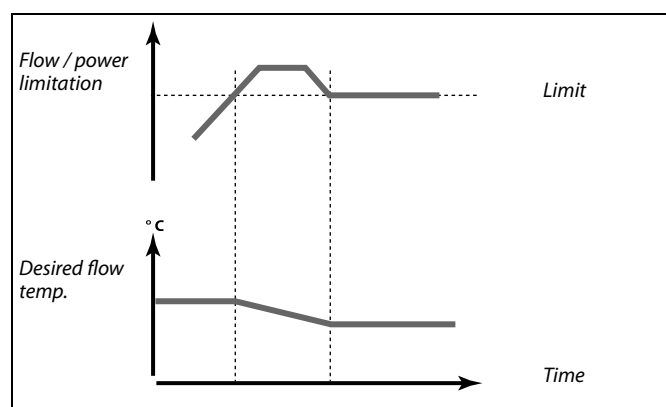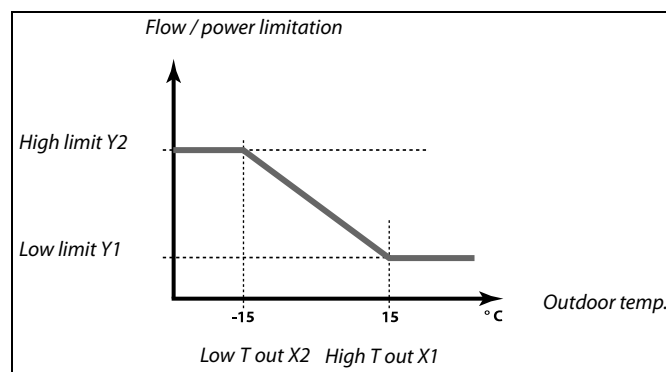

If the 'Adapt. time' is too high, there is a risk of unstable control.

Actual (actual flow or power)		11110
Circuit	Setting range	Factory setting
1	Read-out only	
The value is the actual flow or power based on the signal from flow / heat meter, converted in the controller.		

Limit (limitation value)		11111
Circuit	Setting range	Factory setting
1	Read-out only	
The value is the calculated limitation value.		

High T out X1 (flow / power limitation, high limit, X-axis)		11119
Circuit	Setting range	Factory setting
1	-60 ... 20 °C	15 °C
Set the outdoor temperature for the low flow / power limitation.		

The corresponding Y coordinate is set in 'Low limit Y1'.

Installation Guide ECL Comfort 210, application A266

Low limit Y1 (flow / power limitation, low limit, Y-axis) 11117		
Circuit	Setting range	Factory setting
1	0.0 ... 999.9 l/h	999.9 l/h
Set the flow / power limitation referring to the outdoor temperature set in 'High T out X1'.		



The limitation function can overrule the set 'Temp. min' of the desired flow temperature.

The corresponding X coordinate is set in 'High T out X1'.

Low T out X2 (flow / power limitation, low limit, X-axis) 11118		
Circuit	Setting range	Factory setting
1	-60 ... 20 °C	-15 °C
Set the outdoor temperature for the high flow / power limitation.		

The corresponding Y coordinate is set in 'High limit Y2'.

High limit Y2 (flow / power limitation, high limit, Y-axis) 11116		
Circuit	Setting range	Factory setting
1	0.0 ... 999.9 l/h	999.9 l/h
Set the flow / power limitation referring to the outdoor temperature set in 'Low T out X2'.		

The corresponding X coordinate is set in 'Low T out X2'.

Adapt. time (adaptation time) 11112		
Circuit	Setting range	Factory setting
1	OFF / 1 ... 50 s	OFF
Controls how fast the flow / power limitation adapts to the desired limitation.		

OFF: The control function is not influenced by the 'Adapt. time'.

1: The desired temperature is adapted slowly.

50: The desired temperature is adapted quickly.

Actual filter 11113		
Circuit	Setting range	Factory setting
1	1 ... 50	10
The actual filter dampens the flow / power input data by the set factor.		

1: No filtering.

2: Fast (low filter constant)

50: Slow (high filter constant)

Installation Guide ECL Comfort 210, application A266

Input type 11109		
Circuit	Setting range	Factory setting
1	OFF / IM1	OFF
Choice of pulse type from input S7.		

OFF: No input.

IM1: Pulse.

Units 11115		
Circuit	Setting range	Factory setting
1	See the list	ml, l/h
Choice of units for measured values.		

Units to the left: pulse value.

Units to the right: actual and limitation values.

The value from the flow meter is expressed as ml or l.

The value from the heat meter is expressed as Wh, kWh, MWh or GWh.

The values for the actual flow and the flow limitation are expressed as l/h or m³/h.

The values for the actual power and the power limitation are expressed as kW, MW or GW.



List for setting range of 'Units':

ml, l/h
l, l/h
ml, m³/h
l, m³/h
Wh, kW
kWh, kW
kWh, MW
MWh, MW
MWh, GW
GWh, GW

Example 1:

'Units' (11115): l, m³/h

'Pulse' (11114): 10

Each pulse represents 10 litres and the flow is expressed as cubic meters (m³) per hour.

Example 2:

'Units' (11115): kWh, kW (= kilo Watt hour, kilo Watt)

'Pulse' (11114): 1

Each pulse represents 1 kilo Watt hour and the power is expressed in kilo Watt.

Pulse 11114		
Circuit	Setting range	Factory setting
1	OFF / 1 ... 9999	10
Set the value of the pulses from the flow / heat meter.		

OFF: No input.

1 ... 9999: Pulse value.

Example :

One pulse can represent a number of litres (from a flow meter) or a number of kWh (from a heat meter).


Installation Guide ECL Comfort 210, application A266

5.5 Optimization

Auto saving (saving temp. dependent on outdoor temp.) 11011		
Circuit	Setting range	Factory setting
1	OFF / -29 ... 10 °C	-15 °C
Below the set value for the outdoor temperature, the saving temperature setting has no influence. Above the set value for the outdoor temperature, the saving temperature relates to the actual outdoor temperature. The function is relevant in district heating installations in order to avoid a big change in the desired flow temperature after a saving period.		

- OFF:** The saving temperature does not depend on the outdoor temperature.
- 29 ... 10:** The saving temperature depends on the outdoor temperature. When the outdoor temperature is above 10 °C, the reduction is 100%. The lower the outdoor temperature, the less the temperature reduction. When the outdoor temperature is below the set limit, there is no temperature reduction.

The comfort and the saving temperatures are set in the display overviews. The difference between the comfort and the saving temperature is considered to be 100%. Depending on the outdoor temperature, the percentage value can be lower according to the set value in 'Auto saving'.

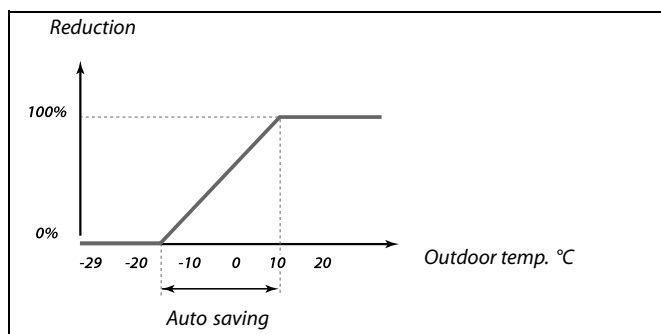

Example:

Outdoor temp.:	-5 °C
Desired room temp. in Comfort mode:	22 °C
Desired room temp. in Saving mode:	16 °C
Setting in 'Auto saving':	-15 °C

The drawing above illustrates that the reduction percentage at an outdoor temperature of -5 °C is 40%.

The difference between Comfort and Saving temperature is (22-16) = 6 degrees.

40% of 6 degrees = 2.4 degrees

The 'Auto saving' temperature is corrected to (22-2.4) = 19.6 °C.

Boost 11012		
Circuit	Setting range	Factory setting
1	OFF / 1 ... 99%	OFF
Shortens the heating-up period by increasing the desired flow temperature by the percentage you set.		

- OFF:** The boost function is not active.
- 1-99%:** The desired flow temperature is increased temporarily with the set percentage.

In order to shorten the heating-up period after a saving temperature period, the desired flow temperature can be increased temporarily (max. 1 hour). At optimizing the boost is active in the optimization period ('Optimizer').

If a room temperature sensor or an ECA 30 / 31 is connected, the boost stops when the room temperature is reached.


Installation Guide ECL Comfort 210, application A266

Ramp (reference ramping)		11013
Circuit	Setting range	Factory setting
1	OFF / 1 ... 99 m	OFF
The time (minutes) in which the desired flow temperature increases gradually to avoid load peaks in the heat supply.		

OFF: The ramping function is not active.

1-99 m: The desired flow temperature is increased gradually with the set minutes.

In order to avoid load peaks in the supply network, the flow temperature can be set to increase gradually after a period with saving temperature. This causes the valve to open gradually.

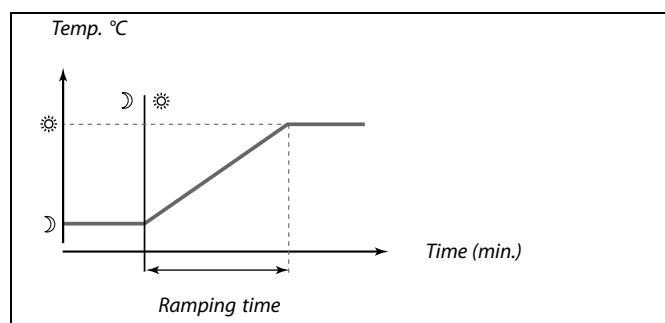

Optimizer (optimizing time constant)		11014
Circuit	Setting range	Factory setting
1	OFF / 10 ... 59	OFF
Optimizes the start and stop times for the comfort temperature period to obtain the best comfort at the lowest energy consumption. The lower the outdoor temperature, the earlier the heating cut-in. The lower the outdoor temperature, the later the heating cut-out. The optimized heating cut-out time can be automatic or disabled. The calculated start and stop times are based on the setting of the optimizing time constant.		

Adjust the optimizing time constant.

The value consists of a two digit number. The two digits have the following meaning (digit 1 = Table I, digit 2 = Table II).

OFF: No optimization. The heating starts and stops at the times set in the schedule.

10 ... 59: See tables I and II.

Table I:

Left digit	Heat accumulation of the building	System type
1-	light	Radiator systems
2-	medium	
3-	heavy	
4-	medium	Floor heating systems
5-	heavy	

Table II:

Right digit	Dimensioning temperature	Capacity
-0	-50 °C	large
-1	-45 °C	.
.	.	.
-5	-25 °C	normal
.	.	.
-9	-5 °C	small

Dimensioning temperature:

The lowest outdoor temperature (usually determined by your system designer in connection with the design of the heating system) at which the heating system can maintain the designed room temperature.

Example

The system type is radiator, and the heat accumulation of the building is medium.

The left digit is 2.

The dimensioning temperature is -25 °C, and the capacity is normal.

The right digit is 5.

Result:

The setting is to be changed to 25.


Installation Guide ECL Comfort 210, application A266

Pre-stop (optimized stop time)		11026
Circuit	Setting range	Factory setting
1	OFF / ON	ON
Disable the optimized stop time.		

OFF: The optimized stop time is disabled.

ON: The optimized stop time is enabled.

Example: Optimization of Comfort from 07:00 - 22:00

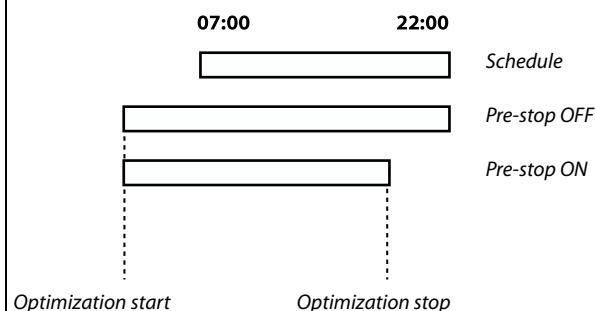

Based on (optimization based on room / outdoor temp.)		11020
Circuit	Setting range	Factory setting
1	OUT / ROOM	OUT
The optimized start and stop time can be based on either room or outdoor temperature.		

OUT: Optimization based on outdoor temperature. Use this setting if the room temperature is not measured.



ROOM: Optimization based on room temperature, if measured.

Total stop		11021
Circuit	Setting range	Factory setting
1	OFF / ON	OFF
Decide whether you want a total stop during the saving temperature period.		

OFF: No total stop. The desired flow temperature is reduced according to:

- desired room temperature in saving mode
- auto saving

ON: The desired flow temperature is lowered to the set value in 'Frost pr.'. The circulation pump is stopped but frost protection is still active, see 'P frost T'.

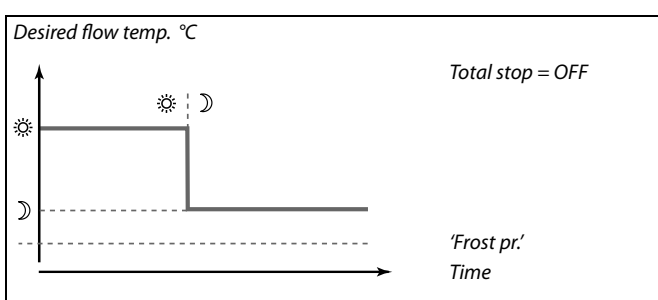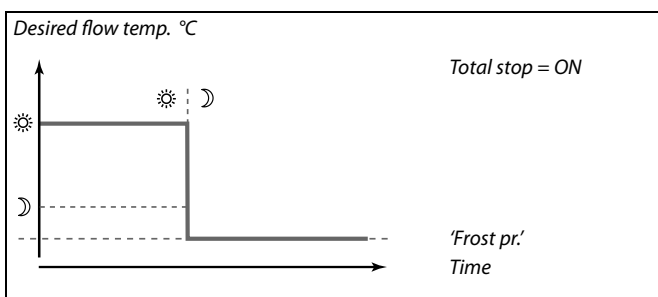

The min. flow temperature limitation ('Temp. min.') is overruled when 'Total stop' is ON.

Installation Guide ECL Comfort 210, application A266


Cut-out (limit for heating cut-out)		11179
Circuit	Setting range	Factory setting
1	OFF / 1 ... 50 °C	20 °C

The heating can be switched OFF when the outdoor temperature is higher than the set value. The valve closes and after the post-run time, the heating circulation pump stops. 'Temp. min.' will be overruled.

The heating system switches ON again when the outdoor temperature and the accumulated (filtered) outdoor temperature become lower than the set limit.

This function can save energy.

Set the value for outdoor temperature at which you want the heating system to switch OFF.

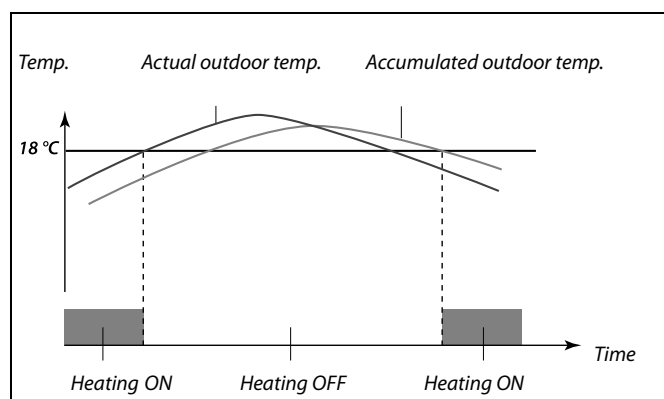

The heating cut-out is only active when the controller mode is in scheduled operation. When the cut-out value is set to OFF, there is no heating cut-out.


Cut-out (limit for heating cut-out) — A266.9		11179
Circuit	Setting range	Factory setting
1	OFF / 1 ... 50 °C	18 °C

The heating can be switched OFF when the outdoor temperature is higher than the set value. The valve closes and after the post-run time, the heating circulation pump stops. 'Temp. min.' will be overruled.

The heating system switches ON again when the outdoor temperature and the accumulated (filtered) outdoor temperature become lower than the set limit.

This function can save energy.

Set the value for outdoor temperature at which you want the heating system to switch OFF.

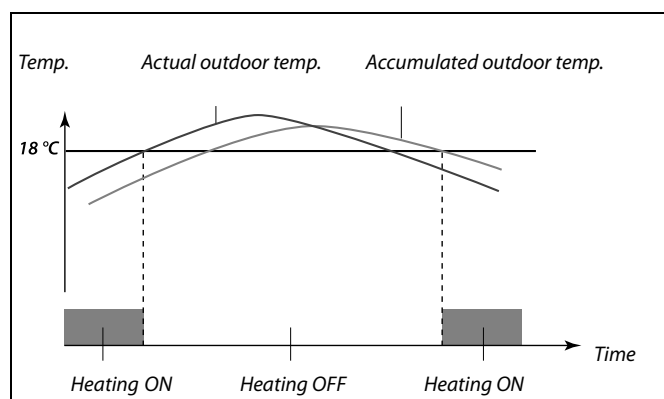


The heating cut-out is only active when the controller mode is in scheduled operation. When the cut-out value is set to OFF, there is no heating cut-out.

Installation Guide ECL Comfort 210, application A266

Parallel operation		11043
Circuit	Setting range	Factory setting
1	OFF / 1 ... 99 K	OFF
Choose whether the heating circuit is to operate in dependence of the DHW circuit. This function might be useful if an installation has limited power or flow.		

OFF: Independent parallel operation, i.e. the DHW and the heating circuits operate independently of each other. It makes no difference whether the desired DHW temperature can be reached or not.

1 ... 99 K: Dependent parallel operation, i.e. the desired heating temperature depends on the DHW demand. Choose how much the DHW temperature can drop before the desired heating temperature has to be decreased.

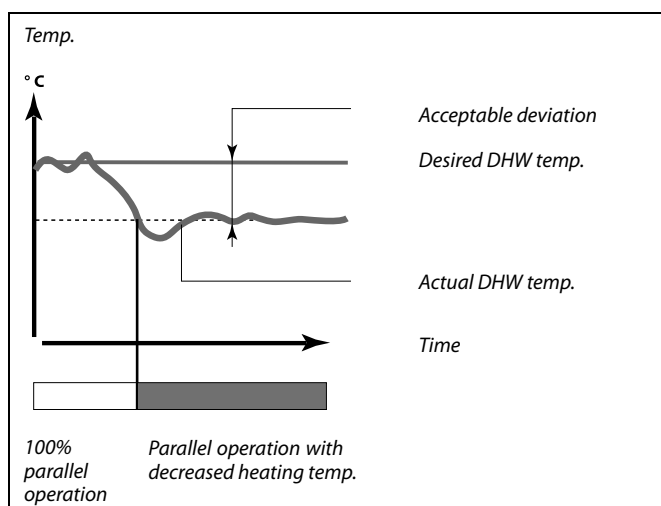

If the actual DHW temperature deviates more than the set value, the gear motor M2 in the heating circuit will gradually close to such an extent that the DHW temperature stabilizes at the lowest acceptable value.

Installation Guide ECL Comfort 210, application A266

5.6 Control parameters

Motor pr. (motor protection) 11174		
Circuit	Setting range	Factory setting
1	OFF / 10 ... 59 m	OFF
Prevents the controller from unstable temperature control (and resulting actuator oscillations). This can occur at very low load. The motor protection increases the lifetime of all involved components.		



Recommended for heating systems with variable load.

OFF: Motor protection is not activated.

10 ... 59: Motor protection is activated after the set activation delay in minutes.

Xp (proportional band) 11184		
Circuit	Setting range	Factory setting
1	5 ... 250 K	80 K

Set the proportional band. A higher value will result in a stable but slow control of the flow temperature.

Xp (proportional band) — A266.9 11184		
Circuit	Setting range	Factory setting
1	5 ... 250 K	85 K

Set the proportional band. A higher value will result in a stable but slow control of the flow temperature.

Tn (integration time constant) 11185		
Circuit	Setting range	Factory setting
1	1 ... 999 s	30 s

Set a high integration time constant (in seconds) to obtain a slow but stable reaction to deviations.

A low integration time constant will make the controller react fast but with less stability.

Tn (integration time constant) — A266.9 11185		
Circuit	Setting range	Factory setting
1	1 ... 999 s	25 s

Set a high integration time constant (in seconds) to obtain a slow but stable reaction to deviations.

A low integration time constant will make the controller react fast but with less stability.

Installation Guide ECL Comfort 210, application A266

M run (running time of the motorized control valve) 11186		
Circuit	Setting range	Factory setting
1	5 ... 250 s	50 s

'M run' is the time in seconds it takes the controlled component to move from fully closed to fully open position. Set the 'M run' according to the examples or measure the running time by means of a stop watch.

How to calculate the running time of a motorized control valve
The running time of the motorized control valve is calculated using the following methods:

Seated valves

Running time = Valve stroke (mm) x actuator speed (sec. / mm)

Example: $5.0 \text{ mm} \times 15 \text{ sec. / mm} = 75 \text{ sec.}$

Rotating valves

Running time = Turning degrees x actuator speed (sec. / degr.)

Example: $90 \text{ degr.} \times 2 \text{ sec. / degr.} = 180 \text{ sec.}$

M run (running time of the motorized control valve) — A266.9 11186		
Circuit	Setting range	Factory setting
1	5 ... 250 s	120 s

'M run' is the time in seconds it takes the controlled component to move from fully closed to fully open position. Set the 'M run' according to the examples or measure the running time by means of a stop watch.

How to calculate the running time of a motorized control valve
The running time of the motorized control valve is calculated using the following methods:

Seated valves

Running time = Valve stroke (mm) x actuator speed (sec. / mm)

Example: $5.0 \text{ mm} \times 15 \text{ sec. / mm} = 75 \text{ sec.}$

Rotating valves

Running time = Turning degrees x actuator speed (sec. / degr.)

Example: $90 \text{ degr.} \times 2 \text{ sec. / degr.} = 180 \text{ sec.}$

Nz (neutral zone) 11187		
Circuit	Setting range	Factory setting
1	1 ... 9 K	3 K

Set the acceptable flow temperature deviation.

Set the neutral zone to a high value if you can accept a high variation in flow temperature. When the actual flow temperature is within the neutral zone, the controller does not activate the motorized control valve.



The neutral zone is symmetrical around the desired flow temperature value, i.e. half the value is above and half the value is below this temperature.

Nz (neutral zone) — A266.9 11187		
Circuit	Setting range	Factory setting
1	1 ... 9 K	2 K

Set the acceptable flow temperature deviation.


Set the neutral zone to a high value if you can accept a high variation in flow temperature. When the actual flow temperature is within the neutral zone, the controller does not activate the motorized control valve.



The neutral zone is symmetrical around the desired flow temperature value, i.e. half the value is above and half the value is below this temperature.

If you want to tune the PI regulation precisely, you can use the following method:

- Set the 'Tn' (integration time constant) to its max. value (999 sec.).
- Decrease the value for the 'Xp' (proportional band) until the system starts hunting (i.e. gets unstable) with a constant amplitude (it might be necessary to force the system by setting an extreme low value).
- Find the critical time period on the temperature recorder or use a stop watch.

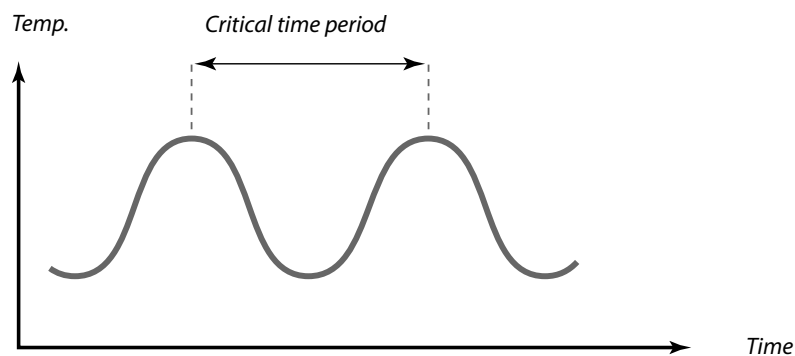

This critical time period will be characteristic for the system, and you can evaluate the settings from this critical period.

'Tn' = 0.85 x critical time period

'Xp' = 2.2 x proportional band value in the critical time period

If the regulation seems to be too slow, you can decrease the proportional band value by 10%. Make sure there is a consumption when you set the parameters.

Installation Guide ECL Comfort 210, application A266

5.7 Application

ECA addr. (choice of Remote Control Unit) 11010		
Circuit	Setting range	Factory setting
1	OFF / A / B	OFF
Decides the communication with the Remote Control Unit.		

- OFF:** No Remote Control Unit. Only room temperature sensor, if any.
- A:** Remote Control Unit ECA 30 / 31 with address A.
- B:** Remote Control Unit ECA 30 / 31 with address B.



The Remote Control Unit has no influence on the DHW control.



The Remote Control Unit must be set accordingly (A or B).

P exercise (pump exercise) 11022		
Circuit	Setting range	Factory setting
1	OFF / ON	ON
Exercises the pump to avoid blocking in periods without heat demand.		

- OFF:** The pump exercise is not active.
- ON:** The pump is switched ON for 1 minute every third day at noon (12:14 hours).

M exercise (valve exercise) 11023		
Circuit	Setting range	Factory setting
1	OFF / ON	OFF
Exercises the valve to avoid blocking in periods without heat demand.		

- OFF:** The valve exercise is not active.
- ON:** The valve opens for 7 minutes and closes for 7 minutes every third day at noon (12:00 hours).

DHW priority (closed valve / normal operation) 11052		
Circuit	Setting range	Factory setting
1	OFF / ON	OFF
The heating circuit can be closed when the controller acts as slave and when DHW charging is active in the master.		



This setting must be considered if this controller is a slave.

- OFF:** The flow temperature control remains unchanged during active DHW charging in the master controller.
- ON:** The valve in the heating circuit is closed* during active DHW charging in the master controller.
* The desired flow temperature is set to the value set in 'Frost pr. T'

Installation Guide ECL Comfort 210, application A266

P frost T		11077
Circuit	Setting range	Factory setting
1	OFF / -10 ... 20 °C	2 °C
When the outdoor temperature is below the set temperature in 'P frost T', the controller automatically switches ON the circulation pump to protect the system.		

OFF: No frost protection.

-10 ... 20: The circulation pump is ON when the outdoor temperature is below the set value.



Under normal conditions, your system is not frost protected if your setting is below 0 °C or OFF.
For water-based systems, a setting of 2 °C is recommended.

P heat T (heat demand)		11078
Circuit	Setting range	Factory setting
1	5 ... 40 °C	20 °C
When the desired flow temperature is above the set temperature in 'P heat T', the controller automatically switches ON the circulation pump.		

5 ... 40: The circulation pump is switched ON when the desired flow temperature is above the set value.



The valve is fully closed as long as the pump is not switched on.

Frost pr. T (frost protection temperature)		11093
Circuit	Setting range	Factory setting
1	5 ... 40 °C	10 °C
Set the desired flow temperature for example at heating cut-out, total stop etc. to protect the system against frost.		

5 ... 40: Desired frost protection temperature.


Ext. input (external override)		11141
Circuit	Setting range	Factory setting
1	OFF / S1 ... S8	OFF
Choose the input for 'Ext. input' (external override). By means of a switch the controller can be overridden to Comfort or Saving mode.		

OFF: No inputs have been selected for external override.

S1 ... S8: Input selected for external override.

If S1...S6 is chosen as override input, the override switch must have gold-plated contacts.
If S7 or S8 is chosen as override input, the override switch can be a standard contact.

See the drawing for a connection example of an override switch to input S8.

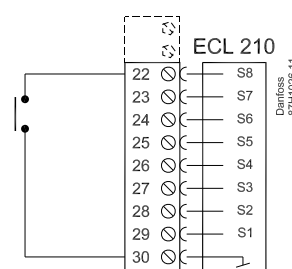

Choose only an unused input for override. If an already used input is applied for override, the functionality of this input is also neglected.



See also 'Ext. mode'.

Installation Guide ECL Comfort 210, application A266

Ext. mode (external override mode)		11142
Circuit	Setting range	Factory setting
1	COMFORT / SAVING	SAVING
Choose external override mode.		



See also 'Ext. input'.

The mode override can be activated for saving or comfort mode. For override, the controller mode must be scheduled mode.

SAVING: The controller is in saving mode when the override switch is closed.

COMFORT: The controller is in comfort mode when the override switch is closed.

Min. act. time (min. activation time gear motor)		11189
Circuit	Setting range	Factory setting
1	2 ... 50	10
The min. pulse period of 20 ms (milliseconds) for activation of the gear motor.		



The setting should be kept as high as acceptable to increase the lifetime of the actuator (gear motor).

Setting example	Value x 20 ms
2	40 ms
10	200 ms
50	1000 ms

Installation Guide ECL Comfort 210, application A266

5.8 Alarm

Many applications in the ECL Comfort 210 and 310 series have an alarm function. The alarm function typically activates relay 4 (ECL Comfort 210) or relay 6 (ECL Comfort 310).


The alarm relay can activate a lamp, a horn, an input to an alarm transmitting device etc. etc.

The relay in question is activated as long as the alarm condition is present.

Upper difference		11147
Circuit	Setting range	Factory setting
1	OFF / 1 ... 30 K	OFF
The alarm is activated if the actual flow temperature increases more than the set difference (acceptable temperature difference above the desired flow temperature). See also 'Delay'.		

OFF: The alarm function is not active.


1 ... 30 K: The alarm function is active if the actual temperature gets above the acceptable difference.

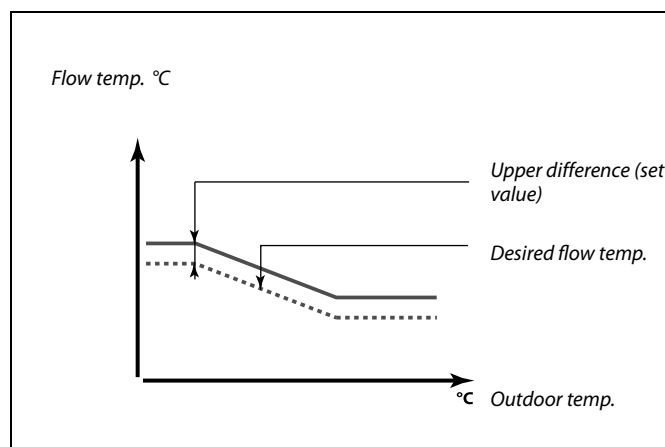

Lower difference		11148
Circuit	Setting range	Factory setting
1	OFF / 1 ... 30 K	OFF
The alarm is activated if the actual flow temperature decreases more than the set difference (acceptable temperature difference below the desired flow temperature). See also 'Delay'.		


OFF: The alarm function is not active.

1 ... 30 K: The alarm function is active if the actual temperature gets below the acceptable difference.

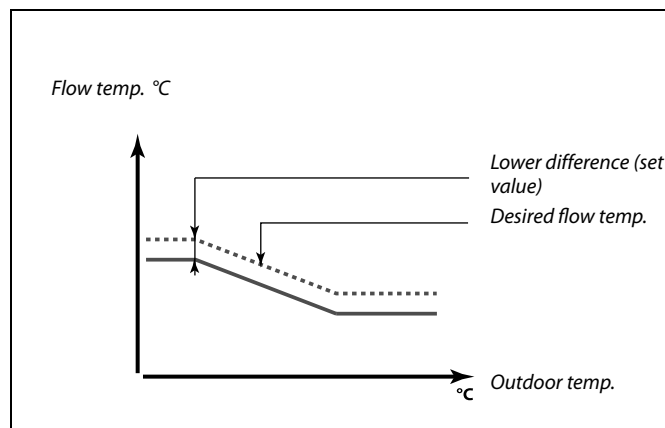

Delay		11149
Circuit	Setting range	Factory setting
1	1 ... 99 m	10 m
If an alarm condition from either 'Upper difference' or 'Lower difference' is present for a longer time than the set delay (in min.), the alarm function is activated.		

1 ... 99 m: The alarm function will be activated if the alarm condition remains after the set delay.

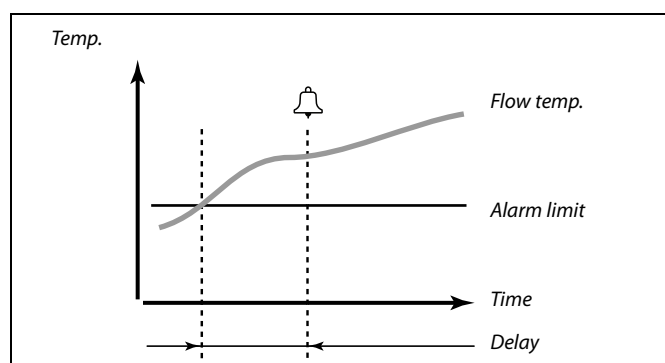

Installation Guide ECL Comfort 210, application A266

Lowest temp.		11150
Circuit	Setting range	Factory setting
1	10 ... 50 °C	30 °C
The alarm function will not be activated if the desired flow temperature is lower than the set value.		


Alarm high — A266.9		11614
Circuit	Setting range	Factory setting
1	0.0 ... 6.0	2.3
The pressure alarm is activated when the measured signal (see 'Low X', 'High X', 'Low Y' and 'High Y') is above the set limit.		

Alarm low — A266.9		11615
Circuit	Setting range	Factory setting
1	0.0 ... 6.0	0.8
The pressure alarm is activated when the measured signal (see 'Low X', 'High X', 'Low Y' and 'High Y') is below the set limit.		

Alarm time-out — A266.9		11617
Circuit	Setting range	Factory setting
1	0 ... 240 s	30 s
The pressure alarm is activated when the measured signal has been above or below the limits for a longer time (in seconds) than the set value.		

Low X — A266.9		11607
Circuit	Setting range	Factory setting
1	0.0 ... 10.0	1.0
The pressure is measured by means of a pressure transmitter. The transmitter sends the measured pressure as a 0-10 V or a 4-20 mA signal.		
A voltage signal can be applied directly to input S7. A current signal is converted by means of a resistor to a voltage and then applied to input S7. The measured voltage on input S7 must be converted to a pressure value by the controller. This and following 3 settings set up the scaling.		
'Low X' defines the voltage value for the lowest pressure value ('Low Y').		

Example: Relationship between input voltage and indicated pressure

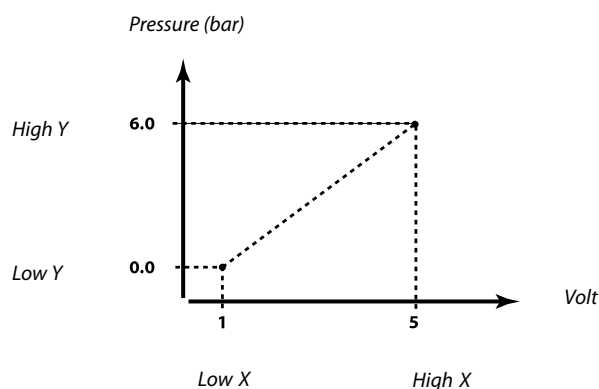

This example shows that 1 volt corresponds to 0.0 bar and 5 volt correspond to 6.0 bar.

High X — A266.9		11608
Circuit	Setting range	Factory setting
1	0.0 ... 10.0	5.0
The measured voltage on input S7 must be converted to a pressure value. High X defines the voltage value for the highest pressure value ('High Y').		

Installation Guide ECL Comfort 210, application A266

Low Y — A266.9		11609
Circuit	Setting range	Factory setting
1	0.0 ... 10.0	0.0
The measured voltage on input S7 must be converted to a pressure value. Low Y defines the pressure value for the lowest voltage value ('Low X').		

High Y — A266.9		11610
Circuit	Setting range	Factory setting
1	0.0 ... 10.0	6.0
The measured voltage on input S7 must be converted to a pressure value. High Y defines the pressure value for the highest voltage value ('High X').		

Alarm value — A266.9		11636
Circuit	Setting range	Factory setting
1	0 / 1	1
The alarm is based on a digital input applied to S8.		

0: The alarm function is active when a switch is open.

1: The alarm function is active when a switch is closed.

Alarm time-out — A266.9		11637
Circuit	Setting range	Factory setting
1	0 ... 240 s	30 s
The alarm is activated when the switch has been closed or opened for a longer time (in seconds) than the set value.		

Flow T — A266.2 / A266.9		11079
Circuit	Setting range	Factory setting
1	10 ... 110 °C	90 °C
The alarm is activated when the flow temperature exceeds the set value.		

Delay — A266.2		11180
Circuit	Setting range	Factory setting
1	5 ... 250 s	5 s
The alarm is activated when the flow temperature has been above the limit set in 'Max. temperature' for a longer time (in seconds) than the set value.		

Installation Guide ECL Comfort 210, application A266

Delay — A266.9		11180
Circuit	Setting range	Factory setting
1	5 ... 250 s	60 s
The alarm is activated when the flow temperature has been above the limit set in 'Max. temperature' for a longer time (in seconds) than the set value.		

Installation Guide ECL Comfort 210, application A266


6.0 Settings, circuit 2

6.1 Flow temperature


The ECL Comfort 210 controls the DHW temperature according to the desired flow temperature for example under the influence of the return temperature.

The desired DHW temperature is set in the overview display.

- 50.3: Actual DHW temperature
- 50: Desired DHW temperature

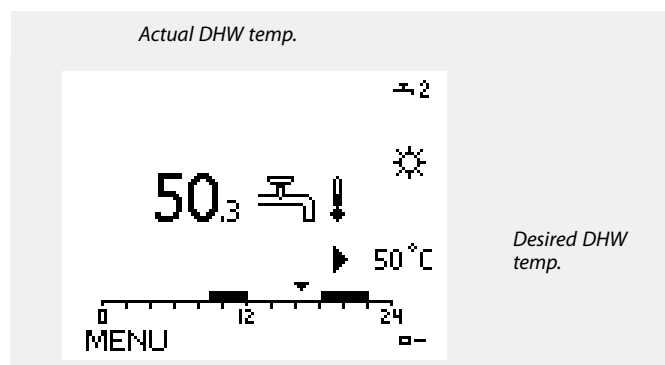


Temp. max. (flow temp. limit, max.) 12178		
Circuit	Setting range	Factory setting
2	10 ... 150 °C	90 °C

 The setting for 'Temp. max.' has higher priority than 'Temp. min.'.


Choose the allowed max. flow temperature for your system.
Adjust the factory setting, if required.

Temp. max. (flow temp. limit, max.) — A266.9 12178		
Circuit	Setting range	Factory setting
2	10 ... 150 °C	65 °C

 The setting for 'Temp. max.' has higher priority than 'Temp. min.'.


Choose the allowed max. flow temperature for your system.
Adjust the factory setting, if required.

Temp. min. (flow temp. limit, min.) 12177		
Circuit	Setting range	Factory setting
2	10 ... 150 °C	10 °C

 The setting for 'Temp. max.' has higher priority than 'Temp. min.'.

Choose the allowed min. flow temperature for your system.
Adjust the factory setting, if required.

Temp. min. (flow temp. limit, min.) — A266.9 12177		
Circuit	Setting range	Factory setting
2	10 ... 150 °C	45 °C

 The setting for 'Temp. max.' has higher priority than 'Temp. min.'.

Choose the allowed min. flow temperature for your system.
Adjust the factory setting, if required.


Installation Guide ECL Comfort 210, application A266

6.2 Return limit

The return temperature limitation is based on a constant temperature value.

The controller automatically changes the desired flow temperature to obtain an acceptable return temperature when the return temperature falls below or gets higher than the set limit.

This limitation is based on a PI regulation where P ('Infl.' factor) responds quickly to deviations and I ('Adapt. time') responds slower and over time removes the small offsets between the desired and actual values. This is done by changing the desired flow temperature.

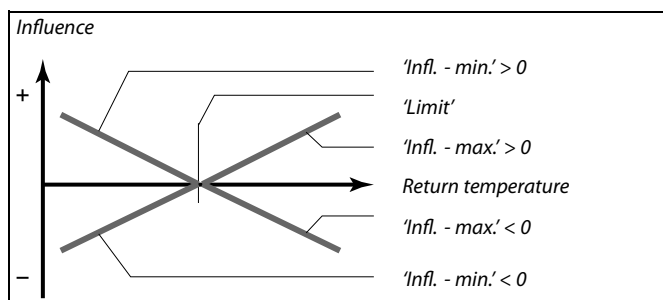

If the 'Infl.' factor is too high and / or the 'Adapt. time' too low, there is a risk of unstable control.

Limit (return temp. limitation)		12030
Circuit	Setting range	Factory setting
2	10 ... 150 °C	30 °C
Set the return temperature you accept for the system.		

When the return temperature falls below or gets higher than the set value, the controller automatically changes the desired flow temperature to obtain an acceptable return temperature. The influence is set in 'Infl. - max.' and 'Infl. - min.'.

Infl. - max. (return temp. limitation - max. influence)		12035
Circuit	Setting range	Factory setting
2	-9.9 ... 9.9	0.0
Determines how much the desired flow temperature will be influenced if the return temperature is higher than the desired limit (see 'Limit').		

Influence higher than 0:

The desired flow temperature is increased, when the return temperature gets higher than the set limit.

Influence lower than 0:

The desired flow temperature is decreased, when the return temperature gets higher than the set limit.

Example

The return limit is active above 50 °C.

The influence is set to -2.0.

The actual return temperature is 2 degrees too high.

Result:

The desired flow temperature is changed by $-2.0 \times 2 = -4.0$ degrees.



Normally, this setting is lower than 0 in district heating systems to avoid a too high return temperature.

Typically, this setting is 0 in boiler systems because a higher return temperature is acceptable (see also 'Infl. - min.').

Infl. - min. (return temp. limitation - min. influence)		12036
Circuit	Setting range	Factory setting
2	-9.9 ... 9.9	0.0
Determines how much the desired flow temperature will be influenced if the return temperature is lower than the desired limit (see 'Limit').		

Influence higher than 0:

The desired flow temperature is increased, when the return temperature gets below the set limit.

Influence lower than 0:

The desired flow temperature is decreased, when the return temperature gets below the set limit.



Normally, this setting is 0 in district heating systems because a lower return temperature is acceptable.

Typically, this setting is higher than 0 in boiler systems to avoid a too low return temperature (see also 'Infl. - max.').

Installation Guide ECL Comfort 210, application A266

Adapt. time (adaptation time)		12037
Circuit	Setting range	Factory setting
2	OFF / 1 ... 50 s	25 s
Controls how fast the return temperature adapts to the desired return temperature limit (I control).		



The adaptation function can correct the desired flow temperature with max. 8 K.

- OFF:** The control function is not influenced by the 'Adapt. time'.
- 1:** The desired temperature is adapted quickly.
- 50:** The desired temperature is adapted slowly.

Priority (priority for return temp. limitation)		12085
Circuit	Setting range	Factory setting
2	OFF / ON	OFF
Choose whether the return temperature limitation should overrule the set min. flow temperature 'Temp. min.'.		


- OFF:** The min. flow temperature limit is not overruled.
- ON:** The min. flow temperature limit is overruled.

Installation Guide ECL Comfort 210, application A266

6.3 Flow / power limit

A flow or heat meter can be connected to the ECL controller in order to limit the flow or consumed power. The signal from the flow or heat meter is a pulse signal.

When the flow / power gets higher than the set limit, the controller gradually reduces the desired DHW temperature to obtain an acceptable max. flow or power consumption.

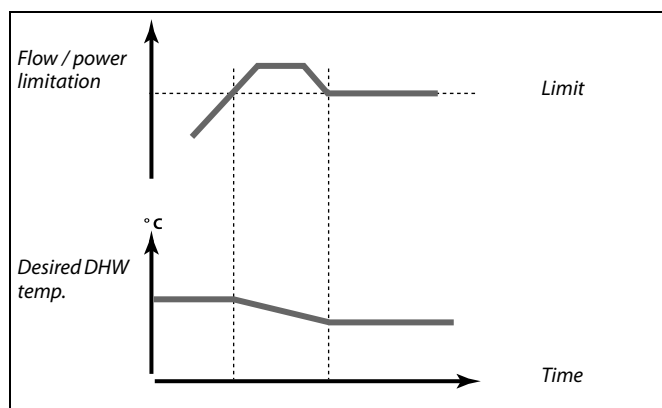

Actual (actual flow or power) 12110		
Circuit	Setting range	Factory setting
2	Read-out only	
The value is the actual flow or power based on the signal from flow / heat meter, converted in the controller.		

Limit (limitation value) 12111		
Circuit	Setting range	Factory setting
2	0.0 ... 999.9 l/h	999.9 l/h
Set the limitation value.		

Adapt. time (adaptation time) 12112		
Circuit	Setting range	Factory setting
2	OFF / 1 ... 50 s	OFF
Controls how fast the flow / power limitation adapts to the desired limitation.		

OFF: The control function is not influenced by the 'Adapt. time'.

1: The desired temperature is adapted slowly.

50: The desired temperature is adapted quickly.

Actual filter 12113		
Circuit	Setting range	Factory setting
2	1 ... 50	10
The actual filter dampens the flow / power input data by the set factor.		

1: No filtering.

2: Fast (low filter constant)

50: Slow (high filter constant)

Installation Guide ECL Comfort 210, application A266

Input type 12109		
Circuit	Setting range	Factory setting
2	OFF / IM1	OFF
Choice of pulse type from input S7.		

OFF: No input.

IM1: Pulse.

Units 12115		
Circuit	Setting range	Factory setting
2	See the list	ml, l/h
Choice of units for measured values.		

Units to the left: pulse value.

Units to the right: actual and limitation values.

The value from the flow meter is expressed as ml or l.

The value from the heat meter is expressed as Wh, kWh, MWh or GWh.

The values for the actual flow and the flow limitation are expressed as l/h or m³/h.

The values for the actual power and the power limitation are expressed as kW, MW or GW.



List for setting range of 'Units':

ml, l/h
l, l/h
ml, m³/h
l, m³/h
Wh, kW
kWh, kW
kWh, MW
MWh, MW
MWh, GW
GWh, GW

Example 1:

'Units' (12115): l, m³/h

'Pulse' (12114): 10

Each pulse represents 10 litres and the flow is expressed as cubic meters (m³) per hour.

Example 2:

'Units' (12115): kWh, kW (= kilo Watt hour, kilo Watt)

'Pulse' (12114): 1

Each pulse represents 1 kilo Watt hour and the power is expressed in kilo Watt.

Pulse 12114		
Circuit	Setting range	Factory setting
2	OFF / 1 ... 9999	10
Set the value of the pulses from the flow / heat meter.		

OFF: No input.

1 ... 9999: Pulse value.

Example :

One pulse can represent a number of litres (from a flow meter) or a number of kWh (from a heat meter).

Installation Guide ECL Comfort 210, application A266

6.4 Control parameters

Auto tuning 12173		
Circuit	Setting range	Factory setting
2	OFF / ON	OFF
Automatically determines the control parameters for the DHW control. 'Xp' 'Tn' and 'M run' do not need to be set, when using auto tuning. 'Nz' must be set.		

OFF: Auto tuning is not activated.

ON: Auto tuning is activated.

The auto tuning function automatically determines the control parameters for DHW control. Thus you do not need to set the 'Xp', 'Tn' and 'M run', as they are automatically set when the auto tuning function is set to ON.

Auto tuning is typically used in connection with the installation of the controller, but it can be activated when needed, e.g. for an extra check of the control parameters.

Before starting the auto tuning, the tapping flow should be adjusted to the relevant value (see table).

If possible, any additional DHW consumption should be avoided during the auto tuning process. Should the tapping load vary too much, the auto tuning and controller will return to the default settings.

Auto tuning is activated by setting the function to ON. When the auto tuning is ended, the function is automatically converted to OFF (default setting). This will be indicated in the display.

The auto tuning process takes up to 25 minutes.

No. of apartments	Heat transfer (kW)	Constant tapping load (l / min)
1-2	30-49	3 (or 1 tap 25% open)
3-9	50-79	6 (or 1 tap 50% open)
10-49	80-149	12 (or 1 tap 100% open)
50-129	150-249	18 (or 1 tap 100% + 1 tap 50% open)
130-210	250-350	24 (or 2 taps 100% open)



In order to meet the summer- / winter variations, the ECL clock must be set to the correct date for an successful auto tuning.

The motor protection function ('Motor pr.') has to be deactivated during auto tuning. During auto tuning the circulation pump for tap water must be switched off. This is done automatically if the pump is controlled by the ECL controller.

Auto tuning is only applicable in connection with valves that are approved for auto tuning, i.e. the Danfoss types VB 2 and VM 2 with split characteristic as well as logarithmic valves such as VF and VFS.

Motor pr. (motor protection) 12174		
Circuit	Setting range	Factory setting
2	OFF / 10 ... 59 m	OFF
Prevents the controller from unstable temperature control (and resulting actuator oscillations). This can occur at very low load. The motor protection increases the lifetime of all involved components.		

OFF: Motor protection is not activated.

10 ... 59: Motor protection is activated after the set activation delay (minutes).



Recommended for DHW systems with variable load.

Xp (proportional band) 12184		
Circuit	Setting range	Factory setting
2	5 ... 250 K	40 K

Set the proportional band. A higher value will result in a stable but slow control of the flow temperature.

Installation Guide ECL Comfort 210, application A266


Xp actual — A266.2		
Circuit	Setting range	Factory setting
2	Read-out only	
<i>'Xp actual' is the read-out of the actual Xp (proportional band) based on the supply temperature. Xp is determined by settings related to the supply temperature. Typically, the higher the supply temperature, the higher the Xp must be in order to achieve a stable temperature control.</i>		

Xp setting range: 5 ... 250 K
 Fixed supply temperature settings: 65 °C and 90 °C
 Factory settings: (65,40) and (90,120)

This means that the 'Xp' is 40 K at 65 °C supply temperature, and 'Xp' is 120 K at 90 °C.

Set the desired Xp values at the two fixed supply temperatures.

If the supply temperature is not measured (the supply temperature sensor is not connected), the Xp value at the setting 65 °C is used.

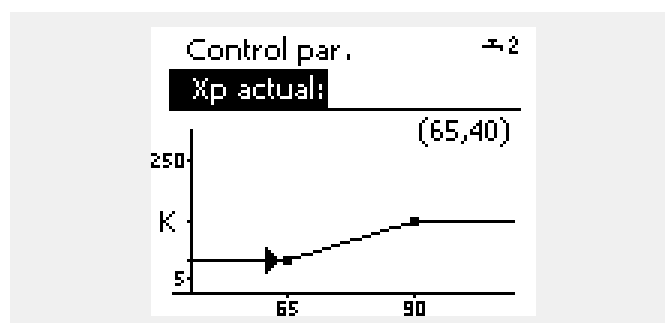

Xp (proportional band) — A266.9		12184
Circuit	Setting range	Factory setting
2	5 ... 250 K	90 K

Set the proportional band. A higher value will result in a stable but slow control of the flow temperature.

Tn (integration time constant)		12185
Circuit	Setting range	Factory setting
2	1 ... 999 s	20 s

Set a high integration time constant to obtain a slow but stable reaction to deviations.

A low integration time constant (in seconds) will make the controller react fast but with less stability.

Tn (integration time constant) — A266.9		12185
Circuit	Setting range	Factory setting
2	1 ... 999 s	13 s

Set a high integration time constant to obtain a slow but stable reaction to deviations.

A low integration time constant (in seconds) will make the controller react fast but with less stability.

Installation Guide ECL Comfort 210, application A266

M run (running time of the motorized control valve) 12186		
Circuit	Setting range	Factory setting
2	5 ... 250 s	20 s

'M run' is the time in seconds it takes the controlled component to move from fully closed to fully open position. Set the 'M run' according to the examples or measure the running time by means of a stop watch.

How to calculate the running time of a motorized control valve
The running time of the motorized control valve is calculated using the following methods:

Seated valves

Running time = Valve stroke (mm) x actuator speed (sec. / mm)

Example: $5.0 \text{ mm} \times 15 \text{ sec. / mm} = 75 \text{ sec.}$

Rotating valves

Running time = Turning degrees x actuator speed (sec. / degr.)

Example: $90 \text{ degr.} \times 2 \text{ sec. / degr.} = 180 \text{ sec.}$

M run (running time of the motorized control valve) — A266.9 12186		
Circuit	Setting range	Factory setting
2	5 ... 250 s	15 s

'M run' is the time in seconds it takes the controlled component to move from fully closed to fully open position. Set the 'M run' according to the examples or measure the running time by means of a stop watch.

How to calculate the running time of a motorized control valve
The running time of the motorized control valve is calculated using the following methods:

Seated valves

Running time = Valve stroke (mm) x actuator speed (sec. / mm)

Example: $5.0 \text{ mm} \times 15 \text{ sec. / mm} = 75 \text{ sec.}$

Rotating valves

Running time = Turning degrees x actuator speed (sec. / degr.)

Example: $90 \text{ degr.} \times 2 \text{ sec. / degr.} = 180 \text{ sec.}$

Nz (neutral zone) 12187		
Circuit	Setting range	Factory setting
2	1 ... 9 K	3 K

Set the acceptable flow temperature deviation.

Set the neutral zone to a high value if you can accept a high variation in flow temperature. When the actual flow temperature is within the neutral zone, the controller does not activate the motorized control valve.




The neutral zone is symmetrical around the desired flow temperature value, i.e. half the value is above and half the value is below this temperature.

Installation Guide ECL Comfort 210, application A266

If you want to tune the PI regulation precisely, you can use the following method:

- Set the 'Tn' (integration time constant) to its max. value (999 sec.).
- Decrease the value for the 'Xp' (proportional band) until the system starts hunting (i.e. gets unstable) with a constant amplitude (it might be necessary to force the system by setting an extreme low value).
- Find the critical time period on the temperature recorder or use a stop watch.

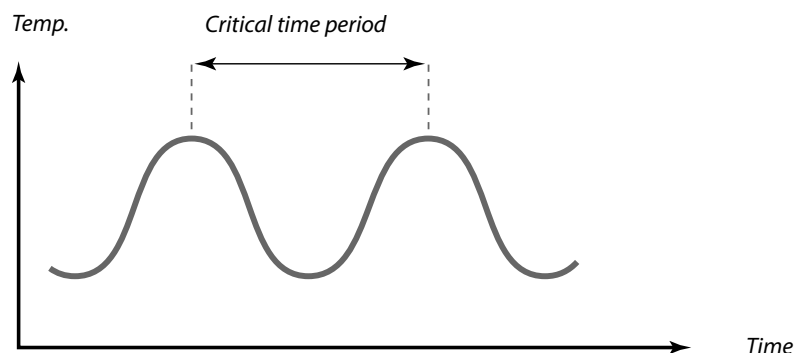

This critical time period will be characteristic for the system, and you can evaluate the settings from this critical period.

'Tn' = 0.85 x critical time period

'Xp' = 2.2 x proportional band value in the critical time period

If the regulation seems to be too slow, you can decrease the proportional band value by 10%. Make sure there is a consumption when you set the parameters.

Supply T (idle) — A266.2		12097
Circuit	Setting range	Factory setting
2	OFF / ON	OFF
The 'supply T (idle)' is the supply temperature when there is no DHW tapping. When tapping is not detected (the flow switch is deactivated), the temperature is maintained at a lower level (saving temperature). Choose which temperature sensor is to maintain the saving temperature.		



If the S6 temperature sensor is not connected, the idle supply temperature will be maintained at S4.

- OFF:** The saving temperature is maintained at the DHW flow temperature sensor (S4).
- ON:** The saving temperature is maintained at the supply temperature sensor (S6).

Tn (idle) — A266.2		12096
Circuit	Setting range	Factory setting
2	1 ... 999 s	120 s
When no tapping is detected (the flow switch is deactivated), the temperature is maintained at a low level (saving temperature). The integration time 'Tn (idle)' can be set to obtain a slow but stable control.		

Installation Guide ECL Comfort 210, application A266

Open time— A266.2		12094
Circuit	Setting range	Factory setting
2	OFF / 0.1... 25.0 s	4.0 s
<p>The 'Open time' is the forced time (in seconds) that it takes to open the motorized control valve when a tapping is detected (the flow switch is activated). This function compensates for the delay before the flow temperature sensor measures a change in temperature.</p>		

Close time— A266.2		12095
Circuit	Setting range	Factory setting
2	OFF / 0.1 ... 25.0 s	2.0 s
<p>The 'Close time' is the forced time (in seconds) that it takes to close the motorized control valve when a tapping is stopped (the flow switch is deactivated). This function compensates for the delay before the flow temperature sensor measures a change in temperature.</p>		

Installation Guide ECL Comfort 210, application A266

6.5 Application

P exercise (pump exercise)		12022
Circuit	Setting range	Factory setting
2	OFF / ON	OFF
Exercises the pump to avoid blocking in periods without heat demand.		

OFF: The pump exercise is not active.

ON: The pump is switched ON for 1 minute every third day at noon (12:14 hours).

P exercise (pump exercise) — A266.9		12022
Circuit	Setting range	Factory setting
2	OFF / ON	ON
Exercises the pump to avoid blocking in periods without heat demand.		

OFF: The pump exercise is not active.

ON: The pump is switched ON for 1 minute every third day at noon (12:14 hours).

M exercise (valve exercise)		12023
Circuit	Setting range	Factory setting
2	OFF / ON	OFF
Exercises the valve to avoid blocking in periods without heat demand.		

OFF: The valve exercise is not active.

ON: The valve opens for 7 minutes and closes for 7 minutes every third day at noon (12:00 hours).

P frost T		12077
Circuit	Setting range	Factory setting
2	OFF / -10 ... 20 °C	2 °C
When the outdoor temperature is below the set temperature in 'P frost T', the controller automatically switches ON the circulation pump to protect the system.		

OFF: No frost protection.

-10 ... 20: The circulation pump is ON when the outdoor temperature is below the set value.



Under normal conditions, your system is not frost protected if your setting is below 0 °C or OFF.
For water-based systems, a setting of 2 °C is recommended.

P heat T (heat demand)		12078
Circuit	Setting range	Factory setting
2	5 ... 40 °C	20 °C
When the desired flow temperature is above the set temperature in 'P heat T', the controller automatically switches ON the circulation pump.		



The valve is fully closed as long as the pump is not switched on.

5 ... 40: The circulation pump is switched ON when the desired flow temperature is above the set value.

Installation Guide ECL Comfort 210, application A266

Frost pr. T (frost protection temperature)		12093
Circuit	Setting range	Factory setting
2	5 ... 40 °C	10 °C
Set the desired flow temperature to protect the DHW system against frost.		

5 ... 40: Desired frost protection temperature.

Ext. input (external override)		12141
Circuit	Setting range	Factory setting
2	OFF / S1 ... S8	OFF
Choose the input for 'Ext. input' (external override). By means of a switch the controller can be overridden to Comfort or Saving mode.		


OFF: No inputs have been selected for external override.

S1 ... S8: Input selected for external override.

If S1...S6 is chosen as override input, the override switch must have gold-plated contacts.

If S7 or S8 is chosen as override input, the override switch can be a standard contact.

See the drawing for a connection example of an override switch to input S8.

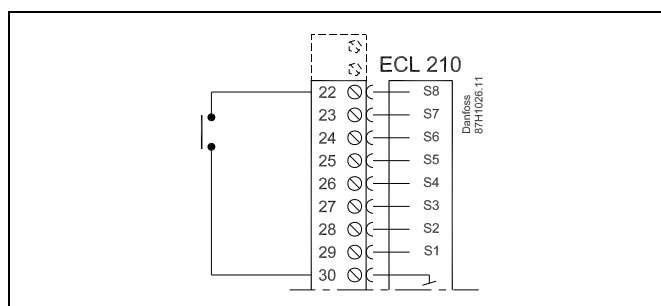

Choose only an unused input for override. If an already used input is applied for override, the functionality of this input is also overridden.



See also 'Ext. mode'.



See also 'Ext. input'.

Ext. mode (external override mode)		12142
Circuit	Setting range	Factory setting
2	COMFORT / SAVING	SAVING
Choose external override mode.		

The mode override can be activated for saving or comfort mode. For override, the controller mode must be scheduled mode.

SAVING: The controller is in saving mode when the override switch is closed.

COMFORT: The controller is in comfort mode when the override switch is closed.

Min. act. time (min. activation time gear motor)		12189
Circuit	Setting range	Factory setting
2	2 ... 50	3
The min. pulse period of 20 ms (milliseconds) for activation of the gear motor.		

Setting example	Value x 20 ms
2	40 ms
10	200 ms
50	1000 ms



The setting should be kept as high as acceptable to increase the lifetime of the actuator (gear motor).

Installation Guide ECL Comfort 210, application A266

Min. act. time (min. activation time gear motor) — A266.9 12189		
Circuit	Setting range	Factory setting
2	2 ... 50	10
The min. pulse period of 20 ms (milliseconds) for activation of the gear motor.		

Setting example	Value x 20 ms
2	40 ms
10	200 ms
50	1000 ms



The setting should be kept as high as acceptable to increase the lifetime of the actuator (gear motor).

Installation Guide ECL Comfort 210, application A266

6.6 Alarm

Many applications in the ECL Comfort 210 and 310 series have an alarm function. The alarm function typically activates relay 4 (ECL Comfort 210) or relay 6 (ECL Comfort 310).


The alarm relay can activate a lamp, a horn, an input to an alarm transmitting device etc. etc.

The relay in question is activated as long as the alarm condition is present.

Upper difference		12147
Circuit	Setting range	Factory setting
2	OFF / 1 ... 30 K	OFF
The alarm is activated if the actual flow temperature increases more than the set difference (acceptable temperature difference above the desired flow temperature). See also 'Delay'.		

OFF: The alarm function is not active.


1 ... 30 K: The alarm function is active if the actual temperature gets above the acceptable difference.

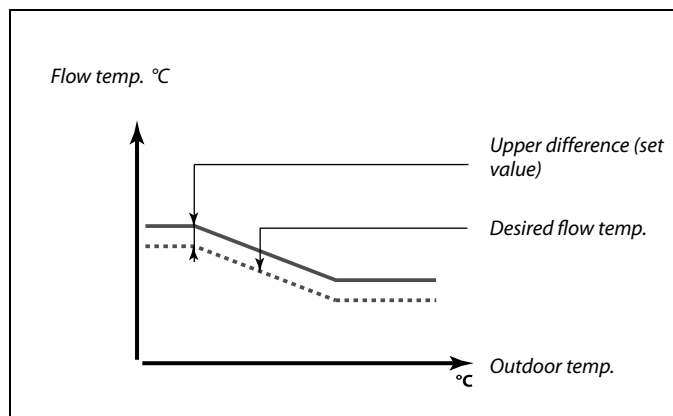

Lower difference		12148
Circuit	Setting range	Factory setting
2	OFF / 1 ... 30 K	OFF
The alarm is activated if the actual flow temperature decreases more than the set difference (acceptable temperature difference below the desired flow temperature). See also 'Delay'.		


OFF: The alarm function is not active.

1 ... 30 K: The alarm function is active if the actual temperature gets below the acceptable difference.

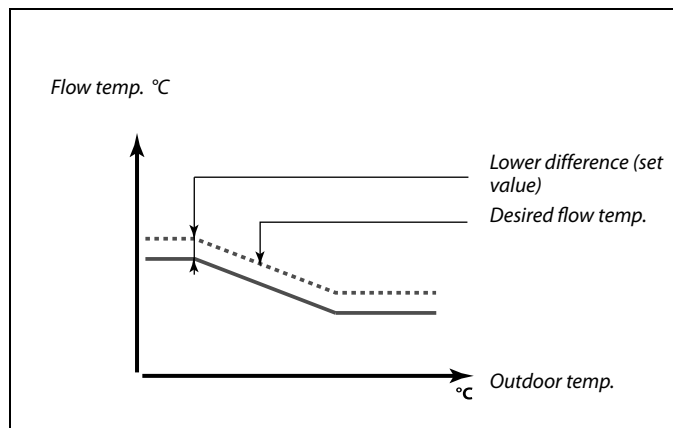

Delay		12149
Circuit	Setting range	Factory setting
2	1 ... 99 m	10 m
If an alarm condition from either 'Upper difference' or 'Lower difference' is present for a longer time than the set delay (in min.), the alarm function is activated.		

1 ... 99 m: The alarm function will be activated if the alarm condition remains after the set delay.

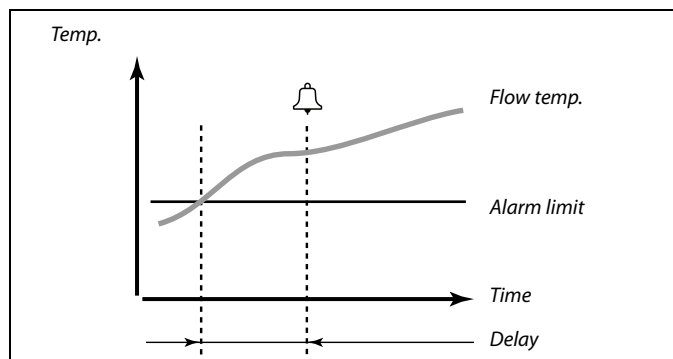



Installation Guide ECL Comfort 210, application A266

Lowest temp.		12150
<i>Circuit</i>	<i>Setting range</i>	<i>Factory setting</i>
2	10 ... 50 °C	30 °C
<i>The alarm function will not be activated if the desired flow temperature is lower than the set value.</i>		

6.7 Anti-bacteria

On selected days during the week the DHW temperature can be increased in order to neutralize bacteria in the DHW system. The desired DHW temperature 'Desired T' (typically 80 °C) will be present for the selected day(s) and duration.

The anti-bacteria function is not active in frost protection mode.

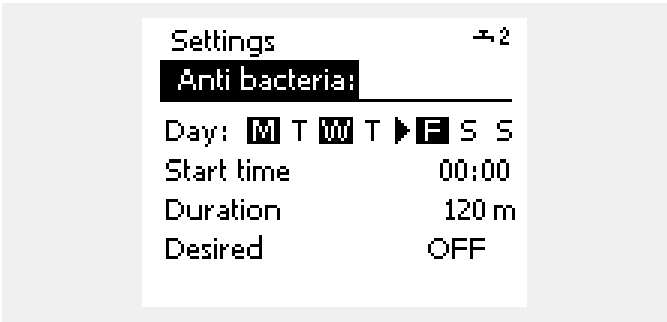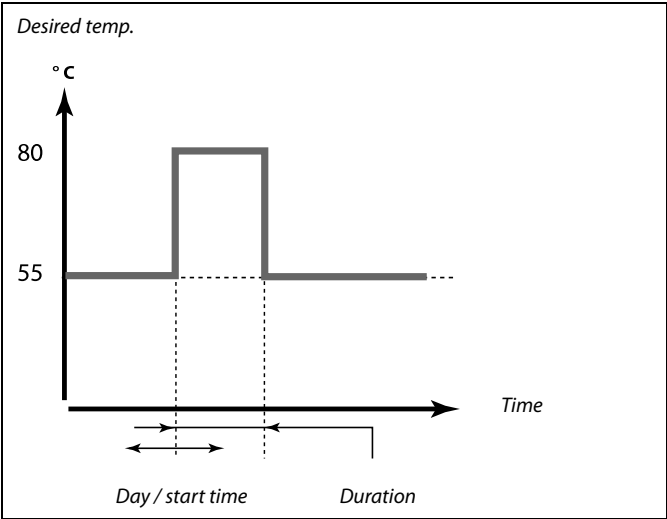

Day		
Circuit	Setting range	Factory setting
2	Weekdays	
Select (mark) the day(s) of the week where the anti-bacteria function must be active.		

- M = Monday
- T = Tuesday
- W = Wednesday
- T = Thursday
- F = Friday
- S = Saturday
- S = Sunday

Start time		
Circuit	Setting range	Factory setting
2	00:00 ... 23:30	00:00
Set the start time for the anti-bacteria function.		

Installation Guide ECL Comfort 210, application A266

Duration		
Circuit	Setting range	Factory setting
2	10 ... 600 m	120 m
Set the duration (minutes) for the anti-bacteria function.		

Desired T		
Circuit	Setting range	Factory setting
2	OFF / 10 ... 110 °C	OFF
Set the desired DHW temperature for the anti-bacteria function.		

OFF: The anti-bacteria function is not active.








1 ... 110: Desired DHW temperature during the anti-bacteria function period.

7.0 Common controller settings

7.1 Introduction to ‘Common controller settings’

Some general settings which apply to the entire controller are located in a specific part of the controller.

To enter ‘Common controller settings’:

Action:	Purpose:	Examples:
	Choose ‘MENU’ in any circuit	MENU
	Confirm	
	Choose the circuit selector at the top right corner in the display	
	Confirm	
	Choose ‘Common controller settings’	
	Confirm	

Circuit selector



Installation Guide ECL Comfort 210, application A266

7.2 Time & Date

It is only necessary to set the correct date and time in connection with the first use of the ECL Comfort controller or after a power break of more than 72 hours.

The controller has a 24 hour clock.

Aut. daylight (Daylight saving time changeover)

YES: The controller's built-in clock automatically changes + / - one hour on the standardized days for daylight saving time changeover for Central Europe.

NO: You change manually between summer and winter time by setting the clock backward or forward.



When controllers are connected as slaves in a master / slave system (via ECL 485 communication bus), they will receive 'Time & Date' from the master.

Installation Guide ECL Comfort 210, application A266


























7.3 Holiday

There is a holiday program for each circuit and a holiday program for the common controller.

Each holiday program contains one or more schedules. Each schedule can be set to a start date and an end date. The set period starts on the start date at 00.00 and stops on end date at 24.00.

Selectable modes are Comfort, Saving, Frost protection or Comfort 7-23 (before 7 and after 23, the mode is scheduled).

How to set your holiday schedule:

Action:	Purpose:	Examples:
	Choose 'MENU'	MENU
	Confirm	
	Choose the circuit selector at the top right corner in the display	
	Confirm	
	Choose a circuit or 'Common controller settings'	
	Heating	
	DHW	
	Common controller settings	
	Confirm	
	Go to 'Holiday'	
	Confirm	
	Choose a schedule	
	Confirm	
	Confirm choice of mode selector	
	Choose mode	
	· Comfort	
	· Comfort 7-23	
	· Saving	
	· Frost protection	
	Confirm	
	Enter the start time first and then the end time	
	Confirm	
	Go to 'Menu'	
	Confirm	
	Choose 'Yes' or 'No' in 'Save'. Choose the next schedule, if required	








The holiday program in the 'Common controller settings' is valid for all circuits. The holiday program can also be set individually in the heating or DHW circuits.






The end date must be at least be one day later than the start date.

Home 
MENU:
 Time & Date
 ▶ Holiday
 Input overview
 Log
 Output override

MENU 
Holiday:
 ▶ Schedule 1 
 Schedule 2 
 Schedule 3 
 Schedule 4 

Holiday 
Schedule 1:
 Mode: 
 Start: 24.12.2009
 End: 2.01.2010

Home 
 MENU
 Mode: 
 Start: 
 End: 2.01.2010

Save
 ▶ Yes No

Installation Guide ECL Comfort 210, application A266

The ECA 30 / 31 can override the holiday schedule of the controller temporarily.

Use one of the following options:



Day off



Holiday



Relaxing (extended comfort period)



Going out (extended saving period)



Energy-saving trick:
Use 'Going out' (the extended saving period) for airing purposes (e.g. for ventilating the rooms by means of fresh air from open windows).

7.4 Input overview

The input overview is located in the common controller settings.

This overview will always show you the actual temperatures in the system (read-only).

MENU ⏏	
Input overview:	
▶ Outdoor T	-0.5 °C
Room T	24.5 °C
Heat flow T	49.6 °C
DHW flow T	50.3 °C
Heat return T	24.7 °C

Installation Guide ECL Comfort 210, application A266

7.5 Log

The log function (temperature history) allows you to monitor the logs of today, yesterday, the past 2 days as well as the past 4 days for the connected sensors.

There is a log display for the relevant sensor, showing the measured temperature.

The log function is only available in the 'Common controller settings'.

Example 1:

1 day log for yesterday showing the development in outdoor temperature during the past 24 hours.

Example 2:




Today's log for the actual heating flow temperature as well as the desired temperature.

Example 3:

Yesterday's log for the DHW flow temperature as well as the desired temperature.

MENU ⏏
Log:
 ▶ Outdoor T
 Room T & desired
 Heating flow & des.
 DHW flow & des.
 Heat return T & limit

Log ⏏
Outdoor T:
 ▶ Log today
 Log yesterday
 Log 2 days
 Log 4 days

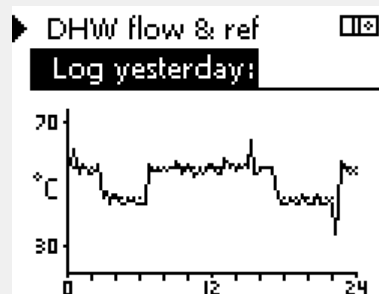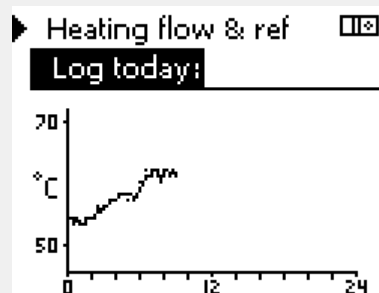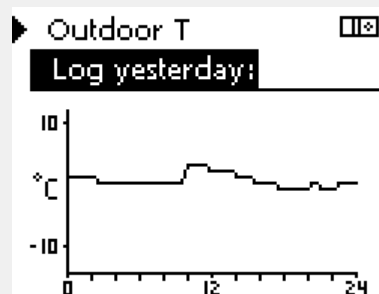

7.6 Output override

The output override is used to disable one or more of the controlled components. This could among others be useful in a service situation.

Action:	Purpose:	Examples:	
	Choose 'MENU' in any of the overview displays	MENU	<div> <div>Controlled components</div> <div>Circuit selector</div> <div> <div>MENU</div> <div>Output override:</div> <div> <div>M1</div> <div>P1</div> <div>M2</div> <div>P2</div> <div>A1</div> </div> <div> <div>AUTO</div> <div>AUTO</div> <div>OPEN</div> <div>AUTO</div> <div>AUTO</div> </div> </div> </div>
	Confirm		
	Choose the circuit selector at the top right corner in the display		
	Confirm		
	Choose common controller settings		
	Confirm		
	Choose 'Output override'		
	Confirm		
	Choose a controlled component	M1, P1 etc.	
	Confirm		
	Adjust the status of the controlled component: Motorized control valve: AUTO, STOP, CLOSE, OPEN Pump: AUTO, OFF, ON		
	Confirm status change		

When the selected controlled component (output) is not 'AUTO', the ECL Comfort controller does not control the component in question (pump or motorized control valve e.g.). Frost protection is not active.

Remember to change the status back again as soon as an override is not required any longer.

Installation Guide ECL Comfort 210, application A266

7.7 System

7.7.1 ECL version

In 'ECL version' you will always be able to find an overview of the data related to your electronic controller.

Please have this information available if you need to contact your Danfoss sales organization concerning the controller.

Information about your ECL Application Key can be found in 'Key functions' and 'Key overview'.

Code no.:	The Danfoss sales and order no. for the controller
Hardware:	Hardware version of the controller
Software:	Software version of the controller
Serial no.:	Unique number for the individual controller
Production week:	Week no. and year (WW.YYYY)

Example, ECL version

System	□□
ECL version:	
▶ Code no.	87H3040
Hardware	A
Software	0.53
Build no.	2356
Serial no.	123456789

7.7.2 Display

Backlight (display brightness) 60058		
Circuit	Setting range	Factory setting
□□	0 ... 10	5
Adjust the brightness of the display.		

0: Weak backlight.

10: Strong backlight.

Contrast (display contrast) 60059		
Circuit	Setting range	Factory setting
□□	0 ... 10	3
Adjust the contrast of the display.		

0: Low contrast.

10: High contrast.

7.7.3 Communication

Modbus addr. 38		
Circuit	Setting range	Factory setting
□□	1 ... 247	1
Set the Modbus address if the controller is part of a Modbus network.		

1 ... 247: Assign the Modbus address within the stated setting range.

Installation Guide ECL Comfort 210, application A266

ECL 485 addr. (master / slave address)		2048
Circuit	Setting range	Factory setting
<input type="checkbox"/> <input type="radio"/>	0 ... 15	15
This setting is relevant if more controllers are working in the same ECL Comfort system (connected via the ECL 485 communication bus) and / or Remote Control Units (ECA 30 / 31) are connected.		



The total cable length of max. 200 m (all devices incl. the internal ECL 485 communication bus) should not be exceeded.
Cable lengths of more than 200 m may cause noise sensibility (EMC).

- 0:** The controller works as slave.
The slave receives information about the outdoor temperature (S1), system time, and signal for DHW demand in the master.
- 1... 9:** The controller works as slave.
The slave receives information about the outdoor temperature (S1), system time, and signal for DHW demand in the master. The slave sends information about the desired flow temperature to the master.
- 10... 14:** Reserved.
- 15:** The ECL 485 communication bus is active.
The controller is master. The master sends information about the outdoor temperature (S1) and system time. Connected Remote Control Units (ECA 30 / 31) are powered.

The ECL Comfort controllers can be connected via the ECL 485 communication bus to perform a larger system (the ECL 485 communication bus can connect to max. 16 devices).

Each slave must be configured with its own address (1 ... 9).

However, more slaves can have the address 0 if they only have to receive information about outdoor temperature and system time (listeners).

7.7.4 Language

Language		2050
Circuit	Setting range	Factory setting
<input type="checkbox"/> <input type="radio"/>	English / 'Local'	English
Choose your language.		



Local language is selected during installation. If you want to change to another local language, the application must be reinstalled. However, it is always possible to change between the local language and English.

8.0 Miscellaneous

8.1 Frequently asked questions



The definitions apply to the Comfort 210 as well as ECL Comfort 310 series. Consequently, you might come across expressions that are not mentioned in your guide.

The time shown in the display is one hour off?

See 'Time and Date'.

The time shown in the display is not correct?

The internal clock may have been reset, if there has been a power break for more than 72 hours.

Go to the 'Common controller settings' and 'Time & Date' to set the correct time.

The ECL Application Key is lost?

Switch the power off and on again to see the system type and the software generation of the controller or go to 'Common controller settings' > 'Key functions' > 'Application'. The system type (e.g. TYPE A266.1) and the system diagram is displayed.

Order a replacement from your Danfoss representative (e.g. ECL Application Key A266).

Insert the new ECL Application Key and copy your personal settings from the controller to the new ECL Application Key, if required.

The room temperature is too low?

Make sure that the radiator thermostat does not limit the room temperature.

If you still cannot obtain the desired room temperature by adjusting the radiator thermostats, the flow temperature is too low. Increase the desired room temperature (display with desired room temperature). If this does not help, adjust the 'Heat curve' ('Flow temp.').

The room temperature is too high during saving periods?

Make sure that the min. flow temperature limitation ('Temp. min.') is not too high.

The temperature is unstable?

Check that the flow temperature sensor is correctly connected and in the right place. Adjust the control parameters ('Control par.').

If the controller has a room temperature signal, see 'Room limit'.

The controller does not operate and the control valve is closed?

Check that the flow temperature sensor is measuring the correct value, see 'Daily use' or 'Input overview'.

Check the influence from other measured temperatures.

How to make an extra comfort period in the schedule?

You can set an additional comfort period by adding new 'Start' and 'Stop' times in 'Schedule'.

How to remove a comfort period in the schedule?

You can remove a comfort period by setting start and stop times to the same value.

How to restore your personal settings?

Please read the chapter concerning 'Inserting the ECL Application Key'.

How to restore the factory settings?

Please read the chapter concerning 'Inserting the ECL Application Key'.

Why can't the settings be changed?

The ECL Application Key has been removed.

How to react on alarms?

An alarm indicates that the system is not operating satisfactorily.
Please contact your installer.

What does P and PI control mean?

P control: Proportional control.

By using a P control, the controller will change the flow temperature proportional to the difference between a desired and an actual temperature, e.g. a room temperature.

A P control will always have an offset which not will disappear over time.

PI control: Proportional and Integrating control.

A PI control does the same as a P control, but the offset will disappear over time.

A long 'Tn' will give a slow but stable control, and a short 'Tn' will result in a fast control but with a higher risk of instability.

8.2 Definitions



The definitions apply to the Comfort 210 as well as ECL Comfort 310 series. Consequently, you might come across expressions that are not mentioned in your guide.

Air duct temperature

Temperature measured in the air duct where the temperature is to be controlled.

Alarm function

Based on the alarm settings, the controller can activate an output.

Anti-bacteria function

For a defined period, the DHW temperature is increased in order to neutralize dangerous bacteria, e.g. Legionella.

Balance temperature

This setpoint is the basis for the flow / air duct temperature. The balance temperature can be adjusted by the room temperature, the compensation temperature and the return temperature. The balance temperature is only active if a room temperature sensor is connected.

Comfort operation

Normal temperature in the system controlled by the schedule. During heating the flow temperature in the system is higher to maintain the desired room temperature. During cooling the flow temperature in the system is lower to maintain the desired room temperature.

Comfort temperature

Temperature maintained in the circuits during comfort periods. Normally during daytime.

Compensation temperature

A measured temperature influencing the flow temperature reference / balance temperature.

Desired flow temperature

Temperature calculated by the controller on basis of the outdoor temperature and influences from the room and / or return temperatures. This temperature is used as a reference for the control.

Desired room temperature

Temperature which is set as the desired room temperature. The temperature can only be controlled by the ECL Comfort controller if a room temperature sensor is installed.

If a sensor is not installed, the set desired room temperature however still influences the flow temperature.

In both cases the room temperature in each room is typically controlled by radiator thermostats / valves.

Desired temperature

Temperature based on a setting or a controller calculation.

Dew point temperature

Temperature at which the humidity in the air condensates.

DHW circuit

The circuit for heating the domestic hot water (DHW).

Factory settings

Settings stored on the ECL Application Key to simplify the set up of your controller the first time.

Flow temperature

Temperature measured in the flow at any time.

Installation Guide ECL Comfort 210, application A266

Flow temperature reference

Temperature calculated by the controller on basis of the outdoor temperature and influences from the room and / or return temperatures. This temperature is used as a reference for the control.

Heat curve

A curve showing the relationship between actual outdoor temperature and required flow temperature.

Heating circuit

The circuit for heating the room / building.

Holiday schedule

Selected days can be programmed to be in comfort, saving or frost protection mode. Besides this, a day schedule with comfort period from 07.00 to 23.00 can be selected.

Humidity, relative

This value (stated in %) refers to the indoor moisture content compared to the max. moisture content. The relative humidity is measured by the ECA 31 and is used for the calculation of the dew point temperature.

Limitation temperature

Temperature that influences the desired flow / balance temperature.

Log function

The temperature history is displayed.

Make-up water function

If the measured pressure in the heating system is too low (e.g. due to a leakage), water can be supplemented.

Master / slave

Two or more controllers are interconnected on the same bus, the master sends out e.g. time, date and outdoor temperature. The slave receives data from master and sends e.g. desired flow temperature value.

Pt 1000 sensor

All sensors used with the ECL Comfort controller are based on the Pt 1000 type (IEC 751B). The resistance is 1000 ohm at 0 °C and it changes with 3.9 ohm / degree.

Optimization

The controller optimizes the start time of the scheduled temperature periods. Based on the outdoor temperature, the controller automatically calculates when to start in order to reach the comfort temperature at the set time. The lower the outdoor temperature, the earlier the start time.

Outdoor temperature trend

The arrow indicates the tendency, i.e. whether the temperature rises or falls.

Return temperature

The temperature measured in the return influences the desired flow temperature.

Room temperature sensor

Temperature sensor placed in the room (reference room, typically the living room) where the temperature is to be controlled.

Room temperature

Temperature measured by the room temperature sensor or the Remote Control Unit. The room temperature can only be controlled directly if a sensor is installed. The room temperature influences the desired flow temperature.

Schedule

Schedule for periods with comfort and saving temperatures. The schedule can be made individually for each week day and may consist of up to 3 comfort periods per day.

Saving temperature

Temperature maintained in the heating / DHW circuit during saving temperature periods.

Twin-pump control

One circulation pump is working and the other is the spare circulation pump. After a set time, the roles are exchanged.

Weather compensation

Flow temperature control based on the outdoor temperature. The control is related to a user-defined heat curve.


2-point control

ON / OFF control e.g. circulation pump, change-over valve or damper control.

3-point control

Opening, closing or no action of the actuator for the motorized control valve. No action means that the actuator remains in its current position.

Installation Guide ECL Comfort 210, application A266

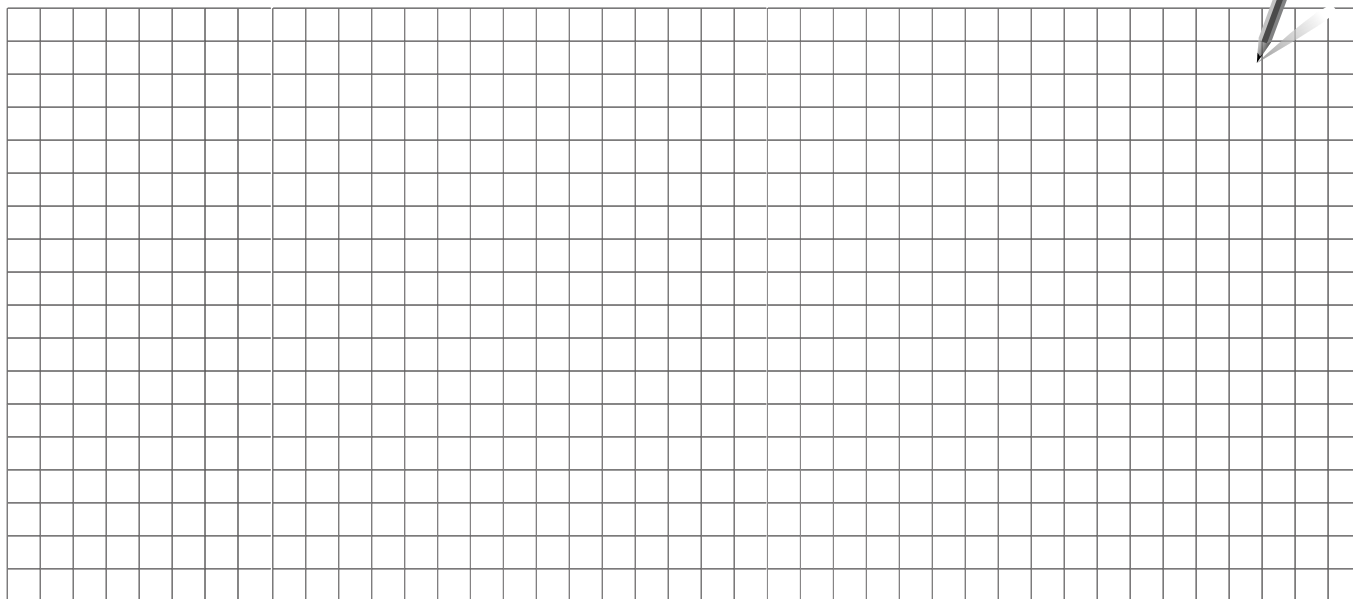

Installer:

By:

Date:

Installation Guide ECL Comfort 210, application A266

