

Application guidelines

Optyma™ Plus INVERTER

Stepless capacity modulation from 30 to 100 rps in a simple plug and play package



Important information/Safety	4	Condensing unit controller	35
1.1 Symbols are shown left of the text	4	6.1 Advantages.....	35
Product description	5	6.2 Controller's regulation logic	35
2.1 Optyma™ Plus INVERTER condensing unit ...	5	6.3 Functions	35
2.2 Exploded view Optyma™ Plus INVERTER	6	6.4 Regulation reference for condensing temperature.....	35
2.3 Condensing unit nomenclature system...	7	6.5 Fan operation	35
2.4 Label	7	6.6 Compressor control	35
2.5 Approvals and certificates	8	6.7 Maximum discharge gas temperature....	36
2.6 Technical specifications.....	8	6.8 High pressure monitoring	36
2.7 Spare part codes	9	6.9 Low pressure monitoring.....	36
2.9 Layout.....	14	6.10 Pump down limit.....	36
Application range.....	15	6.11 Data communication	36
3.1 Main applications.....	15	6.12 Controller settings	37
3.2 Condensing unit selection	15	Service and maintenance	40
3.3 Application envelopes	16	7.1 General recommendations	40
3.4 Ambient conditions	17	7.2 Condenser	40
3.5 Limits for voltage supply	17	7.3 Service and safety advice.....	40
Installation.....	18	7.4 Access ports	41
4.1 Location & fixings.....	18	Transportation, handling and storage	42
4.2 Electrical connection	19	8.1 Unpacking.....	42
4.2.1 Power supply protection.....	19	8.2 Transportation and handling	42
4.2.2 Protection and features.....	19	8.3 Disposal Instruction.....	42
4.3 Wiring diagrams	20	Warranty	43
4.3.1 Emergency running without controller22		9.1 Warranty conditions.....	43
4.4 Electrical protection standard (protection class)	26	9.2 Unauthorized changes.....	43
4.5 EMC compliance.....	26	Data collected during start up	44
4.5.1 Warning when touching unit when OFF	26		
4.6 Phase sequence	27		
4.7 Brazed connections.....	27		
4.8 High pressure transmitter connection....	28		
4.9 Pressure relief valve (PRV) connection....	29		
System design recommendations	30		
5.1 Piping design	30		
5.2 Evacuation	31		
5.3 Refrigerant charge.....	32		
5.4 Oil level	33		
5.5 Check before start	33		
5.6 Startup of the unit	34		
5.7 Check after start	34		

1.1 Symbols are shown left of the text

There are 3 symbols, used for different degrees of danger:



Warning! Risk of serious injury or death to person!



Caution! Danger which can lead to serious damages!



Notice! Risk of damage to equipment!

This guideline is intended to enable users to ensure the safe installation, starting, operation and maintenance of Optyma™ Plus INVERTER condensing units. This guideline is not intended to replace the system expertise available from system manufacturers.

In addition to this instruction application instructions of compressor drive, controller and other internal components must be taken into consideration as well.

2.1 Optyma™ Plus INVERTER condensing unit


Optyma™ Plus INVERTER combines our market leading expertise in condensing unit design with the unique benefits of stepless inverter scroll technology. The result is 20-30% higher energy efficiency in a flexible plug-and-play package, for medium and high temperature refrigeration applications in the range of 2kW to 12.5kW.

Standard equipment features:

- Variable speed compressor (scroll) with acoustic housing and crankcase heater
- Compressor drive (with EMI filter)
- MCHX condenser
- Condenser fan motor
- Oil separator with oil heater
- Receiver with stop valve
- Ball valves
- Sight glass
- HP and LP switches
- Filter drier
- Optyma™ Plus controller
- Circuit Breaker MCB, compressor contactor with overload relay
- Robust weather proof housing



2.2 Exploded view Optyma™ Plus INVERTER

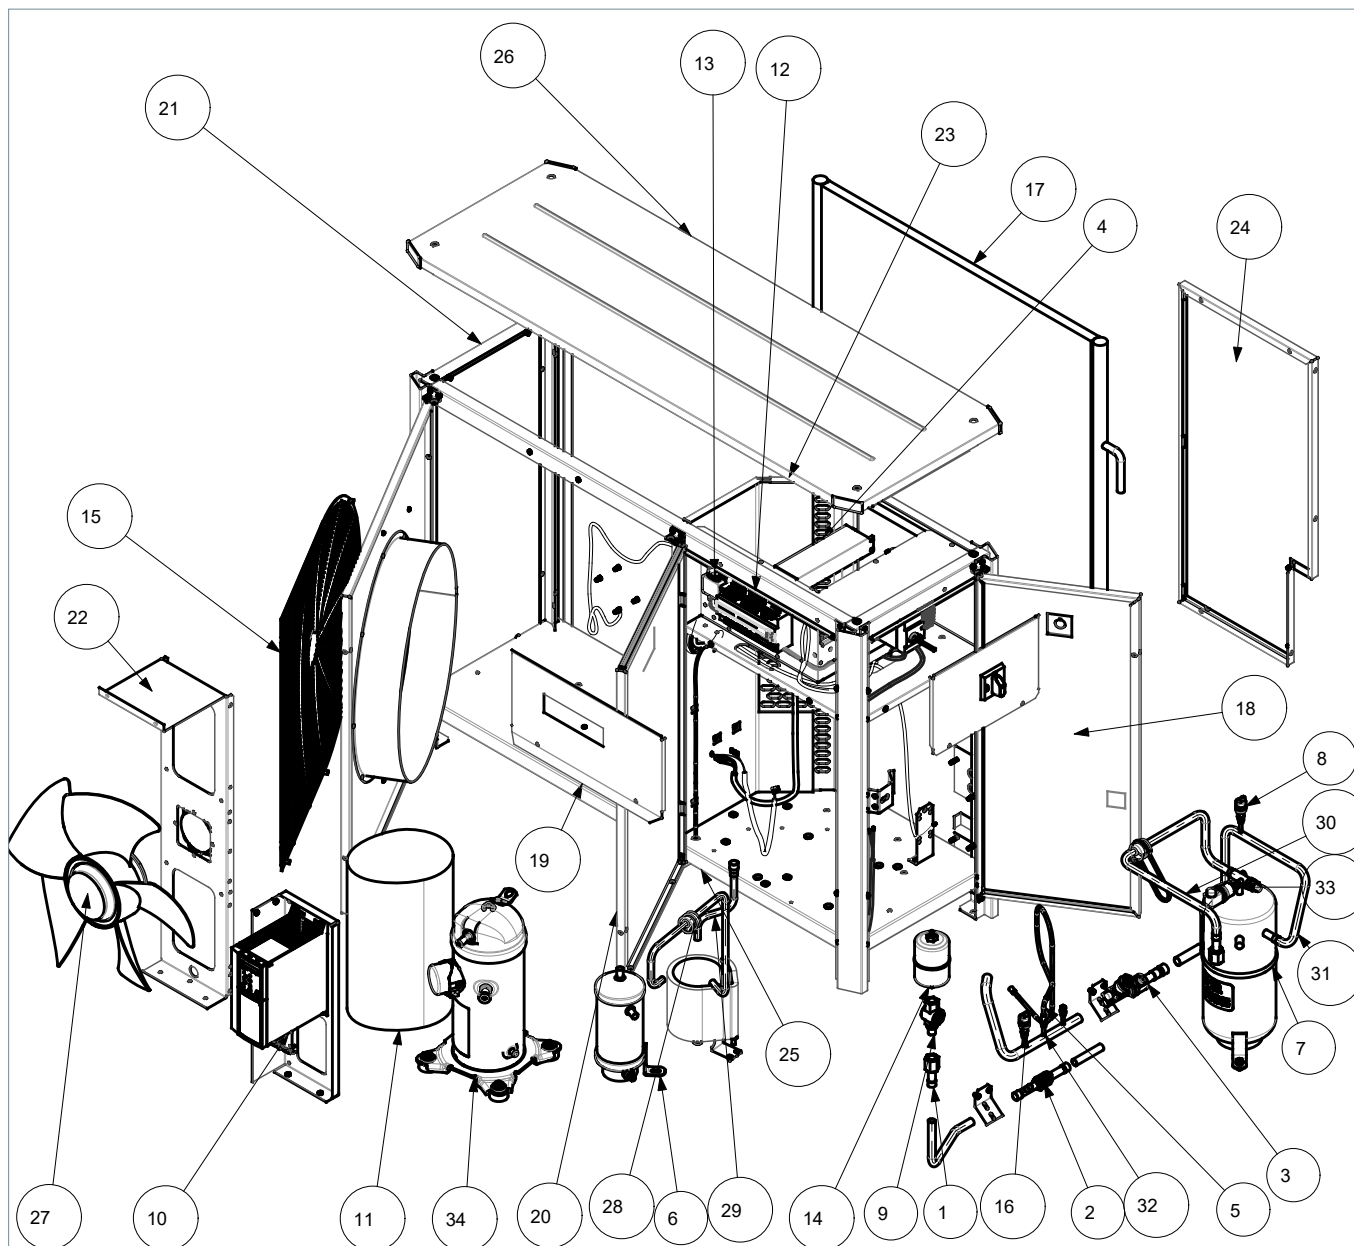

Legend:

- | | | |
|--|---------------------------------|-------------------------------|
| 1: FSA Adaptor | 12: Optyma™ Plus controller | 24: Back panel |
| 2: Liquid line valve (with schrader) | 13: EMI filter (controller) | 25: Base plate |
| 3: Suction line valve + Extra service connection | 14: Refrigerant filter | 26: Top panel |
| 4: EMI filter (drive) | 15: Fan guard | 27: Fan assembly |
| 5: Oil return pipe | 16: Low pressure switch | 28: Discharge pipe |
| 6: Oil separator | 17: Microchannel heat exchanger | 29: Condenser outlet pipe |
| 7: Receiver | 18: Right side door | 30: Receiver outlet pipe |
| 8: High pressure switch | 19: E-box cover | 31: Oil separator outlet pipe |
| 9: Sight glass | 20: Front door, right side | 32: Suction line |
| 10: Compressor drive | 21: Unit frame | 33: Rotalock valve |
| 11: Acoustic hood | 22: Fan bracket | 34: Compressor |
| | 23: Separation panel | |


2.3 Condensing unit nomenclature system

OP - M P P M 028 VVL P01 E

1 2 3 4 5 6 7 8

1	Application	M = MBP
2	Design	P = Packaged units
3	Refrigerant	P= R404A, R407A, R407F, R448A, R449A
4	Condenser type	M = Standard with micro channel heat exchanger Tambient max 43 deg C
5	Displacement	028 = 28 cm ³ /rev
6	Compressor platform	VVL = variable speed scroll VLZ compressor
7	Version	P01
8	Electrical code	E = Compressor 400 V/3 phase/50 Hz, fan 230 V/1 phase/ 50 Hz

2.4 Label

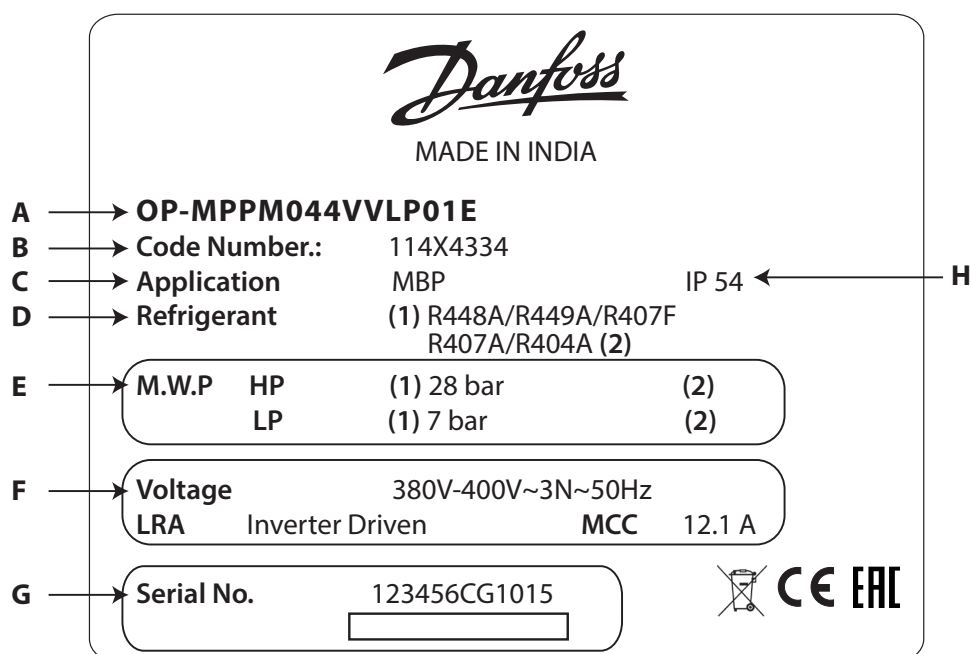

A: Model
B: Code number
C: Application
D: Refrigerant
E: Housing Service Pressure
F: Supply voltage, M_saximum Current Consumption
G: Serial Number and bar code
H: Protection

Serial-no.: XXXXXXCGWWYY
 XXXXXX = ascending number
 CG = manufacturing plant
 WW = week of production
 YY = year of production



For more information related to EcoDesign compliance, please refer to Coolselector®
coolselector.danfoss.com or contact Danfoss



Application Guidelines

Product description

2.5 Approvals and certificates

 Other	All models OP-MPLM, OP-MPPM
	All models OP-MPLM, OP-MPPM
	Contact Danfoss

2.6 Technical specifications

Unit	Condenser coil			Condenser fan	Receiver	Dimensions					Weight [kg]	
	Type	Air flow [m³/h]	Internal volume [dm³]	Fan blade Ø [mm]	Volume [L] (without valve)	Depth D [mm]	Width W [mm]	Height H [mm]	Suction line	Liquid line	Gross	Net
OP-MPLM028 OP-MPPM028	G7	5200	1.62	1x500	6.2	481	1406	965	3/4"	5/8"	150	124
OP-MPLM035 OP-MPPM035	G7	5200	1.62	1x500	6.2	481	1406	965	3/4"	5/8"	151	125
OP-MPLM044 OP-MPPM044	G7	5200	1.62	1x500	6.2	481	1406	965	3/4"	5/8"	151	125
OP-MPPM065	L1	6850	1.1	1x560	10	583	1408	965	7/8"	5/8"	168	140

Unit	MCC compressor [A] 400V/3phase	Max cont. power consumption [kW]	MCC Fan [A] 230V/1 phase	Fan power output [W]	Fan power consumption [W]
OP-MPLM028 OP-MPPM028	8.1	3.98	0.96	1x130	1x220
OP-MPLM035 OP-MPPM035	9.8	4.94	0.96	1x130	1x220
OP-MPLM044 OP-MPPM044	12.0	6.33	0.96	1x130	1x220
OP-MPPM065	19.5	15	1.82	1x125	1x240

2.7 Spare part codes

Unit	Compressor	Condenser	Fan assembly	Receiver	Filter	Sight glass	Liquid line valve	Suction line valve	High pressure transmitter	Low pressure transmitter	Suction and ambient temperature
OP-MPLM028 OP-MPPM028	120G0162	118U3494	118U3829	118U3476	023Z504591	014F0174	009G7053	009G7054	118U4021	118U4025	084N0003
OP-MPLM035 OP-MPPM035	120G0159	118U3494	118U3829	118U3476	023Z504591	014F0174	009G7053	009G7054	118U4021	118U4025	084N0003
OP-MPLM044 OP-MPPM044	120G0156	118U3494	118U3829	118U3476	023Z504591	014F0174	009G7053	009G7054	118U4021	118U4025	084N0003
OP-MPPM065	120G0397	118U5560	118U5296	118U4017	023Z5045	014L0174	009G7053	009G7055	118U4021	118U4025	084N0003

Unit	Suction and ambient temperature	Discharge temperature sensor	Fan grill	Controller*	Main switch	Compressor contact	Door handle	Crankcase heater (Compressor)	Crankcase heater (Oil separator)	High pressure switch	Low pressure switch
OP-MPLM028 OP-MPPM028	084N0003	084N2007	118U3485	118U3465	118U3852 118U3854	118U3847	118U3858	120Z5040	120Z0460	118U3718	118U3720
OP-MPLM035 OP-MPPM035	084N0003	084N2007	118U3485	118U3465	118U3852 118U3854	118U3847	118U3858	120Z5040	120Z0460	118U3718	118U3720
OP-MPLM044 OP-MPPM044	084N0003	084N2007	118U3485	118U3465	118U3852 118U3854	118U3847	118U3858	120Z5040	120Z0460	118U3718	118U3720
OP-MPPM065	084N0003	084N2007	118U3485	118U3465	118U3855	118U3848	118U3858	120Z0892	120Z0460	118U3718	118U3720

Unit	Acoustic hood	Compressor drive CDS803	EMI filter (Drive)	EMI filter (Controller)	Compressor oil	Oil separator	Top panel	Fan Panel	Back panel	Front panel	Access panel	Left side panel
OP-MPLM028 OP-MPPM028	120Z5043	118U3973	118U3972	118U3974	120Z5034 120Z0648	118U3981	118U5131	118U5132	118U5133	118U5134	118U5135	118U5165
OP-MPLM035 OP-MPPM035	120Z5043	118U3973	118U3972	118U3974	120Z5034 120Z0648	118U3981	118U5131	118U5132	118U5133	118U5134	118U5135	118U5165
OP-MPLM044 OP-MPPM044	120Z5043	118U3973	118U3972	118U3974	120Z5034 120Z0648	118U3982	118U5131	118U5132	118U5133	118U5134	118U5135	118U5165
OP-MPPM065	120Z5084	118U5559	118U5562	118U3974	120Z0648	118U5561	118U5563	118U5330	118U5133	118U5134	118U5564	-

* For service replacement of controller in Optyma™ Plus INVERTER only new version of controller can be used: code number on the controller is 084B8080.

NOTICE For service purpose original components (spare parts) recommended by Danfoss should be used.

Application Guidelines Product description

Optyma™ Plus INVERTER, R404A

Model	Code	Version	Compressor	Electrical code (1)	Compressor speed, rps	Tamb [°C]	Cooling capacity Q [kW] (2)					EcoDesign (3)		Sound power level dB(A)	Sound pressure level 10 m dB(A)
							Evaporating Temperature (Mid point) [°C]								
							-15 °C	-10 °C	-5 °C	0 °C	5 °C	COP	SEPR		
OP-MPPM028VVL	114X4302	P01	VLZ028TGA	E	30	27	1.61	2.00	2.46	2.99	-	-	-	72	41
						32	1.49	1.87	2.30	2.80	-				
						38	-	-	-	-	-				
						43	-	-	-	-	-				
					50	27	2.72	3.36	4.11	4.96	-	-	-	72	41
						32	2.52	3.13	3.83	4.63	-				
						38	-	2.84	3.49	4.23	-				
						43	-	2.60	3.19	3.88	-				
					75	27	4.03	4.96	6.02	7.24	-	-	-	73	42
						32	3.74	4.61	5.61	6.76	-				
						38	-	4.19	5.11	6.16	-				
						43	-	3.82	4.68	5.65	-				
					100	27	5.25	6.44	7.79	9.32	-	-	3.56	74	43
						32	4.88	6.00	7.27	8.70	-				
						38	-	5.44	6.61	7.92	-				
						43	-	4.96	6.03	7.25	-				
OP-MPPM035VVL	114X4316	P01	VLZ035TGA	E	30	27	2.04	2.53	3.11	3.76	-	-	-	72	41
						32	1.89	2.36	2.89	3.52	-				
						38	-	-	-	-	-				
						43	-	-	-	-	-				
					50	27	3.43	4.22	5.14	6.20	-	-	-	72	41
						32	3.18	3.93	4.79	5.78	-				
						38	-	3.56	4.35	5.25	-				
						43	-	3.24	3.97	4.80	-				
					75	27	5.01	6.14	7.44	8.93	-	-	-	74	43
						32	4.65	5.71	6.93	8.31	-				
						38	-	5.17	6.28	7.55	-				
						43	-	4.71	5.73	6.90	-				
					100	27	6.42	7.85	9.48	11.34	-	-	3.87	74	43
						32	5.96	7.29	8.82	10.55	-				
						38	-	6.60	7.99	9.57	-				
						43	-	6.00	7.27	8.72	-				
OP-MPPM044VVL	114X4334	P01	VLZ044TGA	E	30	27	2.64	3.26	3.98	4.80	-	-	-	72	41
						32	2.44	3.03	3.71	4.48	-				
						38	-	-	-	-	-				
						43	-	-	-	-	-				
					50	27	4.36	5.34	6.47	7.75	-	-	-	74	43
						32	4.04	4.97	6.03	7.24	-				
						38	-	4.51	5.49	6.60	-				
						43	-	4.10	5.01	6.04	-				
					75	27	6.32	7.72	9.31	11.10	-	-	-	74	43
						32	5.87	7.18	8.67	10.34	-				
						38	-	6.50	7.87	9.40	-				
						43	-	5.91	7.17	8.59	-				
					100	27	8.09	9.86	11.85	14.06	-	-	3.89	74	43
						32	7.49	9.14	11.00	13.06	-				
						38	-	8.23	9.93	11.82	-				
						43	-	7.45	9.01	10.75	-				



For more information related to EcoDesign compliance, please refer to Coolselector®
coolselector.danfoss.com or contact Danfoss



Model	Code	Version	Compressor	Electrical code (1)	Compressor speed, rps	Tamb [°C]	Cooling capacity Q [kW] (2)					EcoDesign (3)		Sound power level dB(A)	Sound pressure level 10 m dB(A)
							Evaporating Temperature (Mid point) [°C]								
							-15 °C	-10 °C	-5 °C	0 °C	5 °C	COP	SEPR		
OP-MPPM065VVL	114X3406	P01	VLZ065TGNE9B	E		27	3.77	4.76	5.87	7.11	-	-		72	41
						32	3.35	4.31	5.38	6.58	-				
						38	2.82	3.73	4.75	5.90	-				
						43	2.38	3.23	4.20	5.30	-				
						27	6.02	7.52	9.23	11.15	-	-		73	42
						32	5.47	6.89	8.50	10.32	-				
						38	4.78	6.09	7.58	9.27	-				
						43	4.18	5.39	6.78	8.36	-				
						27	8.73	10.79	13.13	15.74	-	-		75	44
						32	7.99	9.92	12.10	14.54	-				
						38	7.07	8.83	10.82	13.05	-				
						43	6.27	7.88	9.71	11.77	-				
						27	11.26	13.81	16.67	19.82	-	-	3.97	76	45
						32	10.33	12.71	15.35	18.28	-				
						38	9.16	11.31	13.71	16.37	-				
						43	8.15	10.09	12.28	14.71	-				

[1] Electrical code:

E = Compressor 400V/3Ph/50Hz, fan 230V/1Ph/50Hz

[2] Nominal conditions (EN13215), Evaporating temperatures at Mid point, Superheat 10K, Subcooling 0K

[3] Rated conditions (EN13215), Evaporating temperature (Mid) -10°C, Ambient air temperature +32°C, Return Gas Temperature 20°C, Subcooling 0K

SEPR, Seasonal Energy Performance Ratio

Q [W], Cooling Capacity

P [W], Power Input

Application Guidelines Product description

Optyma™ Plus INVERTER, R448A/R449A

Model	Code	Version	Compressor	Electrical code (1)	Compressor speed, rps	Tamb [°C]	Cooling capacity Q [kW] (2)					EcoDesign (3)		Sound power level dB(A)	Sound pressure level 10 m dB(A)
							Evaporating Temperature (Mid point) [°C]								
							-15 °C	-10 °C	-5 °C	0 °C	5 °C	COP	SEPR		
OP-MPPM028VVL	114X4302	P01	VLZ028TGA	E	30	27	1.61	2.01	2.49	3.03	-	-	-	72	41
						32	1.52	1.90	2.35	2.87	-				
						38	-	-	-	-	-				
						43	-	-	-	-	-				
					50	27	2.74	3.39	4.16	5.02	-	-	-	73	41
						32	2.58	3.20	3.93	4.75	-				
						38	-	2.96	3.65	4.42	-				
						43	-	2.75	3.40	4.13	-				
					75	27	4.01	4.94	6.04	7.27	-	-	-	73	42
						32	3.78	4.66	5.70	6.87	-				
						38	-	4.32	5.29	6.38	-				
						43	-	4.02	4.93	5.96	-				
					100	27	5.14	6.30	7.68	9.24	-	-	3.75	74	43
						32	4.85	5.95	7.26	8.73	-				
						38	-	5.53	6.74	8.11	-				
						43	-	5.16	6.31	7.59	-				
OP-MPPM035VVL	114X4316	P01	VLZ035TGA	E	30	27	2.02	2.52	3.11	3.79	-	-	-	72	41
						32	1.90	2.37	2.94	3.58	-				
						38	-	-	-	-	-				
						43	-	-	-	-	-				
					50	27	3.40	4.20	5.14	6.19	-	-	-	72	41
						32	3.19	3.96	4.85	5.85	-				
						38	-	3.65	4.49	5.42	-				
						43	-	3.38	4.18	5.06	-				
					75	27	4.95	6.09	7.42	8.90	-	-	-	74	43
						32	4.66	5.73	6.99	8.40	-				
						38	-	5.30	6.47	7.78	-				
						43	-	4.923	6.02	7.25	-				
					100	27	6.34	7.76	9.43	11.31	-	-	3.63	74	43
						32	5.98	7.32	8.90	10.67	-				
						38	-	6.79	8.25	9.90	-				
						43	-	6.34	7.71	9.25	-				
OP-MPPM044VVL	114X4334	P01	VLZ044TGA	E	30	27	2.60	3.23	3.97	4.80	-	-	-	72	41
						32	2.44	3.04	3.75	4.54	-				
						38	-	-	-	-	-				
						43	-	-	-	-	-				
					50	27	4.27	5.27	6.44	7.74	-	-	-	74	43
						32	4.01	4.96	6.07	7.30	-				
						38	-	4.57	5.61	6.77	-				
						43	-	4.24	5.22	6.31	-				
					75	27	6.22	7.62	9.25	11.04	-	-	-	74	43
						32	5.83	7.16	8.70	10.40	-				
						38	-	6.59	8.03	9.61	-				
						43	-	6.10	7.45	8.94	-				
					100	27	7.99	9.75	11.76	13.95	-	-	4.12	74	43
						32	7.46	9.13	11.05	13.12	-				
						38	-	8.36	10.14	12.08	-				
						43	-	7.68	9.35	11.18	-				

Model	Code	Version	Compressor	Electrical code (1)	Compressor speed, rps	Tamb [°C]	Cooling capacity Q [kW] (2)					EcoDesign (3)		Sound power level dB(A)	Sound pressure level 10 m dB(A)
							Evaporating Temperature (Mid point) [°C]								
							-15 °C	-10 °C	-5 °C	0 °C	5 °C	COP	SEPR		
OP-MPPM065VVL	114X3406	P01	VLZ065TGNE9B	E	30	27	3.60	4.58	5.69	6.92	-	-	-	72	41
						32	3.21	4.17	5.25	6.46	-				
						38	-	-	-	-	-				
						43	-	-	-	-	-				
					50	27	5.79	7.27	8.94	10.83	-	-	-	73	42
						32	5.29	6.70	8.30	10.10	-				
						38	-	5.98	7.49	9.19	-				
						43	-	5.35	6.78	8.39	-				
					75	27	8.41	10.42	12.68	15.21	-	-	-	75	44
						32	7.76	9.65	11.79	14.18	-				
						38	-	8.69	10.68	12.90	-				
						43	-	7.86	9.71	11.79	-				
					100	27	10.87	13.33	16.07	19.08	-	-	4.14	76	45
						32	10.06	12.37	14.94	17.77	-				
						38	-	11.17	13.53	16.14	-				
						43	-	10.14	12.32	14.73	-				

[1] Electrical code:

E = Compressor 400V/3Ph/50Hz, fan 230V/1Ph/50Hz

[2] Nominal conditions (EN13215), Evaporating temperatures at Mid point, Superheat 10K, Subcooling 0K

[3] Rated conditions (EN13215), Evaporating temperature (Mid) -10°C, Ambient air temperature +32°C, Return Gas Temperature 20°C, Subcooling 0K

SEPR, Seasonal Energy Performance Ratio

Q [W], Cooling Capacity

P [W], Power Input




For more information related to EcoDesign compliance, please refer to Coolselector®
coolselector.danfoss.com or contact Danfoss




2.9 Layout

OP-MPLM028-035-044, OP-MPPM028-035-044

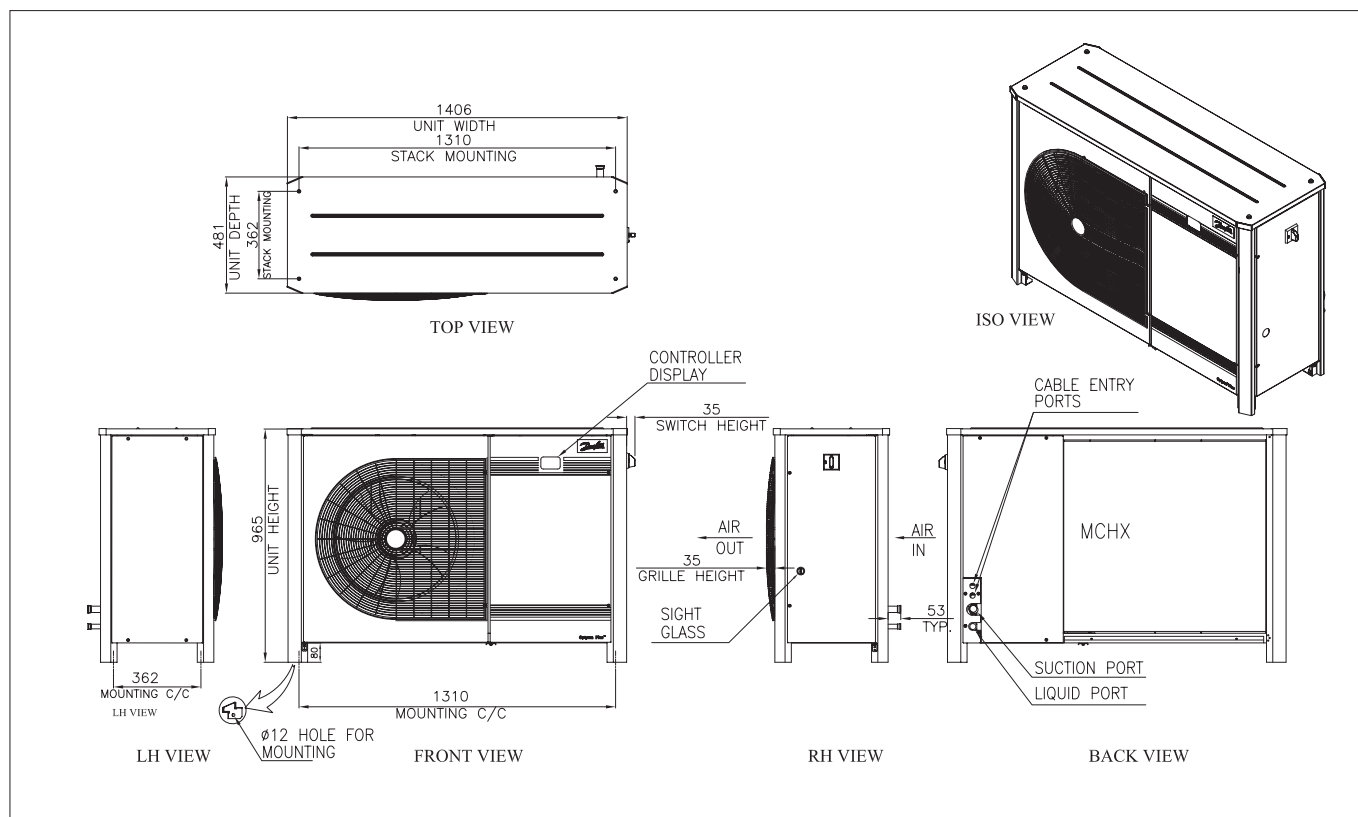

OP-MPPM065

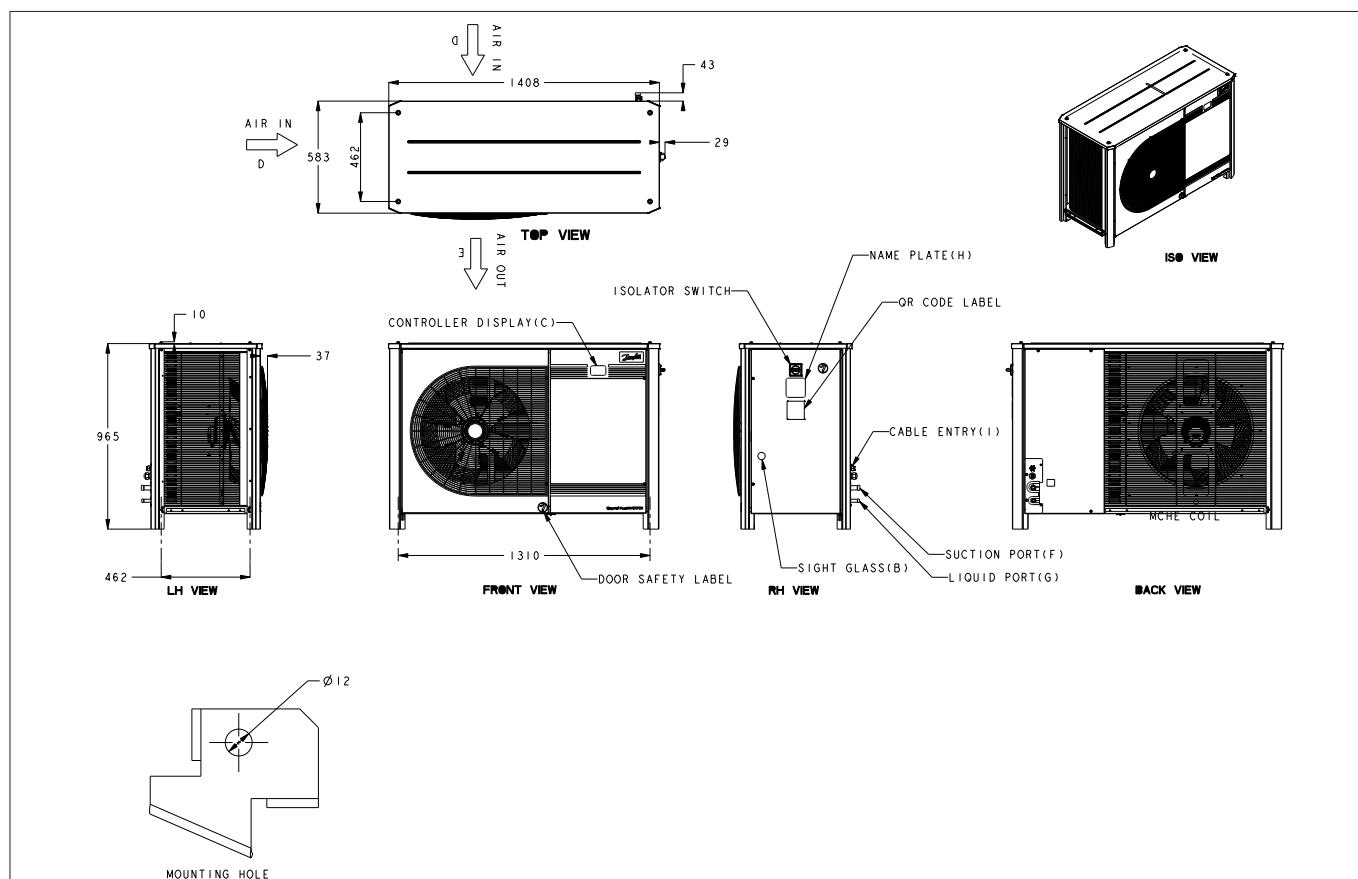

3.1 Main applications

Optyma™ Plus INVERTER is a perfect cooling solution for typical MBP applications like food retail, petrol forecourt sites, cold rooms, and display cases. All units are fully wired and factory tested. They have one cabinet sizes and are equipped with one fan.

Optyma™ Plus INVERTER outdoor condensing units are released for R448A/R449A, R407A/F and R404A.

3.2 Condensing unit selection

Inverter technology offers more flexibility in condensing unit selection than fixed-speed units. Selection of the right inverter condensing unit size can be made by next method: Select a condensing unit size which achieves the peak load system cooling capacity demand at its maximum speed.

NOTICE It is compulsory to secure that condensing unit capacity at minimum speed (30 rps) will not be higher than necessary cooling capacity for the smallest evaporator!

In case minimum (at 30 rps) condensing unit capacity is higher than capacity of smallest evaporator it can cause work of condensing unit outside its application envelope and as consequence reduce lifetime.

Example1 (evaporating temperature -10 °C, ambient temperature 32 °C, R404A):

Evaporator1= 3 kW

Evaporator2= 3 kW

Evaporator3= 3 kW

Total Q = 9 kW (maximum cooling capacity)

Minimum cooling capacity = minimum evaporator capacity = minimum evaporating capacity = 3kW

According to the capacities at evaporating -10 °C, ambient 32 °C and refrigerant R404A condensing unit OP-MPPM044 (maximum capacity 9 kW) achieves the peak load system cooling capacity (9,3 kW) demand at its maximum speed and at the same time condensing unit capacity at minimum speed (minimum capacity 3 kW) is not higher than necessary cooling capacity for the smallest evaporator (3 kW).

Example2 (evaporating temperature -10 °C, ambient temperature 32 °C, R404A):

Evaporator1= 1 kW

Evaporator2= 2,1 kW

Evaporator3= 2,5 kW

Evaporator4=1,5 kW

Total Q = 7,1 kW (maximum cooling capacity)

Minimum cooling capacity = minimum evaporator capacity = Evaporator1 = 1 kW.

According to the capacities at evaporating -10 °C, ambient 32 °C and refrigerant R404A condensing unit OP-MPPM035 (maximum capacity 7,2 kW) achieves the peak load system cooling capacity (7,1 kW) demand at its maximum speed but at the same time condensing unit capacity at minimum speed (minimum capacity 2,3 kW) is higher than necessary cooling capacity for the smallest evaporator (1 kW).

In this case it is recommended to connect few evaporators together (regulated by one thermostat) to achieve smallest required capacity higher than minimum capacity of condensing unit: by managing Evaporator1 and Evaporator4 via one thermostat minimum required capacity will be 2,5 kW (Evaporator2) which is higher than minimum capacity of condensing unit at low speed (2,3 kW).

NOTICE Compressor of Optyma™ Plus INVERTER is equipped with a IPM (Interior Permanent Magnet) motor. The compressor cannot operate without frequency converter. It will be destroyed immediately if connected directly to public network. For OP-MPLM028-035-044, OP-MPPM028-035-044, the applied frequency from the inverter will be 60 Hz for 30 rps (1800 rpm) up to 200 Hz for 100 rps (6000 rpm).

For OP-MPPM065, the applied frequency from the inverter will be 90 Hz for 30 rps (1800 rpm) up to 300 Hz for 100 rps (6000 rpm).




Please refer to the table below

Compressor speed	OP-MPLM028-035-044 OP-MPPM028-035-044		OP-MPPM065	
	Min	Max	Min	Max
rps	30	100	30	100
rpm	1800	6000	1800	6000
Drive output frequency Hz	60	200	90	300

3.3 Application envelopes

The operating envelopes of Optyma™ Plus INVERTER are given in the figures below, where the ambient and evaporating temperatures represent the range for steady state operation. The figures below show the operating envelopes

for condensing units with refrigerants R448A/ R449A, R407A/F and R404A. The operating limits serve to define the envelopes within which reliable operation of the condensing units are guaranteed.

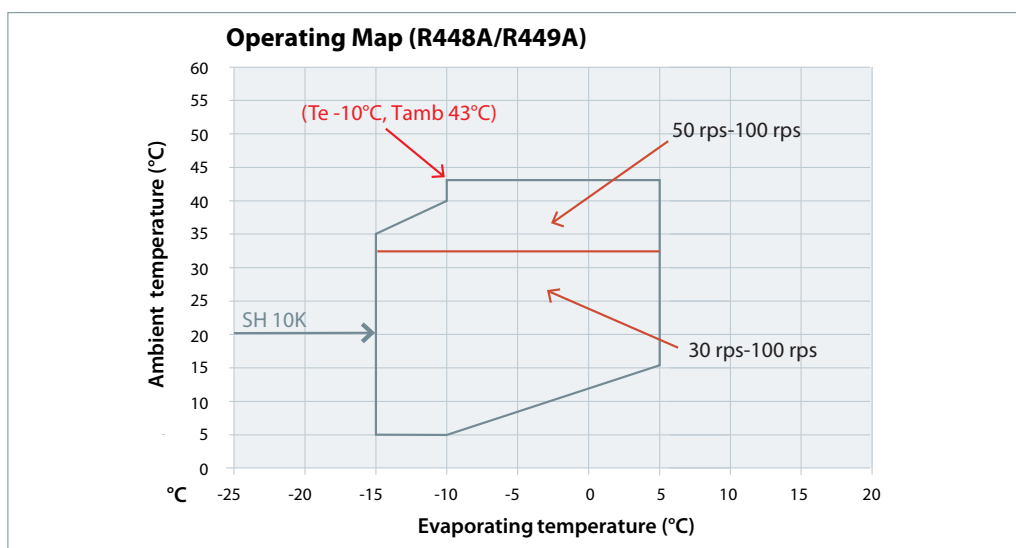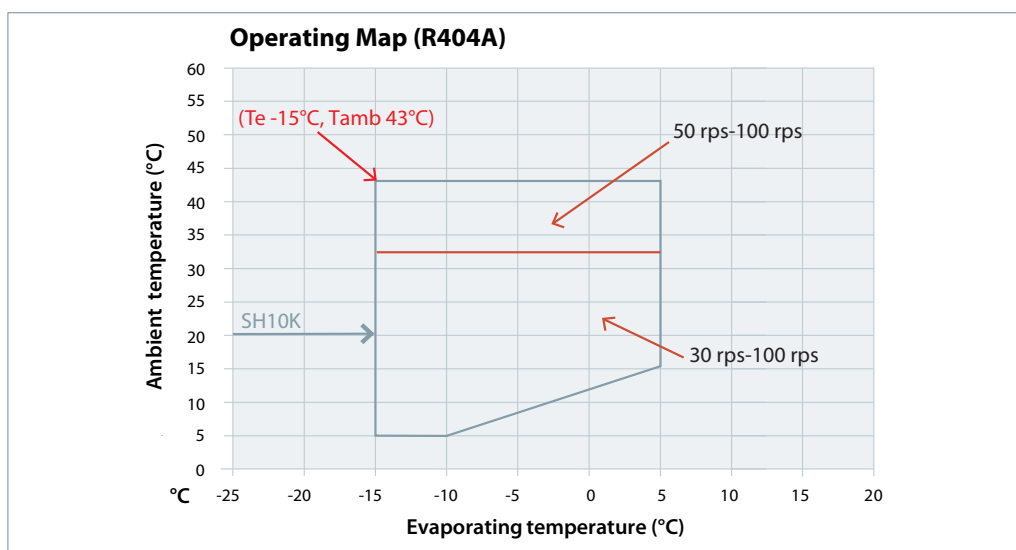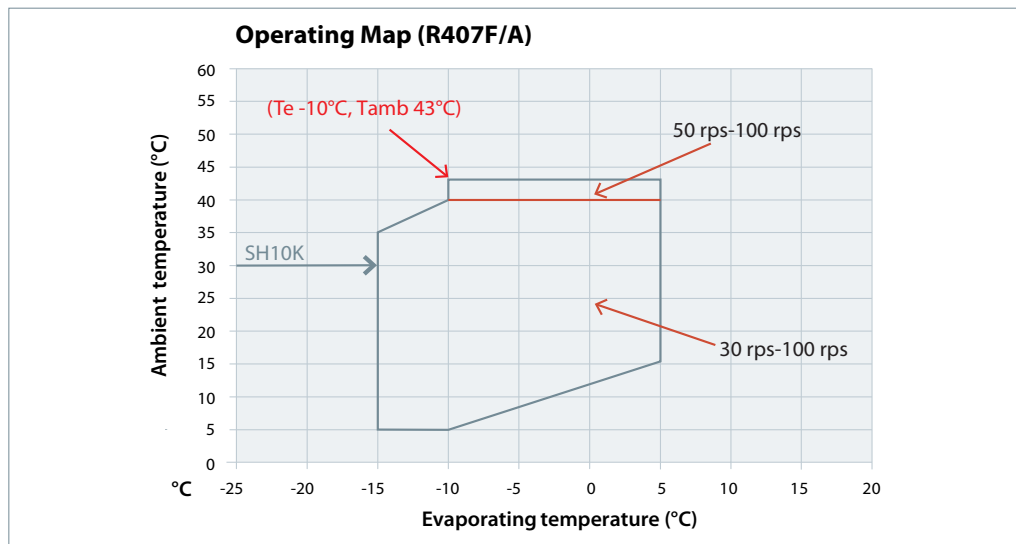

Application Guidelines

Application range

Red line on the application envelope indicates maximum safe ambient temperature for low load (30-50 rps) and high ambient conditions (above 32 °C for R448A/R449A, 32 °C for R404A and above 40 °C for R407A/F.

In case low unit capacity required (30-50 rps) at high ambient temperatures controller will increase compressor speed up to minimum safe

speed at high temperature. This minimum safe speed at high temperature is factory preset to 50 rps (controller parameter c47: Start speed of the compressor). It is not recommended to decrease setting of parameter c47 below 50 rps as this can lead to work of compressor at low speed during high ambient conditions which can reduce lifetime of the unit.

Minimum and maximum evaporating and condensing temperatures as per the operating

envelopes – compressor should work inside application envelope.

Other operating limits:	Recommendation
Discharge gas temperature	125 °C maximum
Evaporator outlet superheat	above 6K (to avoid liquid flood back)
Suction gas superheat at compressor inlet	within the limits shown on the application envelope

Special attention to suction line insulation will have to be secured in order to:

- Avoid too high superheat during high ambient conditions that can create too high discharge gas temperature.

- Avoid too low superheat during low ambient conditions that can create condensation of refrigerant in suction line.

3.4 Ambient conditions

Optima™ Plus INVERTER units can be used with ambient temperature from -15°C to 43°C. For altitudes above 2000 m, contact Danfoss. The other working conditions should be within the limits of application envelope.

To assure that the unit can start during cold conditions the parameter "c94 LpMinOnTime" can be used. If this parameter is set to a value that is higher than 0 and the ambient temperature (Tamb) is below 5°C, the internal transmitter "LP switch c75" and "pump down limit c33" will be overridden for the number of seconds defined in "c94 LpMinOnTime". And the value for Min on time for the compressor will be set to the largest of the values of "c94 MinLpOnTime" and "c01 Min. on time".

The CDS803 drive forces the compressor to 50rps (see Optima Controller parameter c47) for 30s always at compressor start, to ensure proper oil return at low load and short runtimes. The start delay time can be modified via drive parameter 1-71, if a proper oil return is always ensured without or by modifying this start delay function.

In order to change 1-71, a separate LCP panel needs used to change the settings on the drive, the LCP panel has the ordering code 120Z0581.

When changing 1-71, a value not lower as 10 seconds should get applied.

3.5 Limits for voltage supply

Voltage limits: Min: 360 V Max 440 V
Phase asymmetry: ±3%
Frequency limits: 50Hz ±1%

⚠CAUTION Optyma™ Plus INVERTER unit has to be installed by competent authorized

personnel and the installation shall comply to applicable local laws and rules.

4.1 Location & fixings

The unit is to be placed in such a way that it is not blocking or expose an obstacle for walking areas, doors, windows etc. The foundation where the unit is to be placed upon has to be strong enough to carry the entire weight, see unit data. Ensure adequate space around the unit for air circulation. Avoid installing the unit in locations which are exposed to direct sunshine daily for long periods. Unit has to be placed on a horizontal surface - less than 3° slope, which has to be strong and stable enough to eliminate vibrations and interference. It is recommended to install the unit on rubber grommets or vibration dampers (not part of the Danfoss supply). Installation of unit shall not be done in aggressive and dusty environments.


Furthermore the installation of the unit shall not be done in facilities containing flammable gasses or in installation containing flammable gasses.

NOTICE Special attention should be paid if unit needs to be installed close to the sea as this can reduce unit lifetime due to corrosion of metal parts.

Where multiple units are to be installed in the same location, please consider each individual case carefully. Air by-pass around each condenser and between the units should be avoided at all times.

Optyma™ Plus INVERTER condensing units can also be used for wall mounting on suitable brackets. Wall mounting brackets are not supplied by Danfoss.

Another factor to consider in finding a good installation site is the direction of the prevailing wind. For example if the air leaving the condenser faces the prevailing wind, the air flow through the condenser can be impeded, causing high condensing temperatures, improper functioning of the unit and ultimately resulting in reducing the life of the unit. A baffle is a remedy for this situation.

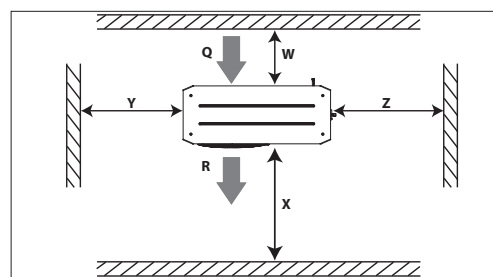

Picture 1: Minimum mounting distances

Q: Air in

R: Air out

Unit	W [mm]	X [mm]	Y [mm]	Z [mm]
Housing 3	250	760	580	580

4.2 Electrical connection

⚠ WARNING Ensure that power supply cannot be switched on during installation.

Below table lists recommended wiring sizes for the condensing unit power supply cables. These wiring sizes are valid for a cable length up to 30 m.

Model	Cable size, mm ² (from network to unit main switch)
OP-MPLM028 OP-MPPM028	4
OP-MPLM035 OP-MPPM035	4
OP-MPLM044 OP-MPPM044	4
OP-MPPM065	4

Note: 1. The wire size here is the guideline. In each specific case required cable size should be specified by the installer depending on the system design, ambient temperature, the wire material, current, etc.

found in the wiring diagram. Wiring diagram can be found in front door of unit. Unit is equipped with high and low pressure switches, which directly cuts the power supply of the compressor contactor in case of activation.

In order to ensure a safe and problem free operation of the unit it is recommended to:

Unit is equipped with an electronic controller and compressor drive.

- Ensure that the power supply corresponds to the unit and that the power supply is stable (see nominal values on unit label and power supply limits in paragraph 3.5).

The controller and compressor drive are pre-programmed with parameters ready for use with the actual unit.

- Make the power supply according to present norm and legal requirements. Ensure that the unit is properly connected to ground.

As standard the parameters for operation with refrigerant R449A set. If another refrigerant is to be used refrigerant parameter (o30) needs to be changed (refer to description in Controller application manual). Parameters for high and low pressure cut outs are preset in the controller adapted to the compressor and refrigerant installed in the unit.

The unit is equipped with a main switch with overload protection. Overload protection is preset from factory. Value for overload protection can be

4.2.1 Power supply protection

You should use only original circuit breaker, min. short circuit breaking capacity needs to

be 100kA. Please refer to spare part section for selection of components for service replacement.

4.2.2 Protection and features

- Electronic thermal compressor protection against overload.

- Monitoring of the intermediate circuit voltage ensures that the frequency converter trips, when the intermediate circuit voltage is too low or too high.

- Temperature monitoring of the heat sink ensures that the frequency converter trips in case of overtemperature.

- The frequency converter is protected against ground faults on compressor terminals U, V, W.

- The frequency converter is protected against short-circuits between compressor terminals U, V, W.

- Occurring alarms will be shown in the controller display and by the red LED in front of the frequency converter.


- When a compressor phase is missing, the frequency converter trips and issues an alarm.

- The root cause of an individual alarm can be shown with an optional LCP (local control panel, code 120Z0581) or the MCT10 setup software.


- When a mains phase is missing, the frequency converter trips or issues a warning (depending on the load).

4.3 Wiring diagrams

OP-MPLM028-035-044, OP-MPPM028-035-044

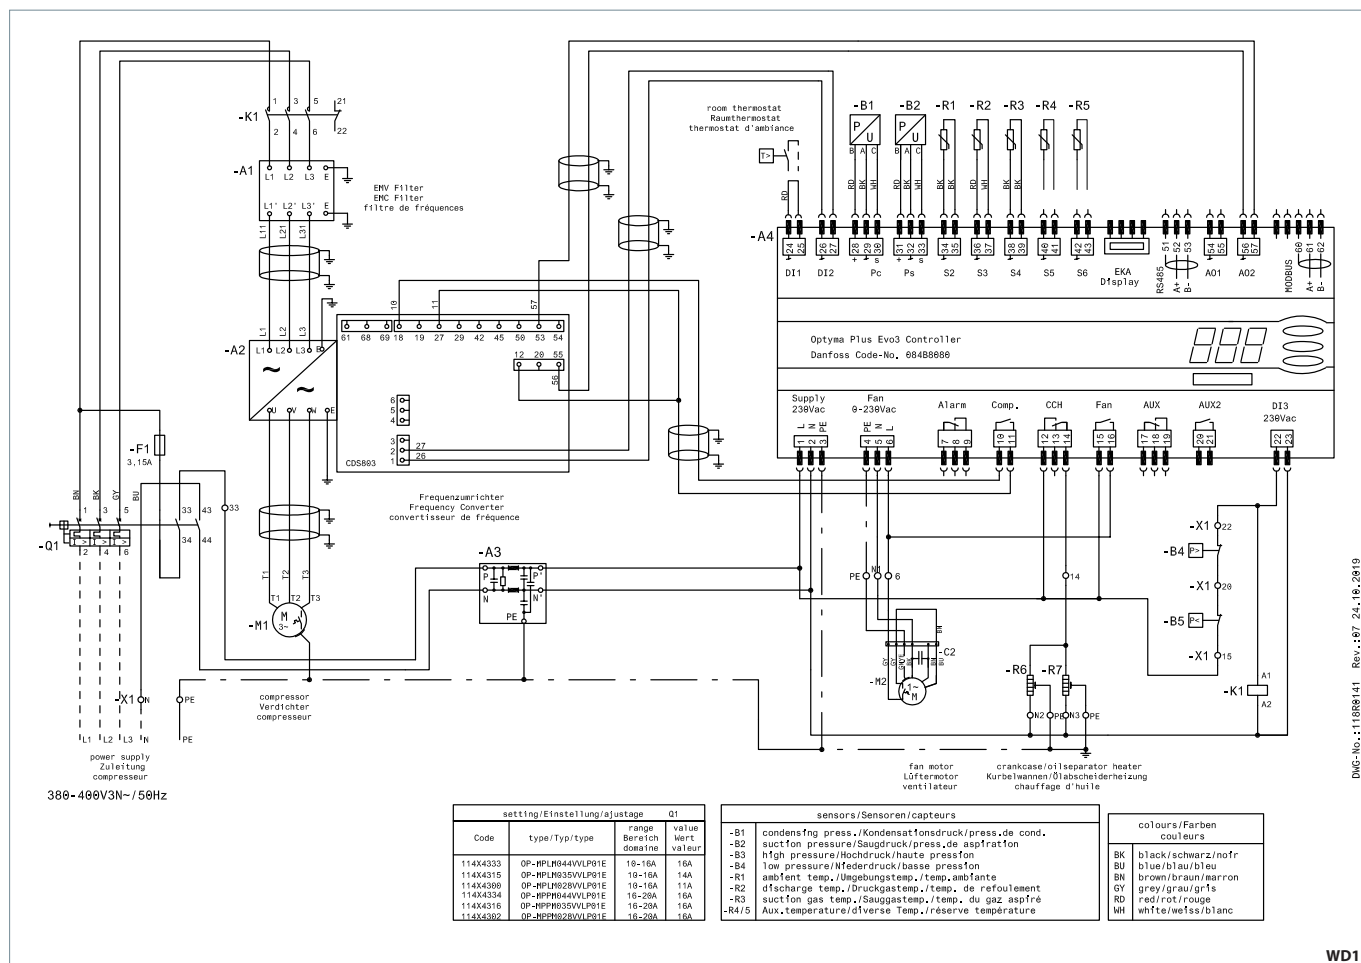

OP-MPPM065

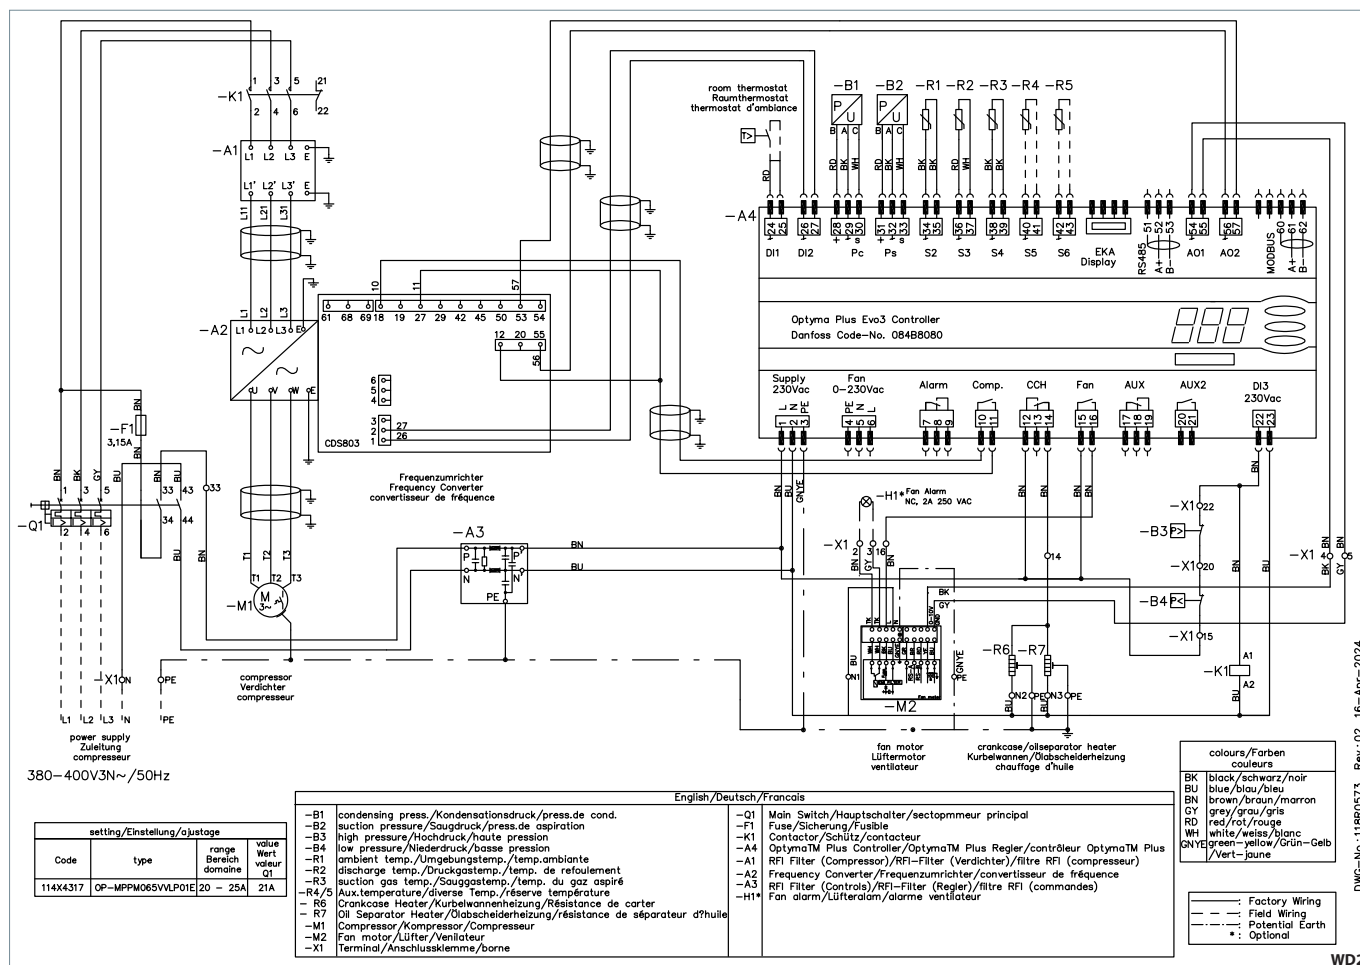

DWG-No.:118R0573 Rev.:02, 16-Apr-2024

4.3.1 Emergency running without controller

In case of controller failure, the condensing unit can still be operated when the controller standard wiring (WD1 & WD2) is modified into a temporary wiring (WD3 & WD4) as described below.

This modification may be done by authorized electricians only. Country legislations have to be followed.

Disconnect the condensing unit from power supply (turn hardware main switch off).

- Contact of Room Thermostat must be possible to switch 250VAC.

For Variable speed units with AC-fan (OP-MPPM028-035-044)


- Remove wire 22 (safety input DI3) and wire 6 (fan supply) and put them together. A fan pressure switch (e.g. KP5) or a fan speed controller (e.g. XGE) can be connected in series to wire 6.

For Variable speed unit with EC-fan (OP-MPPM065)


- Remove wire from controller terminal 22 (safety input) and controller terminal 16 (fan relay) and put them together
- Remove the wire from terminal 4 to controller terminal 55. Remove the wire from terminal 5 to controller terminal 54. Connect Terminal 4 and Terminal 5
- Remove the wire from terminal 5 to EC-Fan Gnd terminal. Connect Terminal 5 to EC-Fan 10VDC terminal

- Remove wire 10 (drive start) and wire 24 (room thermostat) and put them together.
- Remove wire 11 (drive start) and wire 25 (room thermostat) and put them together.
- Remove wire 53 and 55 from drive terminals and connect the attached 10kOhm potentiometer (R8) as below:
wire 1 to drive terminal 55
wire 2 to drive terminal 53
wire 3 to drive terminal 50
- Turn the knob of the potentiometer to middle position, which corresponds approximately compressor speed 50rps.
- Remove wire 14 (crankcase and oil separator heaters) and connect it to the compressor contactor terminal 22.
- Remove wire 12 (supply crankcase and oil separator heaters), extend this wire by using an 250 Vac 10mm² terminal bridge and 1,0mm² brown cable and connect it to compressor contactor terminal 21.
- Remove the large terminal block from the controller terminals 10 to 19.
- Connect the condensing unit to power supply (turn hardware main switch on).
- Adjust the potentiometer to get the desired speed.
- Replace the controller as soon as possible.

OP-MPLM028-035-044, OP-MPPM028-035-044 - Emergency Wiring

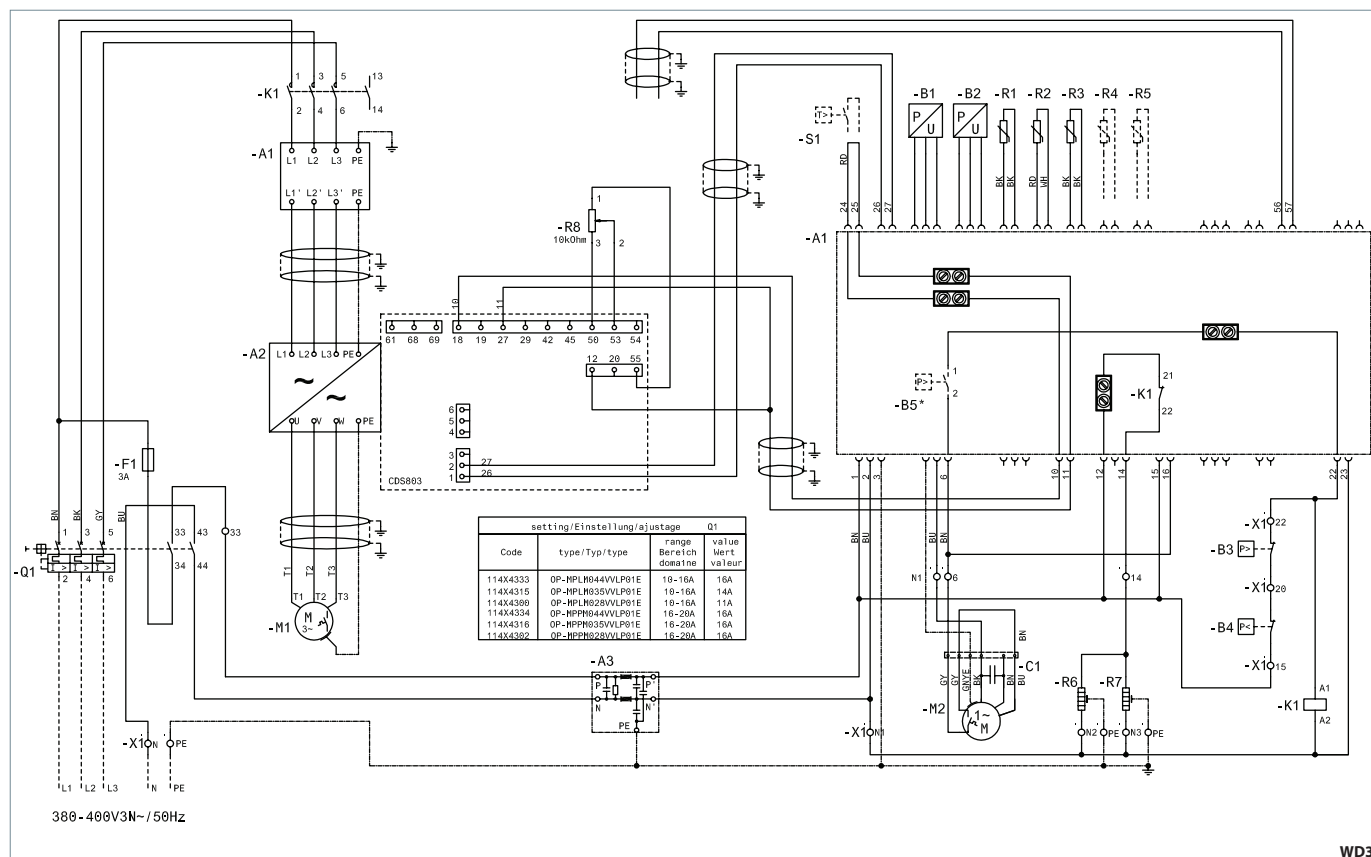


OP-MPPM065 - Emergency Wiring

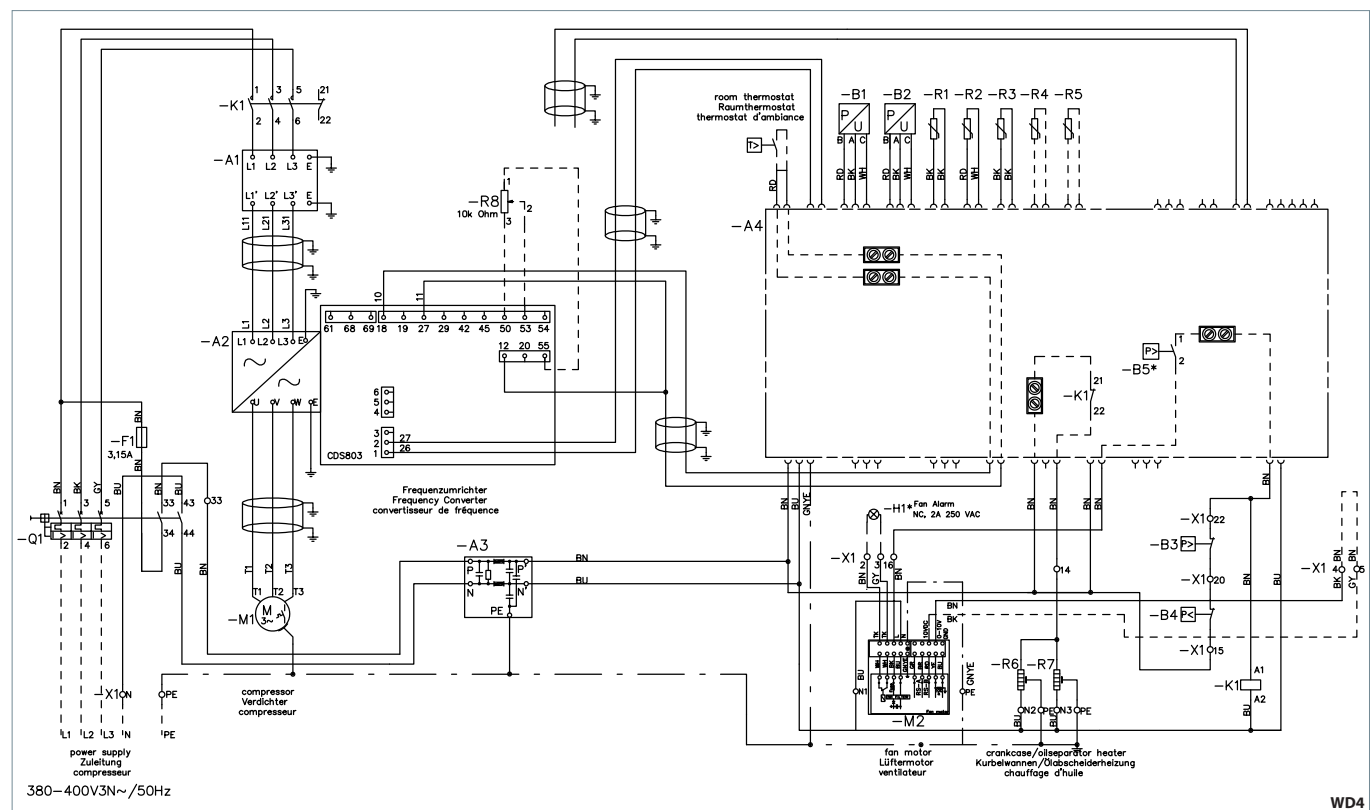


Legend

A1 : EMC/RFI Filter (Compressor)	A2 : Frequency Converter	A3 : EMI Filter (Controls)	A4 : Optyma™ Plus Controller
B1 : Condensing Pressure Transducer	B2 : Suction Pressure Transducer	B3 : High Pressure Switch	B4 : Low Pressure Switch
B5* : Fan Speed Controller / Pressure Switch	C1 : Run Capacitor (Fan)	F1 : Fuse (Control Circuit)	K1 : Contactor
M1 : Compressor	M2 : Fan Motor	Q1 : Main Switch	R1 : Ambient Temp. Sensor
R2 : Discharge Temp. Sensor	R3 : Suction Temp. Sensor	R4,R5 : Auxiliary Temp. Sensor (optional)	R6 : Crankcase Heater
R7 : Oil Separator Heater	R8 : Compressor Speed Potentiometer	S1 : Room Thermostat (optional)	X1 : Terminal
Supply : Supply	Fan : Fan	Alarm : Alarm	Comp. : Compressor
CCH : Crankcase Heater	Aux : Auxiliary		

Picture1. Normal wiring

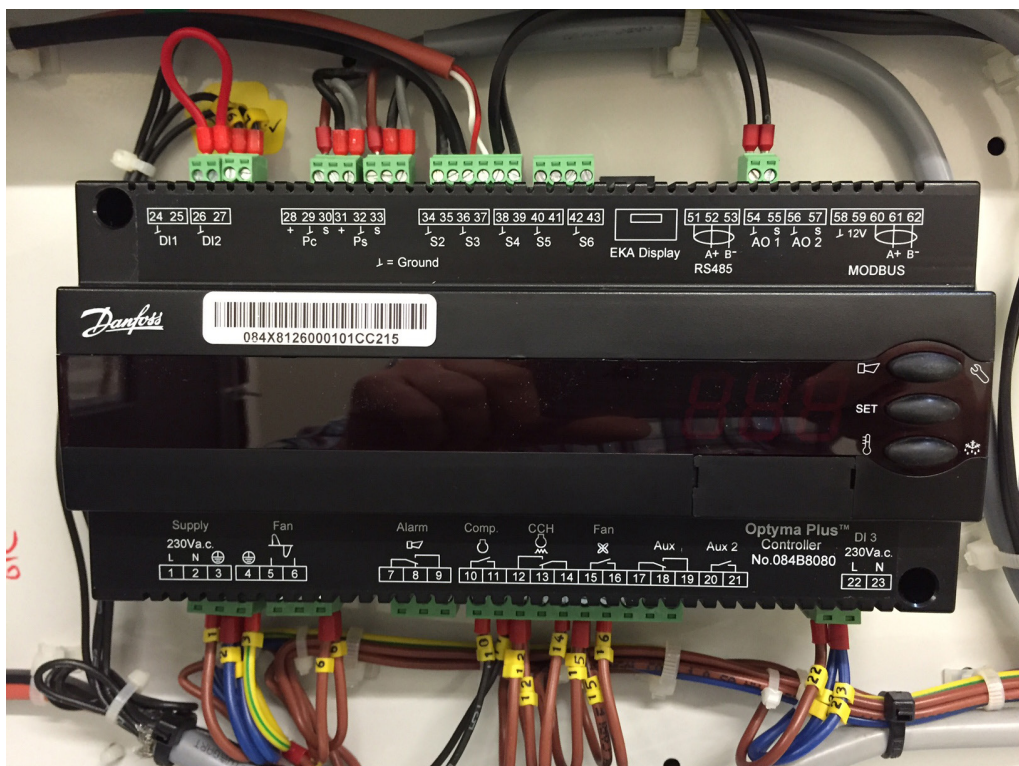

Picture2. Emergency wiring

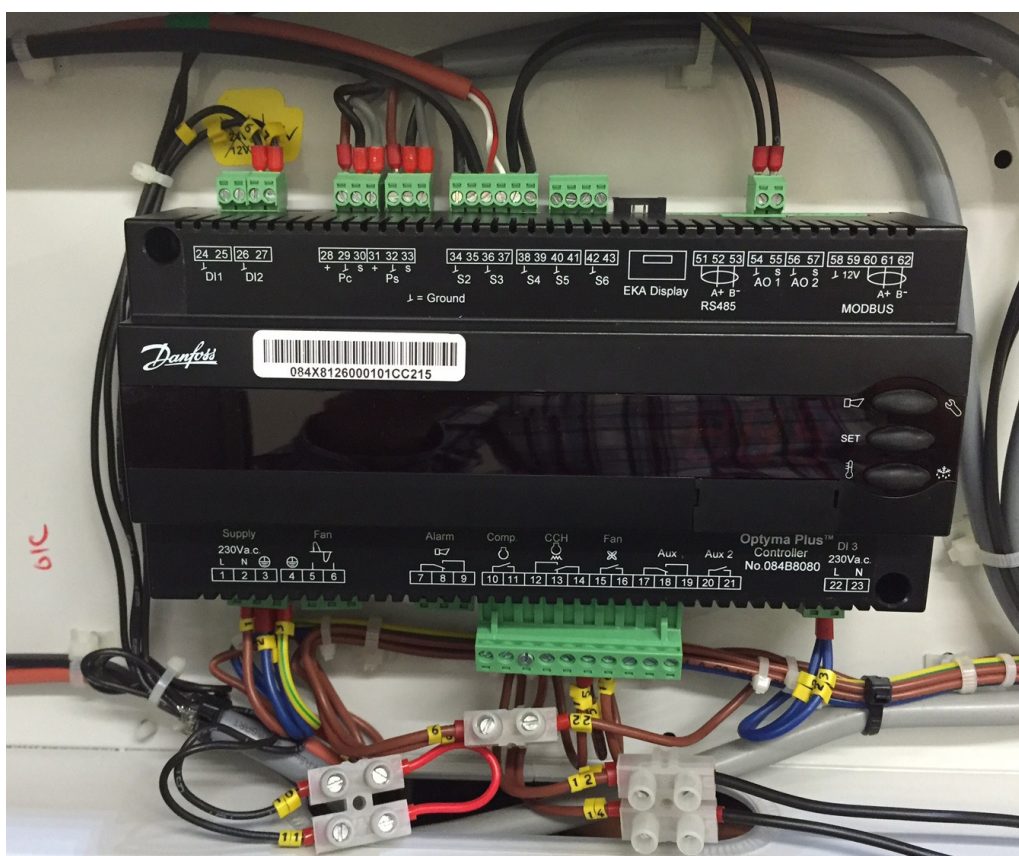

Application Guidelines

Installation

4.4 Electrical protection standard (protection class)

- Scroll compressors: IP22
- Fan: IP54
- Controller: IP20
- Drive: IP20
- Complete unit: IP54

⚠ WARNING Power connections under voltage and can cause danger by electrical shock.

Optyma™ Plus INVERTER units are fully wired and factory tested. Electrical connection compromises only power supply.

4.5 EMC compliance

All necessary actions are taken to secure EMC compliance of complete condensing unit!

4.5.1 Warning when touching unit when OFF

⚠ WARNING Frequency converters contain DC-link capacitors that can remain charged even when the frequency converter is not powered. To avoid electrical hazards, disconnect AC mains and wait 15 min for the capacitors to fully discharge before performing any service or repair work. Failure to wait the specified time after power has been removed before doing service or repair could result in death or serious injury.

The digital inputs are not a safety switch. They do not disconnect the frequency converter from the mains.

Do not remove mains connections, compressor connections or other power connections while the frequency converter is connected to power.

⚠ CAUTION Leakage Current

The ground leakage current from the frequency converter exceeds 3.5 mA. According to IEC 61800-5-1 a reinforced Protective Earth connection

must be ensured with a min. 10 mm² Cu or an additional PE wire – with the same cable cross-section as the mains wiring - must be terminated separately.

Residual Current Device

This product can cause a DC current in the protective conductor. Where a residual current device (RCD) is used for extra protection, only an RCD of Type B (time delayed) shall be used on the supply side of this product.

Recommended Brand & Model Number :

Make	RCCB Model Number
Doepke	DFS 4B SK, Type B
ABB	F 804 B, Type B
ABL	RA4403, Type B

Protective earthing of the frequency converter and the use of RCDs must always follow national and local regulations.

4.6 Phase sequence

Optyma™ Plus INVERTER units are equipped with variable speed scroll compressors for which proper phase sequence is compulsory in order to secure rotation in right direction and therefore compression.

The phase sequence has to be secured between the drive and compressor.
(The phase sequence between network and unit drive is of no influence on the compressor rotation direction).

4.7 Brazed connections


NOTICE Refrigerant connections, brazing and flange connections has to be done by a qualified installer according to EN378.

The unit is supplied with an positive protective pressure of Nitrogen (1 bar).
The use of substances containing chlorine, mineral oil or other chemicals is not allowed.

Piping has to be designed to avoid vibrations, either through flexibility or piping brackets. Furthermore piping has to be done in such a way that oil return for the compressor is ensured and the risk of liquid slug over in compressor is eliminated.

Only use clean and dehydrated refrigeration grade copper tubing. Tube-cutting must be carried out so as not to deform the tubing roundness and to ensure that no foreign debris remains within the tubing. Only refrigerant grade fittings should be used and these must be of both a design and size to allow for a minimum pressure drop through the completed assembly. Follow the brazing instructions bellow. Never drill holes into parts of the pipe-work where filings and particles cannot be removed. Even during installation, if the system is left for any reasonable period of time (say 1 hour), pipes should be re-capped to prevent moisture and contaminant from entering the system.

Liquid/suction tubes are extended from the condensing unit housing, therefore we recommend to isolate the housing by using a heat shield and/or a heat-absorbent compound (e.g. wet cloth) on the copper tubing. Use a double-tipped torch.

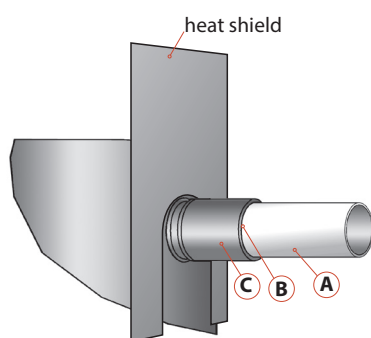

- For brazing the suction and liquid line connections, the following procedure is advised:
- Make sure that no electrical wiring is connected to the compressor.
 - Use brazing material with a minimum of 5% silver content.
 - Fit the copper tube into the unit tube.
 - Apply heat evenly to area A until the brazing temperature is reached. Move the torch to area B and apply heat evenly until the brazing temperature has been reached there as well, and then begin adding the brazing material. Move the torch evenly around the joint, in applying only enough brazing material to flow the full circumference of the joint.
 - Move the torch to area C only long enough to draw the brazing material into the joint.
 - Remove all remaining flux "once the joint has been soldered" with a wire brush or a wet cloth.

Remaining flux would cause corrosion of the tubing. Ensure that no flux is allowed to enter into the tubing. Flux is acidic and can cause substantial damage to the internal parts of the system and compressor.

The polyolester oil used in VLZ compressors is highly hygroscopic and will rapidly absorb moisture from the air. Condensing unit must therefore not be left open to the atmosphere for a long period of time. Unit fitting plugs shall be removed just before brazing. Condensing unit should always be the last component brazed into the system.

Before eventual unbrazing of the compressor or any system component, the refrigerant charge must be removed from both the high- and low-pressure sides. Failure to do so may result in serious personal injury. Pressure gauges must be used to ensure all pressures are at atmospheric level.

For more detailed information on the appropriate materials required for brazing or soldering, please contact the product manufacturer or distributor. For specific applications not covered herein, please contact Danfoss for further information.

It is compulsory to braze with a protective atmosphere of nitrogen inside the piping. Nitrogen displaces the air and prevents the formation of copper oxides in the system.

(Copper oxide could block capillary tubes, thermal expansion valves and generate damage of compressor).

(Insulation should be at least 19 mm thick and is not a part of Danfoss supply). Use only dry pipes and components in order to avoid moisture in the system.

Furthermore it is recommended to insulate the suction pipe up to the compressor inlet.

NOTICE Maximum test pressure is 28 bar.

4.8 High pressure transmitter connection

NOTICE Do not open the receiver Rotolock valve entirely, it must be turned 1 round (360°) to the closed direction to provide system pressure to the transmitter!

1. Valve In (from receiver).
2. Valve Out (to evaporator).
3. Service port (for safety devices).
4. Service port (for transmitter or service only).

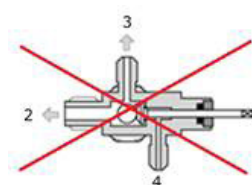
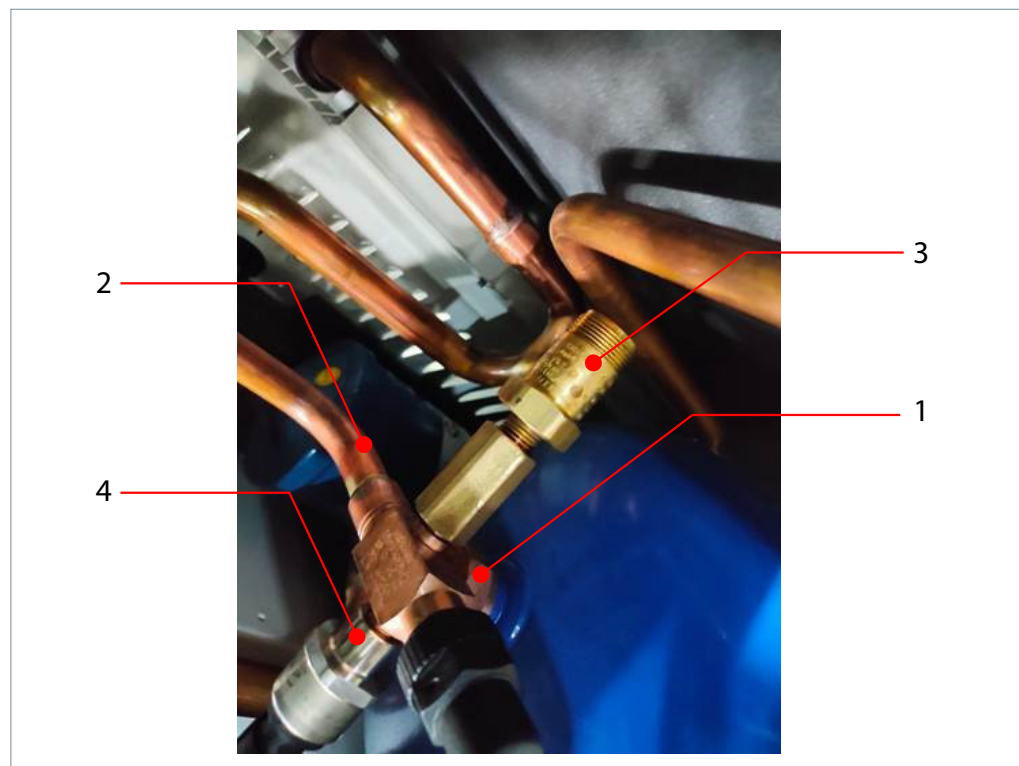


Fig A: Fully closed Condition
Port 2 and 3 is fully open
port 4 is fully closed

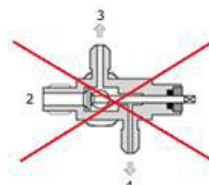


Fig B: Fully Opened Condition
Port 3 and 4 is fully open
port 2 is fully closed

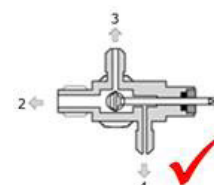


Fig C: Partially Opened Condition
Port 2, 3, 4 is fully opened.

⚠ WARNING Transmitter failure: Valve shall be opened entirely to disconnect transmitter port from the others.

⚠ WARNING Rotolock spindle should be rotated by 5.5 turns/rotation in anticlockwise (from valve fully closed position) to open the valve.


4.9 Pressure relief valve (PRV) connection

PRV Valve for cat I models (Not factory mounted)

- PRV to be fitted on liquid receiver at 3/8" NPT Connection. (Refer Coolselector2 for PRV spare part code). Use Locatite 554 for PRV fitment.
- Torque: 40Nm (Don't exceed given torque)




- Installer need to take care of where to blow the leaked refrigerant. Danfoss recommended to blow refrigerant away from condensing unit.
- Recommended to change PRV when after discharge, Changing refrigerant
- Don't remove the seal and attempt to reset the valve.
- Valves must be installed vertically or Horizontally, but ensure PRV to be fitted above system's liquid level.
- Ensure refrigerant is released safely to the atmosphere directly.
- In case of hazard, additional spare kit has been designed in order to collect the released refrigerant. Kit should be installation with proper piping routing for discharge of refrigerant safely. (See picture below)

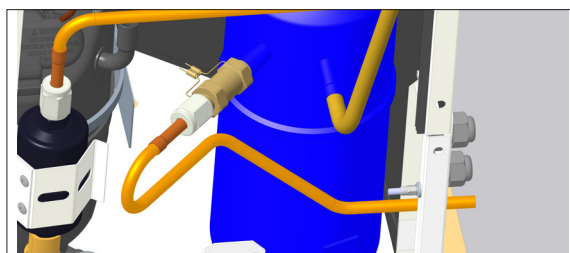

- PRV should not be installed on service valve.
- Replace PRV after clean out of system or bared out.
- No Detachable joints and valves should not accessible to public. All brazing joints should comply with EN 14276-2 and other permanent joints should comply with EN-16084.

PRV Valve for cat II models (Factory mounted)

For Optyma™ Plus INVERTER, condensing units OP-MPPM065 which falls in PED cat II, PRV is fitted on receiver rotolock valve from factory.

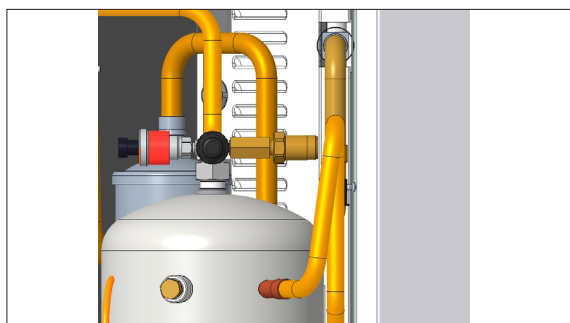

5.1 Piping design

Connection sizes! Unsuitable refrigerant flow rate!

NOTICE Do not assume that the liquid/suction connection sizes on the unit are in fact the correct sizes to run your interconnecting refrigeration pipes!

The pipes should be sized to ensure optimum performance and good oil return. The sizing must also take into account the full capacity range through which this particular unit will need to operate.

Pipe runs should be kept as short as possible, using the minimum number of directional changes. Use large radius bends and avoid trapping of oil and refrigerant. This is particularly important for the suction line.


All pipes should be adequately supported to prevent sagging which can create oil traps. The recommended pipe clamp support distance is shown in Table below:

Tube size	Distance between 2 clamp supports
12 mm (1/2")	1 m
16 mm (5/8")	1,5 m
19 mm (3/4")	1,8 m
22 mm (7/8")	2 m

The suction line should:

- secure gentle slope towards the unit (recommended slope minimum 0,5/100).
- have P traps, double risers and reduced pipe diameters where long vertical risers cannot be avoided.

The suction gas velocity must be sufficient to ensure a good oil return, within 8 to 12 m/s in vertical risers. In horizontal pipes this velocity can decrease down to 4 m/s. The use of U-trap and double suction risers is often required. These suction risers must always be fitted with a U-trap at the bottom and a P-trap at the top and never be higher than 4 m unless a second U-trap system is fitted.

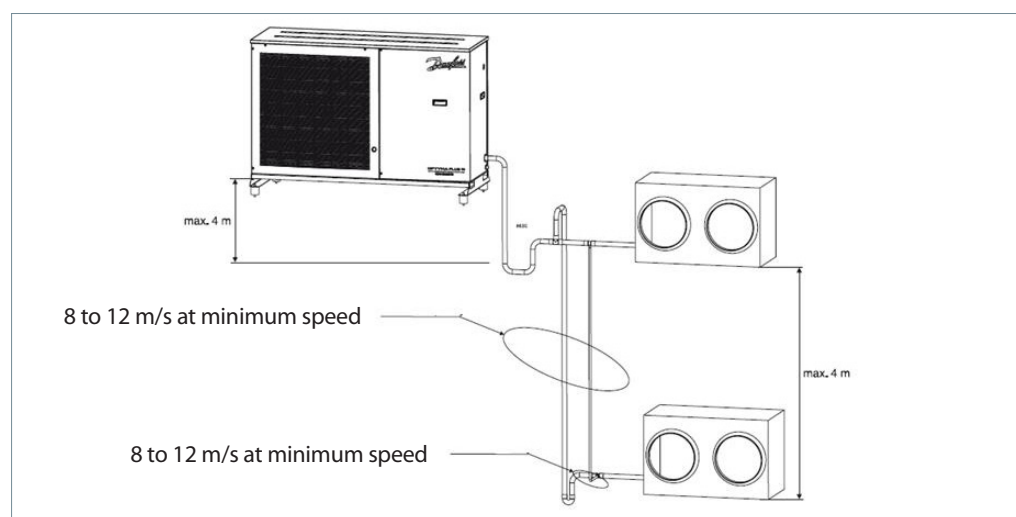

If the evaporator lies above the CU, a pump-down cycle is strongly recommended. If a pump-down cycle were to be omitted, the suction line must have a loop at the evaporator outlet to prevent refrigerant from draining into the compressor during off-cycles. If the evaporator are situated below the CU, the suction riser must be trapped so as to prevent liquid refrigerant from collecting at the outlet of the evaporator while the system is idle, which would mislead the expansion valve's sensor (thermal bulb) at start-up.

Maximum safety length of pipes between CU and last evaporator is 20 m.

If pipes length is more than 20 m special adjustment of complete system is needed (oil and refrigerant charge adjustments).

Diameter of separate suction lines from evaporators to condensing unit manifold should be with appropriate size according evaporator capacity (securing recommended speed for proper oil return). Common manifold tube should be as close as possible to condensing unit.

NOTICE The installer is responsible for the installation of the unit and complete refrigeration system design according particular conditions of each application as this is not scope of current Guideline.

5.2 Evacuation

Moisture obstructs the proper functioning of both the compressor and the refrigeration system. Air and moisture reduce service life and increase condensation pressure, which causes abnormally high discharge temperatures that are then capable of degrading the lubricating properties of the oil. The risk of acid formation is also increased by air and moisture, and this condition can also lead to copper plating. All these phenomena may cause both mechanical and electrical compressor failures. The typical method for avoiding such problems is a vacuum pump-down executed with a vacuum pump, thus creating a minimum vacuum of 500 microns (0.67 mbar).

NOTICE The evacuation procedure is based upon achieving an actual system Vacuum standard and is NOT TIME DEPENDENT!

Evacuate the installation down to 0,67 mbar to ensure quality vacuum.

It is recommended to evacuate on both high and low pressure side to achieve fast and uniform vacuum in the entire refrigeration system.

When the vacuum level has been reached, the system must be isolated from the pump. A vacuum of 0.67mbar has to be reached and maintained for 4 hours. This pressure is to be measured in the refrigeration system, and not at the vacuum pump gauge.

If pressure increases rapidly, the system is not airtight. Locate and repair leaks. Restart the vacuum procedure.

If pressure increases slowly, the system contains moisture inside. Break the vacuum with nitrogen gas and restart the vacuum process again.

CAUTION Do not use a megohmmeter nor apply power to the compressor while it is under vacuum as this may cause internal damage.

CAUTION Leak detection must be carried out using a mixture of nitrogen and refrigerant or nitrogen and helium. Never use other gasses such as oxygen, dry air or acetylene as these may form an inflammable mixture. Pressurize the system on HP side first then LP side.

5.3 Refrigerant charge

For the initial charge condensing must not run and eventual service valves must be closed. Charge refrigerant as close as possible to the nominal system charge before starting the compressor. As maximum safe refrigerant charge for compressor is 3,6 kg initial charge can be considered close to 4 kg (will depend on tube sizes, lengths of each individual system). This initial

charging operation must be done in liquid phase as far away as possible from the compressor.

Never start the compressor under vacuum, ensure a progressive charge of the system to 4– 5 bar.



Charging port (suction line) - adjustment of refrigerant charge

Charging port (liquid line) - initial charge (=4 kg)

For the initial refrigerant charge service port on liquid line ball valve can be used. This port is equipped with Schrader valve.

For the adjustment of refrigerant charge port on the suction line can be used (located between oil return port and suction ball valve port). This port is also equipped with Schrader valve.

Refrigerant charge should secure stable work at minimum and maximum heat load within the limits of condensing unit application envelope!

The remaining charge is done until the installation has reached a level of stable nominal condition during operation.

Next steps can be followed for proper charging or the system:

- keep system working under the max load conditions (all evaporators working, maximum air/liquid flow via evaporator(s)).
- slowly throttling liquid in on the low pressure side as far away as possible from the compressor suction connection by default via the port on suction line as described before.
- keep under the control evaporating pressure, condensing pressure, suction superheat.

- charge system until reaching suction superheat 6-12 K at desired evaporating temperature.

Suction superheat as well as suction, condensing pressures (temperatures) can be read from controller display.

To avoid system overcharging (which can cause higher energy consumption, high pressure alarms) maximum refrigerant charge can be calculated as follows:

$$M_{max} = (V_{rec} + V_{liqL}) * 0.9,$$

Where

M_{max} = approximate maximum refrigerant charge, kg

V_{rec} = receiver volume, L, for Optyma™ Plus INVERTER 6,2 L for OP-MPPM028-035-044 and 10L for OP-MPPM065

V_{liqL} = internal volume of liquid line, L (specific for each system)

0.9 – correlation coefficient due to refrigerant density.

Liquid line – Dimension			Liquid line - Volume	
OD [inch]	OD [mm]	ID [mm]	VliqL [L/1m]	VliqL [L/10m]
3/8	9.5	7.9	0.05	0.5
1/2	12.7	11.1	0.10	1.0
5/8	15.9	14.1	0.16	1.6
3/4	19.1	17.3	0.23	2.3
7/8	22.2	19.9	0.31	3.1

During all of the charge procedure keep the oil heaters ON and keep an eye on the oil sight glass, so that it doesn't change color, density or appearance and it doesn't start foaming. Refrigerant charge quantity must be suitable for maximum load conditions as well as for minimum load conditions for both summer and winter operations.

It means that refrigerant charge should be enough to feed all evaporators during the peak load conditions and condenser should not be flooded by liquid refrigerant during minimum load conditions.

Receiver and liquid lines should be able to contain remaining refrigerant during low load conditions.

Only refrigerant for which the unit is designed for has to be charged, see unit data.

In case of refrigerant blend charging has to be done in liquid form in order to avoid chemical changes of the refrigerant.

NOTICE Don't judge the refrigerant charge by the liquid sight glass as 100% correct way. It may mislead you!

CAUTION When Optyma™ Plus INVERTER unit has to be scraped, refrigerant has to be disposed for destruction. Local laws and rules have to be followed for disposal of refrigerant.

5.4 Oil level

Optyma™ Plus INVERTER condensing units are supplied with POE oil, the oil separator is pre-charged with 0.3L for OP-MPPM028-035-044 and 0.7L for OP-MPPM065 oil. In case of adding oils always use original Danfoss POE oil from new cans.

After commissioning, the oil level should be checked and topped up if necessary.

When the compressor is running under stabilized conditions, the oil level must be visible in the sight glass. The presence of foam filling in the sight glass indicates large concentration of refrigerant in the oil and / or presence of liquid returning to the compressor. The oil level can also be checked a few minutes after the compressor stops, the level must be between $\frac{1}{4}$ and $\frac{3}{4}$ of sight glass. When the compressor is off, the level in the sight glass can be influenced by the

presence of refrigerant in the oil.

In installations with good oil return and line runs up to 20 m, no additional oil is required. If installation lines exceed 20 m, additional oil may be needed. Oil charge has to be adjusted based on the oil level in the compressor sight glass.

Top-up the oil while the compressor is idle. Use the schrader connector or any other accessible connector on the compressor suction line and a suitable pump.

The oil fills connection and gauge port is a 1/4" male flare connector incorporating a Schrader valve.

Oil changing is not normally necessary for package units.

5.5 Check before start

1. Compliance between unit and power supply.
 2. Check that valves are opened.
- Remark: Do not open receiver valve entirely to get correct pressure to the discharge pressure transmitter. Turn valve spindle one round (360°) in close direction.

3. Check that crankcase and oil separator heaters are working.
4. Check that fan can rotate freely.
5. Check for possible faults in the installation.
6. Check main switch overload protection setting.

5.6 Startup of the unit

After below steps are completed:

- 1) System is completely installed.
- 2) All electrical connections are done.
- 3) System is charged.

Next steps are needed to start the unit:

The controller of the condensing unit is set for R449A. If this factory setting of refrigerant as well as other factory settings of parameters fits for the requirement of your application, no controller parameter must be changed.

- For a refrigerant change go into the parameter menu (press upper button 5 seconds).
- Select parameter "r12" (software main switch) with a short press on lower button.
- Activate parameter "r12" with middle button and change the value to 0 (zero).
- Confirm the value with a short press on the middle button (the 3 LED's start flashing).
- Go to the parameter "o30" (Refrigerant).
- Change the value of parameter "o30" to 21 if R407A, 37 if R407F will be used.
- Confirm the value with a short press on the middle button.

Press short the upper (or lower) button to go to the next Parameter of the Parameter menu, e.g. Parameter r23 for suction pressure setpoint or r82

for Min Condensing Pressure. Scroll fast through the Parameters with a long press on these buttons.

- Press short the middle button to show the value of the selected Parameter.
- Press afterwards the upper (or lower) button to change the value of the selected parameter. A long press on these buttons will change the value fast
- Select parameter "r12" again.
- Change the value to 1 (one).
- Confirm the value with a short press on the middle button (the 3 LED-signs stop flashing and the condensing unit will start if required).
- After 20 seconds the display returns to the evaporation temperature in °C, the new refrigerant and all relevant parameters are changed.

It is compulsory to energize crankcase and oil separator heaters at least 1 hour before initial start-up and start-up after prolonged shutdown to remove refrigerant in liquid phase from the compressor.

Condensing unit is factory preset for quick installation and start up. Compressor drive is fully managed by condensing unit controller and therefore all parameters settings should be done only via condensing unit controller.

5.7 Check after start

After a couple of hours of stable operation following has to be checked via service parameters U :

1. Unit current consumption.
2. Rotation of fan (suction through condenser).
3. Check for leakages in refrigerant system.

4. Check superheat.
5. Check oil level.
6. Check for abnormal noises.
7. Check for abnormal vibrations.
8. Suction and discharge pressures.

	In order to provide the highest level of compressor protection, energy efficiency and adaptation to	variable conditions condensing unit is equipped with specific controller.
6.1 Advantages	<ul style="list-style-type: none"> • Condensing pressure control in relation to outside temperature. • Fan speed regulation. • On/off and variable speed regulation of the compressor. • Crankcase heating element control. • Day/night controller operation. 	<ul style="list-style-type: none"> • Built-in clock function with power reserve . • Built-in Modbus data communication. • Monitoring discharge temperature td. • Oil return management control at variable speed operation.
6.2 Controller's regulation logic	<p>The controller receives a signal for demanded cooling, and it then starts the compressor. If compressor is controlled by variable speed, the suction pressure (converted to temperature) will be controlled according to the set evaporating temperature.</p> <p>Condenser pressure regulation is performed following a signal from the ambient temperature</p>	<p>sensor and the set reference corresponding to difference between condensing and ambient temperatures. The controller will then control the fan, which allows the condensing temperature to be maintained at the desired value. The controller can also control the heating element in the crankcase so that oil is kept separate from the refrigerant.</p>
6.3 Functions	<ul style="list-style-type: none"> • Control of condensing temperature. • Control of fan speed. • On/off control or speed regulation of the compressor. • Control of heating element in crankcase. • Liquid injection into economizer port. 	<ul style="list-style-type: none"> • Raising the condenser pressure regulation reference during night operation. • Both internal and external start/stop cooling. • Safety cut-out activated via signal from automatic safety control.
6.4 Regulation reference for condensing temperature	The controller controls the condensing temperature in relation to the ambient temperature. This difference is preset in the	controller. It can also, via another parameter, get increased at night.
6.5 Fan operation	The controller will control the fan so that the condensing temperature is maintained at the desired value above the ambient temperature.	
6.6 Compressor control	<p>The compressor is controlled by a signal at the DI1 input. The compressor will start once the input is connected. Three restrictions have been implemented to avoid frequent start/stops:</p> <ul style="list-style-type: none"> - minimum ON time. - minimum OFF time. - time elapsed between two starts. <p>These three restrictions have the highest priority during regulation, and the other functions will wait until they are complete before regulation can continue. When the compressor is 'locked'</p>	<p>by a restriction, this can be seen in a status notification. DI3 input is used as a safety stop for the compressor, an insufficient input signal will immediately stop the compressor. The compressor is speed-controlled with a voltage signal at the AO2 output.</p> <p>If the compressor has been running for a long period at low speed, the speed is increased for a short moment for the purpose of oil return.</p>

6.7 Maximum discharge gas temperature

The temperature is recorded by sensor Td. If variable speed control is chosen for the compressor, this control will initially reduce the compressor capacity if the Td temperature approaches the set maximum value. If higher temperature is detected than the set max. temperature, the fan's speed will be set to 100%. If this does not cause the temperature to drop, and if the temperature remains high after the

set delay time, the compressor will be stopped. The compressor will only be re-started once the temperature is 10 K lower than the set value. The above mentioned re-start restrictions must also be complete before the compressor can start once again. If the delay time is set to '0', the function will not stop the compressor. The Td sensor can be deactivated (o63).

6.8 High pressure monitoring

During regulation, the internal high pressure monitoring function is able to detect an over the limit condensing pressure so that the regulation can continue. However, if the C73 setting is exceeded, the compressor will be stopped.

If, on the other hand, the signal comes from the interrupted safety circuit connected to DI3, the compressor will immediately be stopped and the fan will be set to 100%. When the signal is once again 'OK' at the DI3 input, the regulation will resume.

6.9 Low pressure monitoring

During regulation, the internal low pressure monitoring function will cut out the compressor upon detecting a suction pressure that falls below the lower limit, but only once the minimum ON

time is exceeded. An alarm will be issued. This function will be time delayed, if the compressor starts at low ambient temperature.

6.10 Pump down limit

The compressor will be stopped if a suction pressure that falls below the set value is registered, but only once the minimum ON time is exceeded.

6.11 Data communication

The controller is delivered with built-in MODBUS data communication and can be connected to an ADAP KOOL® network. If a different form of data communication is requested, a LON RS-485 module can be inserted in the controller. The connection will then be made on terminal RS 485.

Important:
All connections to the data communication must comply with the requirements for data communication cables.

All condensing units are delivered with controllers which are factory pre-set.
See below table with factory setting of controllers integrated into condensing units and controllers supplied separately for service replacement (when controller is supplied as spare part for service replacement its factory settings are slightly different and should be adjusted according to controller unit specific settings in paragraph 6.12 and application specific requirements).

6.12 Controller settings

NOTE! In case of controller replacement beware that unit controller settings are different from default controller factory settings!

Function		Code	Min.value	Max.value	Default controller settings	Unit controller settings
Normal operation						
Set point Tc (regulation reference follows the number of degrees above the outside temperature Tamb)		---	2.0 K	20.0 K	8.0 K	
Regulation						
Select SI or US display. 0=SI (bar and °C). 1=US (Psig and °F)		r05	0/ °C	1/F	0/ °C	
Internal Main Switch. Manual and service = - 1, Stop regulation = 0, Start regulation =1		r12	-1	1	0	1
Offset during night operation. During night operation the reference is raised by this value		r13	0 K	10 K	2 K	
Set point for suction pressure Ts		r23	-25 °C	10°C	-7°C	
Readout of reference for Tc		r29	-	-	-	
Thermostat cut-in value for an external heating element (069=2 and o40=1)		r71	-30.0°C	0.0°C	-25°C	
Min. condensing temperature (lowest permitted Tc reference)		r82	0°C	40°C	30°C	
Max. condensing temperature (highest permitted Tc reference)		r83	20°C	50°C	40°C	
Max. discharge gas temperature Td		r84	50°C	140°C	125°C	125°C
Alarms						
Alarm time delay on signal on the DI2 input		A28	0 min.	240 min.	30 min.	
Alarm for insufficient cooling in condenser. Set temperature difference.		A70	3.0 K	20.0 K	10.0 K	
Delay time for A70 alarm		A71	5 min.	240 min.	30 min.	
Compressor						
Min. ON-time		c01	1 s	240 s	5 s	
Min. OFF-time		c02	3 s	240 s	120 s	
Min. time between compressor starts		c07	0 min.	30 min.	5 min.	
Pump down limit at which the compressor is stopped (setting 0.0 = function dis-activated)		C33	0.0 bar	6.0 bar	0.0 bar	2.3
Min. compressor speed		c46	30 rps	70 rps	30 rps	
Start speed for compressor and min. speed for high condensing temperatures		c47	30 rps	70 rps	50 rps	
Max. compressor speed		c48	50 rps	100 rps	100 rps	
Max. compressor speed during night operation (% value of c48)		c69	50%	100%	70%	
Definition of compressor control: 0: No compressor - Condensing unit OFF 1: Fixed speed - Input DI1 used to start / stop of fixed speed compressor 2: Variable speed - Input DI1 used for start / stop of variable speed-controlled compressor with a 0-10 V signal on AO2		c71	0	2	1	2
Time delay for high Td. The compressor will stop when time expires		c72	0 min.	20 min.	1 min.	
Max. pressure. Compressor stops if a higher pressure is recorded		c73	7.0 bar	31.0 bar	23.0 bar	25.8
Difference for max. pressure (c73)		c74	1.0 bar	10.0 bar	3.0 bar	
Min. suction pressure Ps. Compressor stops if a lower pressure is recorded		c75	-0.3 bar	6.0 bar	1.4 bar	2
Difference for min. suction pressure and pump down		c76	0.1 bar	5.0 bar	0.7 bar	
Amplification factor Kp for compressors PI regulation		c82	3.0	30.0	20.0	
Integration time Tn for compressors PI regulation		c83	30 s	360 s	60 s	
Liquid Injection Offset		c88	0.1 K	20.0 K	5.0 K	
Liquid Injection hysteresis		c89	3.0 K	30.0 K	15.0 K	
Compressor stop delay after Liquid injection		c90	0 s	10 s	3 s	
Desired compressor speed if the signal from the pressure transmitter Ps fails		c93	25 Hz	70 Hz	60 Hz	
Min On time during Low Ambient LP		c94	0 s	120 s	0 s	
Measured Tc for which the Comp min speed is raised to StartSpeed		c95	10.0°C	70.0°C	50.0°C	
Control parameters						
Amplification factor Kp for PI regulation		n04	1.0	20.0	7.0	
Integration time Tn for PI regulation		n05	20	120	40	
Kp max for PI regulation when the measurement is far from reference		n95	5.0	50.0	20.0	

Application Guidelines Condensing unit controller

Function		Code	Min.value	Max.value	Default controller settings	Unit controller settings
Fan						
Readout of fan speed in %		F07	-	-	-	
Permitted change in fan speed (to a lower value) % per second		F14	1.0%	5.0%	5.0%	
Jog speed (speed as a % when the fan is started)		F15	10%	100%	40%	
Jog speed at low temperature		F16	0%	40%	10%	
Definition of fan control: 0=Off; 1=Internal control. 2=External speed control		F17	0	2	1	
Minimum fan speed. Decreased need will stop the fan		F18	0%	40%	10%	
Maximum fan speed		F19	40%	100%	100%	
Manual control of the fan's speed. (Only when r12 is set to -1)		F20	0%	100%	0%	
Phase compensation (should only be changed by specially trained personnel.)		F21	0	50	20	
Real time clock						
Time at which they switch to day operation		t17	0 hrs	23 hrs	0	
Time at which they switch to night operation		t18	0 hrs	23 hrs	0	
Clock - Setting of hours		t07	0 hrs	23 hrs	0	
Clock - Setting of minute		t08	0 min.	59 min.	0	
Clock - Setting of date		t45	1 day	31 day	1	
Clock - Setting of month		t46	1 mon.	12 mon.	1	
Clock - Setting of year		t47	0 year	99 year	0	
Miscellaneous						
Network address		o03	0	240	0	
On/Off switch (Service Pin message) IMPORTANT! o61 must be set prior to o04 (used at LON 485 only)		o04	0/Off	1/On	0/Off	
Access code (access to all settings)		o05	0	100	0	
Readout of controllers software version		o08				
Select signal for display view. 1=Suction pressure in degrees, Ts 2=Condensing pressure in degrees, Ts		o17	1	2	1	
Pressure transmitter working range Ps - min. value		o20	-1 bar	5 bar	-1	
Pressure transmitter working range Ps- max. value		o21	6 bar	200 bar	12	
Refrigerant setting: 13=User defined. 19=R404A. 20=R407C 21=R407A. 37=R407F. 40=R448A. 41=R449A	*	o30	0	42	0	41
Input signal on DI2. Function: 0=not used, 1=External safety function. Regulate when closed, 2=external main switch, 3=Night operation when closed, 4=alarm function when closed, 5=alarm function when open, 6=on/off Status for monitoring 7=Alarm from speed regulation		o37	0	7	0	
			0	3	1	
Pressure transmitter working range Pc- min. value		o47	-1 bar	5 bar	0 bar	
Pressure transmitter working range Pc - max. value		o48	6 bar	200 bar	32 bar	
Setting of condensing unit type (is factory set when the controller is mounted and cannot be subsequently changed)	*	o61	0	69	0	55 or 56 or 57*
The sensor input S3 is to be used to measure the discharge gas temperature (1=yes)		o63	0	1	1	
Replace the controllers factory settings with the present settings		o67	Off (0)	On (1)	Off (0)	
Defines the use of the Taux sensor: 0=not used; 1=measuring of oil temperature; 2=other optional use		o69	0	3	0	
Period time for heating element in crankcase (ON + OFF period)		P45	30 s	255 s	240 s	
Difference for heating elements 100% ON point		P46	-20 K	-5 K	-10 K	
Difference for heating elements 100% OFF point		P47	5 K	20 K	10 K	
Read-out of operating time for condenser unit. (Value must be multiplied by 1,000). The value can be adjusted		P48	-	-	0 h	
Read-out of compressor operating time. (Value must be multiplied by 1,000). The value can be adjusted		P49	-	-	0 h	

Application Guidelines Condensing unit controller

Function		Code	Min.value	Max.value	Default controller settings	Unit controller settings
Read-out of operating time of heating element in crankcase. (Value must be multiplied by 1,000). The value can be adjusted		P50	-	-	0 h	
Read-out of number of HP alarms. The value can be adjusted		P51	-	-	0	
Read-out of number of LP alarms. The value can be adjusted		P52	-	-	0	
Read-out of number of Td alarms. The value can be adjusted		P53	-	-	0	
Oil return management. Compressor speed for the counter starting point		P77	25 rps	70 rps	40 rps	
Oil return management. Limit value for counter		P78	5 min.	720 min.	20 min.	
Oil return management. Boost-speed		P79	40 Rps	100 Rps	50 Rps	
Oil return management. Boost-time		P80	10 s	600 s	60 s	
Service						
Readout pressure on Pc		u01	bar			
Readout temperature Taux		u03	°C			
Status on DI1 input. 1=on=closed		u10				
Status on night operation (on or off) 1=on=night operation		u13				
Readout superheat		u21	K			
Readout temperature at S6 sensor		u36	°C			
Status on DI2 input. 1=on=closed		u37				
Readout the compressor capacity in %		u52	%			
Status on relay to compressor. 1=on=closed	**	u58				
Status on relay to fan. 1=on=closed	**	u59				
Status on relay to alarm. 1=on=closed	**	u62				
Status on relay "Aux". 1=on=closed	**	u63				
Status on relay to heating element in crank case. 1=on=closed	**	u71				
Status on high voltage input DI3. 1=on=230 V		u87				
Readout condensing pressure in temperature		U22	°C			
Readout pressure Ps		U23	bar			
Readout suction pressure in temperature		U24	°C			
Readout ambient temperature Tamb		U25	°C			
Readout discharge temperature Td		U26	°C			
Readout suction gas temperature Ts		U27	°C			
Readout the voltage on the output AO1		U44	V			
Readout the voltage on the output AO2		U56	V			

NOTICE Following controller parameters are modified from factory setting by condensing unit production.

All Other parameters in «unit controller setting» are same as "Default controller setting"

- r12: 1 (main switch = ON).
- c71: 2 (compressor type = variable speed compressor).
- c73: 25.8 (max. condensing pressure = 25.8bar(g)).
- c75: 2.0 (min. suction pressure = 2.0 bar(g)).
- o30: 41 (refrigerant: 19=R404A, 21=R407A, 37=R407F, 40=R448A, 41=R449A).

- o61: 55, 56 or 57 (compressor size: 55=VLZ028, 56=VLZ035, 57=VLZ044 & VLZ065).

Following parameter should be modified by installer if controller is used as pump down device.

- c33: 2.3 (pump down limit, should be min. 0.3bar higher than c75 to avoid unwanted alarms).
- F17: 2 (for EC fan motor model OP-MPPM065 only)

Modification of controller parameters shall be done by qualified persons only.

In case of any problems with controller it is possible to connect unit bypassing it: see details in chapter 4.3.1 of this guideline.

7.1 General recommendations

⚠ WARNING Even if main switch of condensing unit is in position OFF power still available at income terminals of main switch.

In case of any service related to electrical components inside condensing unit it is recommended to disconnect condensing unit from the power by switch located before condensing unit.

It is recommend to check the unit for leakages minimum once a year and in accordance with national requirements.

Furthermore following should be checked:

1. Electrical and refrigerant connections for damages, corrosion etc.
2. The mounting devices (bolts, nuts, etc) of the unit.
3. Vibrations: if it is on the same level as after installation or any signs of abnormal vibration.
4. Operation conditions.
5. Airflow across the condenser.
6. Oil level.
7. Tightness of electrical connections.
8. Operation of the crankcase and oil separator heaters.

Compressor must always be warmer than any other component in the circuit, even if the circuit is switched off for seasonal stop.

7.2 Condenser

Condenser should at least once a year be checked for clogging and be cleaned if deemed necessary. Access to internal side of condenser takes place through fan door. Remember to switch off the unit at main switch before opening the fan door.

In comparison to fin and tube heat exchangers, microchannel coils tend to accumulate more of the dirt on the surface and of the less dirt inside which can make them easier to clean.

Step 1: Remove surface debris

Remove surface dirt, leaves, fibres, etc. with a vacuum cleaner (preferably with a brush or other soft attachment rather than a metal tube), compressed air blown from the inside out, and/or a soft bristle (not wire!) brush. Do not impact or scrape the coil with the vacuum tube, air nozzle, etc.

Step 2: Rinse

Do not use any chemicals (including those advertised as coil cleaners) to wash microchannel heat exchangers. They can cause corrosion. Rinse only with water.

Hose the MCHE off gently, preferably from the inside out and top to bottom, running the water through every fin passage until it comes out clean. Microchannels fins are stronger than traditional tube & fin coil fins but still need to be handled with care. Do not bang the hose into the coil.

Step 3: Optional blow dry

Microchannel heat exchangers, because of their fin geometry, tend to retain water more than traditional fin & tube coils. It may be beneficial to blow or vacuum out the rinse water from your unit to speed drying and prevent pooling.

7.3 Service and safety advice

If the refrigerant system has been opened the system has to be flushed with dry air or nitrogen to remove moisture and a new filter dryer has to be installed. If evacuation of refrigerant has to be done, it shall be done in such a way that no refrigerant can escape to the environment. Beware of hot and cold components in the refrigeration system. The components in the refrigeration system are pressurized; as a consequence special attention has to be paid during operation on these components.

⚠ CAUTION Do not operate condensing unit without refrigerant charge or without being connected to the system.

Safety goggles, gloves, protective clothing, safety boots, hard hats or another safety equipment should be worn when necessary.


Never install a system in the field and leave it unattended when it has no charge, a holding charge, or with the service valves closed without electrically locking out the system.

Do not touch the compressor until it has cooled down. Ensure that other materials in the area of the compressor do not get in touch with it.

⚠ WARNING Before Starting Repair Work

- Disconnect from mains
- Wait as stated before for discharge of the DC-link. (Refer section 4.5.1 Warning when touching unit when OFF)
- Remove compressor cable.

7.4 Access ports

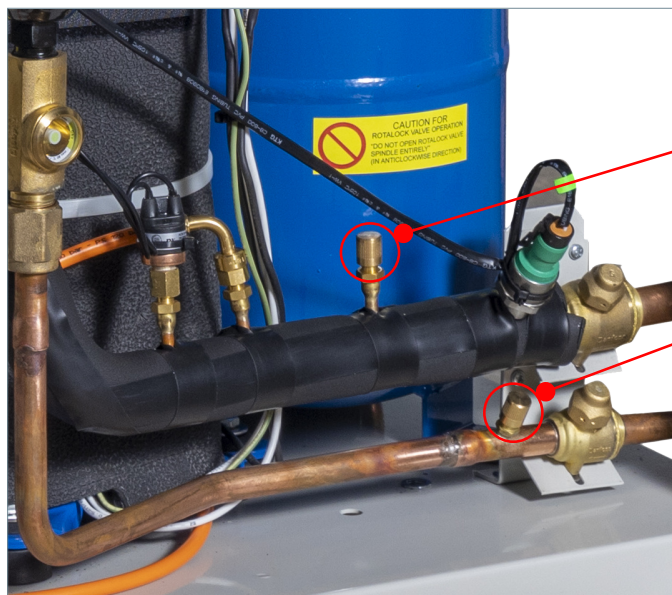

Charging port (suction line) - adjustment of refrigerant charge

Charging port (liquid line) - initial charge (=4 kg)

Application Guidelines

Transportation, handling and storage

8.1 Unpacking

When unit reaches your warehouse, inspect the packing for any visible damage and make sure it is in good condition. In the event you detect any damage, please contact your forwarder

immediately: send a registered letter to the shipping company claiming the suffered damage, a copy of which should be sent responsible contact in Danfoss.

8.2 Transportation and handling

Move the condensing unit only with appropriate mechanical or handling equipment according to weight. It is recommended not to open the packaging before the unit is at the final place for installation. Handle the unit with care. The packaging allows for the use of a forklift or pallet

jack. Use appropriate and safe lifting equipment. Store and transport the unit in an upright position. Store the unit between -35°C and 50°C. Don't expose the packaging to rain or corrosive atmosphere. After unpacking, check that the unit is complete and undamaged.

8.3 Disposal Instruction

Equipment containing electrical components must not be disposed of together with domestic waste. It must be separately collected with electrical and

electronic waste according to local and currently valid legislation.

9.1 Warranty conditions

Always transmit the model number and serial number with any claim filed regarding this product. The product warranty may be void in following cases:

- Absence of nameplate.
- External modifications, in particular drilling, welding, broken feet and shock marks.
- Compressor opened or returned unsealed.
- Rust, water or leak detection dye inside the compressor.
- Use of a refrigerant or lubricant not approved by Danfoss.
- Any deviation from recommended instructions pertaining to installation, application or maintenance.

- Use in mobile applications.
- Use in explosive atmospheric environment.
- No model number or serial number transmitted with the warranty claim.

NOTICE Charging of refrigerant or oil not specified by Danfoss as suitable for the unit will lead to annulment of warranty from Danfoss A/S side (if the refrigerant or oil are not approved in writing by Danfoss). Annulment of warranty from Danfoss side will also take place if the unit is altered without written approval from Danfoss.

Warranty is governed by the Danfoss general terms of warranty.

9.2 Unauthorized changes

Warranty can also be rejected in case of unauthorized modifications of the condensing unit:

- Modification of electrical box.
- Modification of internal piping system of the condensing unit.

- Direct changes of drive parameter setting (all parameter changes should be limited to controller setting changes. No changes allowed on the drive itself).
- Replacement of drive, compressor, fan or other components on the condensing unit by similar components which are not Danfoss original components or approved by Danfoss.

Application Guidelines

Data collected during start up

Identification				
Country				
Installation reference (shop name)				
City of installation				
Installer Company				
Unit Code/Type				
Serial N° of unit				
Installation Date				
Commission Date				
Installation				
Refrigerant				
Number of evaporators connected to the variable speed condensing unit				
Expected maximum Ambient temperature °C				
Expected minimum Ambient temperature °C				
Evaporators				
Evaporator N°	1	2	3	4
Type of application (cold room, cabinet, process cooling, etc.)				
Distance to the unit [m]				
Vertical position of the unit (+ if above or - if below)				
Evaporator Cooling capacity [kW]				
Evaporating pressure [bar] / temperature [°C]				
Superheat at evaporator outlet [K]				
Type of expansion valve used : Thermostatic (TEV) - electronic (EEX)				
Compressor				
Suction gas temperature [°C] or pressure [bar] at compressor inlet				
Frequency observed at stabilised condition				
Oil level in oilsightglass after start-up (1/4 - 1/2 - 3/4)				
Oil topup [L]				
Refrigerant charge [kg]				
Electrics & controls				
Has the installation a stable power supply				
Voltage (between L1/L2/L3)	U1:	U2:	U3:	
What's the type of grid (IT, TT, TN)				
If system-manager used (AK-SM, AK-SC....), type				

Kind request to provide after start-up completed copy of this page to your wholesaler of purchase, as part of warranty modalities.

Danfoss Commercial Compressors

is a worldwide manufacturer of compressors and condensing units for refrigeration and HVAC applications. With a wide range of high quality and innovative products we help your company to find the best possible energy efficient solution that respects the environment and reduces total life cycle costs.

We have 40 years of experience within the development of hermetic compressors which has brought us amongst the global leaders in our business, and positioned us as distinct variable speed technology specialists. Today we operate from engineering and manufacturing facilities spanning across three continents.



Danfoss Scrolls



Danfoss Light Commercial Refrigeration Compressors



Danfoss Inverter Scrolls



Danfoss Maneurop Reciprocating Compressors



Danfoss Turbocor Compressors



Danfoss Optyma Condensing Units

Our products can be found in a variety of applications such as rooftops, chillers, residential air conditioners, heatpumps, coldrooms, supermarkets, milk tank cooling and industrial cooling processes.



Danfoss A/S

Climate Solutions • danfoss.com • +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.

All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.