


User Manual

Remote Control

MP08A TR2400 Receiver

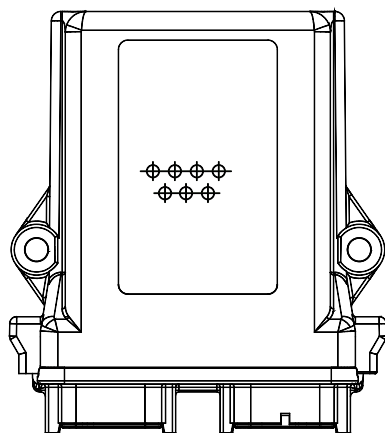

Revision history

Table of revisions

Date	Changed	Rev
January 2019	Rebranded to Danfoss	0101

Contents

Safety instructions

General safety.....	4
Safety warnings.....	4

Technical description

Dimensions and identification.....	6
------------------------------------	---

Installation

Receiver installation.....	7
Input and output configuration.....	8
Digital outputs.....	8
Analog outputs.....	9
Radio/manual option (exclusive to MP08A).....	9
Pinout information.....	10

Troubleshooting

Troubleshooting guide.....	11
----------------------------	----

Safety instructions

MP 08 general safety

The following safety instructions must be read carefully in order to install and use the product properly and to keep it in perfect working condition and to reduce the risk of misuse.

Potential damage to operator and product.

Do not use this product on machines in potentially explosive atmospheres unless the model is ATEX/ RATEX certified to do so.

- Strictly adhere to the installation instructions contained in this document.
- Make sure that professional and competent personnel carry out the installation.
- Ensure that all site and prevailing safety regulations are fully respected.
- Make sure that this document is permanently available to the operator and maintenance personnel.
- Keep the transmission key when the set is not in use.
- On starting each working day, check to make sure that the STOP button and other safety measures are working.
- When in doubt, press the STOP button.
- Whenever several sets have been installed, make sure the transmitter is the right one. Identify the machine controlled on the label for this purpose on the transmitter or by using the display (in case it has one).
- Service the equipment periodically.
- When carrying out repairs, only use spare parts from Danfoss.

MP 08 safety warnings

Potential damage to operator and product.


Follow the guidelines below to reduce risk of injury to the operator and the product.

- Use the device with the manufacturer's battery and battery charger (if applicable).
- Only allow qualified personnel to operate the equipment.
- Always set the STOP button in the off position when not in use.
- Always press STOP before plugging in tether cable (if applicable).
- Do not operate product when visibility is limited.
- Make sure product is compatible with the machine.
- Avoid knocking or dropping the product.
- Do not use the product if a failure is detected.


Changes or modifications not approved by Danfoss can void the user's authority to operate this product.

Safety instructions


Quick reference precautions

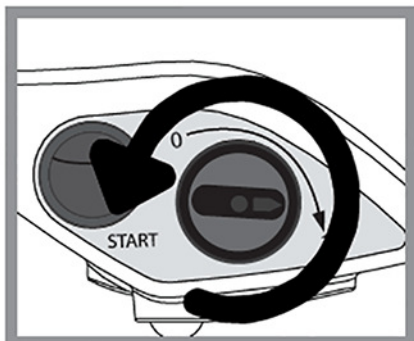


Remove the transmission key only when the set is not in use or to deny the access

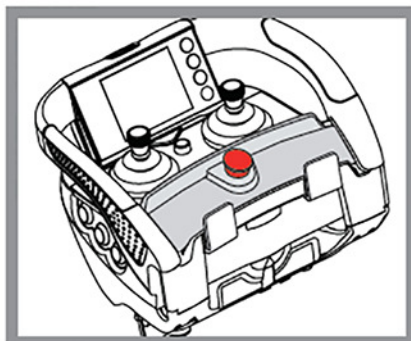


When in doubt, press the STOP button

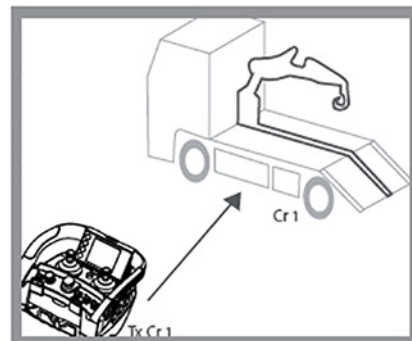


Make sure the transmitter works with the machine to be handled

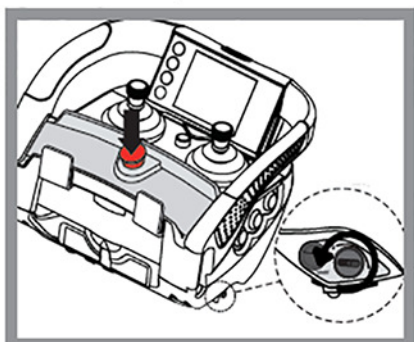

After use set the contact key and the STOP button

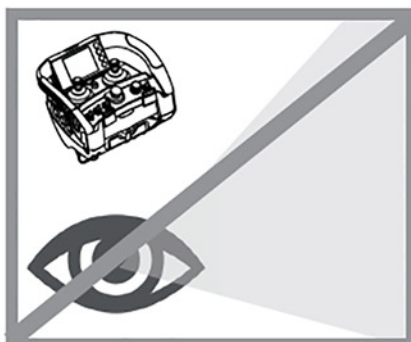

Do not use the set when visibility is limited

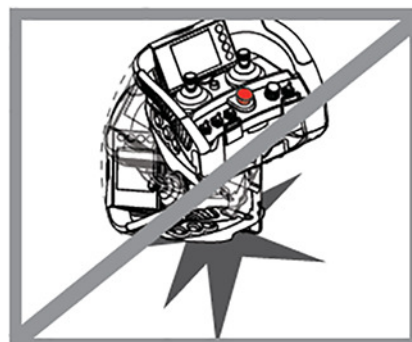


Avoid knocking or dropping the set

Technical description

MP 08A dimensions and identification

Dimensions in mm

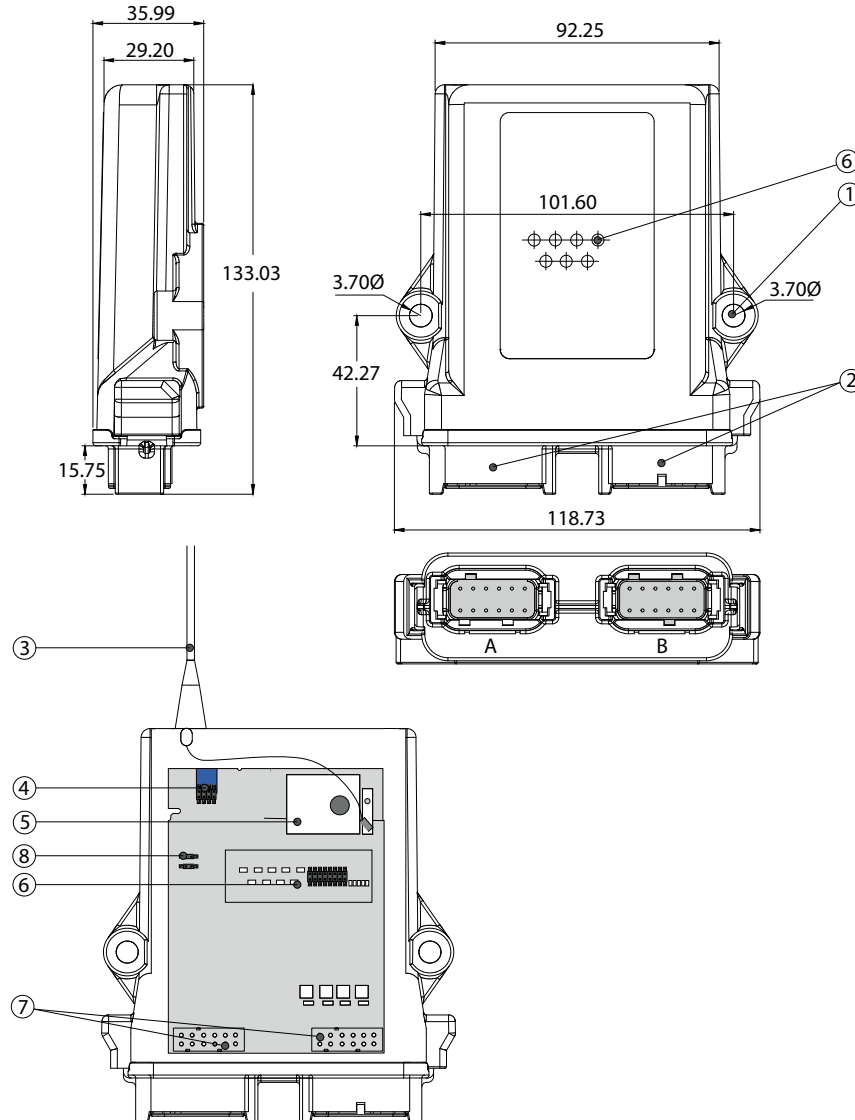

1. Fixing slots (fixed assembly or anti-vibration)
2. DEUTSCH connector
3. External antenna A60 (433) or A70 (870)
4. Removable internal EEPROM
5. TR800-CE MCX Radio
6. External signaling LEDs
7. DEUTSCH connector pinout
8. Analog input configuration jumpers

Installation

MP08 input and output configuration

This receiver has one analog input IN 0-10V (without isolation) or IN 0-20mA (without isolation). These inputs share the same hardware/pins and each one is selected by an internal jumper.


The two inputs cannot be live together at the same time.

The MP08 includes a 7.5A internal fuse.

MP08A digital outputs


The digital output group K1-K4 have a common contact at pin B1 of the connector. This pin is connected to pin B12 (stop) for powering up the group of outputs. Maximum of 2A per output.

DEUTSCH connector

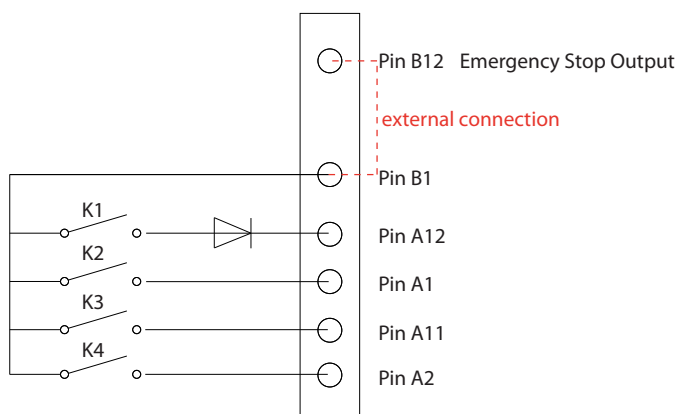

As an alternative, this group of outputs (K1-K4) can be connected directly to the external general power supply in order to provide a higher capacity of current.

DEUTSCH connector

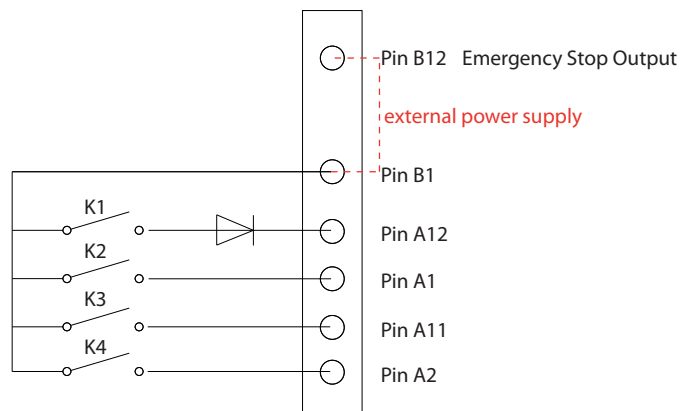


Installation

MP08A analog outputs


The illustration below shows the pinout information for outputs 1-4. Maximum of 2A per output.

DEUTSCH connector

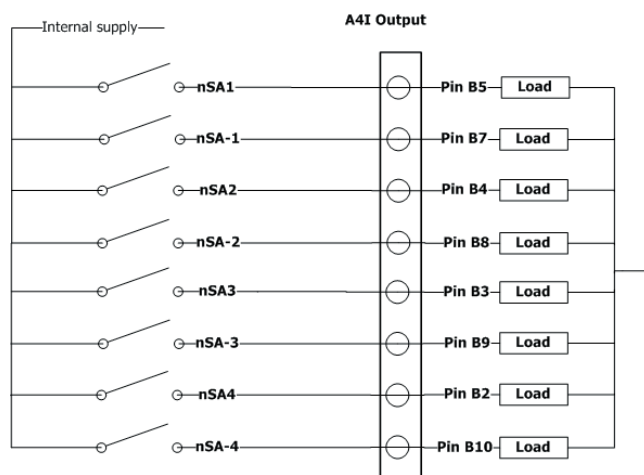

MP08A radio/manual option

The receiver has the possibility to connect to an external switch for changing from Radio mode to Manual mode if needed. Thus, all inputs and outputs of the receiver will be voided, except from the emergency stop output.

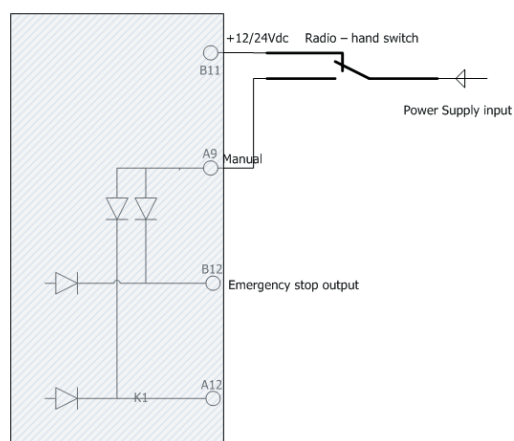


This option is exclusive to MP08A.

Installation

MP08A pinout information

Below is a description of each pin in the connector.

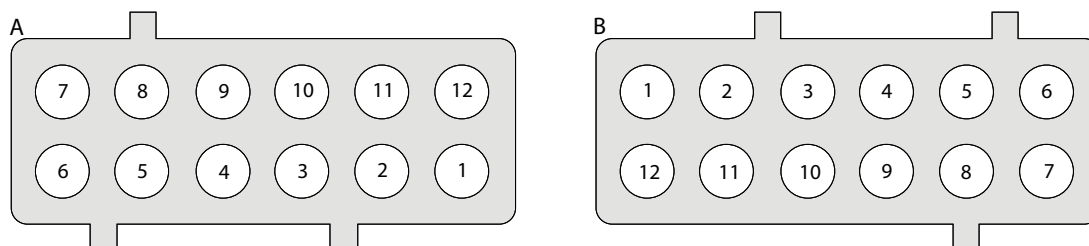

Connector A

Pin	Description
1	K2
2	K4
3	IN 0-10V / IN 0-20mA
4	N/A
5	IN4
6	IN3
7	IN2
8	IN1
9	Manual
10	GND
11	K3
12	K1

Connector B

1	PW / K1-4
2	1SA4
3	1SA3
4	1SA2
5	1SA1
6	GND
7	1SA-1
8	1SA-2
9	1SA-3
10	1SA-4
11	+12/24V
12	STOP

Troubleshooting

Receiver LED troubleshooting guide






The troubleshooting LEDs are located on then receiver board. Use the following table to identify faults and corrective action.

In order to reach the signaling, the receiver must be accessible and connected and the two screws located on the base of the receiver must be released using the suitable tool.

The LEDs on the receiver board are POWER, STATUS, DIAG1, DIAG2, ORDER and RELAY in that order.

LED	Color and frequency	Pulse frequency	Description	Action
POWER	Green continuous		Switched ON if powered	Check power supply if it is switched off.
STATUS	Blue fast pulses		System is starting; establishing connection with radio and EEPROM	Wait
	Blue continuous		Waiting for transmitter communication, coming from ACTIVE STOP	Release STOP button and press START
	Blue slow pulses		Waiting for transmitter communication, coming from PASSIVE STOP	Press Start
	Green continuous		Working	Operate
	Red slow pulses		EEPROM module missing or corrupt	Check EEPROM and reprogram if necessary
	Red double pulses		Radio communication error	Replace receiver
	Red triple pulses		Secondary micro error or error between micro communication	Replace receiver
STATUS + DIAG1	Red 4 pulses Orange slow pulses		Low tension in the receivers power supply	Supply the system with the correct voltage
	Red 4 pulses Orange double pulses		Hardware error	Replace receiver
	Red 4 pulses Orange triple pulses			
	Red 4 pulses			
	Orange 4 pulses			

Troubleshooting

LED	Color and frequency	Pulse frequency	Description	Action
DIAG1	Green slow pulses		Low link quality	N/A
	Green double pulses		Medium link quality	N/A
	Green triple pulses		High link quality	N/A
ORDER	Green continuous			N/A
RELAY	Green continuous		STOP relay activated	N/A

Products we offer:

- DCV directional control valves
- Electric converters
- Electric machines
- Electric motors
- Hydrostatic motors
- Hydrostatic pumps
- Orbital motors
- PLUS+1® controllers
- PLUS+1® displays
- PLUS+1® joysticks and pedals
- PLUS+1® operator interfaces
- PLUS+1® sensors
- PLUS+1® software
- PLUS+1® software services, support and training
- Position controls and sensors
- PVG proportional valves
- Steering components and systems
- Telematics

Danfoss Power Solutions is a global manufacturer and supplier of high-quality hydraulic and electric components. We specialize in providing state-of-the-art technology and solutions that excel in the harsh operating conditions of the mobile off-highway market as well as the marine sector. Building on our extensive applications expertise, we work closely with you to ensure exceptional performance for a broad range of applications. We help you and other customers around the world speed up system development, reduce costs and bring vehicles and vessels to market faster.

Danfoss Power Solutions – your strongest partner in mobile hydraulics and mobile electrification.

Go to www.danfoss.com for further product information.

We offer you expert worldwide support for ensuring the best possible solutions for outstanding performance. And with an extensive network of Global Service Partners, we also provide you with comprehensive global service for all of our components.

Comatrol

www.comatrol.com

Turolla

www.turollaocg.com

Hydro-Gear

www.hydro-gear.com

Daikin-Sauer-Danfoss

www.daikin-sauer-danfoss.com

Local address:

**Danfoss
Power Solutions (US) Company**
2800 East 13th Street
Ames, IA 50010, USA
Phone: +1 515 239 6000

**Danfoss
Power Solutions GmbH & Co. OHG**
Krokamp 35
D-24539 Neumünster, Germany
Phone: +49 4321 871 0

**Danfoss
Power Solutions ApS**
Nordborgvej 81
DK-6430 Nordborg, Denmark
Phone: +45 7488 2222

**Danfoss
Power Solutions Trading
(Shanghai) Co., Ltd.**
Building #22, No. 1000 Jin Hai Rd
Jin Qiao, Pudong New District
Shanghai, China 201206
Phone: +86 21 3418 5200

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequent changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.