


Service guide

## **MAH motor**

MAH 6.3 - 12.5

Disassembling and assembling

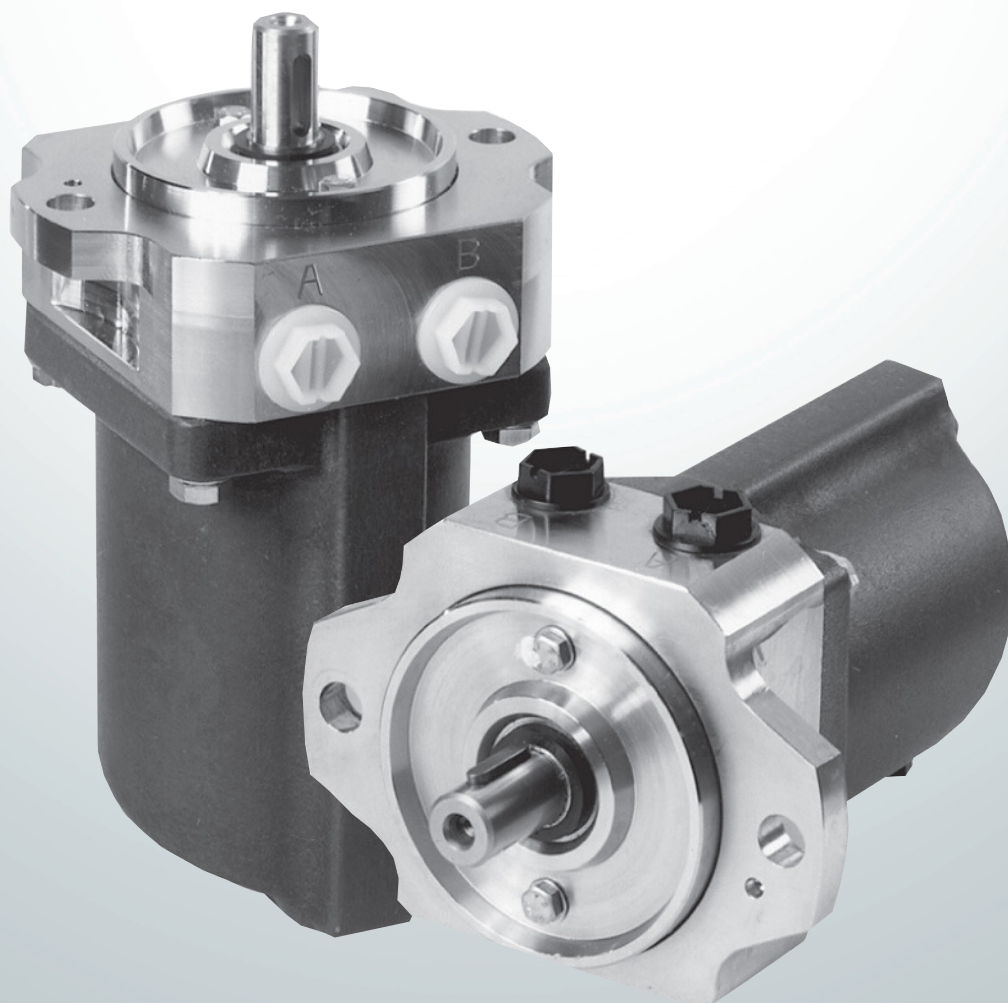

<b>Table of Contents</b>		Introduction .....	2
	1.	Disassembling the motor .....	3
	2.	Inspection.....	7
	3.	Assembling the motor .....	8
	4.	Service kit for MAH 6.3 .....	13
	4.1.	Service kit for MAH 12.5 .....	14
	5.	Exploded view MAH 6.3 .....	15
	5.1.	Exploded view 12.5 .....	16

Introduction

**NOTE: If the motor is disassembled within the warranty period, the motor is no longer covered by the warranty.**

This document covers the instructions for disassembling and assembling the motor MAH 6.3 - 12.5


Tools needed for disassembling/assembling the MAH 6.3 - 12.5 motor



# 1. Disassembling the motor




1. Remove parallel key and unscrew front cover.

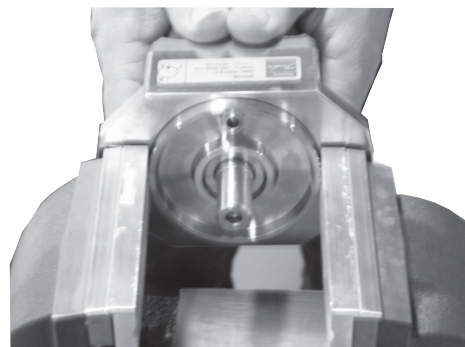


2. Dismantle front cover using a vice.



3. Remove shaft seal using two screwdrivers.

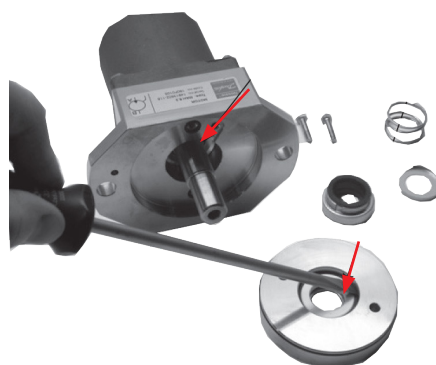


4. Remove the two small O-rings from flange. Remove seal from front cover using a screwdriver.

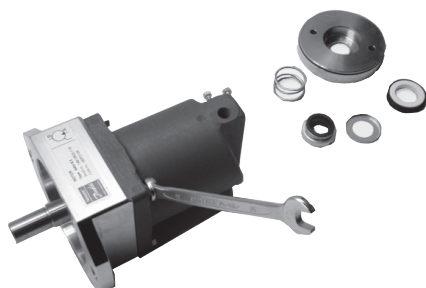


5. Unscrew the four screws for housing.




6. Remove housing.

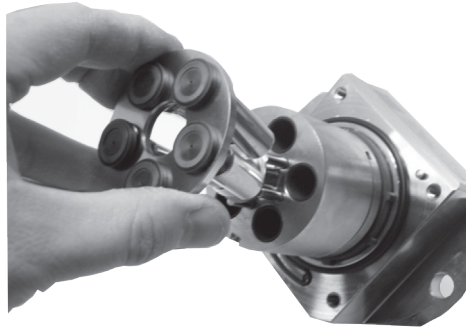

7. Remove pistons and retaining plate from cylinder barrel.

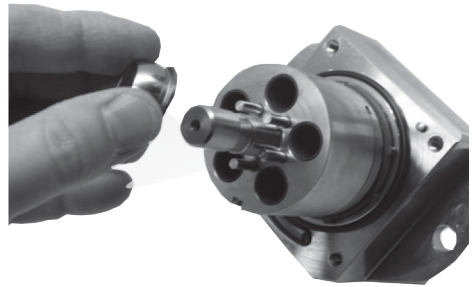

8. Remove retaining guide.

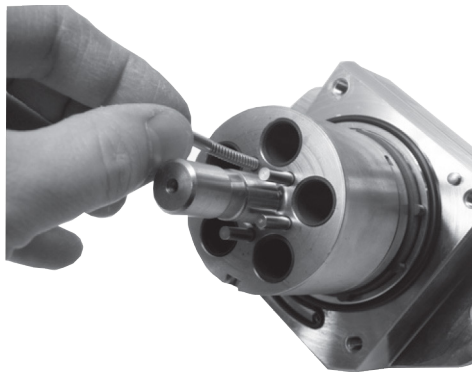


9. Remove pins and springs.




10. Remove cylinder barrel.




11. Remove port plate from flange.

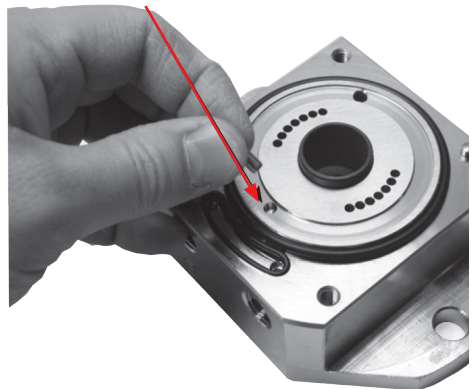

12. Remove guide pin.

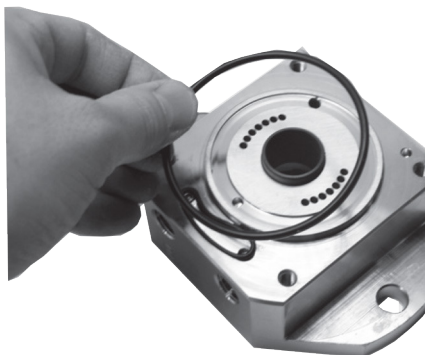


13. Remove O-ring from flange..

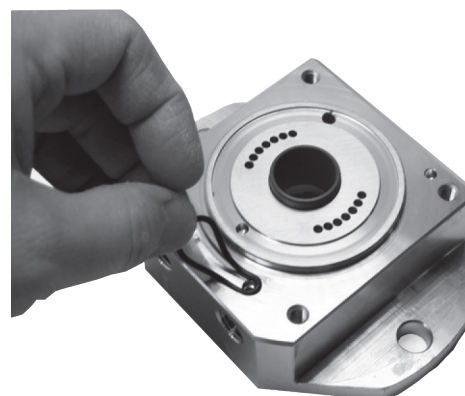

14. Remove O-ring from port.



15. Loosen thrust plate using a screwdriver.  
Place screwdriver in slot of thrust plate.

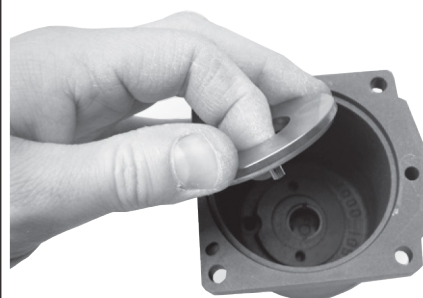


16. Remove swash plate from housing.

17. Wash all parts and replace all seals  
(inclusive shaft seal).

Inspect all parts carefully (see "Inspection")  
and replace any worn parts.

If the motor has failed, the reason for the  
failure must be found and fixed before the  
repaired motor is re-installed.


## 18. Parts

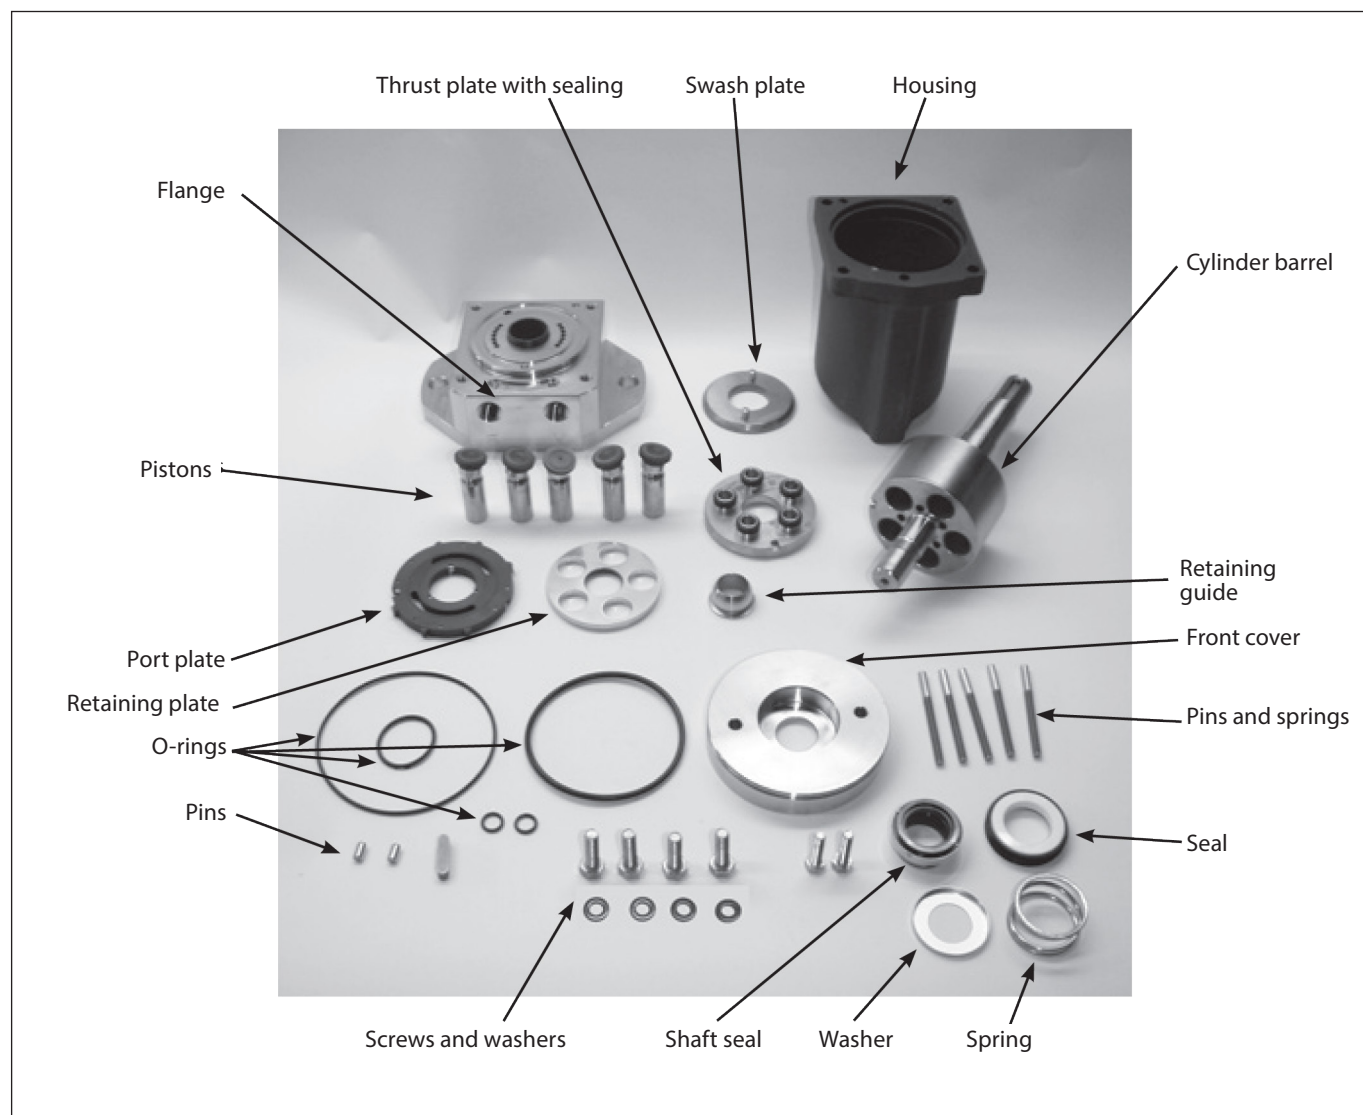





## 2. Inspection


### 2.1. Port plate and thrust plate

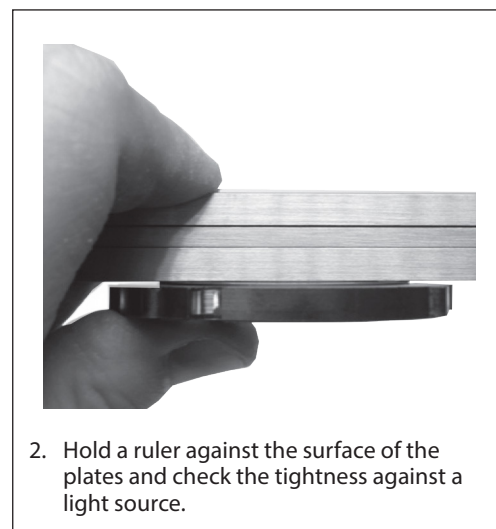


### 2.2. Pistons

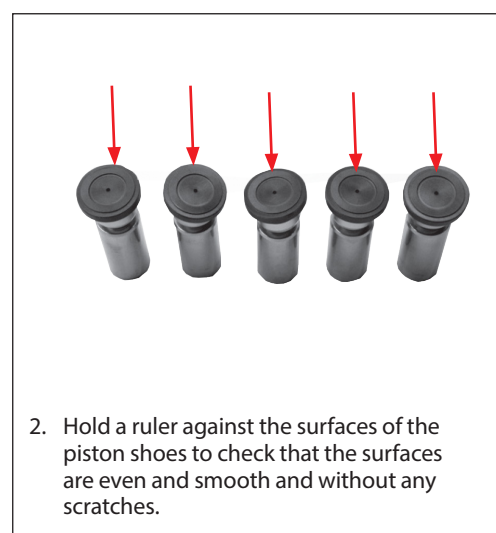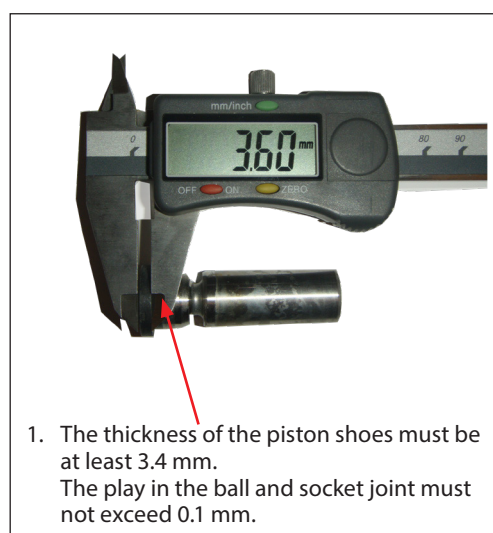

### 2.3 Cylinder barrel

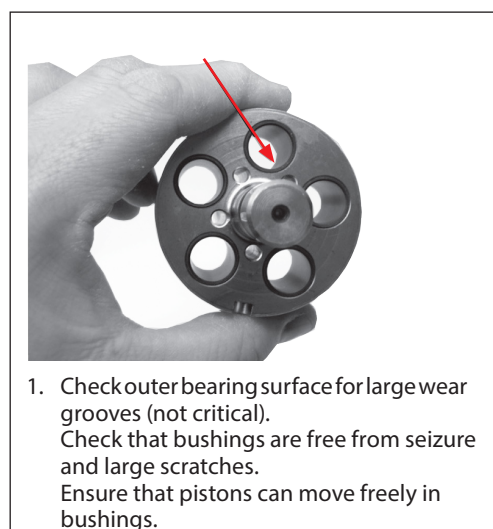

### 2.4 Housing

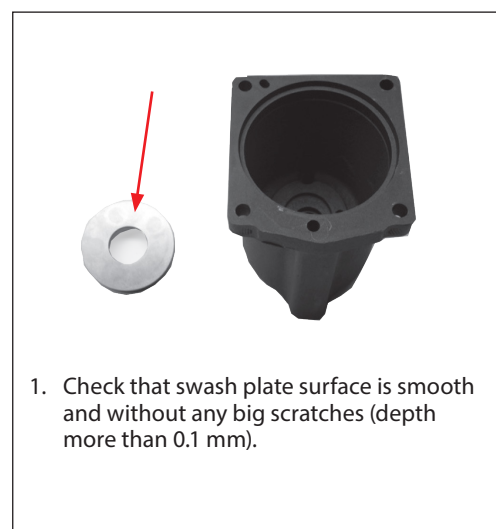


### 3. Assembling

**WARNING:**

Do not use silicone when assembling the motor. Do not reuse disassembled O-rings; they might be damaged. Always use new O-rings.

**Important:**


It is essential that the motor is serviced in conditions of absolute cleanliness. All parts must be absolute clean before mounting.

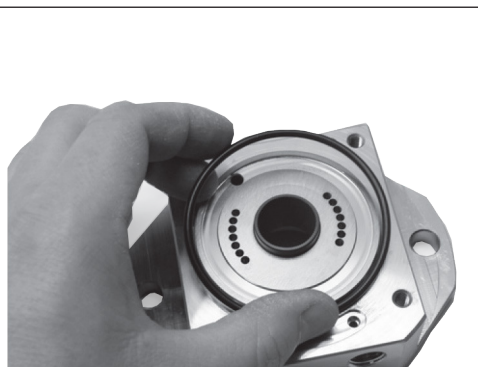

1. Mount O-ring on flange.



2. Mount guide pin.

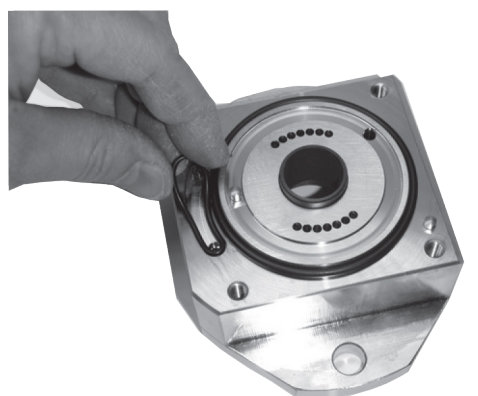


3. Mount the O-ring in port.




4. Mount port plate in its right position using pin as guide.




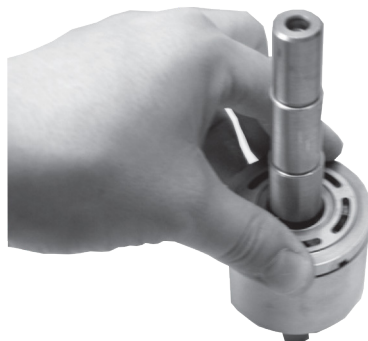

5. Mount thrust plate with seals on cylinder barrel.

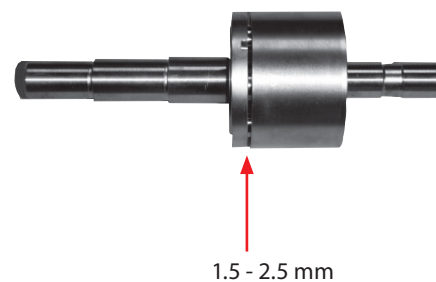

6. Check that the gap between the cylinder barrel and the thrust plate is 1.5-2.5 mm.

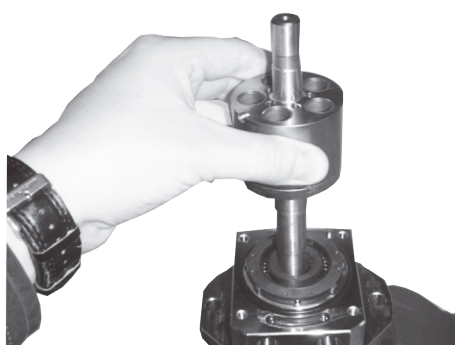

7. Mount the cylinder barrel in the flange.




8. Assemble pins and springs.




9. Mount pin/spring assemblies.




10. Mount the retainer guide.

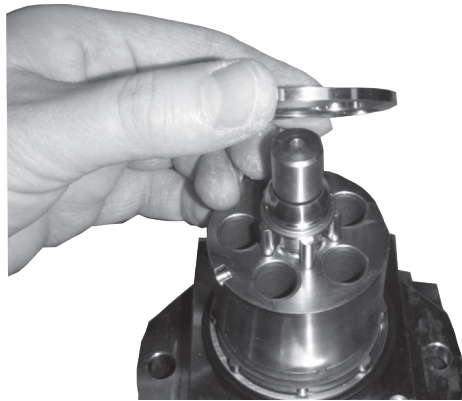


11. Mount the retaining plate on the retainer guide with plain surface pointing upwards.

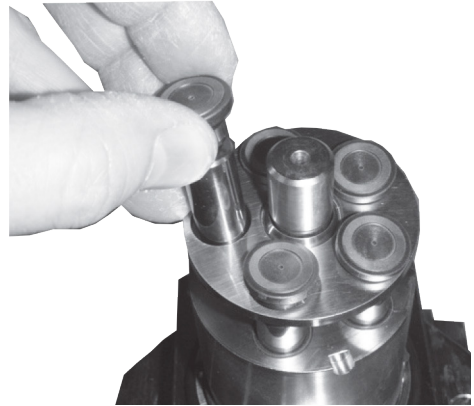


12. Insert the pistons.

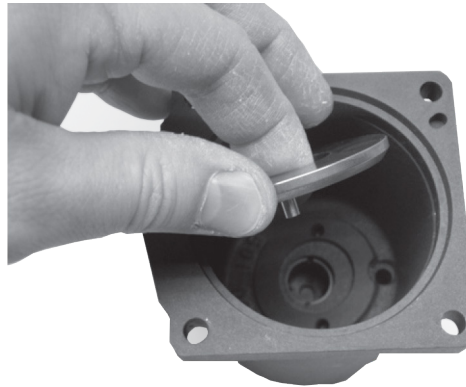

13. Mount swash plate.

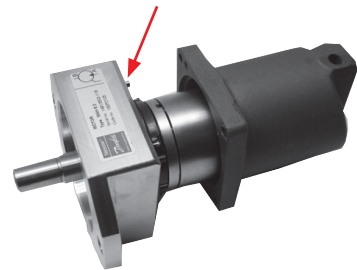


14. Mount housing using pin as guide.

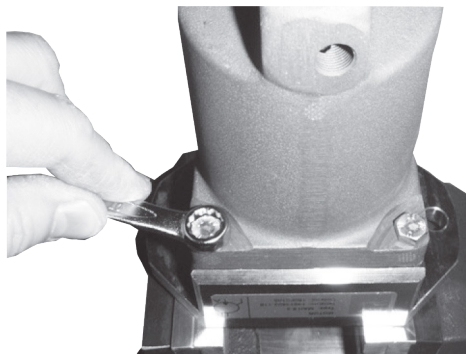

15. Tighten screws to a torque of 13 Nm.




16. Mount the two O-rings in the flange.

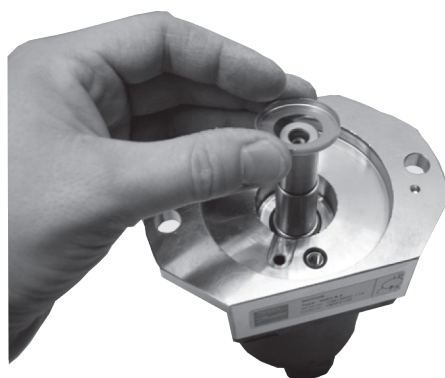

17. Mount washer with edge pointing upwards.




18. Mount spring.

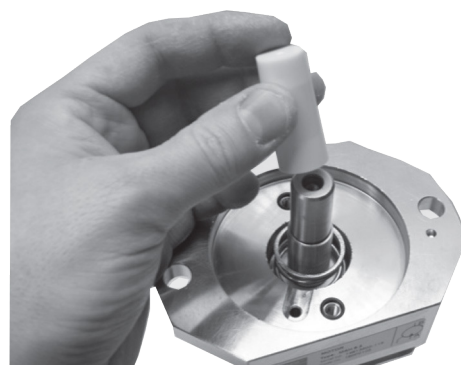

19. Fit hollow bush onto shaft.



20. Wet shaft seal and mount/slide it over bush.

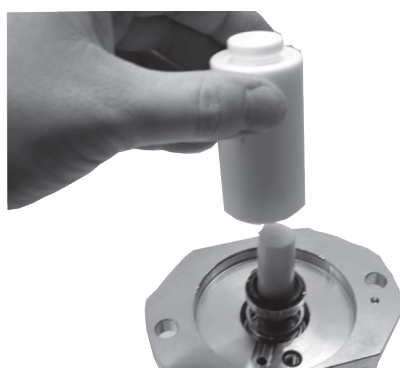

21. Use shaft seal tool when pressing shaft seal downwards.



22. Press shaft seal in position.



23. Mount O-ring on front cover.



24. Wet shaft seal with water and mount it in front cover. .




25. Press shaft seal into front cover using shaft seal tool. Ensure that it is pressed to the bottom.



26. Mount front cover and align it to screw holes.



27. Tighten screws to a torque of 7 Nm.

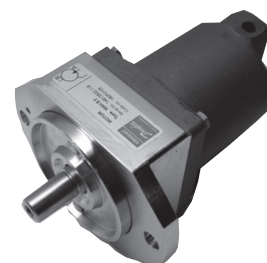

28. Motor assembled.

## Service guide | Disassembling and assembling MAH 6.3 - 12.5

### 4. Service kit list for MAH 6.3

Pos.	Qty.	Unit	Designation	Material						
					180F4002 - Shaft seal	180F4003 - Valve plate (MAH 4-6.3 CW)	180F4004 - Piston kit	180F4005 - Cylinder barrel	180F4006 - Valve plate (MAH 4-6.3 CCW)	180Z0235 - Shaft seal tool set
-	1	Pc.	Shaft bush, torpedo	-						X
-	1	Pc.	Press tool for 18 mm shaft	-						X
-	1	Pc.	Mounting screw	-						X
1	1	Pc.	Housing with bearing (welded)	AISI317Mg/PEEK						
5	4	Pcs.	Screw (M6 x 22 mm)	A4	X					
15	4	Pcs.	Washer	Stainless steel (1.4571)	X					
16	1	Pc.	Plug (G <sup>1</sup> / <sub>8</sub> "	PA						
17	1	Pc.	Back-up ring	PTFE						
18	1	Pc.	O-ring	NBR						
19	1	Pc.	Sliding shoe	PEEK						
20	2	Pcs.	Pin (Ø4.0 x 8.0)	A4			X			
21	1	Pc.	Swash plate	Stainless steel (1.4057)			X			
61	1	Pc.	Cylinder barrel (assembled) ISO	Stainless steel (1.4057)				X		
62	5	Pcs.	Preload spring (0.75 x 2.50 x 37 mm)	Stainless steel (1.4310)			X			
63	5	Pcs.	Pin for retaining ball	Stainless steel (1.4057)			X			
64	1	Pc.	Retaining ball	Stainless steel (1.4057)			X			
65	1	Pc.	Int. retaining plate	Stainless steel (1.4310)/PEEK			X			
66	5	Pcs.	Piston with piston shoes	Stainless steel (1.4057)/PEEK			X			
67	1	Pc.	Key (5 x 5 x 20 mm)	Stainless steel (1.4571)	X					
91	1	Pc.	Port plate	Stainless steel (1.4301)/PEEK		X			X	
92	1	Pc.	Thrust plate	Stainless steel (1.4301)/ (1.4057)		X			X	
93	5	Pcs.	Back-up ring	PTFE		X			X	
94	5	Pcs.	O-ring (Ø8.73 x Ø1.78)	NBR		X			X	
121	1	Pc.	Port flange with bearing	Stainless steel (1.4301)/PEEK						
122	1	Pc.	O-ring (Ø65 x Ø3.00)	NBR	X					
123	1	Pc.	O-ring (Ø75.92 x Ø1.78)	NBR	X					
124	1	Pc.	Shaft seal	SIMRAX, AX15EA-018, 1.44301/C/Al203	X					
125	1	Pc.	Front cover	Stainless steel (1.4301)						
126	2	Pcs.	Pin (Ø4.0 x 8.0 mm)	A4	X					
127	2	Pcs.	Screw (M5 x 20 mm)	A4	X					
131	2	Pcs.	Plug (G <sup>1</sup> / <sub>4</sub> "; PA6.6; NV17 Ø20.5)	PA						
136	2	Pcs.	O-ring (Ø7.0 x Ø1.5)	NBR	X					
148	1	Pc.	Dust seal (Ø16.00 x 22.00 x 3.40 mm)	N60	X					
149	1	Pc.	O-ring (Ø24.0 x Ø2.0)	NBR	X					
150	1	Pc.		Stainless steel						
-	1		Service instruction (180R9151)		X	X	X	X	X	


## Service guide | Disassembling and assembling MAH 6.3 - 12.5

### 4.1. Service kit list for MAH 12.5


Pos.	Qty.	Unit	Designation	Material						
					180F4012 - Shaft seal	180F4013 - Valve plate (MAH 10-12.5 CW)	180F4014 - Piston kit	180F4015 - Cylinder barrel	180F4016 - Valve plate (MAH 10-12.5 CCW)	180Z0235 - Shaft seal tool set
-	1	Pc.	Shaft bush, torpedo	-						X
-	1	Pc.	Press tool for 18 mm shaft	-						X
-	1	Pc.	Mounting screw	-						X
1	1	Pc.	Housing with bearing (welded)	AISI317Mg/PEEK						
5	4	Pcs.	Screw (M8x25 mm)	A4	X					
15	4	Pcs.	Washer	Stainless steel (1.4571)	X					
16	1	Pc.	Plug (G $\frac{1}{8}$ " )	PA						
17	1	Pc.	Back-up ring	PTFE						
18	1	Pc.	O-ring	NBR						
19	1	Pc.	Sliding shoe	PEEK						
20	2	Pcs.	Pin (Ø4.0 x 8.0)	A4			X			
21	1	Pc.	Swash plate	Stainless steel (1.4057)			X			
61	1	Pc.	Cylinder barrel (assembled) ISO	Stainless steel (1.4057)				X		
62	5	Pcs.	Preload spring (0.75 x 2.50 x 37 mm)	Stainless steel (1.4310)			X			
63	5	Pcs.	Pin for retaining ball	Stainless steel (1.4057)			X			
64	1	Pc.	Retaining ball	Stainless steel (1.4057)			X			
65	1	Pc.	Int. retaining plate	Stainless steel (1.4310)/PEEK			X			
66	5	Pcs.	Piston with piston shoes	Stainless steel (1.4057)/PEEK			X			
67	1	Pc.	Key (5 x 5 x 20 mm)	Stainless steel (1.4571)	X					
91	1	Pc.	Port plate	Stainless steel (1.4301)/PEEK		X			X	
92	1	Pc.	Thrust plate	Stainless steel (1.4301)/ (1.4057)		X			X	
93	5	Pcs.	Back-up ring	PTFE		X			X	
94	5	Pcs.	O-ring (Ø8.73 x Ø1.78)	NBR		X			X	
121	1	Pc.	Port flange with bearing	Stainless steel (1.4301)/PEEK						
122	1	Pc.	O-ring (Ø78 x Ø3.00)	NBR	X					
123	1	Pc.	O-ring (Ø75.92 x Ø1.78)	NBR	X					
124	1	Pc.	Shaft seal	SIMRAX, AX15EA-018, 1.44301/C/AI203	X					
125	1	Pc.	Front cover	Stainless steel (1.4301)						
126	2	Pcs.	Pin (Ø4.0 x 8.0 mm)	A4	X					
127	2	Pcs.	Screw (M5 x 20 mm)	A4	X					
131	2	Pcs.	Plug (G $\frac{1}{4}$ "; PA6.6; NV17 Ø20.5)	PA						
136	2	Pcs.	O-ring (Ø7.0 x Ø1.5)	NBR	X					
148	1	Pc.	Dust seal (Ø16.00 x 22.00 x 3.40 mm)	N60	X					
149	1	Pc.	O-ring (Ø29.0 x Ø2.0)	NBR	X					
150	1	Pc.		Stainless steel						
-	1		Service instruction (180R9152)		X	X	X	X	X	



## 5. Exploded view MAH 6.3

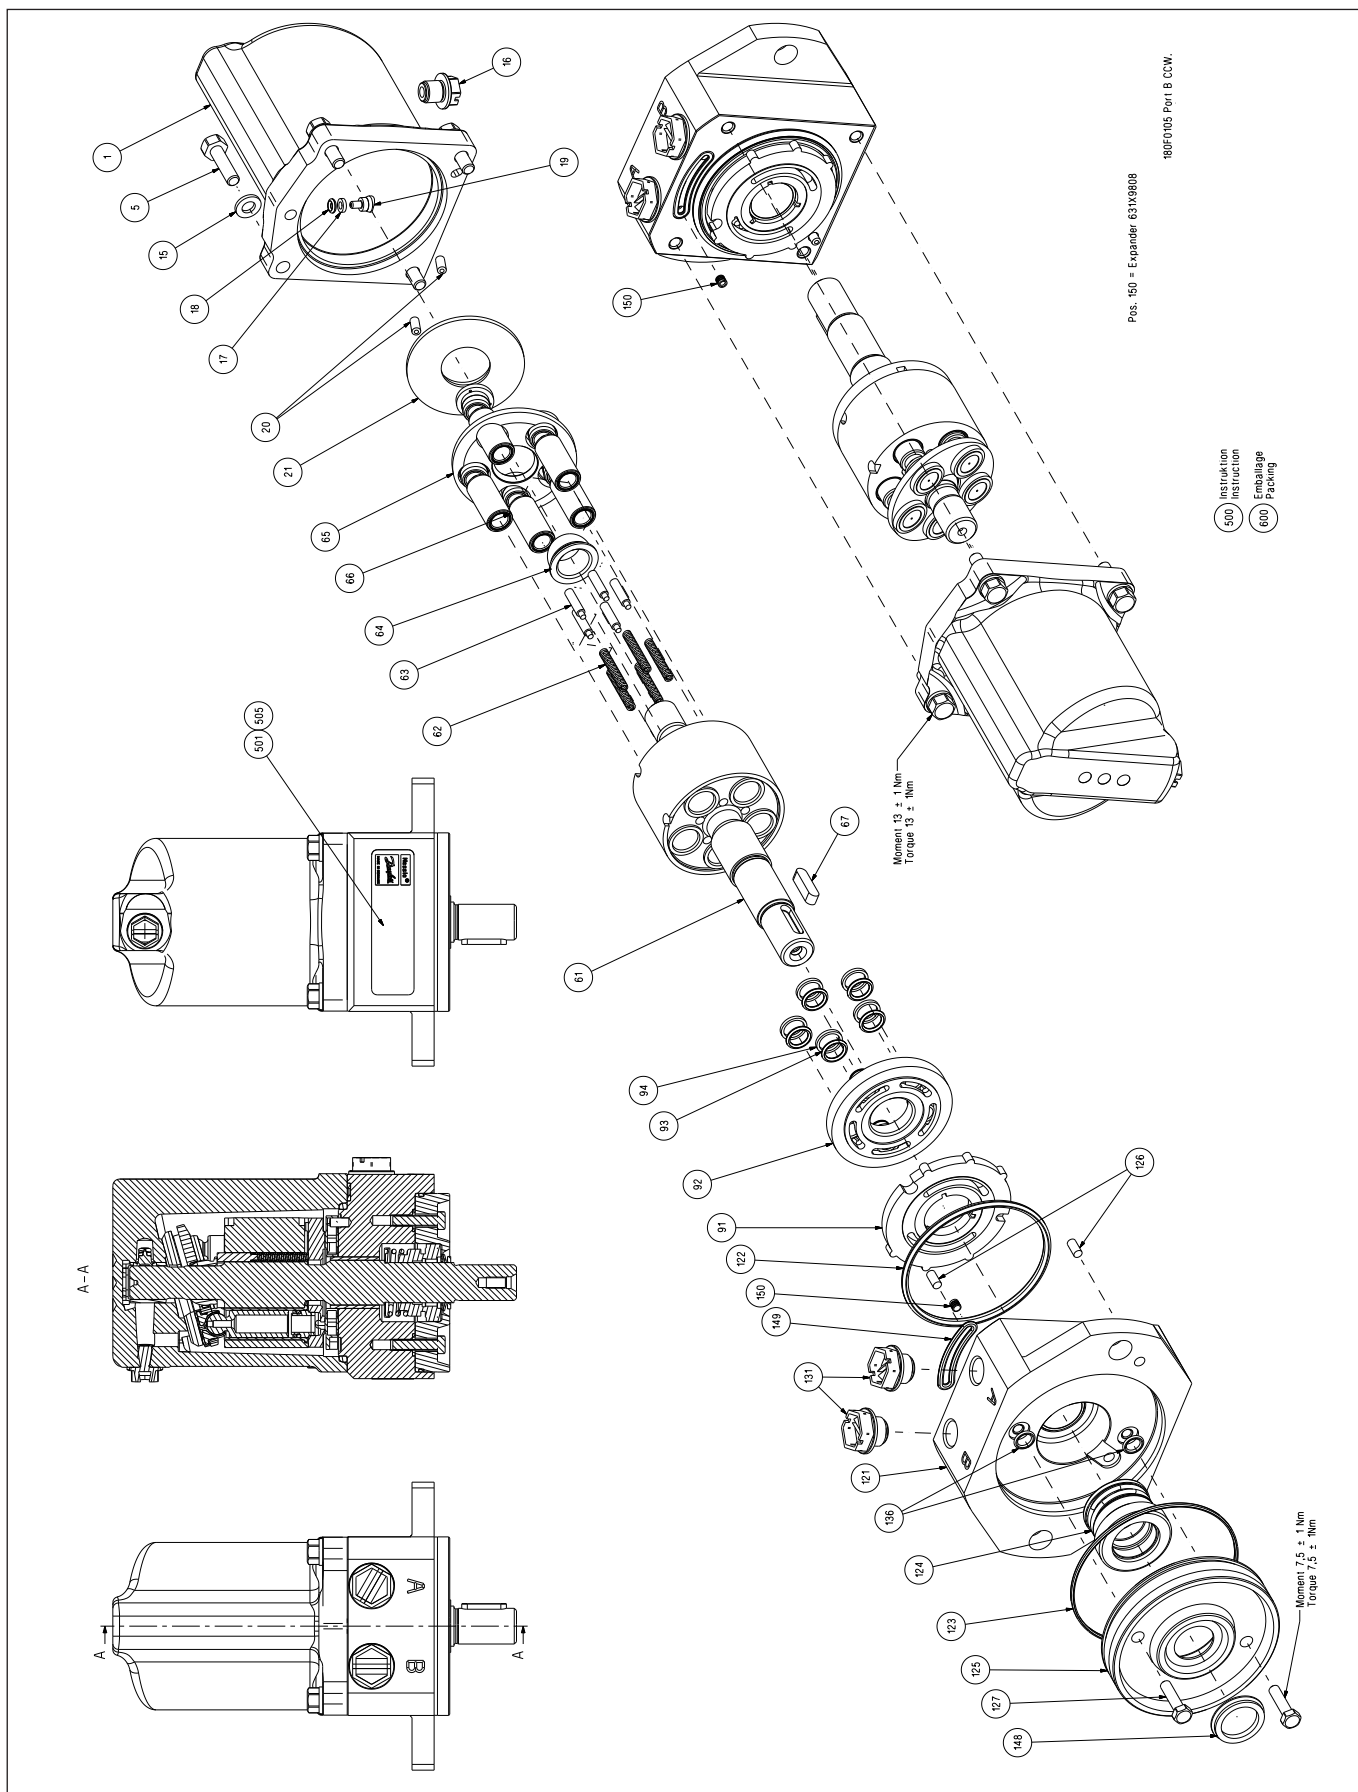

## 5.1. Exploded view MAH 12.5

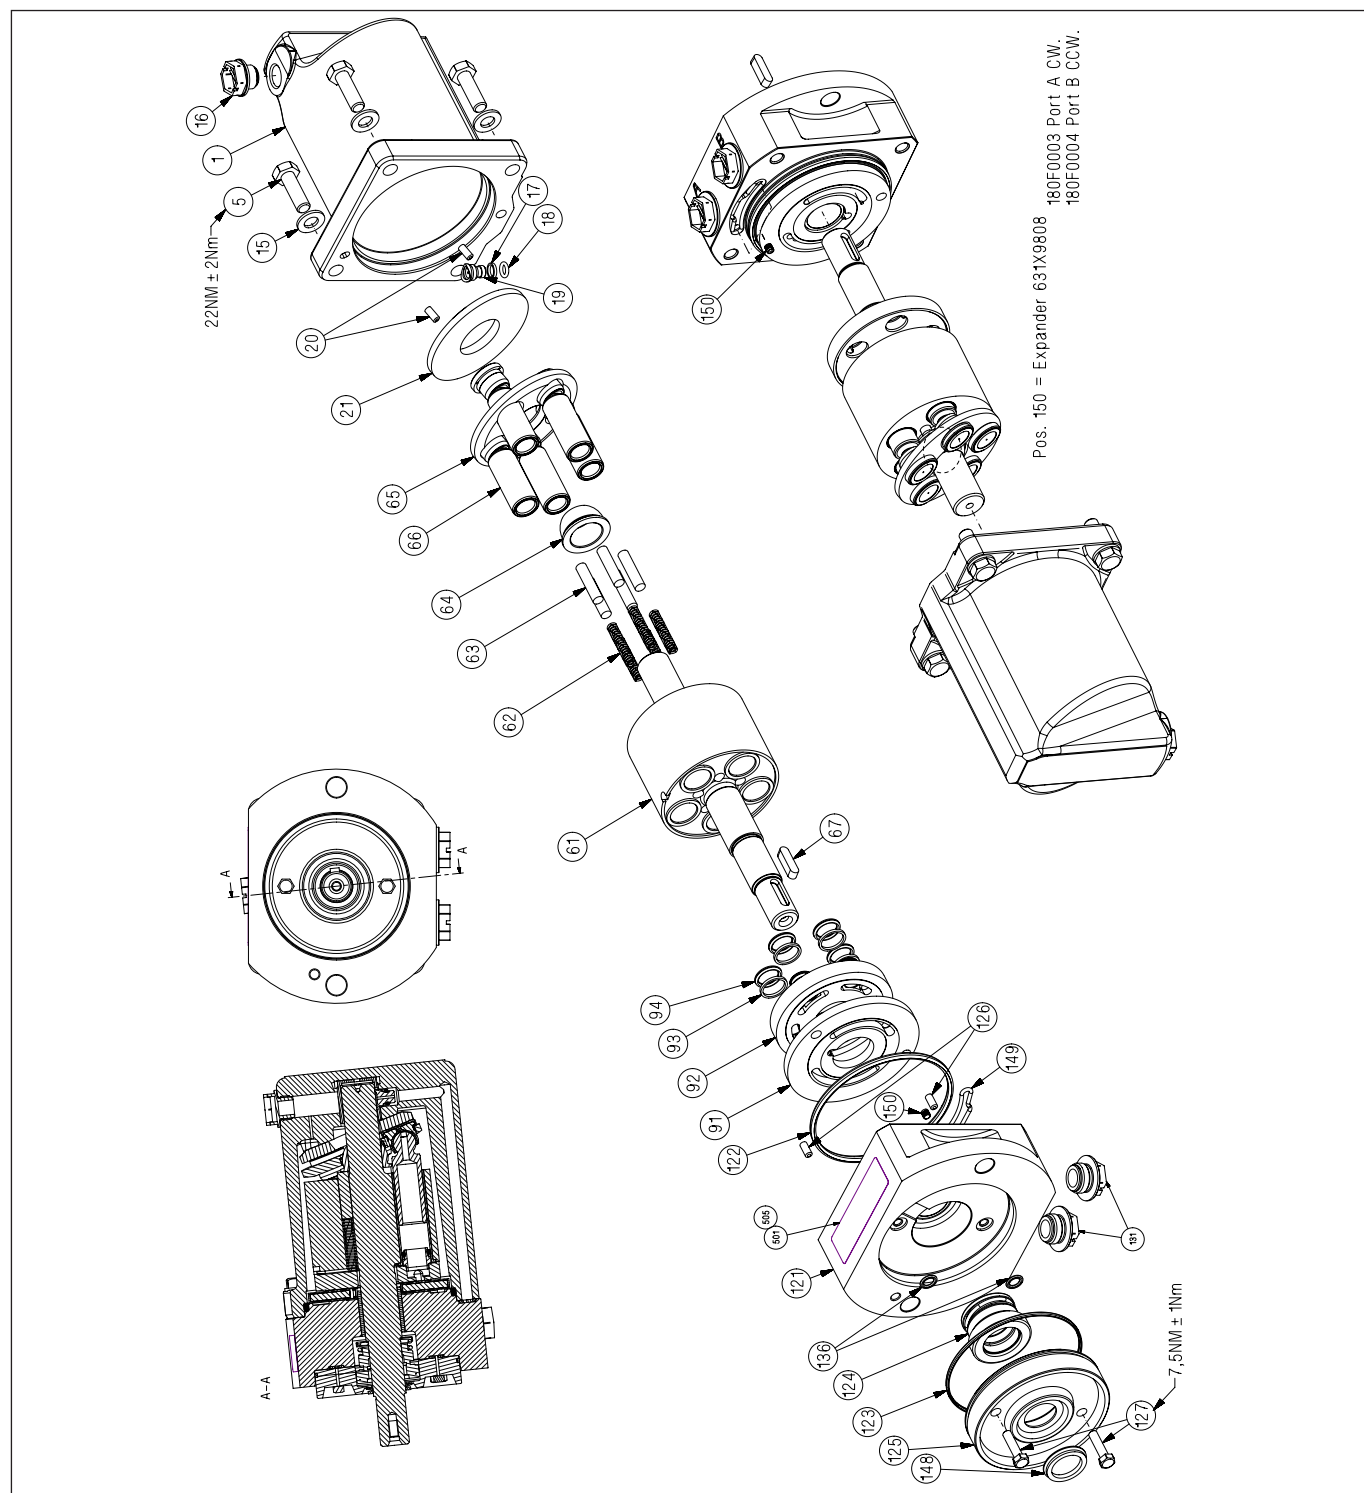

**Danfoss A/S**  
High Pressure Pumps  
Nordborgvej 81  
DK-6430 Nordborg  
Denmark