

Installation Guide

RTS2

Combined radiation and room temperature sensor

Danger!

This device may only be installed by a qualified electrician in accordance with the circuit diagram in the operating instructions. The existing safety regulations must be observed.

Application

This sensor was specially developed to record the room and/or radiation temperature in residential, hotel and office rooms under normal ambient conditions.

Function

There are 4 NTC sensors in the sensor housing, two act as room temperature sensors, the other two are glued directly into the black hemisphere as radiation sensors. This combination allows, for example, when the room is not occupied, the reduced temperature or frost protection to be monitored by the room sensor, and when the room is occupied, the radiant heat can be recorded by the radiation sensor. In the case of combined heating systems, it is possible to regulate the "feel good temperature" which is determined from the room and radiation temperature using a suitable evaluation device

Technical specifications

Degree of protection: IP30

Ambient temperature: -20 ... +70°C


Measurement current: < 1mA

Ball pressure test: 75°C



Pollution Degree: 2

Electrical connection: screw terminals (0.14 ... 1.5 mm²), cable length max. 50 m, (only for use with safety extra low voltage, max. 30V~ / 42V4)


Avoid parallel routing with lines carrying mains voltage or use shielded lines.

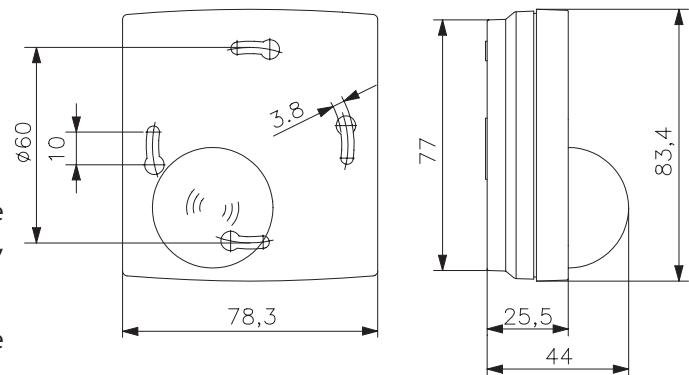

Mounting: Wall mounting or installation on an UP box Colour: pure white, similar to RAL 9010, hemisphere in black.

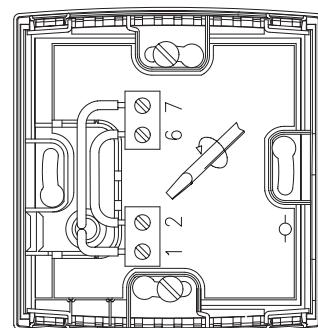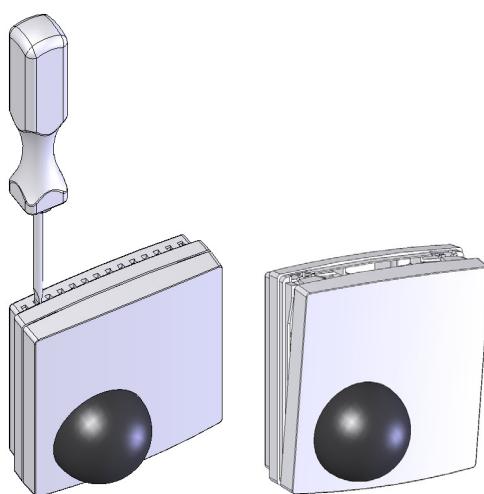

Wiring Diagram

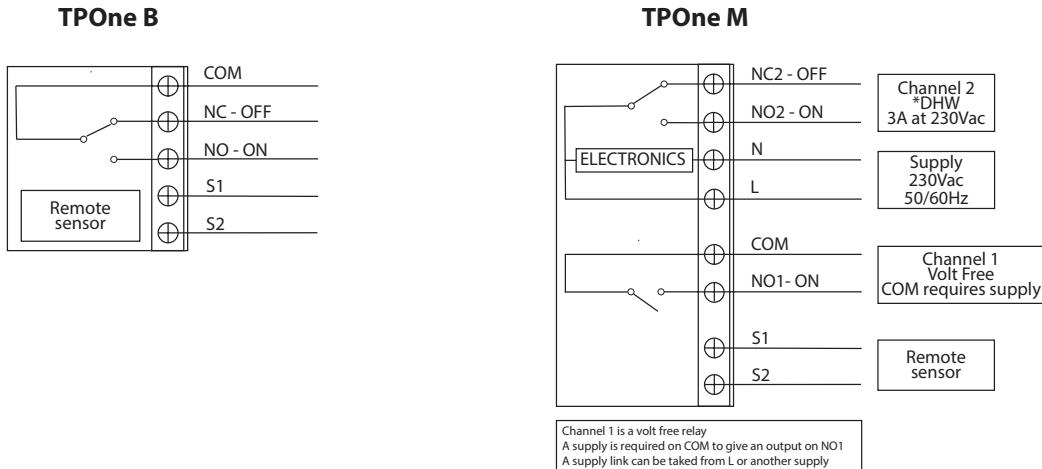

RTS2 needs to be connected on S1 and S2

Danfoss A/S

Climate Solutions • danfoss.com • +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc, and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.

All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.