

Data sheet

NovoCon® S CO6, Energy, I/O

Description



NovoCon® S is a high accuracy multi-functional field bus actuator, specifically designed for use in combination with the Pressure Independent Balancing Control Valve type AB-QM in sizes from DN 10-32.

The flow is modulated by the AB-QM pressure independent control valve to avoid overflow and reduced boiler and/or chiller efficiency.

The actuator with AB-QM is used to control water supply to fan coil units, chilled beams, induction units, small re-heaters, re-coolers, AHU's and other terminal units for zone control, in which hot/cold water is the controlled medium. Due to its accuracy, remote functionality and flow indication features, this product facilitates an accelerated commissioning process, allows easy maintenance, improves indoor comfort, increases energy savings and allows for fair cost allocation of heat/cool energy.

The high position accuracy of the actuator, together with the pressure independent and linear characteristic of the AB-QM valve, allow NovoCon® S to be used as a flow indicator. Setup of the actuator and valve parameters are made via fieldbus. Control is achieved via field bus or via analog inputs for NovoCon® S.

Typical applications are:

- Radiant ceiling panels, supplied by 4 pipes (Heating supply and return and cooling supply and return).
- Fan coil units, with single coils supplied by 4 pipes (Heating supply and return and cooling supply and return).

General features:

- Remote commissioning/Pre-set/Flush features
- Flow indication
- High position accuracy
- LED bar displaying status
- No tools required for mounting
- Maintenance-free lifetime
- Self-positioning process
- Low-noise operation
- Plug-in halogen free cables
- Auto MAC addressing for BACnet
- Auto baud rate detection
- Intrinsic alarm reporting for BACnet

- Valve blockage alarm
- Broken wire detection on analog control and ground signal
- Mis-wiring protection on any wire up to 30 V
- BACnet MS/TP and Modbus RTU in the same product.

Combined with the Actuator NovoCon® ChangeOver6, NovoCon® S offers a unique solution in controlling both the AB-QM valve and a 6-port motorised ball valve that performs a diverting function between two water circuits in 4-pipe changeover systems.

This diverting function allows the cooling and heating capacity of a fan coil unit to be increased for the same compact size compared to a double coil model where the heating and cooling water circuits each have their own coil.


The 6-port diverting valve and actuator works in combination with an AB-QM PIBCV valve and NovoCon® S bus actuator. The AB-QM balances the flow and the NovoCon® S bus actuator controls the flow. NovoCon® S also controls the 6-port diverting valve actuator which switches between heating and cooling. This unique functionality is characterized by the following:

- There is only one single field bus and power supply connection cable to the NovoCon® S actuator. This powers both the NovoCon® S and controls the 6-port actuator. Furthermore, there is feedback from the 6-port actuator to NovoCon® S.
- The NovoCon® S actuator detects, by means of comparing 0-10V control & feedback signal, if the 6-port actuator is in manual operation mode, removed from the valve or if the 6-port valve is blocked.
- The NovoCon® S actuator has two Design Flow Rate pre-settings: one for heating and another for cooling.
- The NovoCon® S actuator indicates power emission for heating and cooling energy based on flow, supply and return pipe measurement.
- While in maintenance mode, the 6-port actuator is able to fully close the valve and prevent any leakage, thereby saving on stop valves.
- Logic contained within the NovoCon® S actuator, ensures that only one actuator in each pair (NovoCon® S and 6-port valve actuator) runs at the same time. This reduces voltage booster demands in daisy chains.
- The NovoCon® S actuator detects if the 6-port actuator cable is disconnected. If this is the case an alarm is initiated.

Description (continued)


Features CO6:

- NovoCon® S CO6 + Changeover actuator represents only ONE device on the fieldbus network needing no physical I/O
- No cross-flow between heating and cooling
- Simple connection and control
- Feedback for position status and alarms
- Silent and reliable operation
- Maintenance free
- Teflon seal and polished chrome valve ball to prevent valve sticking
- Blocked valve alarm
- Manual override

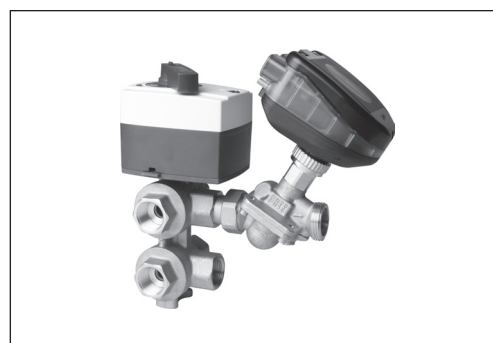


Features Energy:

- Supply and return temperature measurement
- Power/emission indication reading

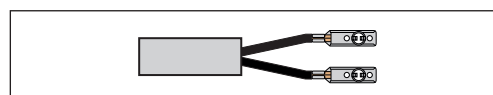

Features I/O:

- Connection to other devices, e.g. room thermostat, window contact, CO2 sensor, humidity sensors, fan control, 0-10V actuator etc.
- Select temperature units, Ohms or use as potential free contacts
- Available analog output AO, analog input AI, 2xT(resistance) inputs

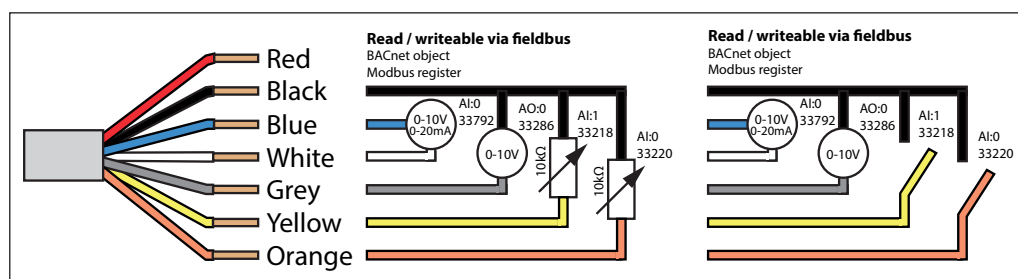

Ordering



Type	Code No.
NovoCon® S CO6, Energy, I/O	003Z8503

Accessories

Type	Length	Connections	Cable material	Code No.
Cable NovoCon® Digital	1.5 m	bus / power	Halogen free	003Z8600
Cable NovoCon® Digital	5 m	bus / power	Halogen free	003Z8601
Cable NovoCon® Digital	10 m	bus / power	Halogen free	003Z8602
Cable NovoCon® Digital, daisy chain	0.5 m	actuator / actuator	Halogen free	003Z8609
Cable NovoCon® Digital, daisy chain	1.5 m	actuator / actuator	Halogen free	003Z8603
Cable NovoCon® Digital, daisy chain	5 m	actuator / actuator	Halogen free	003Z8604
Cable NovoCon® Digital, daisy chain	10 m	actuator / actuator	Halogen free	003Z8605
Cable NovoCon® Analog	1.5 m	0-10 V / power / voltage booster	Halogen free	003Z8606
Cable NovoCon® Analog	5 m	0-10 V / power / voltage booster	Halogen free	003Z8607
Cable NovoCon® Analog	10 m	0-10 V / power / voltage booster	Halogen free	003Z8608
Cable NovoCon® I/O	1.5 m	actuator / free wires	Halogen free	003Z8612



Cable NovoCon® Energy	1.5 m	actuator / PT1000 surface temperature sensors	PVC	003Z8610
Cable NovoCon® Energy	1.5 m	actuator / PT1000 Immersed temperature sensors	PVC	003Z8611

ChangeOver⁶ actuators

Actuator NovoCon ChangeOver ⁶	1 m	Plug-in	Halogen free	003Z8520
Actuator NovoCon ChangeOver ⁶ Energy	1 m	Plug-in	Halogen free, sensors PVC	003Z8521
Actuator NovoCon ChangeOver ⁶ Flexible	2 m	Actuator / open wires	PVC	003Z8522



Note! Cables are not included with actuator and must be ordered separately.
If separate PT1000 temperature sensors are needed, Danfoss has an array of PT1000 sensors that can be used with NovoCon® S CO6, Energy, I/O. See Danfoss PT1000 sensors ESMT, ESM-10, ESM-11, ESMB-12, ESMC and ESMU.


Data sheet

NovoCon® S CO6, Energy, I/O

Ordering (continued)

Type	DN	Fire load class ¹⁾	Code No.
ChangeOver ⁶ insulation	15	B2	003Z3159

¹⁾ According to D/N 4102

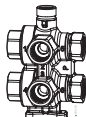

Type	DN	k _{vs} (m³/h)	Connection	Code No.
ChangeOver ⁶ valve	15	2,4	Rp ½	003Z3150
	20	3,8	Rp ¾	003Z3151

Accessories and spare parts (for temp. sensor)

Type	Designation	Code No.
Pocket	Immersion, stainless steel 100 mm, for ESMB (087B1184)	084N1082
Pocket	Immersion, stainless steel 250 mm, for ESMB (087B1184)	084N1083
	Heat conducting paste, 3.5 cm²	041E0110

Service kit - combination with old AB-QM

Type	Code No.
NovoCon® adapter for AB-QM, DN 10-32 (5 pcs.)	003Z0239

Approvals



EMC Directive 2014/30/EU, EN 60730-2-14:1997, EN 60730-2-14/A1:2001, EN60730-1:2011
RoHS Directive 2011/65/EU

Technical data

Power supply range	24 V AC/DC, 50 / 60 Hz *
Power consumption	Running: 3.9 VA@24VAC / 1.7 W@24V DC / Standby: 0.9 W
Protection class	III safety extra-low voltage
Control signal NovoCon® S	BACnet MS/TP, Modbus RTU 0-10 VDC, 0-5 VDC, 2-10 VDC, 5-10 VDC, 2-6 VDC, 6-10 VDC, 0-20 mA, 4-20 mA
Actuator speed selections (open to close)	3 sec/mm, 6 sec/mm, 12 sec/mm, 24 sec/mm, Constant Time
Stroke	7 mm
Force	90 N
Position accuracy	± 0.05 mm
Ambient temp. range	-10° C to 50° C
Ambient humidity	98% r.h., non-condensing (according to EN 60730-1)
Max. medium temp.	120° C
Storage temp. range	-40 to 70 °C
Grade of enclosure	IP 54 (IP 40 upside down)
Weight	0.4 kg

* NovoCon S is designed to operate at power deviations up to ±25%.

BACnet data


Type	Length
BACnet device profile	BACnet Application Specific Controller (B-ASC)
BACnet protocol	BACnet Master Slave / Token Passing (MS/TP)
BACnet baud rates supported	Auto baud rate detection* / 9600 bps / 19200 bps / 38400 bps / 56700 bps / 76800 bps / 115200bps

Modbus RTU data

Supported baud rates	Auto baud rate detection* / 9600 bps / 19200 bps / 38400 bps / 56700 bps / 76800 bps / 115200bps
Supported transmission modes	Parity: None (1-8-N-2) / Odd (1-8-O-1) / Even* (1-8-E-1) / None (1-8-N-1) Data format: Parity (Start bit - Data bits - Parity - Stop bits)


* Default

Dimensions

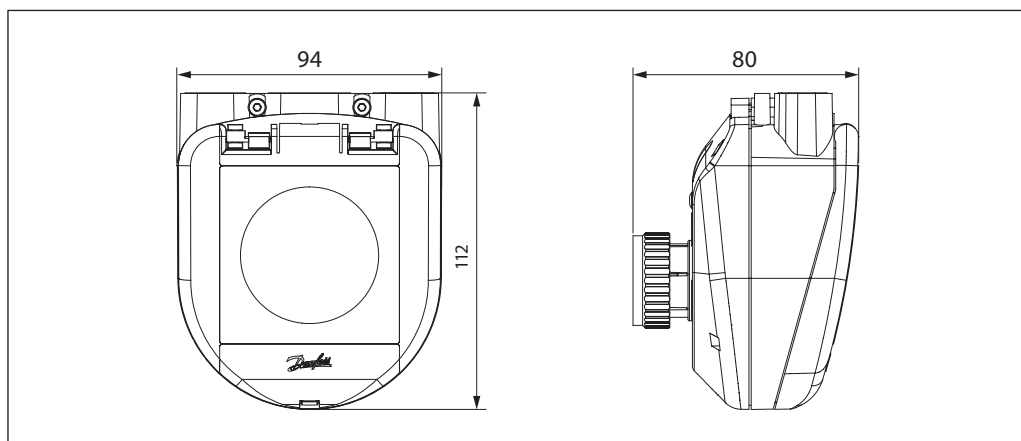


Service kit - combination with new / old AB-QM

① NovoCon® & AB-QM (Gen. 2011).
No adapter needed!

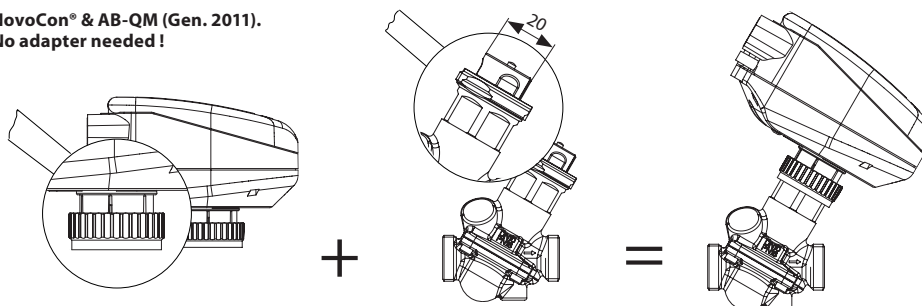

② NovoCon® & AB-QM (version made before year 2011).

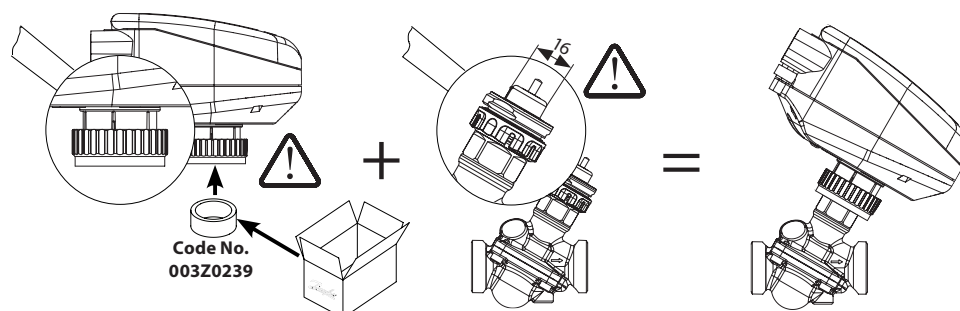

Presetting

Pre-setting of flow is made electronically with the NovoCon® S actuator. The pre-set scale on the AB-QM valve is not used under normal operation.

Normal operation


Leave valve at default factory pre-set (100 %).

High flow operation

In order to achieve a more efficient flush and enable pre-setting of the valve more than 100%, it is recommended to manually pre-set the AB-QM valve to maximum flow. This is done by turning the pre-set scale counter-clockwise until it stops.


See drawing.

NovoCon® S in high flow operation enables pre-setting of AB-QM DN 10-20 up to 120% and DN 25-32 up to 110%.

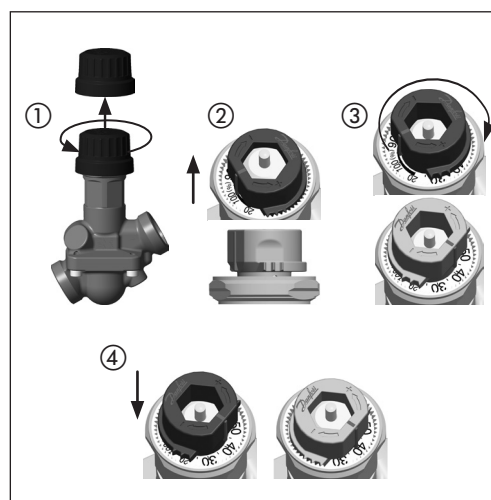

Design

- ① Removable lid
- ② Bus and power connections
- ③ LED window
- ④ Locking ring
- ⑤ Manual override
- ⑥ Reset button
- ⑦ DIP switches

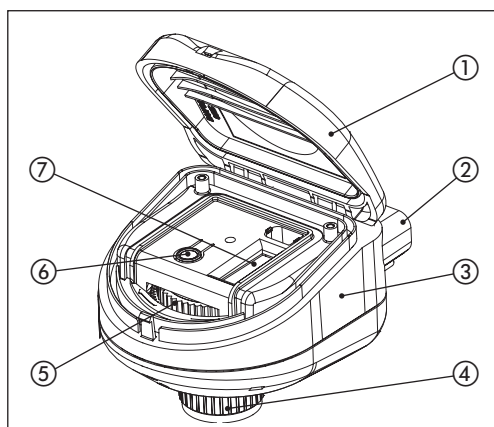


Mounting Orientation


NovoCon® S can be mounted in any position. However, mounting orientation affects the IP classification. See illustration.

Note!

IP classification is only valid when cable or plugs are present in all connections.

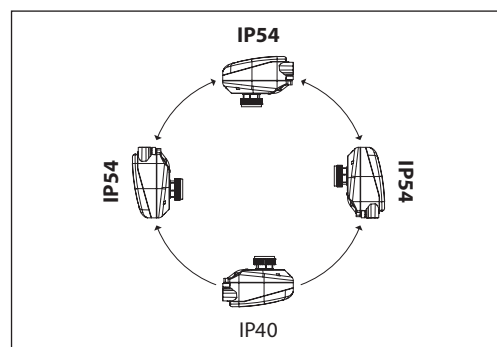

Application principles ChangeOver⁶

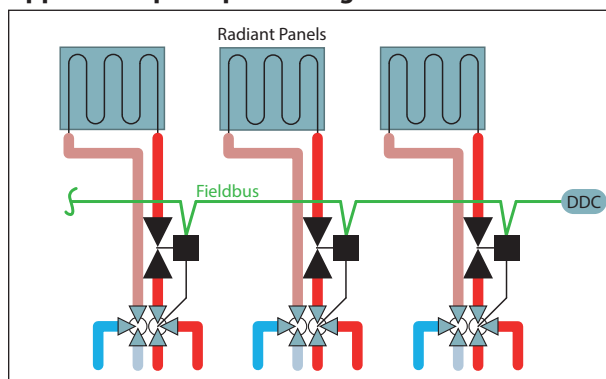


Separate maximum flow pre-setting for heating and for cooling

Setup

Object /Register	Write/read value	Description
MSV:9 / 32810	CO6 mode	While in CO6 mode, the 0-10V input and output signals are used purely for controlling the 6-port valve actuator
MSV:3 / 32802	Valve type	ISO valve selected = l/h, °C, kW and kg/m³. ANSI valve selected = g/min, °F, BTU and lb/ft³
AV:30 / 32796	400	Design flow setting of Heating e.g. 400 l/h
AV:31 / 32798	250	Design flow setting of Cooling e.g. 250 l/h

Application principles ChangeOver6 Energy

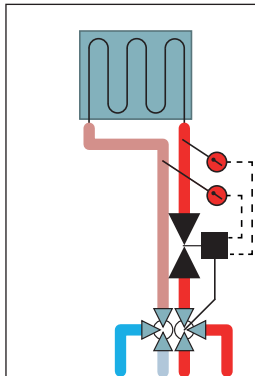


Setup

Object /Register	Write/read value	Description
MSV:9 / 32810	CO6 mode	While in CO6 mode, the 0-10V input and output signals are used purely for controlling the 6-port valve actuator
AV:32 / 33288	Power emission	Calculates energy based on values from flow feedback (AV:2) and temperature (AI:1 and AI:2)
MSV:3 / 32802	Valve type	ISO valve selected = l/h, °C, kW and kg/m³. ANSI valve selected = g/min, °F, BTU and lb/ft³
AI:1 / 33218	Temperature	Select between temperature units or ohms
AI:2 / 33220	Temperature	Select between temperature units or ohms
AV:30 / 32796	400	Design flow setting of Heating e.g. 400 l/h
AV:31 / 32798	250	Design flow setting of Cooling e.g. 250 l/h

Application principles NovoCon I/O

When combining the NovoCon® S and the Cable NovoCon I/O, many options are possible

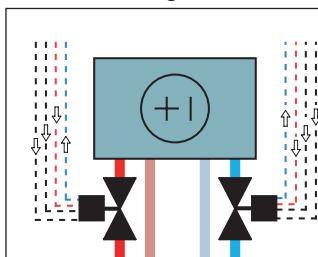

Resistance inputs can also be used as galvanic insulated digital inputs for detection of window contact, condensation sensor etc.
Connected: 850 Ohm.
Disconnected >10 kOhm.

Operation example (DDC command)

Object /Register	Write value	Description
MSV:9 / 32810	Digital Control	Select Digital mode to disable alarms caused by expected feedback signals while in CO6 mode
AV:1 / 33280	85	DDC writes % opening value of the AB-QM valve
AO:0 / 33286	5.5	DDC writes level of voltage on NovoCon S analog output, which is send to the connected remote device

Read on the BMS example


Object /Register	Read value	Description
AO:0 / 33286	5.5	Voltage output from NovoCon to remote device
AI:0	6.5	Voltage level on the analog control input measured by the actuator (may also be mA)
AI:1 / 33218	1160	Resistance value (Ohms) received from remote device 1
AI:2 / 33220	1263	Resistance value (Ohms) received from remote device 2

Application principles NovoCon I/O and Multiplexers

Multiplexers (analog-digital-analog convertors) in combination with NovoCon® S CO6, Energy, I/O, may be used to gather information on, or control on/off devices.

Using NovoCon's 0-10V output signal (AO:0 / 33286), multiplexers convert this signal in order to switch devices on or off e.g. 7V signal from NovoCon is converted inside the multiplexer so device1=on, device 2=on, device3=off. E.g. 4V signal from NovoCon is converted inside the multiplexer so the device1=on, device 2=off, device3=off.

Using NovoCon's 0-10V input signal (AI:0 / 33216) received from the multiplexers the DDC can decipher the meaning of the voltage signal e.g. 7V signal to NovoCon from the multiplexer is deciphered by the DDC as meaning device1=on, device 2=on, device3=off. 4V signal to NovoCon from the multiplexer is deciphered by the DDC as meaning device1=on, device 2=off, device3=off.

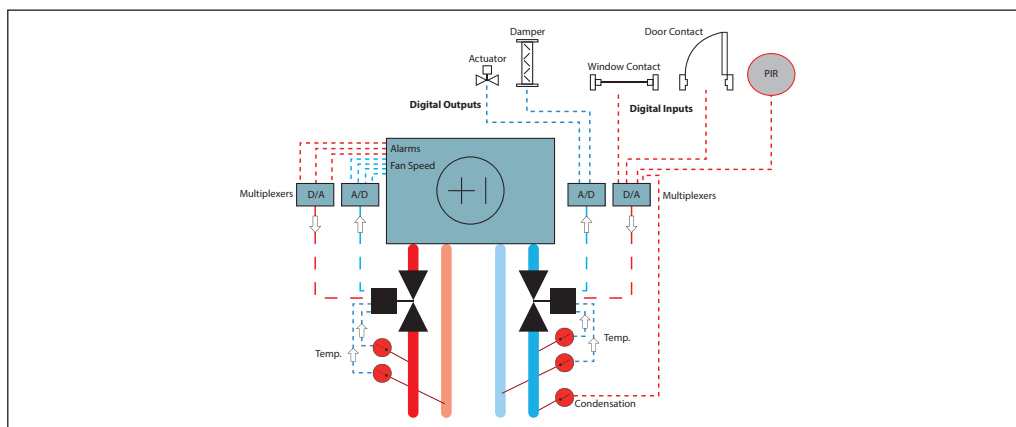


Application principles ChangeOver6 (continued)

Anti-sticking requirements:


To reduce the risk of the ball valve sticking due to water quality, the valve must be partially rotated at least every 7 days. This is a factory default setting and is handled by the object MSV:11 / register 32812.

The ChangeOver⁶ is a 6-port valve with a rotary actuator that switches the flow between heating and cooling. An AB-QM pressure independent balancing and control valve with an actuator is used to balance the system and modulate the flow. When using the NovoCon® S CO6, Energy, I/O for flow control, both NovoCon S and the Actuator NovoCon ChangeOver⁶ are represented on the fieldbus network and need no physical I/O for control.


Cooling:

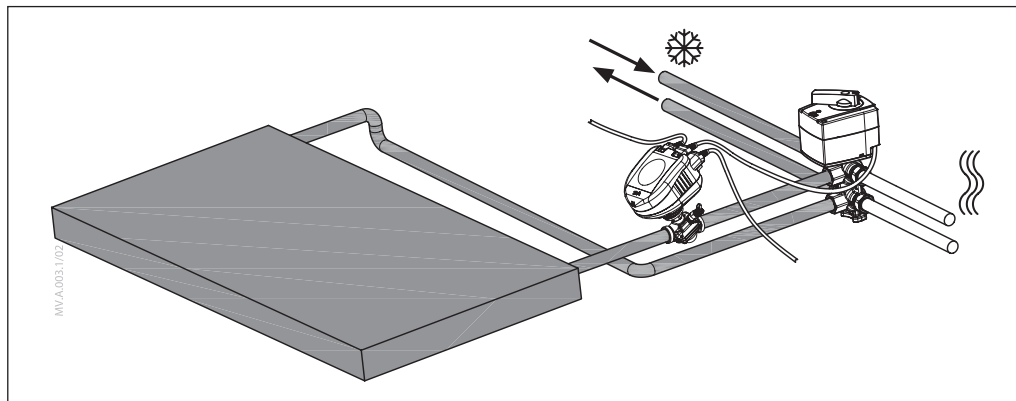

Heating:

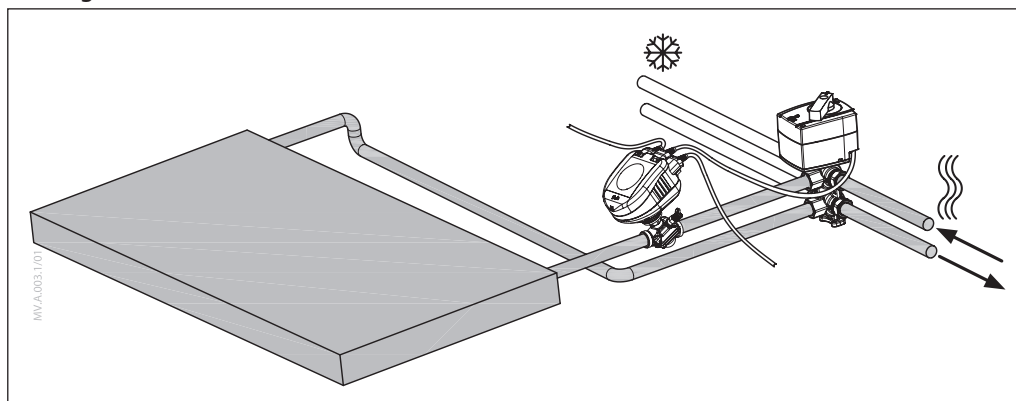

No mixing and shut off

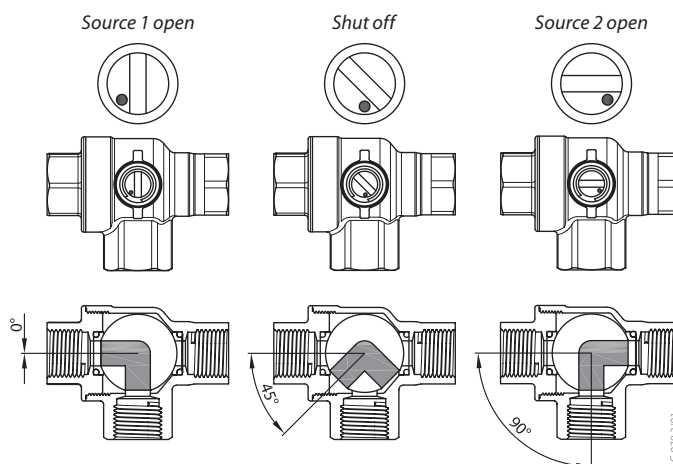

Normally cooling is connected to port 1 and 4 and heating to port 5 and 6. If, for some reason, this is not the case, then Inverted CO6 mode (MSV:9/32810) must be used instead.

CO6, contrary to other ball valves, includes a shut off function. This function should only be used during maintenance and not during operation. This replaces the need for four ball valves.


MSV:9 / 32810

3: CO6 Mode


Normally cooling is connected to ports 1 and 4 and heating to ports 5 and 6. If that is not possible, then this may be switched and **4: Inverted CO6 Mode** must be selected.

NovoCon S and the ChangeOver actuator communicate with 0-10V control and feedback signal. Whole functionality is available by using simple bus commands. For easier technical understanding, please see below detailed explanation of the communication between NovoCon S and the ChangeOver⁶ actuator.

CO6 mode

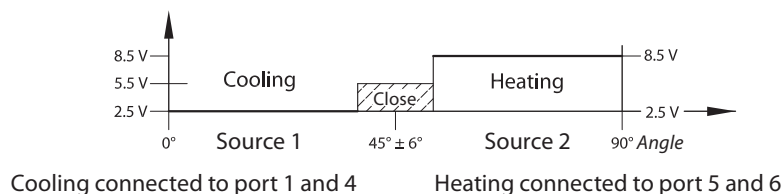

Inverted CO6 mode

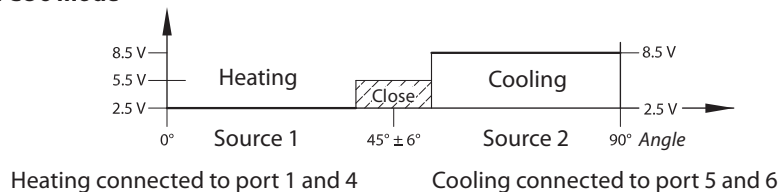

Signal from NovoCon S to the Actuator NovoCon ChangeOver⁶

	Stop the motor	Cooling	Shut-off	Heating
CO6 mode	1.0 V	2.5 V	5.5 V	8.5 V
Inverted CO6 mode	1.0 V	8.5 V	5.5 V	2.5 V

Feedback signal from the Actuator NovoCon ChangeOver⁶

Unable to move	Cooling	Moving direction: Cooling to Heating	Shut-off	Moving direction: Heating to Cooling	Heating
1.0 V	2.5 V	4.0	5.5 V	7.0 V	8.5 V

Wiring



The wiring of BACnet MS/TP (RS485) must be carried out in accordance with applicable standard ANSI/TIA/EIA-485-A-1998.


Galvanic separation shall be provided for segments crossing buildings. Common ground shall be used for all devices on the same network inclusive router, gateways etc.

All BACnet bus connections in the cables are made with twisted wires.

The cable type used for all NovoCon cables is AWG22/0.32mm².

If other cables are used to extend the length, always use twisted pair wire for bus signal and include ground for the bus signal. The recommended cable type for this is AWG22/0.32 mm². If used for longer distances please use a AWG20/0.5mm² or AWG18/0.75mm² cable. The cables characteristic impedance shall be between 100-130Ω The capacitance between conductors shall be less than 100 pf per meter. Note: the length of the cables influence on the communication speed. Longer cable lengths should mean lower baud rate. Maximum cable length allowed is 1200m.

Use a minimum 20 cm distance between 110V/230V/400V power line cables and bus cables.

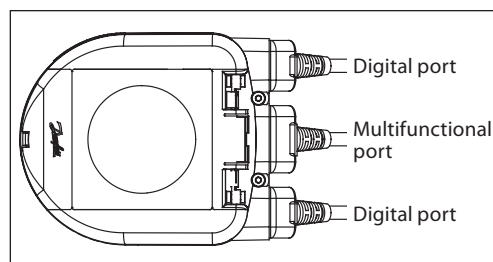


NovoCon® digital daisy chain cable




The digital daisy chain cable is used to connect power and BACnet/Modbus between two NovoCon® S devices.

NovoCon® digital cable

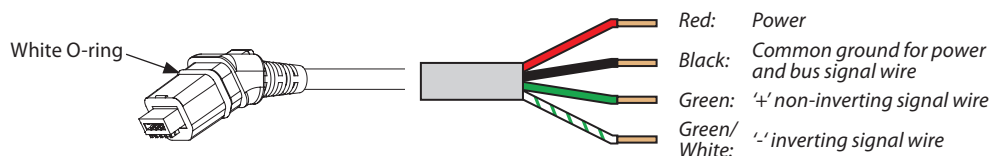

The digital cable is used to connect NovoCon® to other BACnet/Modbus devices.

NovoCon® analog cable

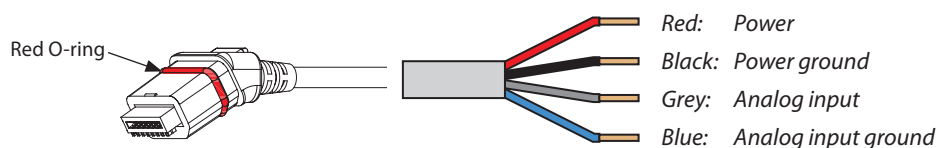

The analog cable is used to connect power and analog control signal.

The analog cable can also be used as a voltage booster for NovoCon® S on the network.

The "Power ground" and "Analog input ground" should be connected to the same ground on the Controller.


Cable NovoCon® Energy with PT1000 surface sensor




NovoCon® Energy cable - PT1000 surface sensors



Wiring with DC or AC power supply:

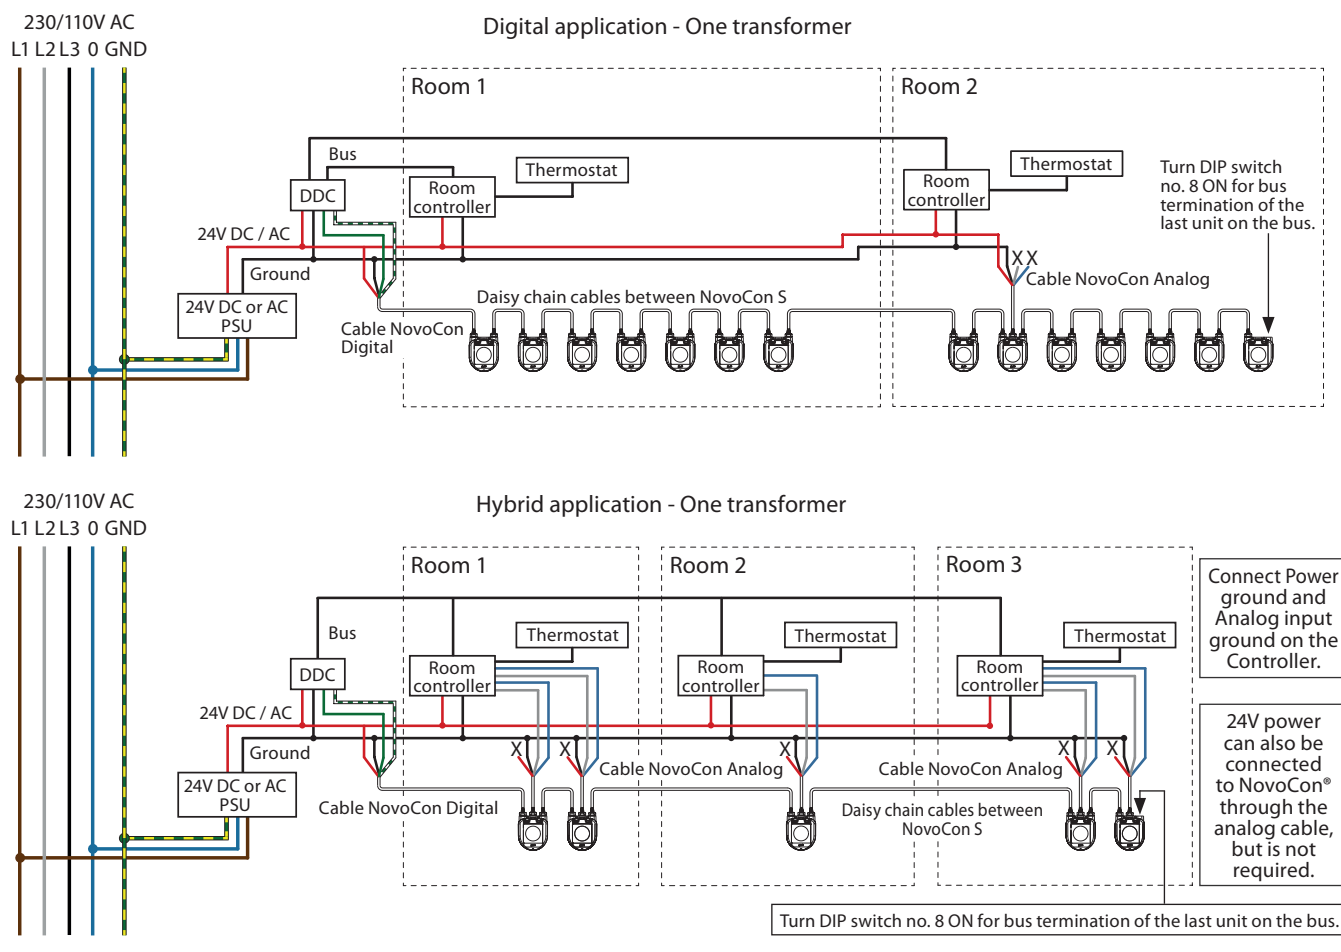

Wiring with AC power supplies:

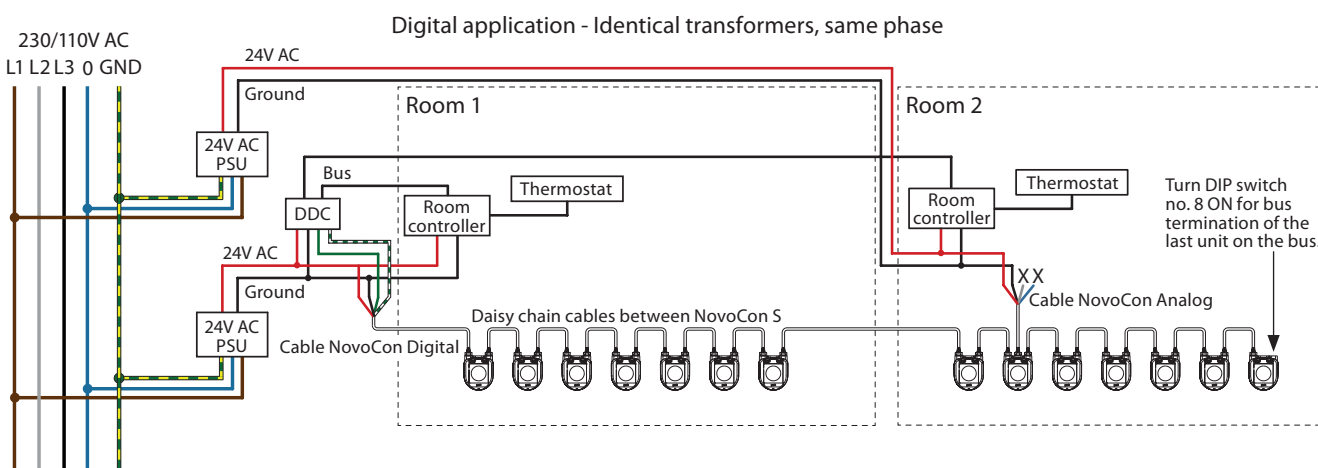


WARNING

If the NovoCon S network is supplied with two or more AC power boosters, caution must be observed when disconnecting one of the transformers from the high voltage power line. As the NovoCons are connected in a daisy chain, there may be high voltage on the primary side of the disconnected power supply.

The power boosters must be protected against overload, otherwise the power booster may be damage if one of the other power boosters in the network is disconnected. See table below.

Wires that ends in an "X" must be properly terminated.

Digital application - Identical or different transformers with different phases, but same ground

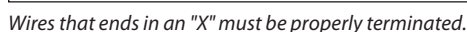

Important: The power supply used must be able to deliver 60% more power than the nominal rating of NovoCon® S.




© Danfoss | 2016.12 | 11

Daisy chain *(continued)*

Use daisy chain connection for NovoCon® S. Danfoss recommend that star topology is NEVER used with NovoCon as debugging the system becomes very difficult. T-junction connections (stub lines) are not recommended. In the event of T-junction connections being used, Danfoss accepts no responsibility although it is advised that the following limitations are never exceeded:

- max T-junction cable length 1.5m (shortest standard digital cable)
 - total length of Network max 640m (+ 100m stub length)
 - max baud rate 76 kb/s¹⁾
 - max number of devices on network 64¹⁾
 - main cable should be standard RS485 bus, twisted pair, min thickness AWG 22
- ¹⁾ When using less than 32 devices you may attempt to raise the speed to 115 kb/s.

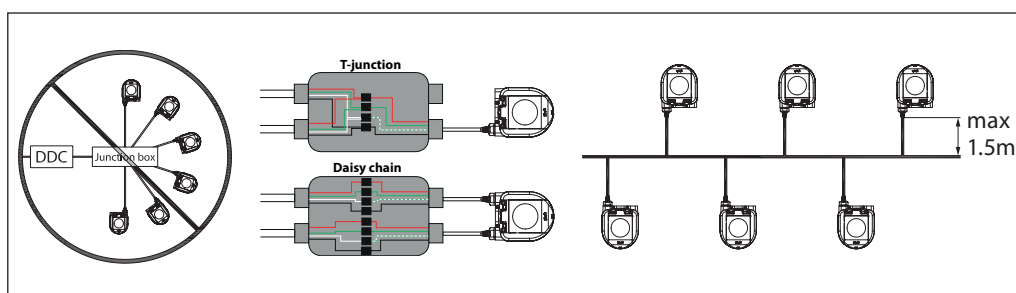

If the supply voltage to the first device in the daisy chain is lower than 24V AC/DC, or long thin cables other than NovoCon® cables are used, then the quantity of devices in the daisy chain may have to be reduced.

The recommended maximum quantities of NovoCon® S are 64 pcs in one daisy chain connection. If other BACnet devices are added with NovoCon® S in the same daisy chain connection, Danfoss recommends a maximum of 32 pcs. to ensure sufficient network speed.

Danfoss recommends that NovoCon S should be used on its own sub-network for optimal performance.

General requirements:

- Use Danfoss daisy chain cable to connect two NovoCon® S devices.
- Use Danfoss digital cable to connect NovoCon® S with another BACnet device.
- The current in cables should not exceed 3Arms at 30°C.
- Use the termination resistor (DIP switch 8) at the end of daisy chain.
- Use Danfoss analog cables as voltage boosters to increase voltage.
- Generally, the same type of power supply is preferred.
- If two power supplies are used, they must have the same polarity and the same common ground.
- A common ground must be used for all devices on the same sub-network, including routers and gateways.
- Galvanic separation shall be provided for segments crossing buildings.
- Connect Power ground and Analog input ground on the Controller.
- Total maximum cable length of sub-network 1200m.

Optimize network speed

Reducing Unnecessary PollforMaster Traffic

Setting for the last NovoCon® in the daisy chain:

The MAX_MASTER setting in NovoCon shall be set to the number of devices (or the highest used MAC address) in the MS/TP sub network. The MAX_MASTER property is found in the Device object and has a default value of 127. It should be noted that the MAX_MASTER property value should be adjusted accordingly at a later stage if more devices are added to the network and/or the highest MAC address exceeds the MAX_MASTER property value.

Before MAX_MASTER can be set it is needed to ensure all devices are within the MAX_MASTER value. If MAX:MASTER is set to 20 communication will not work with a device, which uses MAC address 22, even though e.g. MAC address 15 is not used.


Allocating Correct INFO_FRAMES

Setting for Controller:

Network Routers and Controller devices that transport traffic in the MS/TP network require a higher number of INFO_FRAMES than NovoCon. Therefore, these devices should have a higher value than NovoCon e.g. A general rule of thumb for the sub network router's MAX_INFO_FRAMES property value is equal to the amount of MS/TP devices in the router's sub network. The MAX_INFO_FRAMES property is found in the Device object of MS/TP devices. NovoCon's default MAX_INFO_FRAMES value is 1.

LED Display

BACnet/Modbus (RS485) activity

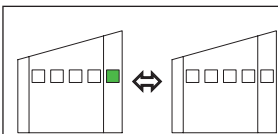


BACnet/Modbus (RS485) activity

No light from LED: Actuator sees no activity on the network

LED turn on and off quickly, 10x/second:

Normal operation on the network communication is OK.

LED turn on and off slowly with green light, 3x/second: Normal operation on the network - communication over longer time directly with this actuator.

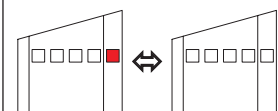


BACnet/Modbus (RS485) activity with ERRORS


LED turns on and off slowly, 10x/second, with RED color: Actuator sees activity, but with errors.

LED turn on and off quickly, 10x/second, with RED color: Communication is OK, EXCEPT that another device may be using the same MAC address.


Position of valve/actuator

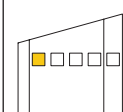


AB-QM valve is **fully closed**.

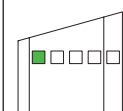


AB-QM is 1-24% open.

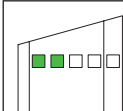


AB-QM is 25-49% open.

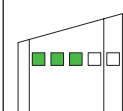


AB-QM is 50-74% open

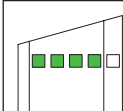

AB-QM is 75-99% open.

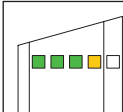

AB-QM valve is **fully open**.




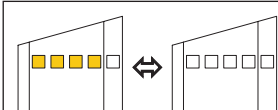


Flush is active








All LEDs turns on/off with specific period.

LED Display (continued)

Movement of valve/actuator

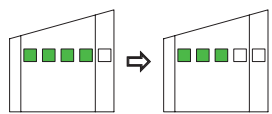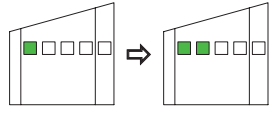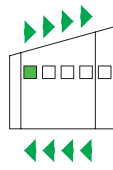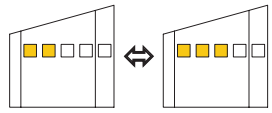	NovoCon® S is closing the valve All green LEDs are turned ON, then turned OFF one at the time (repeatedly).
	NovoCon® S is opening the valve All green LEDs are turned OFF, then turned ON one at the time (repeatedly).
	NovoCon® S is calibrating Green light moves forward and backwards, one by one.
	De-air is active Yellow LEDs are turned ON one by one, then turned OFF one by one (repeatedly).


Information from actuator

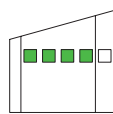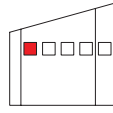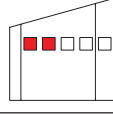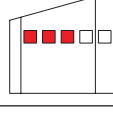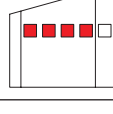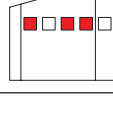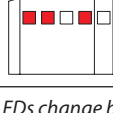	Blinking function , all green LEDs turns on/off. Used to physically identify individual actuator on the bus.
	Error during closing Debris might be trapped under the AB-QM valve cone. Flushing may solve the problem.
	Temperature inside NovoCon® S is out of the recommended range LEDs change between showing the alarms and showing normal operation. Ambient temperature has likely exceeded 60°C.
	Internal NovoCon® S error LEDs change between showing the alarms and showing normal between operation. Try: A: Re-calibrate. B: Turn power off and on. C: If the error does not disappear actuator replacement can be necessary.
	Error during NovoCon® S calibration LEDs change between showing the alarms and showing normal operation. Verify if the NovoCon® S is correctly attached to the valve and recalibrate.
	Power supply is outside limits LEDs change between showing the alarms and showing normal operation. Use analog cables as voltage booster.
	No Control Signal In analog mode is it detected that the control wire is broken. In digital mode is it detected that there has been no update of the Flow Rate Setpoint for more than the specified time in AV:3 (Control fall back timeout).

LEDs change between showing the alarms and showing normal operation.

LED Display (continued)

Pressing the reset button during normal operation

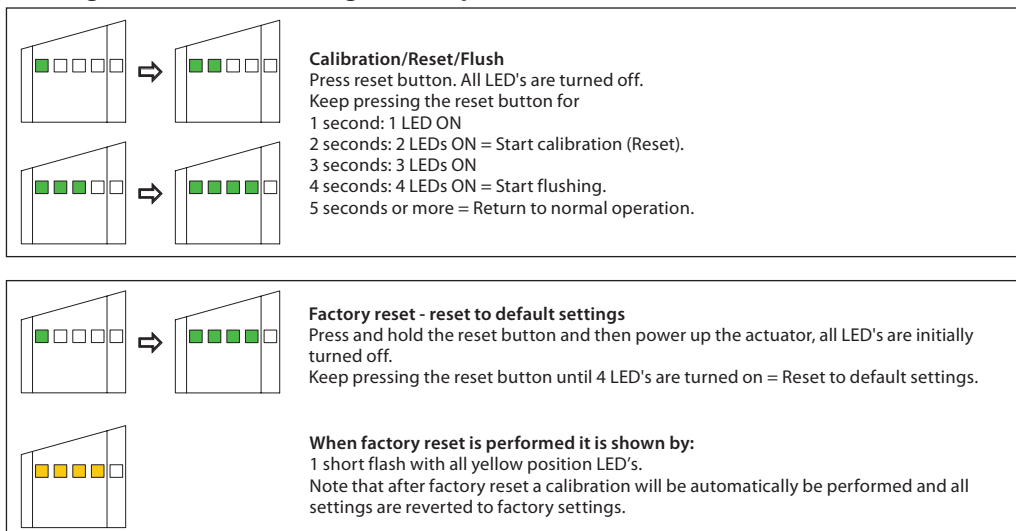


BACnet objects and Modbus registers usage - Design flow rate setting

General

There are simple BACnet and Modbus settings that are essential to the basic setup configuration of NovoCon® S in order to communicate and control. These are contained in the BACnet objects or in decimal format Modbus registers.

Initial configuration

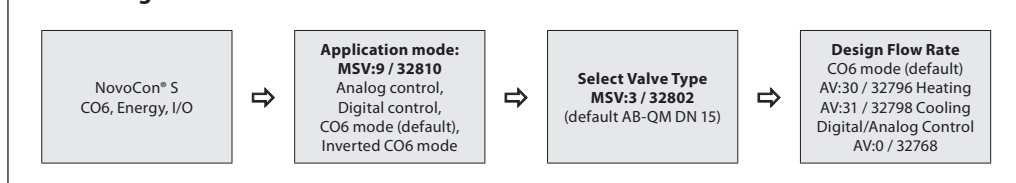

BACnet objects and Modbus registers usage - Advanced configuration and features

If the default setup of the actuator isn't suitable, special attention has to be paid to the following objects:

MSV:9 / 32810	Application mode
MSV:3 / 32802	Selected Valve Type
MSV:30 / 32796	Design Flow Rate Heating (when MSV:9 / 32810 is in CO6 mode or CO6 inverted mode)
MSV:31 / 32798	Design Flow Rate Cooling (when MSV:9 / 32810 is in CO6 mode or CO6 inverted mode)
AV:0 / 32768	Design Flow Rate (when MSV:9 / 32810 is in Digital or Analog mode)
MSV:10 / 33811	CO6 command & status
AI:1 / 32791	Temperature T1 or resistance input
AI:2 / 32792	Temperature T2 or resistance input
AV:32 / 33288	Power Emission

Application mode:

The default is CO6 mode. This is where the NovoCon® S CO6, Energy, I/O actuator is ready to be used with the Actuator NovoCon ChangeOver6. If the heating and cooling pipes are connected inverted to that shown on the data sheet, then CO6 Inverted mode must be selected.

If the ChangeOver functionality is not needed, the NovoCon® S CO6, Energy, I/O can also be controlled by a Digital or Analog control signal. The object/register MSV:9 / 32810 Application mode is used to select this. Furthermore, if CO6 functionality is not used and the voltage inputs and outputs on NovoCon® S CO6, Energy, I/O are used as I/O, we recommend setting the actuator to Digital mode.

Selection of AB-QM valve type:

After selecting Application mode (see above), it is then necessary to select the AB-QM valve type that the actuator is mounted on. This is done with the object MSV:3 / 32802 Selected Valve Type. The present value of MSV:3 / 32802 may be set to values between 1 and 17. Each number represents a specific AB-QM valve type, which can be found in the table: Valve type selection. The default value for MSV:3 / 32802 is 4 i.e. ABQM ISO DN15 valve.

Selection and setting of engineering units:

If there is a need to change the default engineering units, this is done in BACnet via the object's engineering units property and in Modbus via separate registers.

BACnet objects and Modbus registers usage

- Advanced configuration and features *(continued)*

Setting the Design Flow Rate:

Now we come to the point where the designed maximum flow rate of the controlled system should be set if the nominal flow of the valve does not correspond to the designed maximum flow rate. The Design Flow Rate is set by changing the present value of:

- MSV:30 / 32796 Design Flow Rate Heating (when MSV:9 / 32810 is in CO6 mode or CO6 inverted mode)
- MSV:31 / 32798 Design Flow Rate Cooling (when MSV:9 / 32810 is in CO6 mode or CO6 inverted mode)
- AV:0 / 32768 Design Flow Rate (when MSV:9 / 32810 is in Digital or Analog mode)

Note: If the Design Flow Rate is set to more than the nominal flow value of the valve, the mechanical pre-setting on the valve must be set to maximum open (100% open is the default mechanical pre-setting from our factory).

Calibration of the Actuator to the AB-QM Valve:

After all basic settings have been made, it is now time to calibrate the actuator to the chosen AB-QM valve. In doing this, the actuator will adjust itself to the exact AB-QM valve used, and all settings will be used correctly.

A calibration is started by setting the object / register: Actuator Mode and Special Features MSV:0 / 33284 to calibration.

Changing from Heating to cooling:

The object / register MSV:10 / 32811 CO6 command & status is used to change from heating function to cooling function as well as giving feedback as to the ball position status. A more detailed description of this is found in the tables for BACnet objects / Modbus registers.

Temperature measurements:

AI:1 / 32791 Temperature T1 or resistance input and AI:2 / 32792 Temperature T2 or resistance input are used to measure the temperature with PT1000 temperature sensors. The resistance value may also be shown directly if selected, allowing these inputs to be used for other purposes than measuring temperature e.g. window contacts or another potential free contacts.

Power emission:

AV:32 / 33288 Power Emission is used to show the present hydronic power emission of the terminal unit, based on calculations from water flow rate and the temperature difference between supply and return pipes.

Flushing a system:

Actuator Mode and Special Features MSV:0 / 33284 has an option which allows the user to flush the system via the field bus. To start flushing the system, set MSV:0 / 33284 to 3, Flush. The actuator will then open up the AB-QM valve completely. Flush will end when:

- MSV:0 / 33284 is set back to 1 = Normal operation
- Power is cycled.
- Or flush function times-out after 1 hour.

When flushing ends, the actuator returns to normal operation.

De-Airing of a system:

With MSV:0 / 33284, it is also possible to start the De-Air function in the actuator. This function will open and close the AB-QM valve a number of times, helping getting rid of trapped air in the hydronic system. Start De-Air by setting MSV:0 / 33284 to 4. De-air will run undisturbed until it ends. The state of the actuator will then go back to normal operation i.e. MSV:0 / 33284 = 1, Normal.

Controlling the actuator:

Under normal operation Digital (MSV:9 / 32810 Application mode in CO6 mode, Inverted CO6 mode and Digital mode) of the actuator, where the flow through the AB-QM valve is to be controlled, the object Flow Rate Setpoint AV:1 / 33280 is used. The default setting for the Flow Rate Setpoint engineering unit is %.

This is the most suitable setting as the controller does not need to know anything about the Design Flow Rate setting of the actuator. The output signal from the controller needs only to be set up so it regulates from 0 to 100% of the Flow Rate Setpoint AV:1 / 33280.

To change the flow rate through the valve, the present value of AV:1 / 33280 is written-to, in the range 0 – 100%.

If the engineering unit selected for AV:1 / 33280 must be l/hr, the desired flow through the valve must be written-to in integers representing l/hr. An example of this could be a controller writing values to the actuator in the range 0 to 450 l/hr for a DN15 valve.

Alarms and warnings:


System issues can be detected by using BACnet object values BV:10 to BV:21 or Modbus register 33536, see BACnet and Modbus tables for more details.

Auto baud rate

NovoCon® S should be connected after, or at the same time as, other BACnet devices. NovoCon® S will then adapt to it's network's baud rate automatically.

Baud rate MSV:6 / 32804 must be set to 1 (default).


If the NovoCon® S observes activity on the bus within 45 seconds after powering up, then it adopts the baud rate presently used on the network by other BACnet devices. If the actuator does not see activity on the network within this time, it generates a token and sends the token out at the default baud rate of 38400bps.

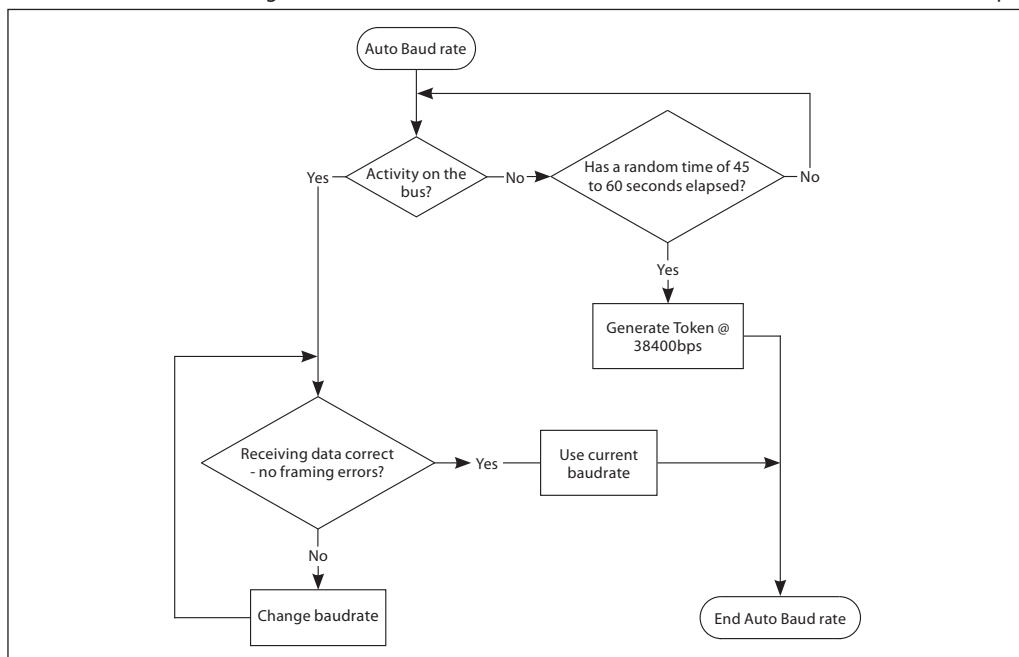

Auto MAC Addressing - BACnet only

MAC address assignment method MSV:5 must be set to 1 (default).

The NovoCon® S actuator observes for used which MAC addresses on the sub-network that are taken and then automatically assign an available MAC address to the actuator on first power up, if the address has not already been manually selected by DIP Switches. If a MAC address collision arises later and Auto MAC addressing is enabled, this function will start the search for an available MAC address again. When an available MAC address is found, an "I-Am" notification will be sent out via BACnet.

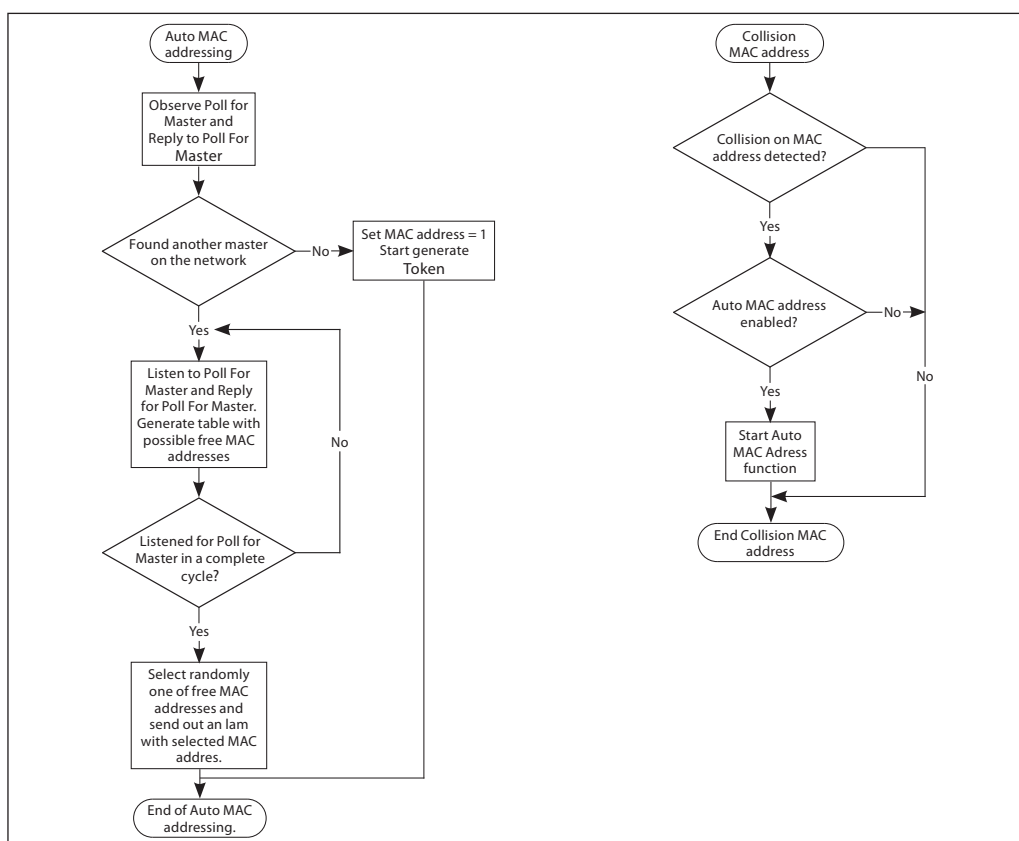


BACnet Objects - Analog Value


Ident	Object / Parameter name	Unit	Read/ Write	Min	Max	Default	Resolution	Description
AV:0	Design Flow Rate	%, L/hr, GPM	R/W	Recommended 20% of nominal flow	Setting Range Maximum from Valve table	Nominal value from the Valve table in L/hr	0.1	Pre-set value for the Design Flow Rate when control signal is at 100%. If Application mode is Analog or Digital control otherwise not used. Units can be changed via the object's engineering units property.
AV:1	Flow Rate Setpoint	%, L/hr, GPM	R/W	0	100% or Design Flow value	100%	0.01	The desired Flow Rate Setpoint through the AB-QM valve. Units can be changed via the object's engineering units property.
AV:2	Actual Flow Rate feedback	%, L/hr, GPM	R	0	If L/hr (GPM) is selected then the valve flow rate is set to the selected valve's (MSV:3) maximum value. Otherwise 100%	L/hr or GPM depending on the selected valve	0.001	Flow rate indication based on the position of the Actuator stem. Units can be changed via the object's engineering units property.
AV:3	Control Fallback Time	Minutes	R/W	0	60	10	1	Time before actuator reacts to a missing analog control signal.
AV:4	Alpha Value	na	R/W	0.05	1.0	0.2	0.01	Value used for shaping the curve in Manual Defined Function (MDF) mode to fit the characteristic curve of a heat exchanger. Linear setting: MDF=1. See curve below table. If AV:1 is in L/hr in Digital mode, the alpha setting is ignored. See Alpha value diagram.
AV:5	Valve closing or opening time	Seconds	R/W	18	700	na	1	The time the actuator needs to move from 0% to 100% of Design Flow Rate. Use with MSV:4.
AV:6	Rectified voltage measured by the actuator	Volts	R	12	50	0	0.01	Rectified voltage which powers the actuator. Too low voltage: 16.1-17.5V. Too high voltage: 38.3-43.4V.
AV:7	MAC Address	na	R/W	1	126	na	1	MAC Address used for BACnet communication.
AV:8	Temperature In the Actuator	°C, °F	R	-20	100	°C	0.5	Temperature measured inside the actuator. Units can be changed via the object's engineering units property.
AV:9	Total Operating Hours	Hours	R	0	MAX	na	1	Total Operating Hours of the actuator.
AV:10	Minutes since last power-up	Minutes	R	0	MAX	na	1	Minutes since the last power-up of the actuator.
AV:11	Minutes since last calibration	Minutes	R	0	MAX	na	1	Minutes since the last time the actuator was calibrated to an AB-QM valve.
AV:12	Minutes since fully closed	Minutes	R	0	MAX	na	1	Minutes since the last time the AB-QM valve was fully closed.
AV:13	Minutes Since Fully Opened	Minutes	R	0	MAX	na	1	Minutes since the last time the AB-QM valve was fully opened.
AV:14	Total steps taken by the actuator	na	R	0	MAX	na	1	Total steps taken by the actuator since first power ON
AV:15	Server Message Count	na	R	0	MAX	na	1	Server Message Count
AV:16	Server Message Received	na	R	0	MAX	na	1	Server Message Received
AV:17	Server Error Count	na	R	0	MAX	na	1	Server Error Count
AV:18	Server Message sent	na	R	0	MAX	na	1	Server Message sent
AV:19	Server Timeout Error	na	R	0	MAX	na	1	Server Timeout Error
AV:20	Serial Number of the actuator	na	R	na	na	na	1	Description of this object holds the serial number of the actuator - programmed at the time of production.
AV:21	The name of the Selected valve is shown here	L/hr or GPM, Unit type comes from Valve Table	R	na	na	na	1	Nominal flow of the selected AB-QM valve type.
AV:22	Valve position at nominal flow	Millimetre	R	na	na	na	1	Position in mm for nominal flow of the selected AB-QM valve.
AV:23	Maximum value for the Design Flow Rate	Unit type follows selection: % or (L/hr or GPM)	R	na	na	na	1	Maximum level the Design Flow can be increased to for the selected AB-QM valve.
AV:24	The name of the User Defined Valve is shown here	L/hr or GPM, Unit type written here is copied to the Valve Table. Default: L/hr	R/W	1	5000	450	0.1	Name and Nominal Flow of the User Defined Valve.
AV:25	Valve position at nominal flow for User Defined Valve	Millimetre	R/W	1.5	5.8	2.25	0.01	Nominal flow position in mm for the User Defined Valve.
AV:26	Maximum value for the Design Flow in the User Defined Valve	%	R/W	100	150	120	1	Maximum level the Design Flow can be increased to for the User Defined Valve.
AV:27	Alarm summary count	na	R	na	na	0	na	Coding for AV:27 Alarm summary count is: If BV:10 is active then AV:27 is 1.0. If BV:11 is active then AV:27 is 2.0. If BV:12 is active then AV:27 is 4.0. If BV:14 is active then AV:27 is 8.0. If BV:15 is active then AV:27 is 16.0. If BV:16 is active then AV:27 is 32.0. If BV:17 is active then AV:27 is 64.0. If BV:18 is active then AV:27 is 128.0. If BV:19 is active then AV:27 is 256.0. If BV:20 is active then AV:27 is 512.0. If BV:21 is active then AV:27 is 1024.0. e.g. if both BV:11 & BV:12 are active then AV:27 is 6.0.
AV:30	CO6 Heating Design Flow Rate	%, L/hr, GPM	R/W	Recommended 20% of nominal flow	Setting Range Maximum from Valve table	Nominal value from the Valve table in L/hr	0.1	Pre-set value for the Design Flow Rate in heating mode, when the control signal is at 100%. When MSV:9 Application mode is in CO6 mode or Inverted CO6 mode. Units can be changed via the object's engineering units property.
AV:31	CO6 Cooling Design Flow Rate	%, L/hr, GPM	R/W	Recommended 20% of nominal flow	Setting Range Maximum from Valve table	Nominal value from the Valve table in L/hr	0.1	Pre-set value for the Design Flow Rate in cooling mode, when the control signal is at 100%. When MSV:9 Application mode is in CO6 mode or Inverted CO6 mode. Units can be changed via the object's engineering units property.
AV:32	Power emission	kW, BTU/h	R	na	na	kW	na	The hydronic power emission of the terminal unit, based on calculations from water flow rate and the temperature difference between supply (AI:1) and return (AI:2) pipes. Positive values reflect heating power emission. Negative values reflect cooling power emission. Units can be changed via the object's engineering units property.

Note: In the following objects, the engineering units are linked e.g. if engineering units are changed in one object then it will be changes in all: AV:0, AV:30 and AV:31.

AV:4 / 32772 Alpha Value Curve

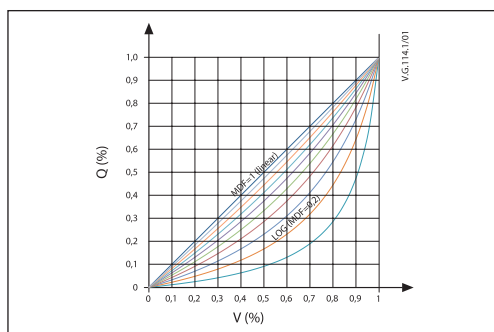

BV:2 / 32786 Direct or Inverse operation mode

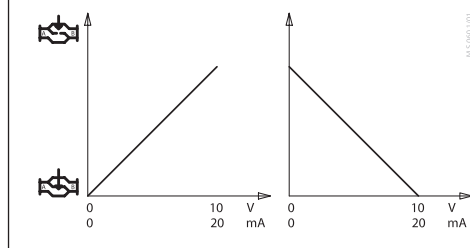

BACnet Objects - Multi State Value

Ident	Object / Parameter name	Read/ Write	State Text	Default State	Description
MSV:0	Actuator Mode and special features	R/W	1: Normal 2: Calibration 3: Flush ¹⁾ 4: De-Air ²⁾ 5: Alarm	1: Normal	Shows present mode of actuator. Calibration, flushing and de-air may be started from here.
MSV:1	Analog Control signal type and range	R/W	1: 0-5 VDC 2: 0-10 VDC 3: 2-10 VDC 4: 5-10 VDC 5: 2-6 VDC 6: 6-10 VDC 7: 0-20 mA 8: 4-20 mA	2: 0-10 VDC	Used to select the analog control signal input type and range.
MSV:2	Missing Control Signal Fallback Action	R/W	1: No action 2: CLOSE 3: OPEN 4: 50% of Design Flow	1: No action	The action that the actuator will commence upon a missing analog control signal.
MSV:3	Selected Valve Type	R/W	See table "Valve Type Selection"	4: AB-QM DN 15	This is the AB-QM valve type that the actuator is set-up to control.
MSV:4	Actuator Speed	R/W	1: 3 sec/mm 2: 6 sec/mm 3: 12 sec/mm 4: 24 sec/mm 5: Constant Time	4: 24 sec/mm	The amount of time the actuator takes to move 1mm or alternatively, a specified constant time function (see AV:5). The Constant Time value range is 18-700 seconds.
MSV:5	MAC Address assignment method	R/W	1: DIP Switch Settings or Auto Addressing 2: User configuration over BACnet or Auto Addressing	1: DIP Switch Settings or Auto Addressing	The MAC address selection method. If the MAC address is not set by DIP Switch, the actuator will automatically assign itself an available MAC address.
MSV:6	Baud Rate	R/W	1: Auto Baud Rate Detection 2: 9600 bps 3: 19200 bps 4: 38400 bps 5: 57600 bps 6: 76800 bps 7: 115200 bps	1: Auto Baud Rate Detection	Baud Rate used for BACnet communication.
MSV:7	LED Control	R/W	1: Normal LED mode 2: Show only alarms 3: All LED's OFF 4: Blink	1: Normal LED mode	The LED display options.
MSV:8	Select field bus protocol	R/W	1: DIP switch 2: BACnet 3: Modbus	1: DIP switch	Selection of field bus protocol.
MSV:9	Application mode	R/W	1: Analog control 2: Digital control 3: CO ₆ mode 4: Inverted CO ₆ mode	3: CO ₆ mode	Select the actuator application mode. State 1: Analog Control. Flow is controlled with an analog signal e.g. 0-10V. Design Flow Rate set via AV:0. State 2: Digital Control. AV:1 is used to control the flow. Design Flow Rate set via AV:0. State 3: CO ₆ mode. AV:1 is used to control the flow. Design Flow Rate set via AV:30 for heating and AV:31 for cooling. Heating is connected to the CO ₆ valve to ports 5 & 6 and cooling to ports 1 & 4. State 4: Inverted CO ₆ mode. AV:1 is used to control the flow. Design Flow Rate set via AV:30 for heating and AV:31 for cooling. Ports are inverted in relation to State 3.
MSV:10	CO ₆ command & status	R/W (1-4) R (5-9)	1: Heating 2: Cooling 3: Shut Off ³⁾ 4: Start exercise 5: Moving towards Cooling 6: Moving towards Heating 7: Alarm 8: Not used 9: Exercising	1: Heating	States 1 to 4 are commands for the actuator NovoCon ChangeOver ⁴⁾ . States 5 to 9 are feedback from the actuator NovoCon ChangeOver ⁴⁾ . State 3, shut-off mode may only be used for maintenance. Do not use shut-off function during operation.
MSV:11	CO ₆ auto exercise	R/W	1: ON 2: OFF	1: ON	ON: The ChangeOver ⁴⁾ valve will be moved from current position to shut off and back again once per week to maintain free movement. OFF: Exercising the valve should be handled by BMS.

¹⁾ Opens the valve fully for one hour or until a new state is selected

²⁾ Opens and closes the valve 5 times at maximum speed

³⁾ A zero desired flow command (AV:1) closes the AB-QM, so that there is neither heating nor cooling. Do not use the CO₆ maintenance shut-off function for this purpose.



The CO₆ valve shut-off function should only be used for maintenance and only when the water temperature in terminal unit is equal to ambient temperature or the terminal unit is not mounted. A water temperature change inside of a closed coil could result in rising pressure and possible damage of to the terminal unit.

BACnet Objects - Binary Value

Ident	Object / Parameter name	Read / Write	Active Text (1)	Inactive Text (0)	Default	Description
BV:2	Direct or Inverse operation Mode	R/W	Inverse	Direct	Direct	Selection between Direct and Inverse operation mode. See Direct/Inverse diagram.
BV:10	Warning: Temperature of the actuator is out of recommended range	R	ON	OFF	na	The Temperature inside the Actuator is out of the recommended range.
BV:11	Alarm: No Control Signal	R	ON	OFF	na	The actuator has detected that it has no analog control signal.
BV:12	Alarm: Error during Closing	R	ON	OFF	na	Actuator can't completely close the AB-QM valve.
BV:14	Warning: Voltage of power supply is too high	R	ON	OFF	na	Voltage of power supply is measured to be too high. When the measured voltage exceeds 43.4V the alarm will be turned ON for too high voltage. When the measured voltage is once more below 38.3V, the alarm will be turned OFF.
BV:15	Warning: Voltage of power supply is too low	R	ON	OFF	na	Voltage of power supply is measured to be too low. When the measured voltage level drops below 16.5V the alarm will be activated for too low voltage. When the measured voltage level drops below 16.1V the motor will also be turned off. When the measured voltage is once more above 17.5V, the motor will be activated again.
BV:16	Alarm: Error during Calibration	R	ON	OFF	na	There was an error during calibration of the actuator.
BV:17	Warning: BACnet MAC-address Conflict was Detected	R	ON	OFF	na	Two or more devices on the same BACnet sub-network have the same MAC-address.
BV:18	Warning: Faults on the BACnet was detected	R	ON	OFF	na	Problems with communication on the network are detected.
BV:19	Alarm: An internal Error has been detected	R	ON	OFF	na	Re-calibrate or power cycle actuator to reset - actuator replacement may be necessary
BV:20	Alarm: CO6 in manual override or CO6 unable to move	R	ON	OFF	na	ChangeOver ^s actuator is in manual override or is unable to reach position.
BV:21	Alarm: CO6 actuator not connected or damaged	R	ON	OFF	na	The ChangeOver ^s actuator is not connected or is damaged.

BACnet Objects - Device Object

List with some selected important Device Object properties.

Property	Value	Read / Write	Description
Object ID	Instance Range: 0 to 4194302	R/W	This property is normally called Device Instance number or Unique ID.
Object-Name	Combination of "NovoCon S" + Type and Object ID	R/W	Product name. Max. 25 characters.
Firmware revision	Current firmware version	R	BACnet software revision.
Application S/W version	Current Application SW version	R	Actuator Application Software version.
Location	This string is empty when actuator is new.	R/W	Free text can be used to describe location etc. Max. 50 characters.
Description	Danfoss NovoCon actuator with BACnet MS/TP	R/W	Product description. Max. 50 characters.
Segmentation-supported	NO SEGMENTATION	R	Actuator does not support segmentation.
Max-master	Default: 127 Range: 0-127	R/W	The MAX_master setting in NovoCon should be set to the number of devices (or the highest used MAC address) in the MS/TP sub network.

BACnet Objects - Analog Input

Ident	Object / Parameter name	Unit	Read / Write	Min	Max	Default	Description
AI:0	Voltage or Current on analog input	Volt / mA	R	0	10V 20mA	na	Voltage(V) or Current(mA) level on the analog control input, measured by the actuator. Units can be changed via the object's engineering units property.
AI:1	T1 or resistance input	°C, °F, Ohm	R	-10°C 10°F 900Ω	120°C 250°F 10kΩ	°C	Temperature/resistance measured from connected PT1000 sensors. For Power emission AV:32, AI:1 is temperature on the flow pipe and AI:2 is temperature on the return pipe. Max. 10m cable. Units can be changed via the object's engineering units property.
AI:2	T2 or resistance input						

BACnet Objects - Analog Output

Ident	Object / Parameter name	Unit	Read / Write	Min	Max	Default	Description
AO:0	Voltage on analog output	Volt	R/W	0	10	Volt	Output Voltage value in Digital and Analog mode MSV:9. Note: In CO6 and Inversed CO6 mode the present value is not writeable.

BACnet Objects - Notification class

Ident	Object / Parameter name	Description
NC:0	Alarm Notifier, Subscribe here for alarms	Subscribe devices for receiving alarms

NC:0 is an object where other BACnet devices can subscribe to be informed directly from this device if an alarm or warning is activated or cleared. A maximum of 4 devices can subscribe to this service. Subscribers of this object will be informed if any of the Warning or Alarms BV:10 to BV:21 is activated or cleared.

When the notification class NC:0 is going to be used to notify about changes with status of Warnings and Alarms (BV:10 – BV:21), is it necessary to subscribe for notifications for the entire day and week: From 00:00:00:00 to 23:59:59:99 and all 7 days of the week. This is because the actuator does not have a clock built in and will therefore not be able to handle notifications with respect to time.

BACnet Objects - Averaging

Ident	Object / Parameter name	Min. Value	Average value	Max. Value	Window Interval	Window Sample	Description
AVO:0	Average rectified voltage measured by the actuator	Updated according to actual measurements			1 Day	24	Average of the rectified voltage that powers the actuator.

Valve Type Selection



Values for flow are valid for water applications. For glycol mixtures, please use correction factor.

Index	Name	Nominal Flow	Units	Valve position for nominal flow [mm]	Setting Range Maximum [%]
1	AB-QM ISO DN 10LF	150	L/hr	2.25	120
2	AB-QM ISO DN 10	275	L/hr	2.25	120
3	AB-QM ISO DN 15LF	275	L/hr	2.25	120
4 ¹⁾	AB-QM ISO DN 15	450	L/hr	2.25	120
5	AB-QM ISO DN 20	900	L/hr	2.25	120
6	AB-QM ISO DN 25	1700	L/hr	4.5	110
7	AB-QM ISO DN 32	3200	L/hr	4.5	110
8	AB-QM ANSI DN ½" LF	1.2	GPM	2.25	100
9	AB-QM ANSI DN ½"	2	GPM	2.25	100
10	AB-QM ANSI DN ½" HF	5	GPM	4	100
11	AB-QM ANSI DN ¾"	4	GPM	2.25	100
12	AB-QM ANSI DN ¾" HF	7.5	GPM	4	100
13	AB-QM ANSI DN 1"	7.5	GPM	4.5	100
14	AB-QM ANSI DN 1" HF	12	GPM	4.5	100
15	AB-QM ANSI DN 1¼"	14.1	GPM	4.5	100
16	AB-QM ANSI DN 1¼" HF	17.5	GPM	4.5	100
17 ²⁾	"User Defined Valve"	NF	UF	VPNF	SRM

¹⁾ Default

²⁾ Default values are identical to AB-QM ISO DN 15.

BACnet BIBBs services

Service	BIBBs	Init/Exe
ReadProperty	DS-RP-B	exe
WriteProperty	DS-WP-B	exe
Who-Is	DM-DDB-A	init
Who-Is	DM-DDB-B	exe
I-Am	DM-DDB-B	init
I-Am	DM-DDB-A	exe
Who-Has	DM-DOB-B	exe
I-Have	DM-DOB-B	init
DeviceCommunicationControl	DM-DCC-B	exe
ReinitializeDevice ¹⁾	DM-RD-B	exe
ConfirmedEventNotification	AE-N-I-B	init
UnconfirmedEventNotification	AE-N-I-B	init
AcknowledgeAlarm	AE-ACK-B	exe
GetEventInformation	AE-INFO-B	exe
GetAlarmSummary	AE-ASUM-B	exe
GetEnrollmentSummary	AE-ESUM-B	exe
AddListElement	DM-LM-B	exe
RemoveListElement	DM-LM-B	exe
ReadPropertyMultiple	DS-RPM-B	exe
WritePropertyMultiple	DS-WPM-B	exe
ChangeOfValue ²⁾	DS-COV-B	exe
Restart	DM-R-B	exe

¹⁾ NovoCon S CO6, Energy, I/O supports BACnet warm reset (power cycle) and Cold reset (factory reset). Note that after Cold/factory reset a calibration will be automatically performed and all settings will be reverted to factory settings.











²⁾ COV is implemented for the following: Analog Inputs AI:0, AI:1 and AI:2, and for the following Analog Values AV:2 and AV:27.

DIP Switch Settings

BACnet: Auto MAC addressing is default. For manual MAC addressing using DIP Switches, MSV:5 must be set to: DIP Switch Settings.

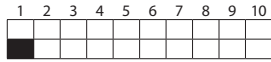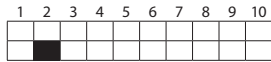Modbus: Manual MAC addressing is default. Automatic addressing is not available for Modbus.

However, if an address has been assigned in BACnet before switching to Modbus, the address will also be used in Modbus if the DIP Switched are left in the default positions.

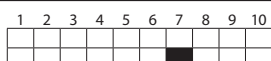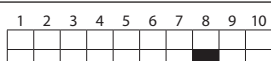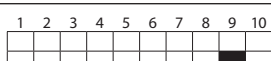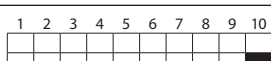DIP Switch	Configuration name	OFF state (default)	ON state
1.  ON OFF	BACnet address / Modbus unit ID bit 0	Logic '0'	Logic '1'
2.  ON OFF	BACnet address / Modbus unit ID bit 1	Logic '0'	Logic '1'
3.  ON OFF	BACnet address / Modbus unit ID bit 2	Logic '0'	Logic '1'
4.  ON OFF	BACnet address / Modbus unit ID bit 3	Logic '0'	Logic '1'
5.  ON OFF	BACnet address / Modbus unit ID bit 4	Logic '0'	Logic '1'
6.  ON OFF	BACnet address / Modbus unit ID bit 5	Logic '0'	Logic '1'
7.  ON OFF	BACnet address / Modbus unit ID bit 6	Logic '0'	Logic '1'
8.  ON OFF	Termination resistor (120Ω)	No termination	Termination resistor enabled ¹⁾
9.  ON OFF	Not used		
10.  ON OFF	-	BACnet MS/TP ²⁾	Modbus RTU ²⁾

¹⁾ The actuator possesses a resistor that can be activated in the last actuator on the bus for correct termination of the bus.

²⁾ When protocol is changed on DIP Switch no. 10, a power cycle is required to make the actuator adopt the newly selected protocol.

DIP Switch Settings - Manual Addressing

BACnet MAC address/Modbus Slave ID is set by DIP switch 1 to 7.

0 = OFF, 1 = ON

DIP switch 1, 2, 3, 4															DIP switch 5,6,7
0000	1000	0100	1100	0010	1010	0110	1110	0001	1001	0101	1101	0011	1011	0111	
0*	1	2	3	4	5	6	7	8	9	10	11	12	13	14	000
16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	100
32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	010
48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	110
64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	001
80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	101
96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	011
112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	111
														127*	

* Addresses no. 0 and 127 must not be used.

Example

Setting MAC address to 37:

DIP 1	DIP 2	DIP 3	DIP 4	DIP 5	DIP 6	DIP 7
ON	OFF	ON	OFF	OFF	ON	OFF

Modbus registers - Configuration

Modbus/ register	Read/ Write	Modbus function	Modbus Data Type	Object / Parameter name	Description	Default	Unit	Description of usage
0x8000 32768	R/W	3, 4 & 16	FLOAT	Design Flow Rate	Pre-set value for the Design Flow Rate when control signal is at 100%. Unit follows 32787	Nominal value from the Valve table in L/hr	%, L/hr, GPM	Design Flow Rate in Liters per hour i.e. 150 ... 450 correspond to 150 ... 450 L/hr or in percent, i.e. 20 ... 100 correspond to 20 ... 100%
0x8002 32770	R/W	3, 4 & 6	WORD	Control Fallback Time	Time before actuator reacts to a missing analog control signal	10	Minutes	Control Fallback Time in minutes, i.e. 0 ... 60 correspond to 0 ... 60 minutes
0x8004 32772	R/W	3, 4 & 16	FLOAT	Alpha Value	Value used for shaping the curve in Manual Defined Function (MDF) mode to fit the characteristics curve of a heat exchanger. If 33280 is in L/hr in Digital mode, the alpha setting is ignored.	0.2	na	Alpha Value curve, i.e. 0.05 ... 1.00 correspond to 0.05 ... 1.00. Alpha = 1.00 is linear. Alpha = 0.2 is equal to the LOG function. See Alpha value diagram.
0x8006 32774	R/W	3, 4 & 16	WORD	Valve closing or opening time	The time the actuator needs to move from 0% to 100% of Design Flow Rate. Use with 32803.	na	Seconds	Valve closing or opening time in seconds i.e. 18 ... 700 correspond to 18 ... 700 seconds
0x8008 32776	R	3, 4 & 6	FLOAT	Nominal Flow of the user defined valve	Name and Nominal Flow of the User Defined Valve.	na	L/hr or GPM, Unit type comes from Valve Table	Nominal flow e.g. in Liters per hour i.e. 0 ... 450 correspond to 0 ... 450 L/hr
0x800A 32778	R	3 & 4	FLOAT	Valve position at nominal flow for User Defined Valve	Nominal flow position in mm for the User Defined Valve.	2.25	Millimetre	Valve position for nominal flow in millimetre, i.e. 0.5 ... 5.8 correspond to 0.5 ... 5.8 millimetre
0x800C 32780	R/W	3, 4 & 6	FLOAT	Maximum value for the Design Flow in the User Defined Valve	Maximum level the Design Flow can be increased to for the User Defined Valve	120	Unit type follows 32787 selection: % or (L/hr or GPM)	i.e. 0 ... 150 correspond to 0 ... 150 %
0x8012 32786	R/W	3, 4 & 6	WORD	Direct or Inverse operation Mode	Selection between Direct and Inverse operation mode. See Direct/Inverse diagram.	0: Direct	0: Direct 1: Inverse	Selection between Direct and Inverse operation mode. See Direct/Inverse diagram.
0x8013 32787	R/W	3, 4 & 6	WORD	Units used to set and display the Design Flow	Units used to set and display the Design Flow. Units come from Selected Valve Type.	0: L/hr or GPM for ANSI versions	0: L/hr / GPM 1: %	Units used to set and display the Design Flow. Select between L/hr and % for European versions or GPM and % for ANSI versions
0x8014 32788	R/W	3, 4 & 6	WORD	Units used to set and display Flow Rate Setpoint	Units used to set and display Flow Rate Setpoint	1: %	0: L/hr / GPM 1: %	Units used to set and display the desired Flow. Select between % and L/hr or GPM for ANSI versions
0x8015 32789	R/W	3, 4 & 6	WORD	Units used to set and display the Actual Flow Rate feedback	Units used to set and display the Actual Flow Rate feedback	0: L/hr or GPM	0: L/hr / GPM 1: %	Select between L/hr and % for European versions or % and GPM for ANSI versions
0x8016 32790	R/W	3, 4 & 6	WORD	Units used to set and display Temperature	Select between °C or °F to set and display temperature inside the actuator	0: °C	0: °C 1: °F	Units used to set and display temperature inside the actuator.
0x8017 32791	R/W	3, 4 & 6	WORD	Units used to set and display T1	Units used to read the temperature or resistance value.	0: °C	0: °C 1: °F 2: Ohm	Units for temperature or resistance value.
0x8018 32792	R/W	3, 4 & 6	WORD	Units used to set and display T2				
0x8019 32793	R/W	3, 4 & 6	WORD	Units used to set Power	Units used to read the power usage.	0: kW	0: kW, 1: BTU/h	Units for power.
0x801A 32794	R/W	3, 4 & 6	WORD	Endian type	Byte ordering for LONG and FLOAT types	0: Big	0: Big 1: Little	Used endian type for float and long registers
0x801C 32796	R/W	3, 4 & 16	FLOAT	CO6 Heating Design Flow Rate	Pre-set value for the Design Flow Rate when the control signal is at 100%. Unit follows 32787	Nominal value from the Valve table in L/hr	%, L/hr, GPM	Design Flow Rate in Liters per hour i.e. 150 ... 450 correspond to 150 ... 450 L/hr or in percent, i.e. 20 ... 100 correspond to 20 ... 100%
0x801E 32798	R/W	3, 4 & 16	FLOAT	CO6 Cooling Design Flow Rate				

Configuration (continued)

Modbus register	Read/Write	Modbus function	Modbus Data Type	Object / Parameter name	Description	Default	Description of usage
0x802A 32810	R/W	3, 4 & 6	WORD	Application mode	Select the actuator application mode. State 1: Analog Control. Flow is controlled with an analog signal e.g. 0-10V. Design Flow Rate set via 33280. State 2: Digital Control. AV:1 is used to control the flow. Design Flow Rate set via 33280. State 3: CO ₆ mode. 33280 is used to control the flow. Design Flow Rate set via 32796 for heating and 32798 for cooling. Heating is connected to the CO ₆ valve to ports 5 & 6 and cooling to ports 1 & 4. State 4: Inverted CO ₆ mode. AV:1 is used to control the flow. Design Flow Rate set via 32796 for heating and 32798 for cooling. Ports are inverted in relation to State 3.	3: CO ₆ mode	1: Analog control 2: Digital control 3: CO ₆ mode 4: Inverted CO ₆ mode
0x802B 32811	R/W	3, 4 & 6	WORD	CO ₆ command & status	Commands and status for the ChangeOver ₆ actuator.	1: Heating	1: Heating 2: Cooling 3: Shut-off* 4: Start exercise 5: Moving towards Cooling 6: Moving towards Heating 7: Alarm 8: Not used 9: Exercising State 1 to 4 are commands for the actuator NovoCon ChangeOver ₆ . State 5 to 9 are feedback from the actuator NovoCon ChangeOver ₆ . State 3, shut-off mode may only be used for maintenance. Do not use shut-off function during operation.
0x802C 32812	R/W	3, 4 & 6	WORD	CO ₆ auto exercise	ON: The ChangeOver ₆ valve will be moved from current position to shut off and back again once per week to maintain free movement. OFF: Exercising the valve should be handled by BMS.moved from current position to shut off and back again once per week to prevent the valve getting stucked.	1: ON	1: ON 2: OFF
0x8020 32800	R/W	3, 4 & 6	WORD	Analog Control signal type and range	Used to select the analog control signal input type and range	2: 0-10 VDC	Select 1, 2 or... based on the table below: 1: 0-5 VDC 2: 0-10 VDC 3: 2-10 VDC 4: 5-10 VDC 5: 2-6 VDC 6: 6-10 VDC 7: 0-20 mA 8: 4-20 mA
0x8021 32801	R/W	3, 4 & 6	WORD	Missing Control Signal fallback Action	The action that the actuator will commence upon a missing analog control signal.	1: No action	Select 1, 2 or... based on the table below: 1: No action 2: CLOSE 3: OPEN 4: Go to 50% of Design Flow Rate
0x8022 32802	R/W	3, 4 & 6	WORD	Selected Valve Type	This is the AB-QM valve type that the actuator is set-up to control	4: AB-QM DN 15	See table "Valve Type Selection 1-17"
0x8023 32803	R/W	3, 4 & 6	WORD	Actuator Speed	The amount of time the actuator takes to move 1mm or alternatively, a specified constant time function (see 32774). The Constant Time value range is 18-700 seconds.	4: 24 sec/mm	Select 1, 2 or... based on the table below: 1: 3 sec/mm 2: 6 sec/mm 3: 12 sec/mm 4: 24 sec/mm 5: Constant Time (set by register 0x8006)
0x8024 32804	R/W	3, 4 & 6	WORD	Baud Rate	Baud Rate used for bus communication	1: Auto Baud Rate Detection	Select 1, 2 or... based on the table below: 1: Auto Baud Rate Detection 2: 9600 bps 3: 19200 bps 4: 38400 bps 5: 57600 bps 6: 76800 bps 7: 115200 bps
0x8025 32805	R/W	3, 4 & 6	WORD	Select UART mode	Supported transmission modes	3: 1-8-E-1	Select 1, 2, 3 or 4 based on the table below: 1: 1-8-N-2 2: 1-8-O-1 3: 1-8-E-1 4: 1-8-N-1 Data format: (Start bit-Data bits-Parity-Stop bits)
0x8026 32806	R/W	3, 4 & 6	WORD	Slave ID	Slave ID used for communication.	na	Slave ID used for communication
0x8027 32807	R/W	3, 4 & 6	WORD	Slave ID assignment method	The Slave ID address selection method.	1: DIP Switch Settings	Select 1 or 3 based on the table below: 1: DIP Switch Settings 2: User configuration over Modbus If DIP Switches are in an invalid position the actuator will automatically check if a Slave ID is present in the User Configuration.
0x8028 32808	R/W	3, 4 & 6	WORD	BUS protocol	Select field bus protocol to be used. See DIP Switch Settings section of data sheet.	1: DIP switch	Select 1, 2 or 3 based on the table below: 1: DIP switch 2: BACnet 3: Modbus
0x8029 32809	R/W	3, 4 & 6	WORD	LED Control	The LED display options.	1: Normal LED mode	Select 1, 2 or... based on the table below: 1: Normal LED mode 2: Show only alarms 3: All LED's OFF 4: Blink (can be used to locate the actuator)
0x8500 34048	W	6	WORD	Reset	Warm reset = Power cycle. Cold reset = Factory reset. Note that after factory reset a calibration will be automatically be performed and all settings will be reverted to factory settings.	na	0x5741 / 22337: Warm reset 0x434F / 17231: Cold reset.

¹⁾ A zero desired flow command (AV:1) closes the AB-QM, so that there is neither heating nor cooling, do not use the CO₆ maintenance shut-off function for this purpose.

The CO₆ valve shut-off function should only be used for maintenance, when the water temperature in terminal unit is equal to ambient temperature or the terminal unit is not mounted. Water temperature change inside of closed coil could result in rising pressure and possible damage of to the terminal unit.

Modbus registers - Operating

Modbus / register	Read/ Write	Modbus function	Modbus Data Type	Object / Parameter name	Description	Default	Unit	Description of usage
0x8200 33280	R/W	3, 4 & 16	FLOAT	Flow Rate Setpoint	The Flow Rate Setpoint through the AB-QM valve. Unit follows 32788	100%	%, L/hr, GPM	Flow Rate Setpoint in percent, i.e. 0 ... 100 correspond to 0 ... 100%
0x8202 33282	R	3 & 4	FLOAT	Actual Flow Rate feedback	Flow Rate Indication based on the position of the Actuator stem. Unit follows 32788	na	%, L/hr, GPM	Design Flow Rate feedback in percent, i.e. 0 ... 100 correspond to 0 ... 100%. If L/hr (GPM) is selected in 32787 then the valve flow rate is set to the selected valve's 32776 maximum value. Otherwise 100%
0x8204 33284	R/W	3, 4 & 6	WORD	Actuator Mode and special features	Shows present mode of actuator. Calibration, Flush and de-air may be started from here	1: Normal	na	Select 1, 2 or ... based on the table below: 1: Normal 2: Calibration 3: Flush 4: De-Air 5: Alarm
0x8206 33286	R/W	3, 4 & 16	FLOAT	Voltage on analog output	Output Voltage value in Digital and Analog mode 32810. Note: In CO6 and Inversed CO6 mode the present value is not writeable	V	Volt	Voltage level i.e. 0.00 ... 10.00 correspond to 0.00 ... 10.00 V
0x8208 33288	R/W	3, 4 & 16	WORD	Power emission	The hydronic power emission of the terminal unit, based on calculations from water flow rate and the temperature difference between supply (33218) and return (33220) pipes. Positive values reflect heating power emission. Negative values reflect cooling power emission. Units can be changed via the object's engineering units property.	kW	kW, BTU/h	Power in kW or BTU/h i.e. 0 ... 1000 correspond to 0 ... 1000 kW or in BTU/h, i.e. 0 ... 1000 correspond to 0 ... 1000 BTU/h

Modbus registers - Information

Modbus / register	Read/ Write	Modbus function	Modbus Data Type	Object / Parameter name	Description	Default	Unit	Description of usage
0x8100 33024	R	3 & 4	FLOAT	Nominal flow of the selected valve type	Nominal flow of the selected valve type	450	L/hr or GPM, Unit type comes from Valve Table	Nominal flow e.g. in Litres per hour i.e. 0 ... 450 correspond to 0 ... 450 L/hr.
0x8102 33026	R	3 & 4	FLOAT	Valve position at nominal flow	Position in mm for nominal flow of the selected valve	na	Millimetre	Valve position for nominal flow in millimetre, i.e. 0.5 ... 5.8 correspond to 0.5 ... 5.8 millimetre.
0x8104 33028	R	3 & 4	FLOAT	Maximum value of the Design Flow Rate	Maximum level the Design Flow Rate can be increased to for the selected valve	na	Unit type follows 0x8013 selection: % or (L/hr or GPM)	Maximum level of the Design Flow Rate e.g. in Litres per hour i.e. 0 ... 450 correspond to 0 ... 450 L/hr.
0x8120 33056	R/W	3 & 4	STRING	Device name	Product name	NovoCon S	na	Ascii coded STRING
0x8140 33088	R	3 & 4	STRING	Model name	Type of the actuator	CO6	na	Ascii coded STRING
0x8160 33120	R	3 & 4	STRING	Vendor name	Name of the Manufacture	Danfoss A/S	na	Ascii coded STRING
0x8180 33152	R/W	3, 4 & 16	STRING	Location description	Free text can be used to describe location etc. E.g. Room 1	na	na	Ascii coded STRING. Max. 50 characters.
0x81A0 33184	R	3, 4	String	Serial number	Serial number of the actuator	na	1	Description of this object holds the serial number of the actuator, programmed at the production time.
0x8108 33032	R	3, 4	LONG	Product ID	Serial number of the actuator	na	1	Unique Product id. The last part of the serial number.
0x810A 33034	R	3 & 4	WORD	SW version	Software version of the actuator	na	na	Ascii coded WORD
0x810B 33035	R	3 & 4	WORD	HW version	Hardware version of the actuator	na	na	Ascii coded WORD
0x81C0 33216	R	3 & 4	FLOAT	Voltage or Current on analog input	Voltage(V) or Current(mA) level on the analog control input, measured by the actuator.	na	Volt / mA	Voltage level measured i.e. 0.00 ... 10.00 correspond to 1.00 ... 10.00 V or in mA, i.e. 0.00 ... 20.00 correspond to 0.00 ... 20.00 mA
0x81C2 33218	R	3 & 4	FLOAT	T1 or resistance input	Temperature/resistance measured from connected PT1000 sensors. For Power emission 33288, 33218 is temperature on the flow pipe and 33220 is temperature on the return pipe.	°C	°C, °F, Ohm	Temperature measured in °C i.e. -10°C ... 120°C or resistance measured i.e. 900Ω ... 10kΩ. Max. 10m cable.
0x81C4 33220	R	3 & 4	FLOAT	T2 or resistance input	Temperature/resistance measured from connected PT1000 sensors. For Power emission 33288, 33218 is temperature on the flow pipe and 33220 is temperature on the return pipe.	°C	°C, °F, Ohm	Temperature measured in °C i.e. -10°C ... 120°C or resistance measured i.e. 900Ω ... 10kΩ. Max. 10m cable.
0x8402 33794	R	3 & 4	FLOAT	Rectified voltage measured by the actuator	Measured rectified voltage which powers the actuator	na	Volt	Rectified voltage which powers the actuator. Too low voltage: 16.1-17.5V Too high voltage: 38.3-43.4V
0x8404 33796	R	3 & 4	FLOAT	Temperature in the actuator	Temperature measured inside the Actuator	na	na	Temperature measured inside the actuator. Unit is decided by 32790.
0x8406 33798	R	3 & 4	LONG	Total Operating Hours	Total Operating Hours of the actuator	Hours	Hours	Total Operating Hours of the actuator
0x8408 33800	R	3 & 4	LONG	Total steps taken by the actuator	Total steps taken by the actuator since first power ON	na	na	Total steps taken by the actuator since first power ON
0x8410 33808	R	3 & 4	LONG	Minutes since last power-up	Minutes since the last power-up of the actuator	Minutes	Minutes	Minutes since the last power-up of the actuator
0x8412 33810	R	3 & 4	LONG	Minutes since last calibration	Minutes since the last time the actuator was calibrated to an AB-QM valve	Minutes	Minutes	Minutes since the last time the actuator was calibrated to a valve
0x8414 33812	R	3 & 4	LONG	Minutes since fully closed	Minutes since the last time the AB-QM valve was fully closed	Minutes	Minutes	Minutes since the last time the valve was fully closed
0x8416 33814	R	3 & 4	LONG	Minutes Since Fully Opened	Minutes since the last time the AB-QM valve was fully opened	Minutes	Minutes	Minutes since the last time the valve was fully opened

Alarms & warning

Modbus / register	Read/ Write	Modbus function	Modbus Data Type	Object / Parameter name	Description	Default	Unit	Description of usage
0x8300 33536	R	3&4	LONG	Alarm: No Control Signal	The actuator has detected that it has no analog control signal	0: OFF	na	Bit 0: 0:OFF; 1:ON
				Alarm: Error during Closing	Actuator can't completely close the AB-QM valve	0: OFF	na	Bit 1: 0:OFF; 1:ON
				Alarm: Error during Calibration	There was an error during calibration of the actuator	0: OFF	na	Bit 2: 0:OFF; 1:ON
				Alarm: An internal Error has been detected	Re-calibrate or power cycle actuator to reset - actuator replacement may be necessary	0: OFF	na	Bit 3: 0:OFF; 1:ON
				Warning: Temperature of the actuator is out of recommended range	The Temperature inside the Actuator is out of the recommended range	0: OFF	na	Bit 16: 0:OFF; 1:ON
				Warning: Voltage of power supply is too high	Voltage of power supply is measured to be too high. When the measured voltage exceeds 43.4V the alarm will be turned ON for too high voltage. When the measured voltage is below 38.3V the alarm will be turned OFF	0: OFF	na	Bit 18: 0:OFF; 1:ON
				Warning: Voltage of power supply is too low	Voltage of power supply is measured to be too low. When the measured voltage level drops below 16.5V the alarm will be activated for too low voltage. When the measured voltage level drops below 16.1V the motor will also be turned off. When the measured voltage is once more above 17.5V the motor will be activated	0: OFF	na	Bit 19: 0:OFF; 1:ON
				Warning: Faults on communication was detected	Problems with Communication on the network are detected	0: OFF	na	Bit 21: 0:OFF; 1:ON
				Warning: Invalid DIP switch setting	Slave ID assignment was done incorrectly to either 0 or 127	0: OFF	na	Bit 22: 0:OFF; 1:ON
				Alarm: CO6 in manual override or CO6 unable to move	ChangeOver6 actuator is in manual override or is unable to reach position.	0: OFF	na	Bit 4: 0:OFF; 1:ON
				Alarm: CO6 actuator not connected or damaged	The ChangeOver6 actuator is not connected or is damaged.	0: OFF	na	Bit 5: 0:OFF; 1:ON

Temperature sensors

Functional description


The sensor unit consists of a platinum element, the resistance value of which changes proportionally with the temperature.

Pt 1000 ohm sensor (1000 ohm at 0°C).


The sensor is adjusted and meets the tolerance requirements of EN 60751 Class B.

The accuracy of temperature measurement is approximately 0.5° in typical operating range. It is unlikely, that during calculation of ΔT , deviation of both sensors would be summed up. Therefore, it is estimated that ΔT measurement accuracy is 0.5° when the sensors are mounted correctly.

R (Typ.) Ohm	Temp. °C	Temp. °F	Tolerance. °C
1117	30	86	0.45
1078	20	68	0.40
1039	10	50	0.35
1000	0	32	0.30
961	-10	14	0.35
922	-20	-4	0.40
882	-30	-22	0.45

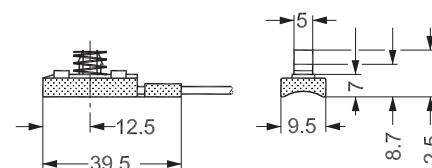

Surface temperature sensor

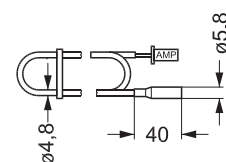

Immersed/universal temperature sensor

Tender text

NovoCon® S CO6, Energy, I/O actuator

Modulating geared actuator with field bus (BACnet MS/TP and Modbus RTU) connectivity used to control pressure independent balancing and control valves DN10-32.

Control signal: BACnet MS/TP, Modbus RTU, 0-10V/2-10V, 0-20/4-20mA

Direct connection to 6-port ball valve actuator with position feedback signal²⁾

Direct connection to 2x PT1000 surface/immersed sensors and emission power indication

Direct connection I/O: 2x resistance, AO and AI⁴⁾

Actuator functionality is remotely accessible via the field bus:

- Design flow pre-setting
- Flushing the valve and terminal unit
- Error during closing intrinsic alarm reporting
- Alarm if CO6 6-port ball valve actuator is blocked, in manual override or disconnected²⁾
- Supply and return temperature readings, emission power indication³⁾
- Energy counter (kWh)³⁾
- Alarm high/low deltaT and temperature sensors disconnected³⁾
- Alpha characteristics setting
- Speed selection 3/6/12/24 s/mm
- Opening/closing time selection from 18s to 700s
- Auto MAC addressing (BACnet only)
- Auto Baud rate detection
- Flow indication based on measured stroke in l/h

Eu.bac interchangeability approved in combination with PIBCV valve

Supply Voltage: 24V DC/AC 50/60Hz

Spindle position accuracy: $\pm 0.05\text{mm}$

Cables: Halogen free plug-in available in 1.5m, 5m and 10m length

Temperature sensors: plug-in 2x PT1000 surface or immersed 1.5m length

64 actuators can be connected to the same network

IP Class: 54

Stroke: 7mm

BACnet Testing Laboratories (BTL) listed BACnet MS/TP fieldbus device¹⁾

Manual override function

Commissioning tool available for addressing, parametrization and hydronic continuous commission

¹⁾ BACnet certification in progress and will be available in Q2.2017

²⁾ CO6 application

³⁾ Energy application

⁴⁾ Remote I/O application

Trouble shooting

BACnet Fieldbus check:

It is possible to check the fieldbus state by examining error messaging related to the actuator in order to verify communication and detect early potential fieldbus related problems. This is done by the object values AV:15 to AV:19.

Quality of the BACnet network:

An important thing for good operation of the actuator is a well functioning network. Some values that tell you about the quality of the network can be found in the objects AV:15 to AV:19. The most important values are AV:17 Server Error Count and AV:19 Server Timeout Error. These two values should be much lower than AV:15, AV:16 and AV:18. As a general rule, it is important that AV:17 and AV:19 are not constantly increasing their count.

Quality of power supply:

The object / register AV:6 / 33794 may be used to check if the power supply and cabling, used to supply the actuator with power, is according to specification requirements. The present value of AV:6 / 33794 represents the current voltage measured inside the actuator. This is the voltage that the actuator monitors at all times and subsequently reacts on if outside the recommended range. See in the table below how the actuator reacts at different voltage levels.

Voltage (Present value of AV:6 / 33794)	Reaction
Voltage below 16.5V	Start alarm indication with LED. Initiate and alarm BV: 15 / 33536 Bit 19 and that the supply voltage is too low.
Voltage below 16.1V	Motor is stopped. The LEDs indicating alarm and actuator still initiating alarm BV:15 / 33535 Bit 19 if the voltage hasn't dropped too low.
When voltage rises above 17.5V again	Motor can run again. LED alarm indication stops and returns to normal operation. Alarm BV:15 / 33536 Bit 19 returns to normal operation.
When voltage rises above 43.4V	Start alarm indication with LED. Initiate an alarm BV:14 / 33536 Bit 18.
When voltage drops below 38.3V again	LED alarm indication stops and returns to normal operation. Alarm BV:14 / 33536 Bit 18 returns to normal operation.

NB: the voltage level will be constantly changing depending on the operational activity of the entire group of actuators and other devices connected. The supply voltage will go up and down in value if:

- Power supply is not strong and stable
- If long cables are used in a daisy chain setup

A higher number of actuators running at the same time will reduce the supply voltage (for the last devices on a daisy chain cable, in particular).

The actuator's voltages are considered to be OK when all values of AV:6 / 33794 are above 18V, when all actuators are moving the motor/running. To ensure voltage in each device is OK under worst case operational conditions, the following is recommended:

- Run all the actuators on the daisy chain cable at the same time. While all are running, check each value of AV:6 / 32794. These values should still be above 18V and no previously mentioned voltage level alarms should be initiated or indicated. If LEDs indicate an alarm state or a BACnet/Modbus alarm is initiated, or a value less than 18V is observed, then cabling should be reviewed.
- Check the values of AVO:0. This BACnet object holds 3 values: Average measured voltage, Maximum measured voltage and Minimum measured voltage. The most important value here is the Minimum measured voltage. It can tell you the lowest voltage that has been measured during operation of the actuator.