

ENGINEERING
TOMORROW



Service Manual

Steering Valve

OSPE



Revision history

Table of revisions

Date	Changed	Rev
September 2025	Corrected tables	0301
August 2022	Changed document number from 'L1506577' to 'AX152986482698' and updated service parts list	0201
August 2015	Codenummer changed	0001
February 2015	First edition	AA

Contents

Safety Precautions

Safety precautions.....	4
-------------------------	---

Service Literature

Symbols used in Literature.....	5
OSPE versions.....	5

Exploded View and Seal Kit

OSPE exploded view.....	6
OSPE parts list.....	7

Tools

Tools for OSPE.....	10
---------------------	----

Dismantling

Dismantling OSPE.....	12
-----------------------	----

Assembly

Assembling OSPE.....	26
----------------------	----

Test and valve setting of OSPE

Set up for testing.....	42
Set up OSPE with integrated priority valve.....	43
Set up OSPE without integrated priority valve.....	43
Steering test.....	43
Pilot relief valve.....	44
Neutral positioning test, OSP part.....	44
Neutral positioning test, EH part.....	44
Manual steering.....	44
Shock valves.....	44
OSPE LSRM.....	44
OSPE LS (non reaction/non reaction versions).....	45
Check for external leakage.....	45

Tightening Torques

Tightening torques for connections OPSE.....	46
--	----

Safety Precautions

Safety precautions

Always consider safety precautions before beginning a service procedure. Protect yourself and others from injury. Take the following general precautions whenever servicing a hydraulic system.

Warning

Unintended Machine Movement

Unintended movement of the machine or mechanism may cause injury to the technician or bystanders. To prevent unintended movement, secure the machine or disable / disconnect the mechanism while servicing.

Warning

Flammable Cleaning Solvents

Some cleaning solvents are flammable. To eliminate the risk of fire, do not use cleaning solvents in an area where a source of ignition may be present.

Warning

Fluid under Pressure

Escaping hydraulic fluid under pressure can have sufficient force to penetrate your skin causing serious injury and/or infection. This fluid may also be hot enough to cause burns. Use caution when dealing with hydraulic fluid under pressure. Relieve pressure in the system before removing hoses, fittings, gauges, or components. Never use your hand or any other body part to check for leaks in a pressurized line. Seek medical attention immediately if you are cut by hydraulic fluid.

Warning

Personal Safety

Protect yourself from injury. Use proper safety equipment, including safety glasses, at all times.

Warning

Product Safety

Steering valves are safety components and therefore it is extremely important that the greatest care is taken when servicing these products. There is not much wear on a steering valve and therefore they normally outlast the application they are built into. Therefore the only recommended service work on steering valves is:

- Changing seals and o-rings
- Disassemble, clean, and assemble if contaminated
- Hydraulic testing, including valve setting

Service Literature

Symbols used in Literature

-  = Non removable part, use a new part
-  = External hex head
-  = Internal hex head
-  = Lubricate with hydraulic fluid
-  = Inspect for wear or damage
-  = Note correct orientation
-  = Mark orientation for reinstallation
-  = Torque specification
-  = Press in - press fit
-  = Pull out with tool - press fit

The symbols above appear in the illustrations and text of this manual. They are intended to communicate helpful information at the point where it is most useful to the reader. In most instances, the appearance of the symbol itself denotes its meaning. The legend above defines each symbol and explains its purpose.

OSPE versions

This service literature is valid for:

- All OSPEs with single stage gear set
- All OSPED with dual gear set; however, only for V2/OSPED for the gear set end

If the OSPED in question is in "old" or "V2/new" design can be traced by the product code:


- OSPEDs with product code number higher than 11113069 are all in "new" design
- OSPEDs with product code lower than 11113069 are all in "old" design

For further explanations between OSPED in "old" and "new" design, see Product Information Bulletin ST2014-0139.

Service literature HN.21.ZA.52 is valid for gear set end of OSPED in "old" version.

Exploded View and Seal Kit

OSPE exploded view

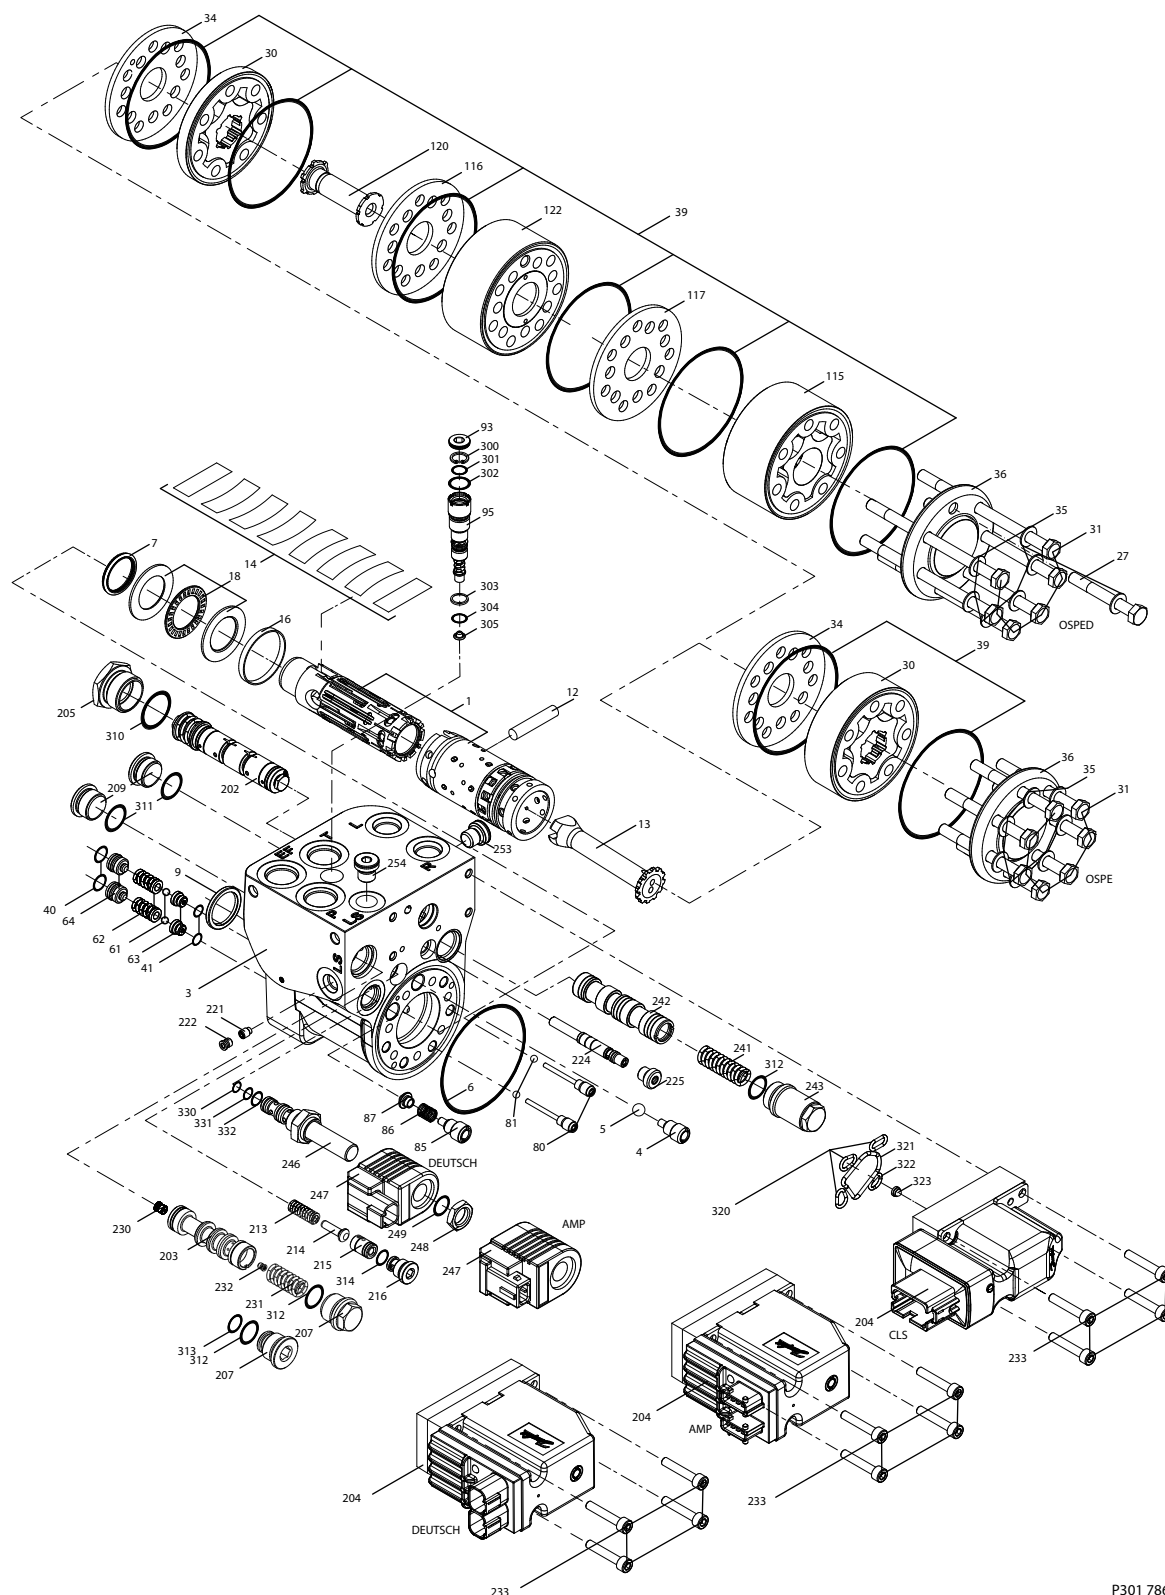

P301 786

Exploded View and Seal Kit

OSPE parts list

OSPE parts list

OSPE	Number per unit	Item	Tightening torque
Spool/Sleeve set	1	1	-
Housing	1	3	-
Screw	1	4	1.5 ±0.3 N·m
Ball for emergency steering Ø8.5 mm	1	5	-
O-ring Ø79.4 x Ø2.0 mm	1	6	-
Shaft seal	1	7	-
Dust seal ring	1	9	-
Cross pin	1	12	-
Cardan shaft	1	13	-
Set of springs	1	14	-
Ring	1	16	-
Bearing assembly	1	18	-
Gear set	1	30	-
Short screw (OSPED)	1	27	30 ±6 N·m
Screws (OSPED)	6	31	30 ±6 N·m
Screws (OSPE)	7	31	30 ±6 N·m
Valve plate	1	34	-
Washers	7	35	-
End cover	1	36	-
O-ring Ø79.4 x Ø2.0 mm (OSPED)	6	39	-
O-ring Ø79.4 x Ø2.0 mm (OSPE)	2	39	-
O-ring Ø9.0 x Ø1.5 mm	2	40	-
O-ring Ø6.0 x Ø1.5 mm	2	41	-
Balls for shock valves Ø4.8 mm	2	61	-
Spring with thrust pad for shock valves	2	62	-
Valves seats	2	63	5.5 ±0.5 N·m
Adjusting screws for shock valves	2	64	-
Pins	2	80	3 ±0.5 N·m
Balls for suction valves Ø4.8 mm	2	81	-
Screw	1	85	1.5 ±0.3 N·m
Spring	1	86	-
Valve cone for P check	1	87	-
Plug	1	93	-
Pilot relief valve cartridge	1	95	20 ±3 N·m
Gear set	1	115	-
Valve plate	1	116	-
Valve plate	1	117	-
Cardan shaft	1	120	-
Valve housing assembly	1	122	-
Spool, EH steering	1	202	-
Spool priority valve	1	203	-
PVE	1	204	-
Plug	1	205	45 ±5 N·m

Exploded View and Seal Kit

OSPE parts list (continued)

OSPE	Number per unit	Item	Tightening torque
Plug	1	207	45 ±5 N·m
Plugs	2	209	45 ±5 N·m
Spring	1	213	-
Cone pilot supply	1	214	-
Spool pilot supply	1	215	-
Plug	1	216	30 ±3 N·m
Check valve, LS	1	221	3.5 ±0.5 N·m
Orifice, LS	1	222	3.5 ±0.5 N·m
Spool PVFC	1	224	-
Plug	1	225	15 ±2 N·m
Orifice PP	1	230	3.5 ±0.5 N·m
Spring	1	231	-
Orifice, dynamic	1	232	1 ±0.1 N·m
Screws	4	233	8 ±1 N·m
Spring	1	241	-
Spool reaction/EH L&R cut off	1	242	-
Plug	1	243	45 ±5 N·m
Cartridge spool, pilot dump	1	246	15 ±2 N·m
Coil	1	247	-
Nut	1	248	5 ±1 N·m
O-ring Ø10.0 x Ø1.5 mm	1	249	-
Plug	1	253	20 ±3 N·m
Plug	1	254	20 ±3 N·m
Lock ring	1	300	-
O-ring Ø7.5 x Ø1.5 mm	1	301	-
O-ring Ø11.0 x Ø2.0 mm	1	302	-
Backup ring	1	303	-
O-ring Ø8.0 x Ø1.5 mm	1	304	-
Filter	1	305	-
O-ring Ø23.3 x Ø2.4 mm	1	310	-
O-ring Ø17.8 x Ø2.1 mm	2	311	-
O-ring Ø17.4 x Ø2.1 mm	2	312	-
O-ring Ø15.0 x Ø1.5 mm	1	313	-
O-ring Ø11.0 x Ø2.0 mm	1	314	-
O-ring Ø10.0 x Ø2.0 mm	3	320	-
O-ring Ø30.0 x Ø2.5 mm	1	321	-
O-ring Ø8.0 x Ø2.0 mm	1	322	-
Filter	1	323	-
O-ring ø7.65 x ø1.78 mm	1	330	-
O-ring ø9.25 x ø1.78 mm	1	331	-
O-ring ø13.5 x ø2.08 mm	1	332	-

Exploded View and Seal Kit

OSPE spare parts

Spare parts list	Code number	Item
Coil, DEUTSCH: D08 12V DE	322113	247
Coil, AMP: D08 12V AJE	321930	247
Coil, DEUTSCH: D08 24V DE	322115	247
Spare part bag containing: Cartridge spool for pilot dump, Nut and O-ring	11085713	246, 248, 249
Seal kit OSPE steering unit part	150N4041	6, 7, 9, 35, 39, 40, 41
Seal kit OSPE EH part	11160415	93, 225, 310, 311, 312, 313, 314
Seal kit pilot relief valve cartridge	155L6870	300, 301, 302, 303, 304, 305
Seal kit PVE ¹	157B4997	320, 321, 322, 323
Seal kit cartridge spool for pilot dump	120433	330, 331, 332

¹ PVE seal kits may contain extra parts not applicable to some PVEs

OSPE seal kit

Spare parts list	Code number	Containing seal kits, codes
Seal kit KIT OSPE complete ¹	11160838	150N4041, 11160415, 155L6870, 157B4997, 120433

EH main spools

Spare parts list	Code number	Item
12 l/min	11275591	202
20 l/min	11278328	202
30 l/min	11275043	202
40 l/min	11238915	202
50 l/min	11277978	202

PVE Actuators

Spare parts list	Code number	Item
PVED-CLS with firmware version 2.02 ²	11230855	204
PVES	11254577	204
PVED-CC with firmware 4.13	11337276	204


² PVED-CLS firmware version can be manually changed once received

Tools


Tools for OSPE

Tools

Holding tool for the entire steering valve.
Material: Appropriate metal or hard plastic
This tool is not available from Danfoss.

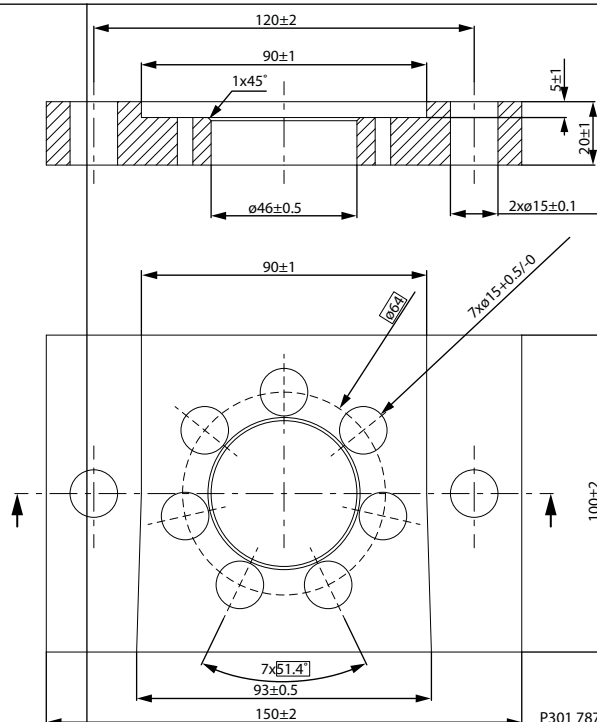


Assembly tool for dust seal.
Material: Free cutting steel.
This tool is not available from Danfoss.

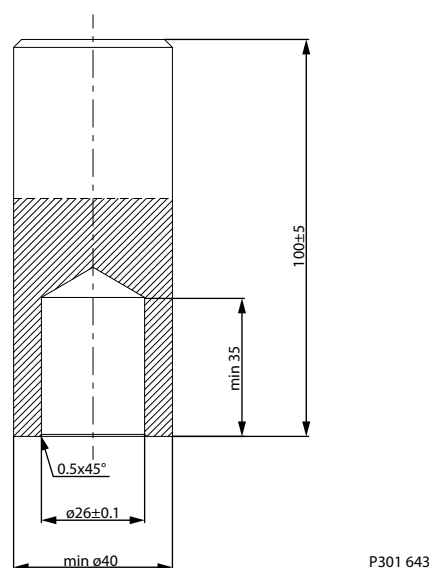

Tools


Tools (continued)

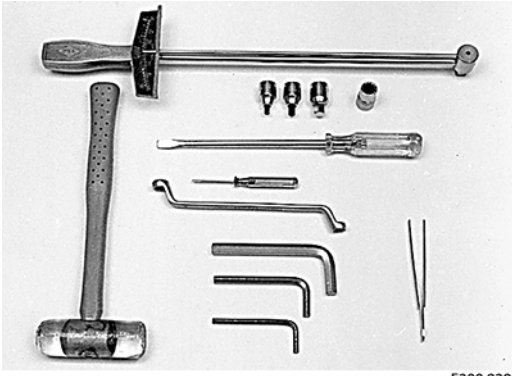Assembly tool for shaft seal, O-ring/Roto Glyd type: Code number: 11092408. <u>This tool has been modified by January 2015. The upper end of outer tube has knurled surface on 25 mm from top only (was 35 mm). Tool with 35 mm knurled surface can be modified by grinding off 10 mm of the knurled surface.</u>	 F301 732
Tool for removing/assembling pilot relief valve cartridge: Code number: 155L6494	
Torque wrench 0 - 70 Nm. 13 - 17 - 19 and 32 mm socket spanner. 2 - 2.75 - 3 - 4 - 5 - 6 and 8 mm Hex key. 12 mm screwdriver. 2 mm screwdriver. 13 - 17 - 19 - 7/8 inch mm ring spanner. Inside circlip pliers Plastic hammer. Tweezers. These tools are not available from Danfoss.	 F300 939

Dismantling

Dismantling OSPE


Dismantling OSPE

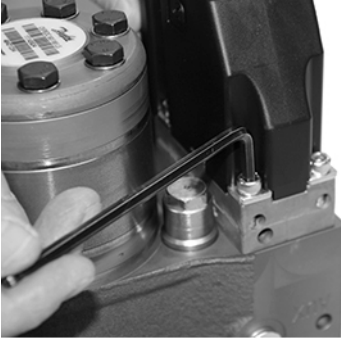Place the unit in the holding tool on steering column end.	 F302 079
Screw out the 4 screws for the PVE (233) using a 5 mm  Hex key. Remove the PVE (204). O-rings (320, 321, 322) and filter (323) are fitted to the mounting surface of PVE.	 F302 080
Screw out the plug (243) using a 17 mm  socket or ring spanner. O-ring (312) is fitted on plug (243).	 F302 081
Remove the spring (241).	 F302 082

Dismantling

Dismantling OSPE (continued)

Remove the EH L&R cut off spool (242).

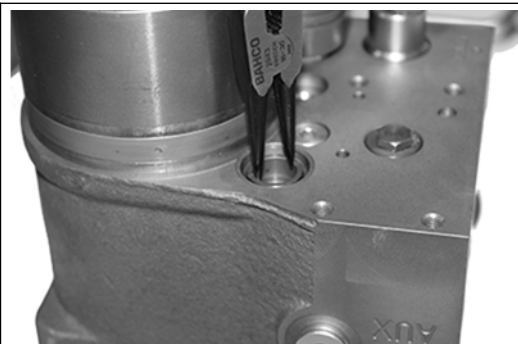

F302 083

Screw out the plug (207).

If the OSPE is with priority valve integrated:

Use a 17 mm  socket or ring spanner. O-ring (312) is fitted on plug (207).

If the OSPE is without priority valve integrated:

Use a 8 mm  Hex key. This plug is fitted with O-ring (312) and (313).



F302 084

Remove the spring (231).



F302 085

Remove the priority valve spool (203).

Orifices (230) and (232) are screwed into spool (203).



F302 086

Dismantling


Dismantling OSPE (continued)

Screw off the nut (248) using a 19 mm  socket or ring spanner.



F302 087

Remove the O-ring (249).

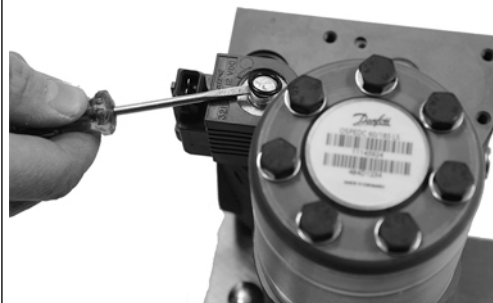

F302 088

Lift off the coil (247).



F302 089


Screw out the cartridge spool (246) using a 7/8 inch  ring spanner. O-rings (330, 331, 332) are fitted on cartridge spool (246).



F302 090





Dismantling

Dismantling OSPE (continued)

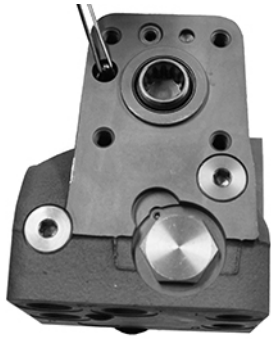Replace the unit in the holding tool on the gear set end. Use appropriate support made of plastic, brass or aluminum under the mounting surface for the PVE to support the steering valve.	 F302 091
Screw out the adjusting screws for shock valves (64) using a 5 mm  Hex key. O-ring (40) is fitted on screw (64)	 F302 092
Remove the springs with trust pads for shock valves (62).	 F302 093
Remove the balls for shock valves (61).	 F302 094

Dismantling


Dismantling OSPE (continued)

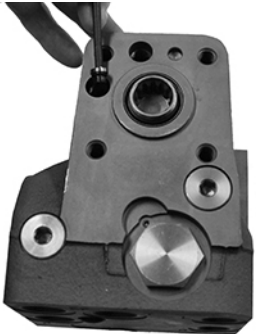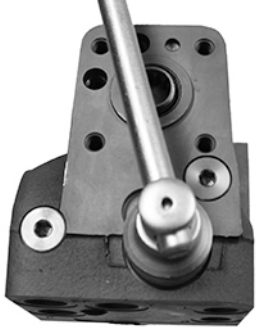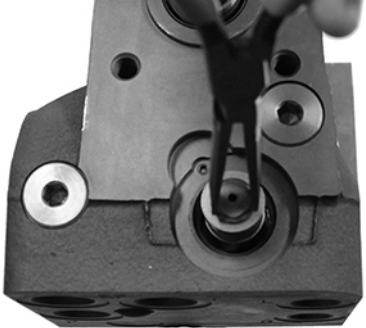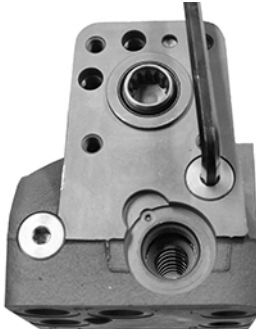Screw out the seats for shock valves (63) using a 2.75 mm  Hex key. O-ring (41) is fitted on seat (63).	 F302 095
Screw out the plug (205) using a 32 mm  socket spanner. O-ring (310) is fitted on plug (205).	 F302 096
Remove the EH-spool (202).	 F302 097
Screw out the plugs (209) using an 8 mm  Hex key. O-ring (311) is fitted on plug (209) <u>The left side positioned plug is only present on OSPE's with priority valve integrated.</u>	 F302 098
Replace the unit in the holding tool on steering column end.	

Dismantling


Dismantling OSPE (continued)

Remove the plug (93) for the pilot relief valve (95)

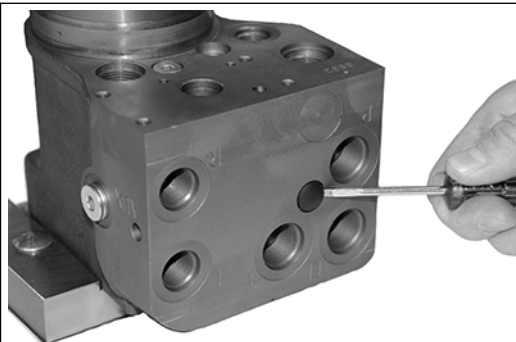


F302 099

Screw out the pilot relief valve cartridge (95) using special key Danfoss code 155L6494.

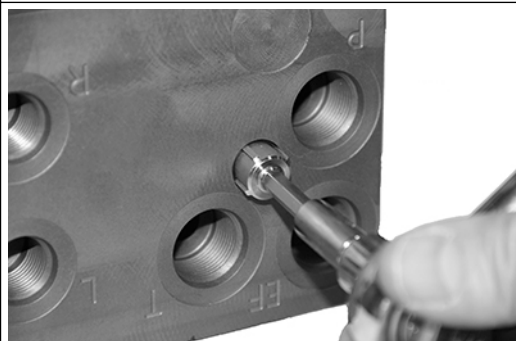


F302 100

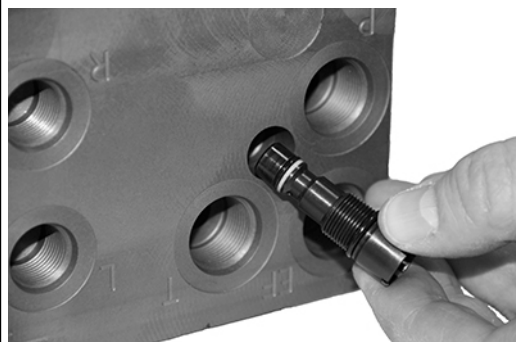

F302 101

Screw out the orifice (222) using a 3 mm  Hex key.

This orifice is not present in all OSPE's.

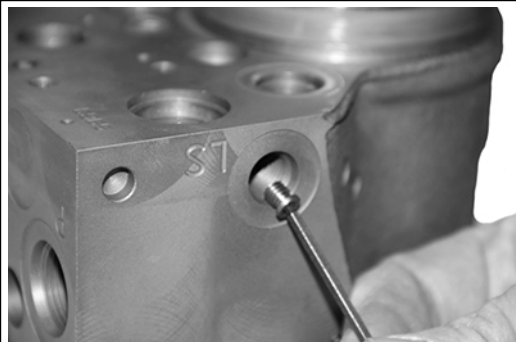


F302 102

Dismantling

Dismantling OSPE (continued)

Screw out the LS check valve (221) using a 3 mm  Hex key.


This check valve is not present in all OSPE's.

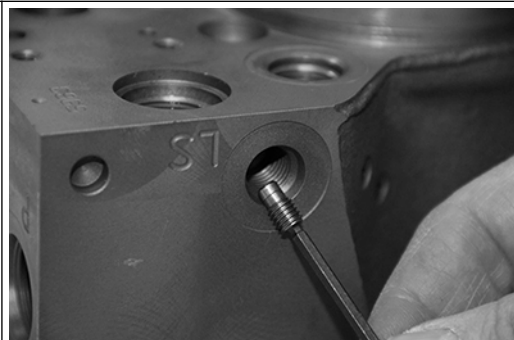

F301 103

Screw out the plugs (253) and (254) using a 6 mm  Hex key.

These plugs not present in all OSPE's.

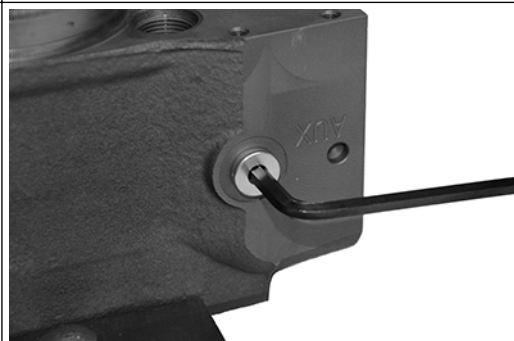

F302 104

OSPED:
Remove the screws (1x27 and 6x31) with washers (35)

using a 13 mm  socket or ring spanner.

OSPE:
Has 7 identical screws (7x 31).



F302 105

Remove the end cover (36), sideways.



F302 106

Dismantling


Dismantling OSPE (continued)

OSPED: Lift the gearwheel set (115) off the unit. Remove the two O-rings (39).



F302 107


OSPED: Remove the distributor plate (117).

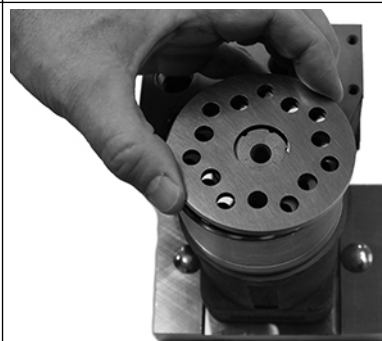

F302 108


OSPED: Remove valve housing assembly (122). Remove the two O-rings (39).

Do not dismantle the entire valve (122).

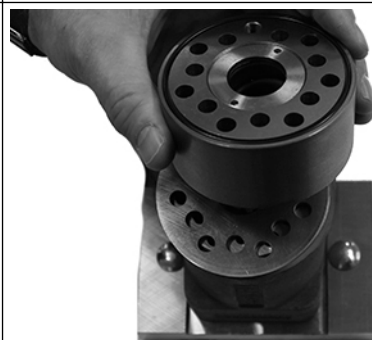

F302 109


OSPED: Remove the distributor plate (116).

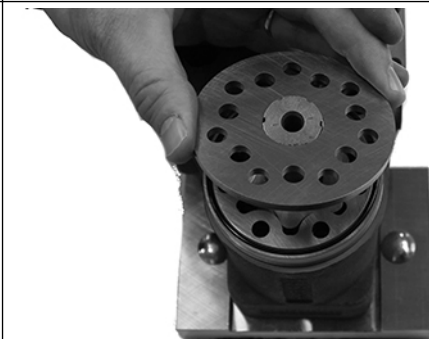

F302 110

Dismantling


Dismantling OSPE (continued)

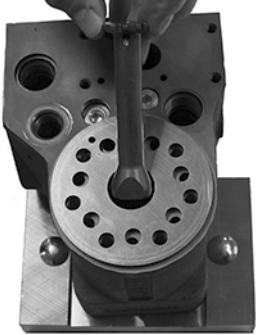OSPED: Remove the cardan shaft (120).	 F302 111
Lift the gearwheel set (30) off the unit. Remove the two O-rings (39).	 F302 112
Remove the cardan shaft (13).	 F302 113
Remove the distributor plate (34) from the housing.	 F302 114

Dismantling

Dismantling OSPE (continued)

Remove the O-ring (6) from housing.

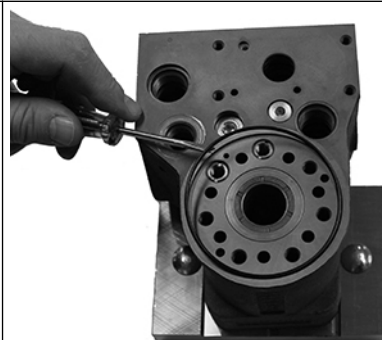


F302 115

Screw out threaded bushing/ball stop (4) from housing using a 12 mm screw driver and remove bushing from housing.



F302 116

Screw out the screw (85) using a 12 mm screw driver. Spring (86) and valve cone (87) will be attached to the screw (85).

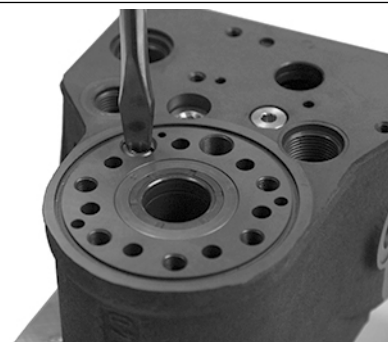

F302 117




F302 118

Dismantling


Dismantling OSPE (continued)

Screw out the pin bolts (80) using a 4 mm  Hex key.

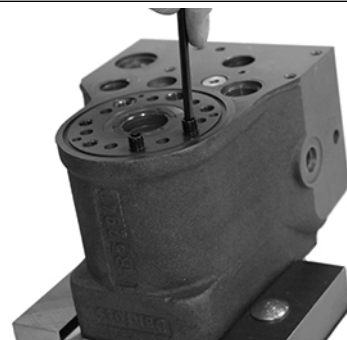

F302 119

Screw out the plug (216) using a 6 mm  Hex key. O-ring 314 is fitted on plug (216).

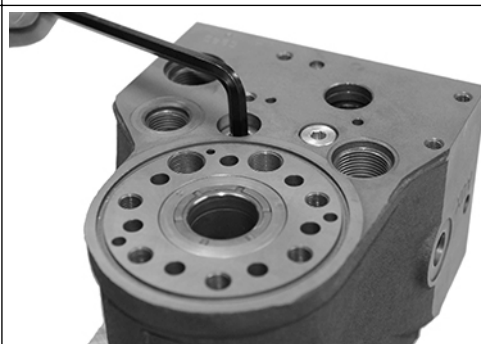


F302 120

Remove plug (216) and spool (215).





F302 121

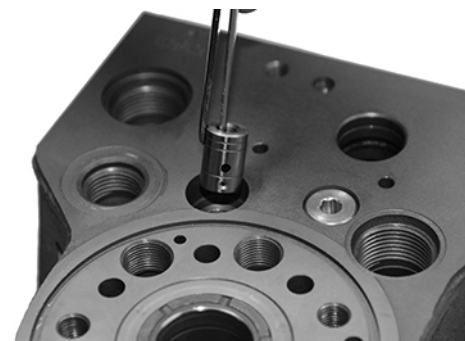

F302 122

Dismantling

Dismantling OSPE (continued)

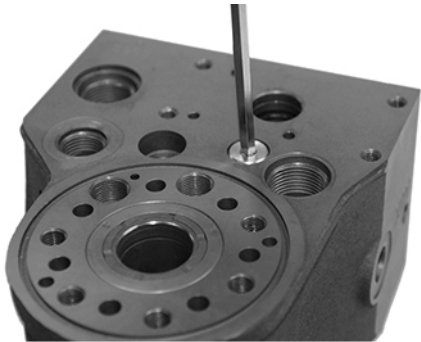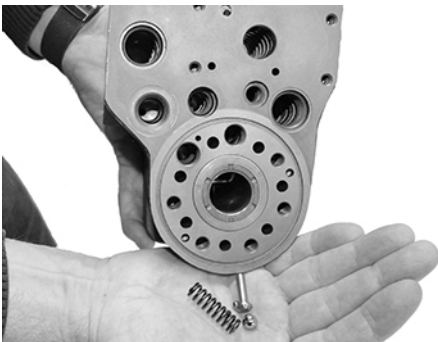Screw out the plug (225) using a 5 mm  Hex key.	 F302 123
Remove spool (224) using a 4 mm screw.	 F302 124
Shake out the check valve ball (5), suction valve balls (81), cone (214) and spring (213).	 F302 125
Place the housing with the ports facing down on the work bench. Ensure that the cross pin (12) in the spool and sleeve set (1) is in the horizontal position. The pin (12) can be observed through the open end of the spool.	 F302 126

Dismantling

Dismantling OSPE (continued)

Press the spool (1) inwards (from the steering column end) and the sleeve (1), ring (16), neutral position springs (14) and bearing assembly (18) will be pushed out of the housing together.



F302 127

Take the bearing races with needle bearing (18) and the ring (16) off the spool and sleeve set (1). The outer bearing (18) race can sometimes "stick" in the housing, therefore check that it has come out.




F302 128

Press out the cross pin (12).



F302 129


Carefully press the spool out of the sleeve.

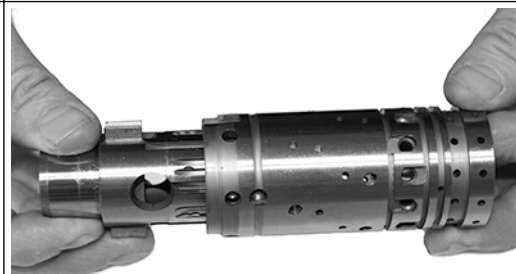

F302 130

Dismantling

Dismantling OSPE (continued)

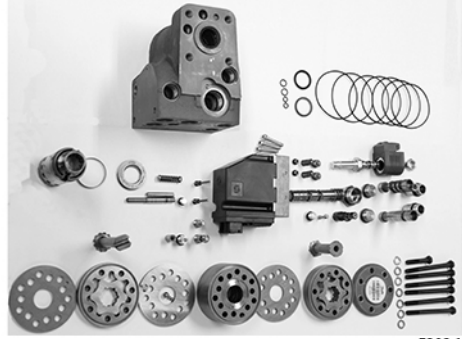Press the neutral position springs (14) out of the slot of the spool.	 F301 808
Remove dust seal (9) and shaft seal (Roto Glyd) (7) carefully with a screw driver or similar tool.	 F302 131
The steering unit OSPED is now completely dismantled	 F302 132
Cleaning Clean all parts carefully in Shellsol K or similar cleaner fluid.	
Inspection and replacement  Replace all seals and washers. Check all parts carefully and make any replacements as is necessary.	

Assembly

Assembling OSPE


Assembling OSPE

Place the two flat neutral position springs (from item 14) in the slot of the spool (from item 1). Place the curved springs between the flat ones and press them into place.




F301 810

Configuration of spring set (14). There can be different numbers of curved springs depending on configuration of spring set. There can be 2, 4 or 6 curved springs.




150-386.10

OSPEF: Spool and sleeve must be positioned correctly relatively to each other. Small marks are present on both spool and sleeve close to one of the slots for the spring set.

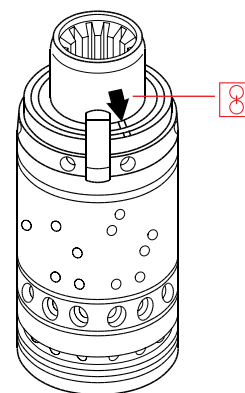

150-412.10

Guide the spool into the sleeve (1). If the spool and sleeve has marks as shown above, these must be placed on same side. Make sure the neutral position springs (14) are placed into the slot.

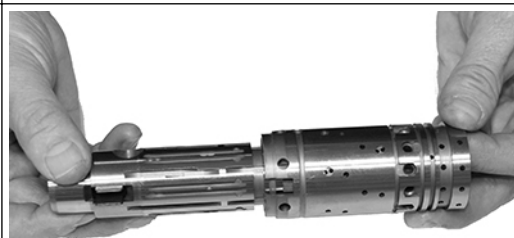

F302 133

Assembly

Assembling OSPE (continued)

Line up the spring set (14).	 F301 812
Guide the ring (16) down over the sleeve. <u>The ring should be able to move free of the springs</u>	 F302 134
Fit the cross pin (12) into the spool/sleeve set (1).	 F302 135
Fit bearing races and needle bearing (18) as shown on the drawing below.	 F301 815

Assembly


Assembling OSPE (continued)

! Caution


Assembly pattern for standard bearing

- 1. Outer bearing race**
- 2. Needlebearing**
- 3. Inner bearing race**
- 4. Spool**
- 5. Sleeve**


* The inside chamfer on the inner bearing race must face the chest of the inner spool.

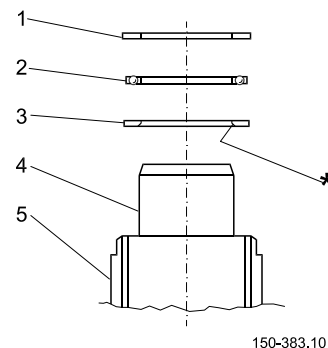


Place the steering valve housing with the port face down on the work bench. Guide the outer part of the assembly tool into the bore for the spool/sleeve set (1).

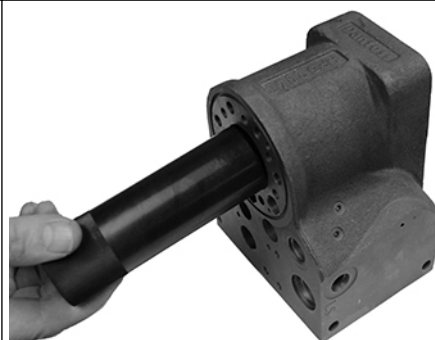

Grease the shaft seal (Roto Glyd, 7) with hydraulic oil and place them on the tool. Ensure that the Roto Glyd seal is placed on the insertion tool as per the photograph.



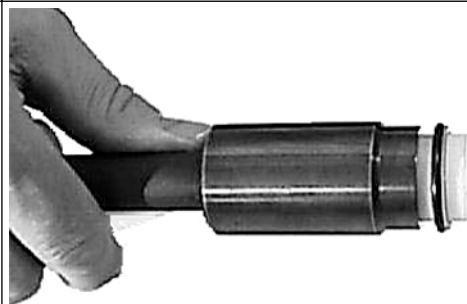


Hold the outer part of the assembly tool in the bottom of the steering unit housing and guide the inner part of the tool right to the bottom.

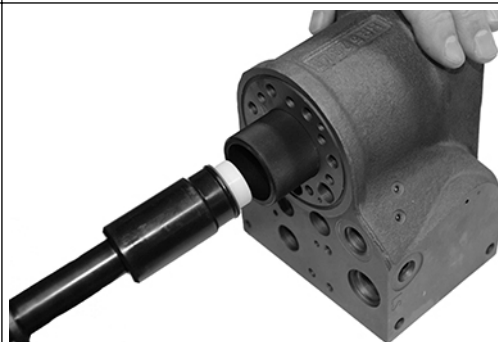

Assembly


Assembling OSPE (continued)

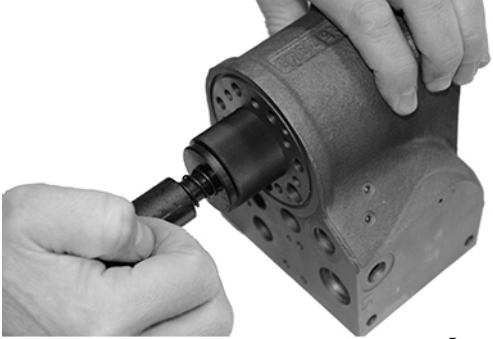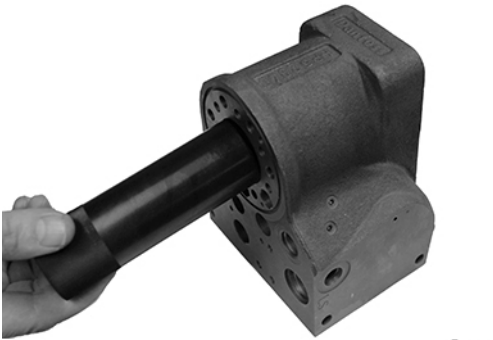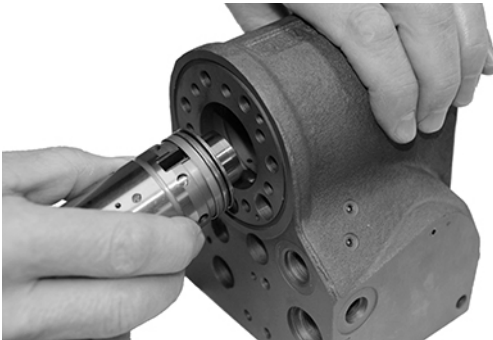Press and turn the shaft seal (7) into position in the housing.	 F302 138
Draw the inner and outer parts of the assembly tool out of the steering unit bore, leaving the guide from the inner part in the bore.	 F302 136
With a light turning movement, guide the spool and sleeve into the bore. <u>Fit the spool set holding the cross pin (12) horizontal.</u>	 F302 139
The spool set will push out the assembly tool guide. The shaft seal (7) is now installed.	 F302 140
Place the steering valve housing (3) on the holding tool on the steering column end.	

Assembly

Assembling OSPE (continued)

Put the check valve ball (5) into the hole indicated by the circle.

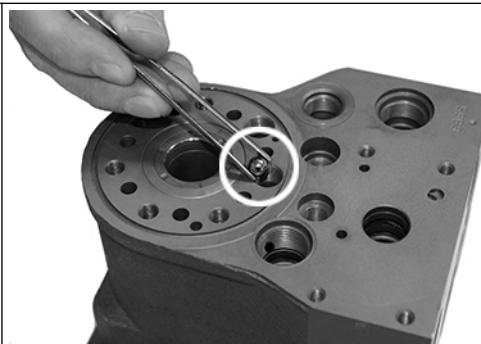

F302 141


Screw in the screw (4) using a 12 mm screw driver. 
 1.5 ± 0.3 Nm.



F302 142

Assemble spring (86) and cone (87) on screw (85).
Place the assembly in the hole indicated by the circle.

Screw in the screw (85) using a 12 mm screw driver. 
 1.5 ± 0.3 Nm.

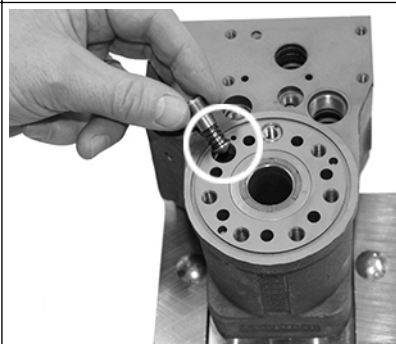

F302 143



Put the suction valve balls (81) into the holes indicated by the circles.



F302 144

Assembly

Assembling OSPE (continued)

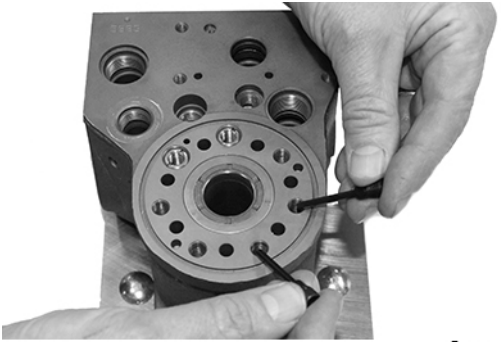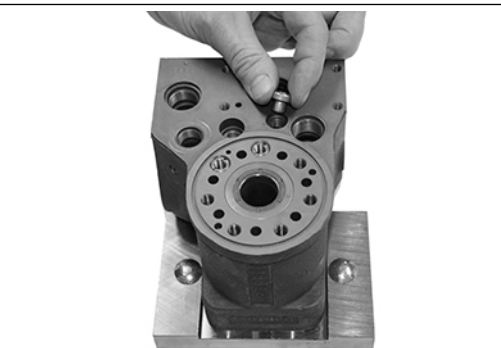Screw in the pin bolts (80) using a 4 mm  Hex key.  $3 \pm 0.5 \text{ Nm}$.	 F302 145
Place the spool (224) in the hole indicated by the circle.	 F302 146
Screw in the plug (225) using a 5 mm  Hex key.  $10 \pm 2 \text{ Nm}$	 F302 147

Assembly

Assembling OSPE (continued)

Place the spring (213), cone (214) and spool (215) in the hole indicated by the circle.



F302 148




F302 149



F302 150



Place the O-ring (314) on plug (216). Screw in the plug (216) using a 6 mm  Hex key.  30 ± 3 Nm.

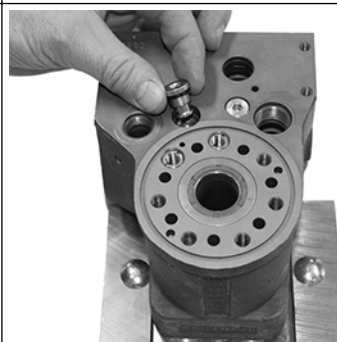

F302 151

Assembly


Assembling OSPE (continued)

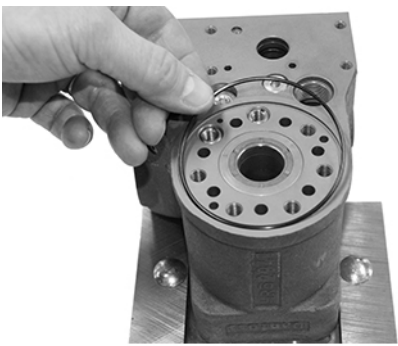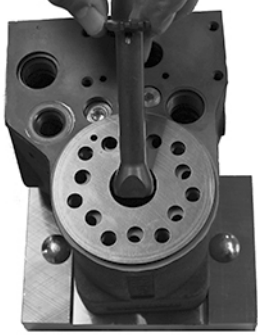Insert the O-ring (6) in the groove on the housing.	 F302 152
Place the distributor plate (34). OSPED: the small $\varnothing 4$ mm hole of the plate (34) must be placed above the $\varnothing 3$ mm hole in the housing. The radial channel groove of the plate (34) must be facing the housing side.	 F302 153
Guide the cardan shaft (13) down into the bore so that the slot is parallel with the connection flange for P, T, L and R ports and lines up with the cross pin (12).	 F302 113
Place the 2 O-rings (39) in the two grooves in the gear rim. Fit the gearwheel with rim (30) on the cardan shaft (13). <u>Place the gear wheel side with all the deeper splines facing downwards. Only this side will fit on the cardan shaft due to all gear sets used in OSPE have timing securing: splines of gear wheel and cardan shaft can only be assembled with correct timing.</u>	 F302 112

Assembly


Assembling OSPE (continued)

OSPED: Place and rotate the cardan shaft (120) with the big diameter end until it moves in gear with gear wheel of gear set (30).

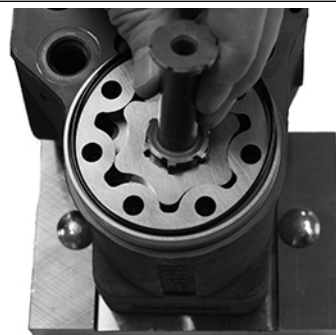


F302 111

OSPED: Place the middle distributor plate (116) so that the channel holes match the holes in the gear set.

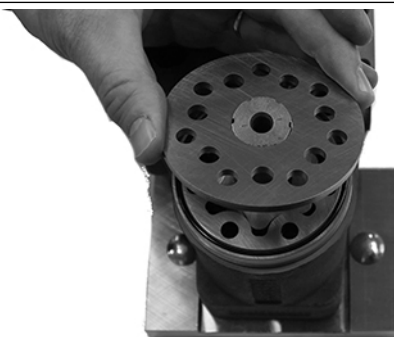


F302 110

OSPED: Place the 2 O-rings (39) in the two grooves in the valve housing assembly (122). Place the valve housing assembly so that the one and only M8 thread whole points upwards and direction port face for P, T, L and R connections.

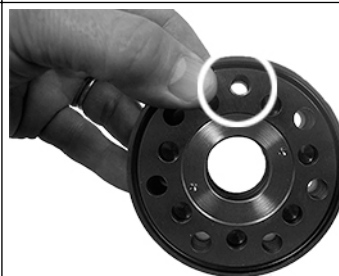

F302 173

Make sure that channel holes of the valve housing assembly (122) match the holes in the distributor plate (116).

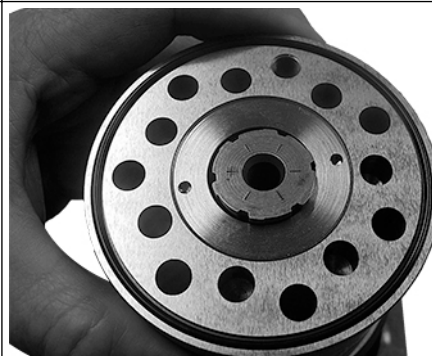

F301 827




Assembly

Assembling OSPE (continued)

OSPED: Place the rear distributor plate (117) so that the channel holes match the holes in valve housing assembly (122).	 F301 828
OSPED: Place the 2 O-rings (39) in the two grooves in the gear rim. Fit the gearwheel with rim (115) on the cardan shaft (120). Place the gear wheel side with all the deeper splines facing downwards. Only this side will fit on the cardan shaft due to all gear sets used in OSPE have timing securing: splines of gear wheel and cardan shaft can only be assembled with correct timing.	 F302 107
Place the end cover (36) in position. Ensure that the bar codes and writing are parallel with the port face for P, T, L and R connections.	 F302 154
OSPED: Fit the short screw (27) with washer (35) and place it in the hole indicated by circle. OSPED: Fit the six screws (31) with new washers (35) and insert them. Cross-tighten all the screws (27 and 31) using a 13 mm  socket spanner.  30 ±6 Nm. OSPE: Has 7 identical screws (7x 31).	 F302 155
Replace the unit in the holding tool on gear set end. Use appropriate support under the mounting surface for the PVE to support the steering valve.	

Assembly


Assembling OSPE (continued)

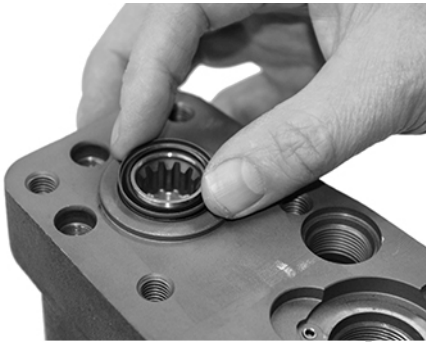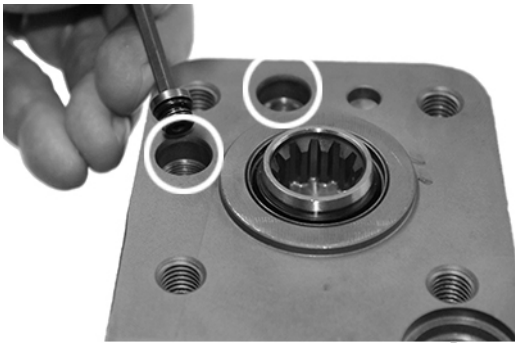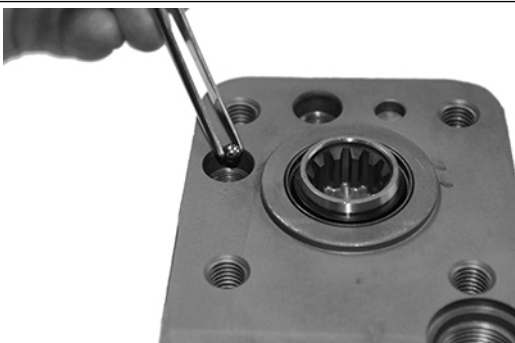The OSPE can now be function tested manually: it must be possible to rotate input shaft with torque < 3.5 Nm [31 lbf·in].	
Place the dust seal ring (9) in the housing.	 F302 156
Fit the dust seal ring (9) in the housing using special tool for dust seal assembly (see page 7) and a plastic hammer.	 F302 157
Place O-ring (41) on the shock valve seats (63). Screw in the seats (63) using a 2.75 mm  Hex key into the cavities indicated by the circles.  6 ± 1 Nm. [53.1 $\pm$ 8.85 lbf·in].	 F302 158
Place one ball (61) in each of the shock valve cavities.	 F302 159

Assembly


Assembling OSPE (continued)

Place springs with trust pads (62) over the two balls.

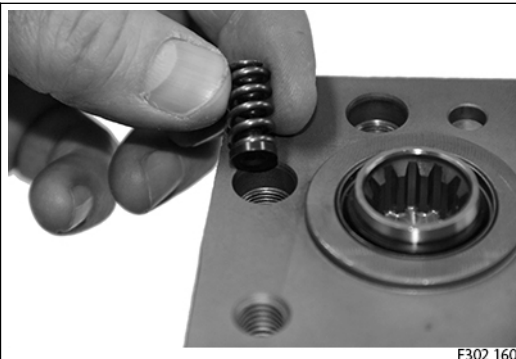


F302 160

Place O-rings (40) on adjusting screws (64). Screw in the two adjusting screws (64) using a 5 mm  Hex key. After entire assembly of the steering valve, make the pressure setting on a test panel according to valve setting specification, see [Shock valves](#) on page 44.

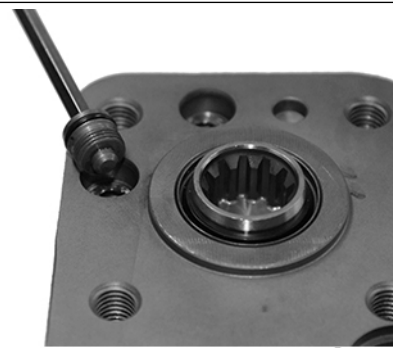


F302 161

Insert the EH-spool (202).

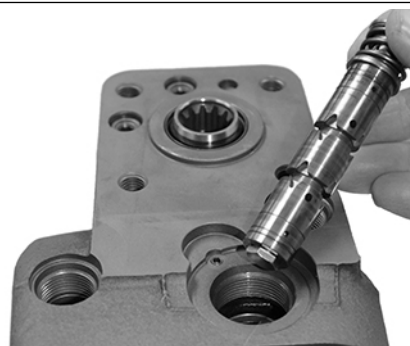

F302 162

Place O-ring (310) on plug (205). Screw in the plug (205) using a 32 mm  socket spanner.  45 ±5 Nm

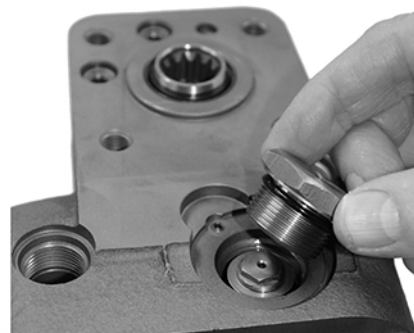

F302 163


Assembly

Assembling OSPE (continued)

Place O-rings (311) on plugs (209). Screw in the plugs

(209) using a 8 mm  Hex key.  45 ±5 Nm

The left side positioned plug is only present on OSPE's with priority valve integrated.

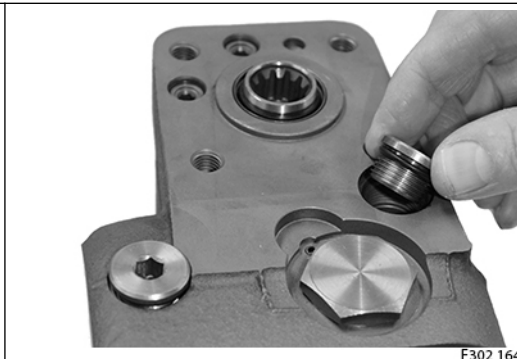

F302 164

Replace the unit in the holding tool on steering column end.

Place back up ring (303), O-rings (301, 302, 304), filter (305) and locking ring (300) in/on cartridge (95). Screw in cartridge (95) using special key Danfoss code 155L6494.

 20 ±3 Nm.


After entire assembly of the steering valve, make the pressure setting on a test panel according to valve setting specification, see [Shock valves](#) on page 44. Insert plastic protection plug (93).



F302 101

Screw in the LS check valve (221) using a 3 mm  Hex key.  3 ±0.5 Nm.

This check valve is not present in all OSPE's.

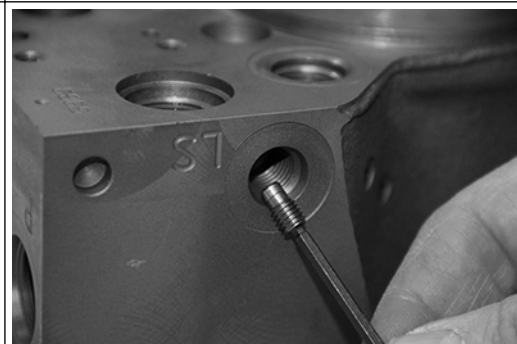


F301 103

Screw in the orifice (222) using a 3 mm  Hex key.

 3 ±0.5 Nm.




This orifice is not present in all OSPE's.

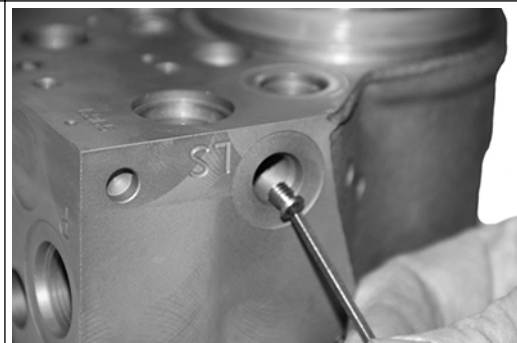

F302 102

Assembly

Assembling OSPE (continued)

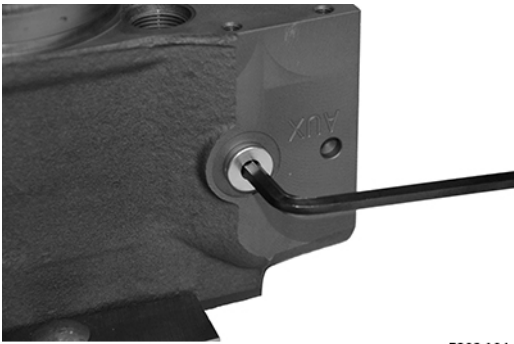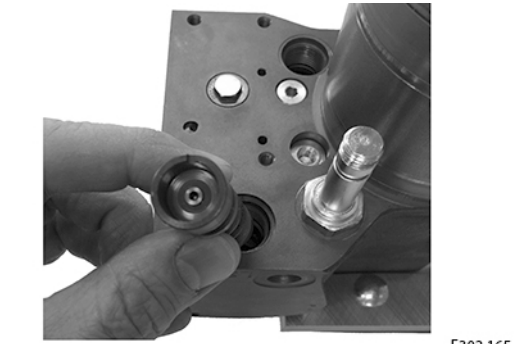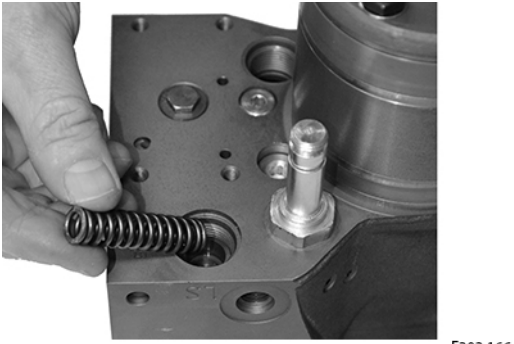Screw in the plugs (253) and (254) using a 6 mm  Hex key.  20 ±3 Nm. <u>These plugs not present in all OSPE's.</u>	 F302 104
Place O-rings (330, 331, 332) on cartridge spool (246). Screw in the cartridge spool (246) using a 7/8 inch  ring spanner.  15 ±2 Nm.	 F302 090
OSPE with priority valve: Assemble spool (203) with the PP orifice (230) using a 3 mm  Hex key.  3.5 ±0.5 Nm. And with dynamic orifice (232) using a 2 mm  Hex key.  1 ±0.1 Nm. Insert the priority valve spool (203) with the spring bore pointing outwards.	 F302 165
OSPE with priority valve: Insert the spring (231). Dimension of this spring depends on specification of priority valve.	 F302 166

Assembly

Assembling OSPE (continued)

OSPE with priority valve:


Place the O-ring (312) on plug (207 with 17 mm key profile).

Screw in the plug (207) using a 17 mm  socket spanner  45 ±5 Nm.

OSPE without priority valve:


Place the O-rings (312, 313) on plug (207 with 8 mm  Hex key profile).

Screw in the plug (207) using a 8 mm  Hex key.  45 ±5 Nm.

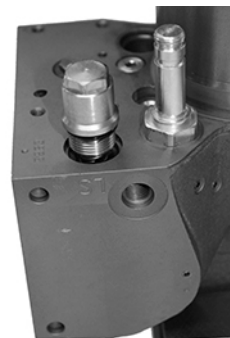

F302 167

Insert the EH L&R cut off spool (242) with the spring bore pointing outwards.

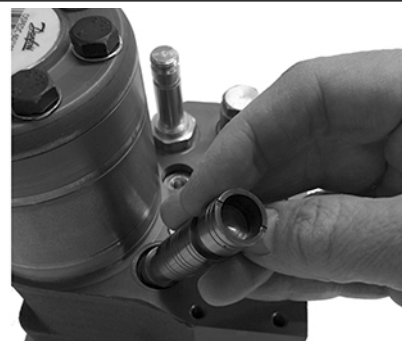

F302 174

Insert the spring (241). Dimension of this spring: Wire diameter: 2.2 mm Length: 50.2 ±0.8 mm



F302 168



Place the O-ring (312) on plug (243). Screw in the plug (243) using a 17 mm  socket spanner  45 ±5 Nm.



F302 169

Assembly

Assembling OSPE (continued)

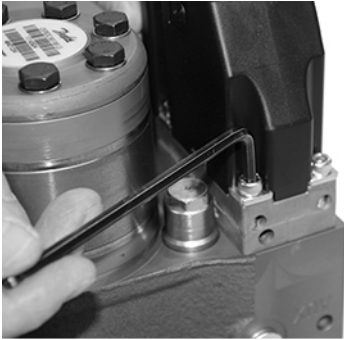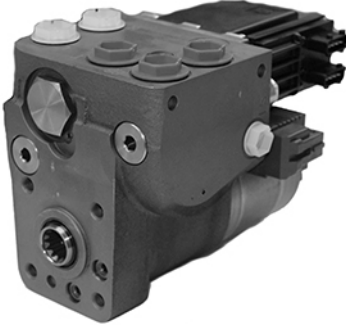Check proper movement of EH spool (202): press on spool end, the spool must be able to be moved downwards 4 mm with force < 100N, and it must be able to return to starting position by help of the neutral spring package integrated in the spool end facing plug (205).	 F302 170
Place O-rings (320, 321, 322) and filter (323) on PVE (204). Place the PVE (204) on OSPE housing as illustrated and screw in the 4 screws for the PVE (233) using a 5 mm  Hex key.  8 ± 1 Nm.	 F302 080
Place coil 247 on cartridge for pilot dump (246). Place O-ring (249) and nut (248) on cartridge for pilot dump (246). Screw in the nut (248) using a 19 mm  socket spanner  5 ± 1 Nm.	 F302 171
Make test and valve setting according to description, see Steering test on page 43.	
Screw in the plastic plugs into the connection ports to keep the ports clean during storage and transportation.	 F302 172

This section describes minimum tests needed, when the OSPE steering valve has been disassembled and reassembled.

[illegible]

A universal hydraulic work bench is required for this setup. The work bench must support the following pump capacity.

Test and valve setting of OSPE

- 25 l/min and up to 210 bar pressure for relief valve setting and steering test
- 3 l/min and up to 280 bar pressure for shock valve setting

The hydraulic oil must have a viscosity of 21 cSt. at 50°C with a maximum degree of contamination according to ISO 4406: 21/19/16.

Set up OSPE with integrated priority valve

1. Connect double rod cylinder to L and R ports of OSPE.
2. Connect pressure gauges to all ports of OSPE.
3. Connect steering column and steering wheel to the input shaft of the OSPE.
4. If OSPE with PVES, PVED CC, or PVED CL, connect battery power cables with on/off switch to the coil of control valve for mode select (247).

Voltage must meet the specification for the code.

For OSPE with PVED CLS, the coil (247) is controlled by the PVED CLS.

5. Connect voltage supply and signal input for the PVE.
6. Connect P port to pump supply.
7. Block LS port with steel plug.
8. Connect T and EF ports separately to tank of pump station.

T pressure should not exceed ~5 bar. The maximum allowed T pressure is 25 bar.

The pump supply circuit should not exceed 210 bar P-T.

9. Screw the adjusting screws of shock valves to block.

Screw clockwise as much as possible to a torque < 5 Nm to ensure the shock valves do not open during steering test or setting of pilot relief valve.

Set up OSPE without integrated priority valve

1. Connect double rod cylinder to L and R ports of OSPE.
2. Connect pressure gauges to all ports of OSPE.
3. Connect steering column and steering wheel to the input shaft of the OSPE.
4. If OSPE with PVES, PVED CC, or PVED CL, connect battery power cables with on/off switch to the coil of control valve for mode select (247).

Voltage must meet the specification for the code.

For OSPE with PVED CLS, the coil (247) is controlled by the PVED CLS.

5. Connect voltage supply and signal input for the PVE.
6. Connect an external priority valve between P of pump station and P of OSPE.

Use Danfoss priority valve OLS 80 code 152B8269, or other OLS 80 with same orifice and spring specification.

Dynamic orifice: Ø1.0 mm

LS orifice: Ø1.2 mm

Spring: 7 bar

7. Connect LS port of OSPE with LS port of OLS.
8. Connect T port of OSPE to tank.
9. Screw the adjusting screws of shock valves to block.

Screw clockwise as much as possible to a torque < 5 Nm to ensure the shock valves do not open during steering test or setting of pilot relief valve.

Steering test

During the testing no motor effect, disturbing vibrations, noise, sticking or other irregularities must occur.

Test and valve setting of OSPE

1. Start the pump, the pump flow is adjusted to approx. 25 l/min and pump pressure control must be set to app. 70 bar.
2. Let the supplied oil flow through the steering unit for a few minutes. At the same time the steering wheel is to be rotated a few times in both directions to bleed of air from the unit and the system.
3. Operate the steering wheel by approx. 10 rpm in a smooth manner from end stroke to end stroke of the steering cylinder for at least 5 cycles. Make sure pressure P-T, 70 bar can be achieved, when steering against end stroke. If this is not possible, the adjusting screw of the pilot relief valve (item 95 of exploded view) must be turned clockwise until P-T, 70 bar is achievable.

Pilot relief valve

The pump flow is adjusted to approx. 25 l/min and pressure to max 210 bar.

The steering wheel is actuated until the steering cylinder reaches one of its end strokes and the steering wheel is actuated in this cylinder position with steering torque 25 ± 5 Nm.

The pilot relief valve (item 95 of exploded view) is set according to specification: Maximum steering pressure (P-T), bar, for the code in question.

The setting pressure is the pressure on the P-port minus the T-port of OSPE.

Neutral positioning test, OSP part

After adjusting the pilot relief valve, the steering wheel must be able to go to neutral position by itself no later than ~1 second after the activation of the steering wheel has been stopped.

The steering unit is in neutral position when the pressure drop (P-T) is no higher than 18 bar.

Neutral positioning test, EH part

For OSPE with PVES, PVED CC, PVED CL: Apply battery power to the coil (item 247 on exploded view). Apply battery power and input signal to the PVE: observe that the steering cylinder is moving according to direction of input signal for PVE. Apply neutral position signal for PVE, observe that cylinder movement stops and that pressure LS-T drops to max. 10 bar.

For OSPE with PVED CLS: The coil (item 247 of exploded view) is controlled by the PVED CLS.

Manual steering

Without pressure on P and T ports, the unit must be able to steer in a smooth manner to the right and to the left observed by the cylinder movement.

For OSPED: the number of turns on the steering wheel for moving the steering cylinder from lock to lock, must increase in comparison to do this test with normal pump supply. Without pump supply the number of turns must match cylinder volume/emergency steer displacement of OSPED. Example: Cylinder volume: 600 ccm, and OSPED 60/185 LSRM > Number of turns must be $600/60 \sim 10$ turns.

Shock valves

Remove pump supply to P port of OSPE and plug the P-port. Remove the steering cylinder connection. T must still be connected to tank of pump station.

OSPE LSRM

L and R ports are connected through the spool/sleeve set in neutral, steering wheel must be untouched during setting of shock valves:

Test and valve setting of OSPE

1. Plug the L- port and apply pump pressure to the R-port. The shock valves are to be set at an oil flow of 3 l/min. The supply must be limited to max 280 bar on the pump station.
2. Screw one of the shock valves (item 64) outwards until pressure is reduced to the lower specified value + 15-20 bar and flows comes out of the T-port (e.g. 235-240 bar of specified value 220-240 bar)
3. Screw the other shock valve (item 64) outwards until pressure is reduced to the lower specified value + 0-5 bar and check that flow out of T-port continues (e.g. 220-225 bar of specified value 220-240 bar).

OSPE LS (non reaction/non reaction versions)

The shock valves are to be set at an oil flow of 3 l/min applied to one of the servo ports L and R at a time. The supply must be limited to maximum 280 bar on the pump station.

Adjust the pressure (R-T/L-T) by adjusting screws of shock valves (item 64) to the specified value for the shock valve setting for the code in question.

Check for external leakage

After testing of the former items, the steering column (wheel) and port connections are removed. P, L, R, EF and LS ports are to be plugged and oil pressure of 20 bar is supplied to the T port for approx. 3 minutes: No leakage must be found in any assemblies or at the input shaft for the steering column.

Tightening Torques

Tightening torques for connections OPSE

Tightening Torques for Connections OSPD V2

Connections	Maximum tightening torque Nm [lbf.in]			
	With cutting edge	With copper washer	With alum. Washer	O-ring
M12 • 1.5	30 [265]	20 [177]	30 [265]	25 [221]
M18 • 1.5	80 [708]	55 [486]	70 [619]	50 [442]
M22 • 1.5	100 [885]	65 [575]	80 [708]	60 [531]

Products we offer:

- Cylinders
- Electric converters, machines, and systems
- Electronic controls, HMI, and IoT
- Hoses and fittings
- Hydraulic power units and packaged systems
- Hydraulic valves
- Industrial clutches and brakes
- Motors
- PLUS+1® software
- Pumps
- Steering
- Transmissions

Danfoss Power Solutions designs and manufactures a complete range of engineered components and systems. From hydraulics and electrification to fluid conveyance, electronic controls, and software, our solutions are engineered with an uncompromising focus on quality, reliability, and safety.

Our innovative products makes increased productivity and reduced emissions a possibility, but it's our people who turn those possibilities into reality. Leveraging our unsurpassed application know-how, we partner with customers around the world to solve their greatest machine challenges. Our aspiration is to help our customers achieve their vision — and to earn our place as their preferred and trusted partner.

Go to www.danfoss.com or scan the QR code for further product information.

**Hydro-Gear**

www.hydro-gear.com

Daikin-Sauer-Danfoss

www.daikin-sauer-danfoss.com

**Danfoss
Power Solutions (US) Company**
2800 East 13th Street
Ames, IA 50010, USA
Phone: +1 515 239 6000

**Danfoss
Power Solutions GmbH & Co. OHG**
Krokamp 35
D-24539 Neumünster, Germany
Phone: +49 4321 871 0

**Danfoss
Power Solutions ApS**
Nordborgvej 81
DK-6430 Nordborg, Denmark
Phone: +45 7488 2222

**Danfoss
Power Solutions Trading
(Shanghai) Co., Ltd.**
Building #22, No. 1000 Jin Hai Rd
Jin Qiao, Pudong New District
Shanghai, China 201206
Phone: +86 21 2080 6201

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequent changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.