

## Installation Guide

## Case/room controller

Type **AK-CC25 Pro** and **AK-CC25 Pro BT**




084R6217




AN513629347022en-000201

## Identification &amp; Dimensions (in mm)

AK-CC25 Pro : 084B4022  
AK-CC25 Pro BT : 084B4023

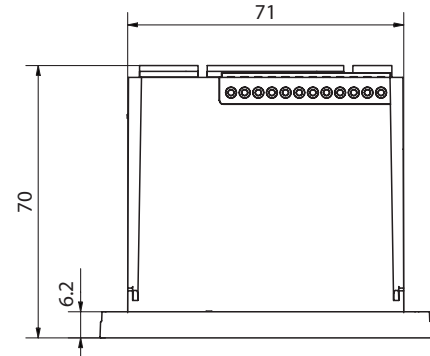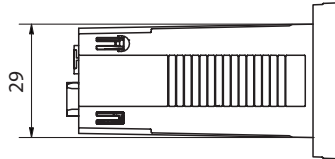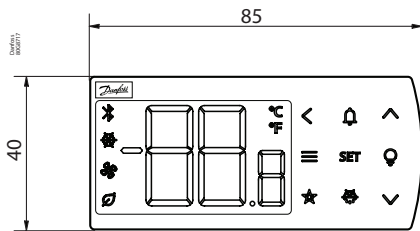


## Panel mounting

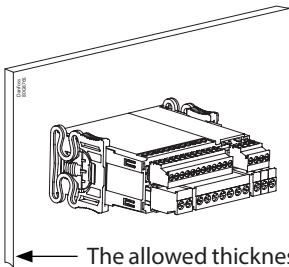

To guarantee IP65 protection, the controller must be fixated with the mounting brackets pushed tight on to the mounting plate (Force: min. 245 nm per bracket).


Maximum deviation between the edges of the rectangular mounting hole from flat surface:  $\leq 0.5$  mm (0,02 in)

Maximum roughness of the surface where the gasket is applied:  $\leq 120$   $\mu$ m.

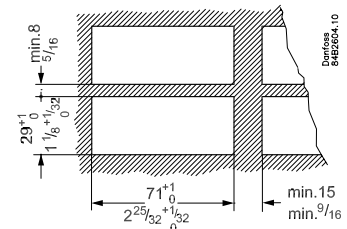

The allowed thickness of the mounting plate are min. 0.8 mm (0.03 inch) and max. 18 mm (0.70 inch).

## Display operation

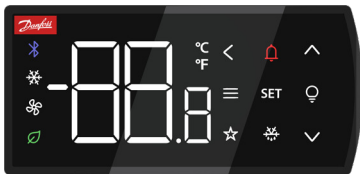

The values will be shown with three digits, and with a setting you can determine whether the temperature is to be shown in °C or in °F

| Icons                                                                               | Name      | Description                                                             |
|-------------------------------------------------------------------------------------|-----------|-------------------------------------------------------------------------|
|  | ECO mode  | Lights up when in night/ECO mode                                        |
|  | Cooling   | Lights up when cooling                                                  |
|  | Fan       | Lights when evaporator fans are running                                 |
| Navigation buttons                                                                  |           |                                                                         |
|  | Back      | Navigates back to previous menu                                         |
|  | Up        | Navigates up in menu structure<br>Increase value when in setting mode   |
|  | Down      | Navigates down in menu structure<br>Increase value when in setting mode |
|  | Info menu | Navigates to the controller info menu                                   |


| Code | Description                                                                                                                               |
|------|-------------------------------------------------------------------------------------------------------------------------------------------|
| Err  | The temperature cannot be displayed due to a sensor error                                                                                 |
| ---  | Three dashes shown in top - Max. value range has been reached                                                                             |
| ---  | Three dashes shown in middle - Parameter is protected by main switch and cannot be changed until "r12 Main switch" is set in OFF position |
| ---  | Three dashes shown in bottom - Min. value range has been reached                                                                          |
| Loc  | The button operation is locked. Unlock by swiping from left to right across the buttons placed in the middle                              |
| UnL  | The button operation is unlocked                                                                                                          |

| Icons                                                                               | Name      | Description                                                                                                                        |
|-------------------------------------------------------------------------------------|-----------|------------------------------------------------------------------------------------------------------------------------------------|
| Direct action buttons                                                               |           |                                                                                                                                    |
|  | SET       | Short press: Change thermostat setpoint<br>Long press: Navigate to parameter menu                                                  |
|  | Alarm     | Short press: Navigates to list of active alarms<br>Long press: Manual reset of alarms<br>Long press while in menu: Reset of alarms |
|  | Light     | Long press: Switches light status                                                                                                  |
|  | Defrost   | Long press: Start/stop of a defrost cycles                                                                                         |
|  | Bluetooth | Long press: Initiate/Terminate Bluetooth connection                                                                                |
|  | Star      | Not in use                                                                                                                         |

|     |                                                                                                                      |
|-----|----------------------------------------------------------------------------------------------------------------------|
| PS  | A higher-level access code is required for performing action                                                         |
| Fan | A case cleaning procedure is ongoing. The fans are running                                                           |
| OFF | r12 Main switch has been set in OFF position. A case cleaning procedure is ongoing - All outputs are in standby mode |
| SEr | r12 Main switch has been set in service mode position for override of outputs                                        |
| d   | Defrost is in progress                                                                                               |
| FAC | The reset to OEM factory procedure has been initiated - select Yes to confirm or No to abort                         |
| OP1 | Operation mode 1 has been selected                                                                                   |
| OP2 | Operation mode 2 has been selected                                                                                   |

### Set access codes at first power up

At first power up, the user will be prompted to set an access code, please refer to the screen flow below:

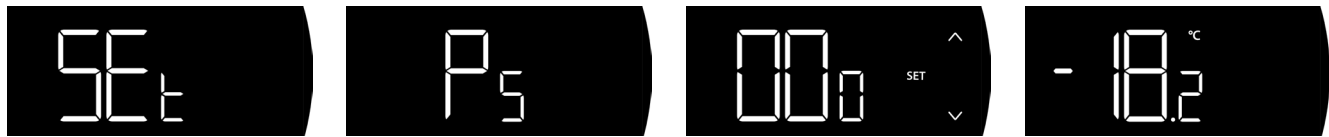

If access codes have not been set, the display will flash between the two first screens "SEt" and "P5" to indicate that the access codes must be set. By pressing the "SET" key, the access code values can be set in screen 3. Be aware, all access codes will be set at this value. Once the access codes are set, the display returns to the normal temperature read out.

### Authentication

The user will always be prompted for selecting a user level (L1/L2/L3) and the corresponding access code, when performing an action that requires a certain access level - please refer to the example below.



User performs a long press on SET to enter parameter menu.



The display indicates that authentication is required by showing "P5" for 2 sec.



The user selects the access level and presses SET.




The user set the value of the corresponding access code and presses SET.




If the provided access code is correct the action that initiated the authentication is carried out.

### Principle


Application 1-4

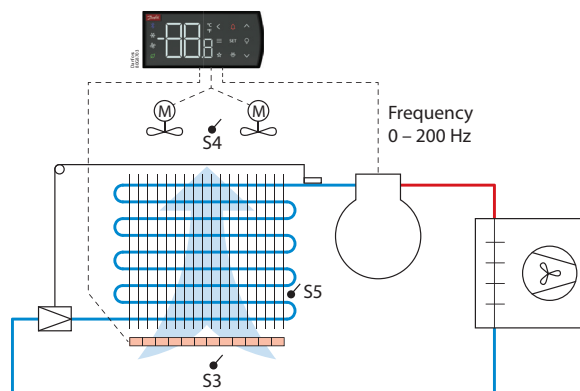


Application 5-8 (single circuit)

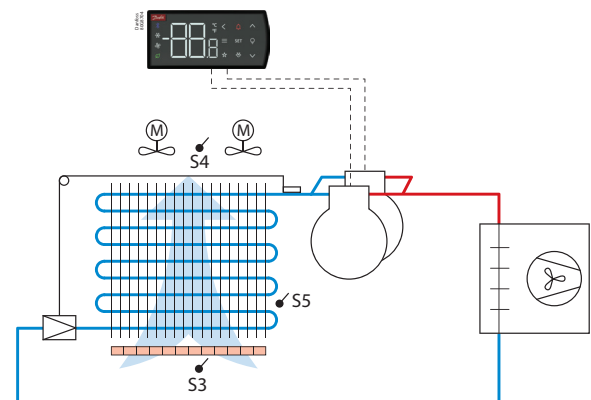

Application 1-4

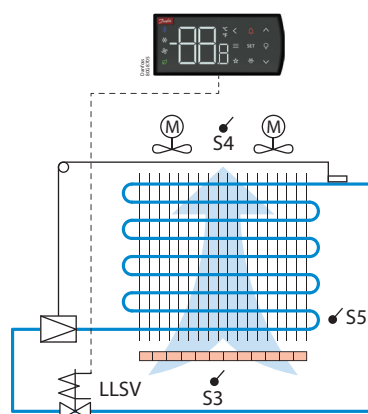


Application 5-8 (dual circuits)

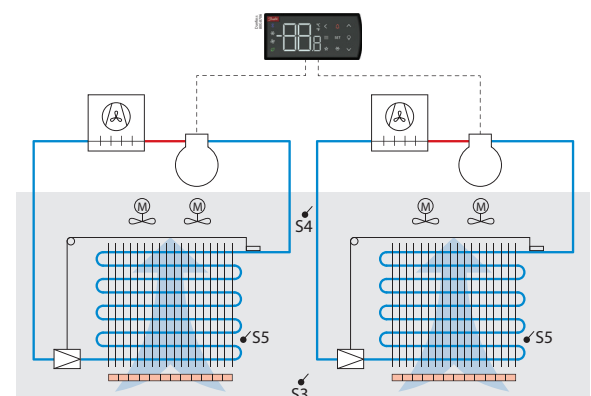


## Wiring

Application 1

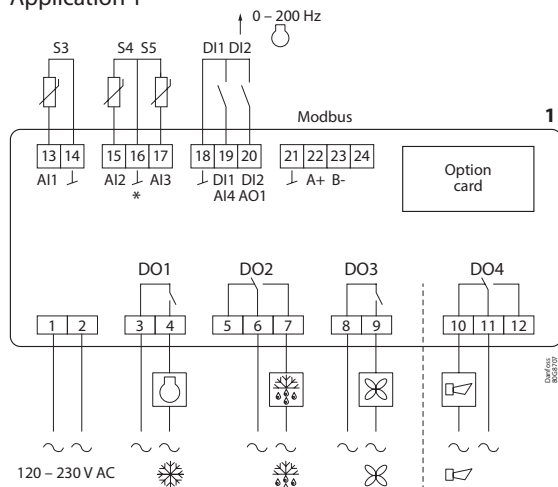


\*Note: Each AI/DI/AO signal must have a separate ground wire.


Application 2

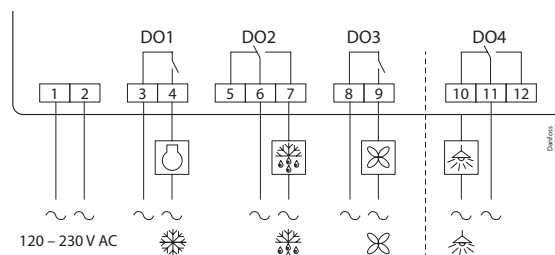


Application 3

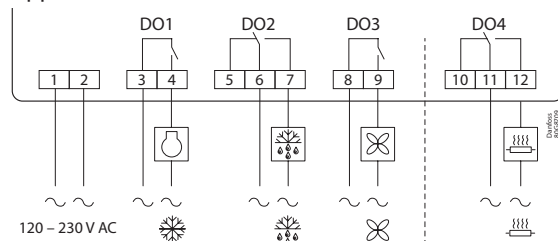


Application 4

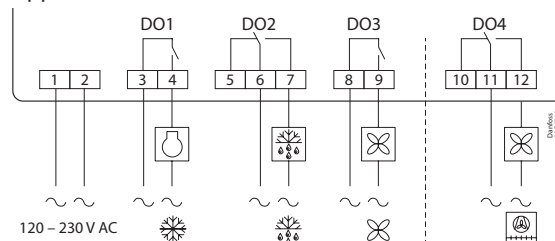


Application 5

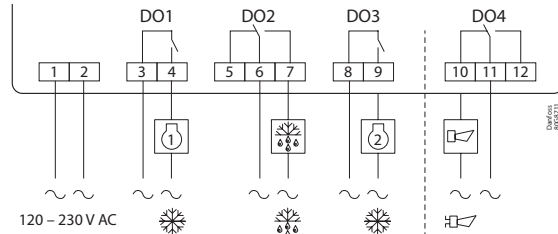


Application 6

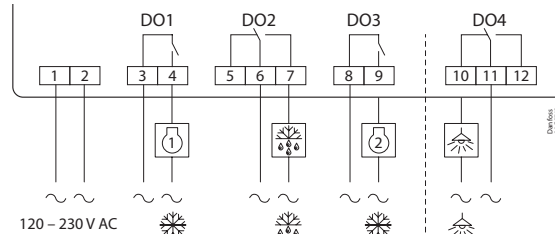


Application 7

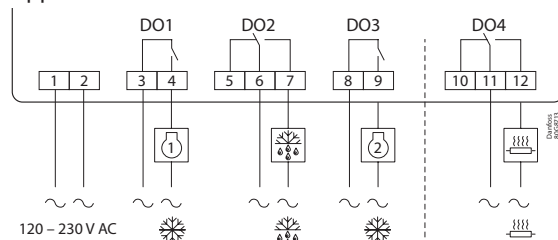


Application 8

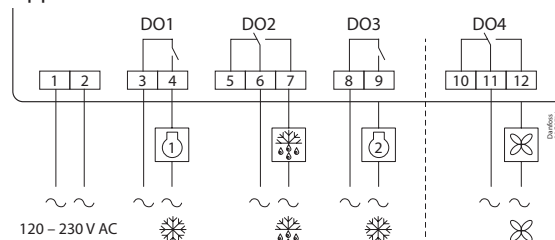

Application 9

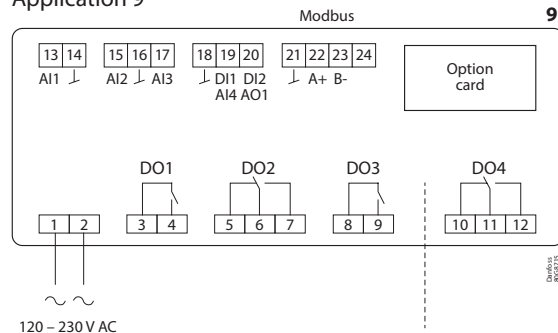


## Data communication

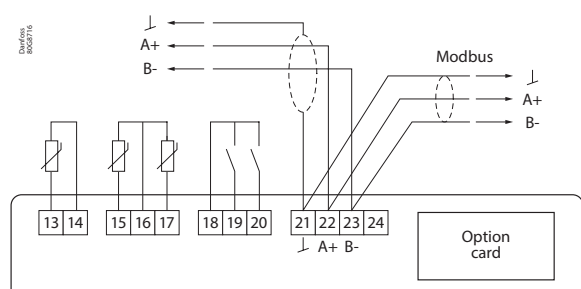

It is important that the installation of data communication cable is performed correctly with sufficient distance to high voltage cables.

For more information, refer the Communications [Design Guide](#).

## Coordinated defrost via cable connections

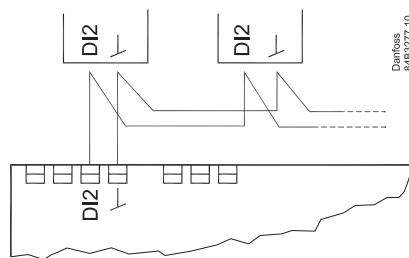

Max. 10

The following controllers can be connected in this way:  
EKC 204A, AK-CC 210, AK-CC 250,  
AK-CC 450, AK-CC 550 and AK-CC55.

Refrigeration is resumed at the same time when all controllers have terminated defrost.

## Electric noise

Cables for sensors, low voltage DI inputs and data communication must be kept separate from other electric cables: - Use separate cable trays - Keep a distance between cables of at least 10 cm - Long cables at the low voltage DI input should be avoided

## Installation considerations

Accidental damage, poor installation, or site conditions, can give rise to malfunctions of the control system, and ultimately lead to a plant breakdown. Every possible safeguard is incorporated into our products to prevent this. However, a wrong installation could still present problems. Electronic controls are no substitute for normal, good engineering practice. Danfoss will not be responsible for any goods, or plant components, damaged as a result of the above defects. It is the installer's responsibility to check the installation thoroughly, and to fit the necessary safety devices. Special reference is made to the necessity of signals to the controller when the compressor is stopped and to the need of liquid receivers before the compressors. Your local Danfoss agent will be pleased to assist with further advice, etc.

For security reasons the connection terminals and cable runs of the Modbus data communication cable shall be placed in physical restricted area, where only authorized personnel has access.

| Conformity                                                                                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|---------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| LVD directive and UL certification                                                                            | IEC/EN/UL 60730-1, IEC/EN/UL 60730-2-9, IEC/EN 60335-1, IEC/EN 60335-2-89, IEC/EN 60335-2-24                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| EMC directive                                                                                                 | IEC/EN 61000-6-1, IEC/EN 61000-6-2, IEC/EN 61000-6-3, IEC/EN 61000-4                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Flammable refrigerants<br><br><i>Approved for use in Zone 2 (gases Zone) as per 2014/34/EU ATEX directive</i> | Compliance with the following requirements of the IEC 60335 standards: <ul style="list-style-type: none"> <li>Components that produce sparks during the normal operation have been tested for enclosed break "dC" device as per IEC/EN 60079-1:2014 and for seal tight "nC" device tested according to IEC/EN 60079-15:2019, which meets requirement of Annex BB of EN 60335-2-89 and Annex CC of EN 60335-2-24.</li> <li>Annex 101.DVL and clause 22.114DV D2 of UL60335-2-89.</li> <li>IEC/EN/UL 60335-2-89 (Annex BB) for commercial refrigeration appliances.</li> <li>IEC/EN/UL 60335-2-24 (Annex CC) for household refrigerator appliance</li> <li>Complementary file LZGH2/8 (Flame Arrest-protected Components for Use in Refrigeration and Air-Conditioning Equipment Employing A2L Refrigerants).</li> </ul> |
| Wireless                                                                                                      | RED directive, FCC/IC 47 CFR Part 15, subsections B, C                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

## EU Conformity Notice

Hereby, Danfoss A/S declares that the radio equipment type AK-CC25 Pro is in compliance with Directive 2014/53/EU.

Scan the QR code for the EU declaration of conformity:



www.danfoss.com  
Danfoss A/S  
Nordborgvej 81  
6430 Nordborg  
Denmark

## Technical data

| Mechanical                    |                                                                                                                                                                                                                                                                   |
|-------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Enclosure                     | Self-extinguishing polycarbonate                                                                                                                                                                                                                                  |
| Environmental conditions      |                                                                                                                                                                                                                                                                   |
| Ingress protection            | Panel mounting with fixing mounting brackets:<br>EN: Front IP65, Back IPX0; UL: Type 1                                                                                                                                                                            |
| Operating temperature         | -20 – 55 °C; 20 – 80 rH% (non-condensing humidity)                                                                                                                                                                                                                |
| Storage temperature           | -40 – 70 °C; 20 – 80 rH% (non-condensing humidity)                                                                                                                                                                                                                |
| Electrical specifications     |                                                                                                                                                                                                                                                                   |
| Purpose of control            | Electrical control device                                                                                                                                                                                                                                         |
| Power supply                  | 100 – 240 V AC                                                                                                                                                                                                                                                    |
| Power consum.                 | 3 V A                                                                                                                                                                                                                                                             |
| Frequency                     | 50/60 Hz                                                                                                                                                                                                                                                          |
| Terminal blocks               | L, N, DO1, DO2, DO3, DO4:<br>Removable male-female 12 – 24 AWG / 0.34 – 2.5 mm <sup>2</sup><br>AI1 – AI3, DI1 – DI2<br>Removable male-female 16 – 28 AWG / 0.081 – 1.5 mm <sup>2</sup><br>Modbus: Removable male-female 16 – 28 AWG / 0.081 – 1.5 mm <sup>2</sup> |
| Rated impulse voltage         | 2500 V                                                                                                                                                                                                                                                            |
| Overvoltage category          | II                                                                                                                                                                                                                                                                |
| Construction of control       | Incorporated control                                                                                                                                                                                                                                              |
| Environmental pollution class | 2                                                                                                                                                                                                                                                                 |
| User interface                |                                                                                                                                                                                                                                                                   |
| Display                       | 3 digits, decimal point and multifunction icons                                                                                                                                                                                                                   |
| Keypad                        | 10 backlit capacitive touch buttons                                                                                                                                                                                                                               |
| Status icons                  | 3 backlit icons                                                                                                                                                                                                                                                   |
| Connectivity                  |                                                                                                                                                                                                                                                                   |
| Bluetooth                     | Bluetooth Low Energy ver. 5.1, Max distance 10 m, variable according to the mobile device used                                                                                                                                                                    |
| Fieldbus                      | RS485 Transceiver oktal load. (allows up to 256 units), Non isolated Speed: up to 115.2 kbps, Fail safe: means accept 0 V on bus line, Cable length: ≤1200 m                                                                                                      |
| Analogue inputs (AI1 – AI4)   |                                                                                                                                                                                                                                                                   |
| Sensor types                  | Pt1000, (AKS 11, AKS 12, AKS 21)<br>PTC 990 Ohm at 25 °C<br>NTC 5K Ohm at 25 °C, (EKS 211)<br>NTC 10K Ohm at 25 °C, (EKS 221)<br>User defined type                                                                                                                |

|                                                    |                                                                                                                                                                                                                                              |                                                                           |                                                                                       |
|----------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| Measuring range                                    | Pt1000: -60 – 120 °C (±0.5 K)<br>PTC1000: -60 – 80 °C (±0.5 K)<br>NTC 5K: -40 – 80 °C (±0.5 K)<br>NTC 10K: -40 – 120 °C (±0.5 K)<br>User defined type: 400 – 200k ohm<br><b>Note:</b> Each AI/DI/AO signal must have a separate ground wire. |                                                                           |                                                                                       |
| Digital inputs (DI1 – DI2)                         |                                                                                                                                                                                                                                              |                                                                           |                                                                                       |
| DI1                                                | Dry contact, Open loop. 3.3 V DC, Contact current. 2.2 mA                                                                                                                                                                                    |                                                                           |                                                                                       |
| DI2                                                | Dry contact, Open loop. 12 V DC, Contact current. 3.5 mA<br>OBS: Defrost co-ordination: Max. 5 Controllers in parallel, Max. 100 m cable total.                                                                                              |                                                                           |                                                                                       |
| Analogue output (AO1)                              |                                                                                                                                                                                                                                              |                                                                           |                                                                                       |
| AO1                                                | Frequency: 0 – 200 Hz (Min. 0 V and Max. 12 V)<br>Sink: 25 mA, cable length < 30 m                                                                                                                                                           |                                                                           |                                                                                       |
| Digital outputs (DO1 – DO4)                        |                                                                                                                                                                                                                                              |                                                                           |                                                                                       |
| Terminals / Action type                            | Load type                                                                                                                                                                                                                                    | EN Ratings                                                                | UL ratings                                                                            |
| DO1, 3-4 (NO)<br>DO2, 5-6-7 (NO/NC)<br>Type 1.B    | Resistive                                                                                                                                                                                                                                    | NC/NO: 10 A, 240 V AC                                                     | NC/NO: 10 A Resistive 240 V AC                                                        |
|                                                    | Motor Compressor                                                                                                                                                                                                                             | DO1: 10A (cos ϕ = 0.6), 240 V AC<br>DO1/DO2: 3.5A (cos ϕ = 0.4), 240 V AC | NO: 1 1/2 HP or 10FLA/60LRA 240 V AC<br>NC/NO: 1/2 HP 125 V AC<br>NC/NO: 1HP 240 V AC |
|                                                    | Inductive                                                                                                                                                                                                                                    | Not rated for this load type                                              | NO: Pilot duty: B300                                                                  |
|                                                    | Lamp Elect. Ballast                                                                                                                                                                                                                          | Not rated for this load type                                              | DO1: NO: TV-5, 125 V AC<br>DO2: NO: TV-5, 240 V AC                                    |
| DO3, 8-9 (NO)<br>DO4, 10-11-12 (NC/NO)<br>Type 1.B | Resistive                                                                                                                                                                                                                                    | NC/NO: 6A Resistive, 240 V AC                                             | NC/NO: 6A Resistive, 240 V AC                                                         |
|                                                    | Motor Compressor                                                                                                                                                                                                                             | NC/NO: 3A (cos ϕ 0.4), 240 V AC                                           | 1/4 HP 125/240 V AC                                                                   |
|                                                    | Inductive                                                                                                                                                                                                                                    | NC/NO: 6(4), 240 V AC                                                     | NC/NO: Pilot duty: B300                                                               |
|                                                    | Lamp Elect. Ballast                                                                                                                                                                                                                          | Not rated for this load type                                              | NO: TV-4, 120/240 V AC                                                                |
| Plugable connector                                 |                                                                                                                                                                                                                                              | Max. 15 A                                                                 |                                                                                       |
| Others                                             |                                                                                                                                                                                                                                              |                                                                           |                                                                                       |
| 5 V DC Supply<br>Supply for external assecories    |                                                                                                                                                                                                                                              | Total load from all external accessory: max. 50 mA, Cable length: ≤3 m    |                                                                                       |
| Real time clock                                    |                                                                                                                                                                                                                                              | Accuracy. Typ. 20 ppm, 10 min/year, Back-up time. 100 hours, 3 days       |                                                                                       |

## Parameter grouping at display operation

|                                              |                          |                                         |
|----------------------------------------------|--------------------------|-----------------------------------------|
| SET                                          | ←                        | SET button, 3 s: Configuration settings |
| Set                                          |                          |                                         |
| (PS)                                         | ←                        | PS: Password (if any)                   |
| v                                            |                          |                                         |
| cFg                                          | →                        | SET                                     |
| v                                            |                          |                                         |
| r--                                          |                          |                                         |
| A--                                          |                          |                                         |
| c--                                          |                          |                                         |
| d--                                          |                          |                                         |
| F--                                          |                          |                                         |
| t--                                          |                          |                                         |
| o--                                          |                          |                                         |
| p--                                          |                          |                                         |
| q--                                          |                          |                                         |
| u--                                          |                          |                                         |
| <                                            |                          |                                         |
| (Return)                                     |                          |                                         |
| Menu groups<br>See also the following pages. |                          |                                         |
| r12                                          | Main switch              |                                         |
| o61                                          | Application              |                                         |
| c08                                          | Step control mode        |                                         |
| o03                                          | MODBUS address           |                                         |
| r05                                          | Temperature unit         |                                         |
| o06                                          | Sensor types             |                                         |
| r89                                          | Food type                |                                         |
| r00                                          | Cut-out temperature      |                                         |
| r15                                          | Ther. sensor S4 %        |                                         |
| r61                                          | Ther. sensor S4% night   |                                         |
| A36                                          | Alarm sensor S4%         |                                         |
| d01                                          | Defrost method           |                                         |
| d03                                          | Defrost interval         |                                         |
| d10                                          | Defrost sensor           |                                         |
| d04                                          | Max. defrost time        |                                         |
| d02                                          | Defrost stop temperature |                                         |
| <                                            |                          |                                         |
| (Return)                                     |                          |                                         |

|          |                           |                                               |
|----------|---------------------------|-----------------------------------------------|
| ^        | ←                         | Info button, 3 s: Information for service use |
| Inf      |                           |                                               |
| StA      | SET                       | See control state message                     |
| dir      | SET                       | →                                             |
| App      | SET                       | See selected application                      |
| in       | SET                       | →                                             |
| out      | SET                       | →                                             |
| buS      | SET                       | MODBUS quality                                |
| SoF      | SET                       | See SW version                                |
| <        |                           |                                               |
| (Return) |                           |                                               |
|          |                           | Read output status                            |
| do1      | *                         |                                               |
| do2      | *                         |                                               |
| do3      | *                         |                                               |
| do4      | *                         |                                               |
| AO1      | *                         |                                               |
| <        |                           |                                               |
| (Return) |                           |                                               |
|          |                           | Read input status                             |
| AI1      | S3                        |                                               |
| AI2      | S4                        |                                               |
| AI3      | S5                        |                                               |
| di1      | **                        |                                               |
| di2      | **                        |                                               |
| <        |                           |                                               |
| (Return) |                           |                                               |
| Pdt      | Start/Stop temp. pulldown |                                               |
| Lht      | Switch light status       |                                               |
| oPS      | Change operation mode     |                                               |

### Output status

When you want info on a relay output, the dot will show whether the relay is activated (energized) for, e.g.:  
do4 = not activated  
do.4 = activated

\*) The output's function (determined at configuration).

The DOs and AOs can also be forced controlled from this menu, when r12 Main switch has been set in position "service".  
Forced control of a function can also be performed in codes q11 to q27.

\*\*) The input's function (determined at configuration).

## Get a good start

With the following procedure you can start regulation very quickly:

1. Open parameter r12 and stop the regulation (in a new and not previously set unit, r12 will already be set to 0 which means stopped regulation).
2. Open parameter o61 and select the application based on the wiring diagrams on page 3.
3. If an application with two compressors has been selected, please choose how the compressors are to be operated:
  - i. Both compressors on same circuit, sequential operation
  - ii. Both compressors on same circuit, cyclic operation
  - iii. Compressors on separate circuits
4. For network. Set the network address in o03  
r05: Set temperature unit in display (°C / °F)  
o06: Select sensor type:  
Pt = Pt1000, Ptc= PTC 1000, n5= NTC 5k, n10 = NTC 10k
5. Then select a set of presets from the "Food type" help table
6. Open parameter r89 and set the number for the array of presettings. The few selected settings will now be transferred to the menu.
7. Set the desired cut-out temperature r00
8. Set the weighted thermostat air temperature between S4 and S3 sensor r15.
9. Set the weighted thermostat air temperature between S4 and S3 during night operation r61.
10. Set the weighted alarm air temperature between S4 and S3 A36.

11. Set the desired defrost method in d01
12. Set the interval time between defrost starts in d03
13. Set the desired defrost sensor in d10
14. Set the maximum defrost time in d04
15. Set the defrost stop temperature in d02
16. Open parameter r12 and start the regulation
17. Go through the parameter list and change the factory values where needed.
18. Get the controller up and running on network:
  - MODBUS: Activate scan function in system unit

## Food type

| Setting of presettings (r89). After setting 1-5, setting is returned to 0.<br><b>Food type =</b> | 1               | 2     | 3             | 4              | 5            |
|--------------------------------------------------------------------------------------------------|-----------------|-------|---------------|----------------|--------------|
|                                                                                                  | Vege-<br>tables | Milk  | Meat/<br>fish | Frozen<br>food | Ice<br>cream |
| Temperature (r00)                                                                                | 8 °C            | 0 °C  | -2 °C         | -20 °C         | -24 °C       |
| Max. temp. setting (r02)                                                                         | 10 °C           | 4 °C  | 2 °C          | -16 °C         | -20 °C       |
| Min. temp. setting (r03)                                                                         | 4 °C            | -4 °C | -6 °C         | -24 °C         | -28 °C       |
| Upper alarm limit (A13)                                                                          | 14 °C           | 8 °C  | 8 °C          | -15 °C         | -15 °C       |
| Lower alarm limit (A14)                                                                          | 0 °C            | -5 °C | -5 °C         | -30 °C         | -30 °C       |
| Upper alarm limit for S6 (A22)                                                                   | 14 °C           | 8 °C  | 8 °C          | -15 °C         | -15 °C       |
| Lower alarm limit for S6 (A23)                                                                   | 0 °C            | -5 °C | -5 °C         | -30 °C         | -30 °C       |

## Fault message

In an error situation the alarm LED on the front will be on and the alarm relay will be activated (depending on priority). If you push the alarm button for 2 seconds you can see the alarm reported in the display. (Alarm priorities can be changed. See the User Guide.) Here are the messages that may appear.

| Code | Alarm text                        | Description                                                                                                                                                      |
|------|-----------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| E01  | Hardware failure                  | The controller has a hardware failure                                                                                                                            |
| E06  | Clock lost time                   | Clock has lost valid time                                                                                                                                        |
| E25  | S3 Air ON evap. A - sensor error  | Sensor signal is out of range. Please check the sensor wiring                                                                                                    |
| E26  | S4 Air OFF evap. A - sensor error | Sensor signal is out of range. Please check the sensor wiring                                                                                                    |
| E27  | S5 Evaporator A - sensor error    | Sensor signal is out of range. Please check the sensor wiring                                                                                                    |
| E28  | S6 product temp. A - sensor error | Sensor signal is out of range. Please check the sensor wiring                                                                                                    |
| E37  | S5 Evaporator B - sensor error    | Sensor signal is out of range. Please check the sensor wiring                                                                                                    |
| E64  | Sc condenser sensor error         | Sensor signal is out of range. Please check the sensor wiring                                                                                                    |
| A01  | High temperature alarm A          | The alarm temperature has been above the max alarm limit for a longer time period than the set alarm delay.                                                      |
| A02  | Low temperature alarm A           | The alarm temperature has been below the min alarm limit for a longer time period than the set alarm delay                                                       |
| A04  | Door open alarm                   | The door has been open for a too long time                                                                                                                       |
| A05  | Max defrost hold time exceeded    | The controller has been waiting longer time than permitted after a co-ordinated defrost.                                                                         |
| A15  | DI alarm 1                        | Alarm signal from digital input signal                                                                                                                           |
| A16  | DI alarm 2                        | Alarm signal from digital input signal                                                                                                                           |
| A19  | Comp. safety                      | Compressor 1 is cut-out by safety signal on DI input                                                                                                             |
| A45  | Main switch set OFF               | The controller main switch has been set to either Stop or Manual control. Alternatively a digital input set up for "main switch" function, has stopped control   |
| A59  | Case in cleaning mode             | A case cleaning operation has been started on a case                                                                                                             |
| A61  | Cond. high temperature            | Condenser temperature has exceeded the alarm limit – check the condenser air inlet for blockage/dirt                                                             |
| A80  | Cond. block alarm                 | Condenser temperature has exceeded the block limit – check the condenser air inlet for blockage/dirt                                                             |
| AA3  | Refrigerant leak detected         | Refrigerant leak alarm via DI input                                                                                                                              |
| a04  | Wrong IO configuration            | The controller has an invalid configuration                                                                                                                      |
| Z01  | Max defrost time exceeded         | The last defrost cycle has stopped on time instead of set temperature                                                                                            |
| a12  | Comp. safety 2                    | Compressor 2 is cut-out by safety signal on DI input                                                                                                             |
| a13  | Compressor safety lockout         | Compressor operation has been blocked due to repeated safety cut-outs. Reset alarm manually by pressing alarm button for 2 seconds while being in the alarm menu |

## Danfoss A/S

Climate Solutions • danfoss.com • +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.

All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.