

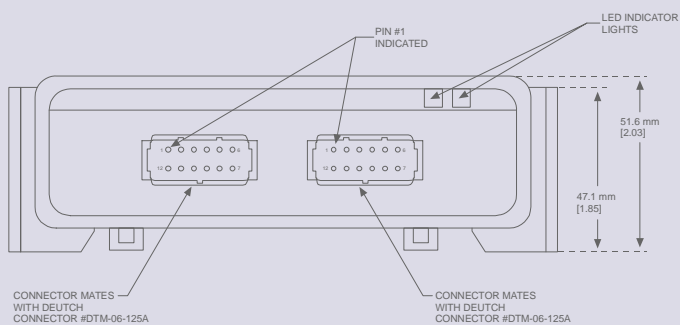
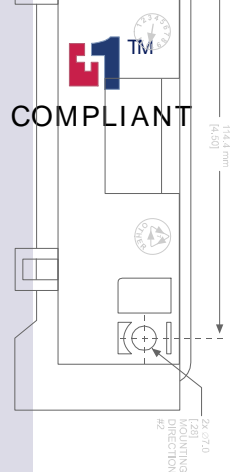
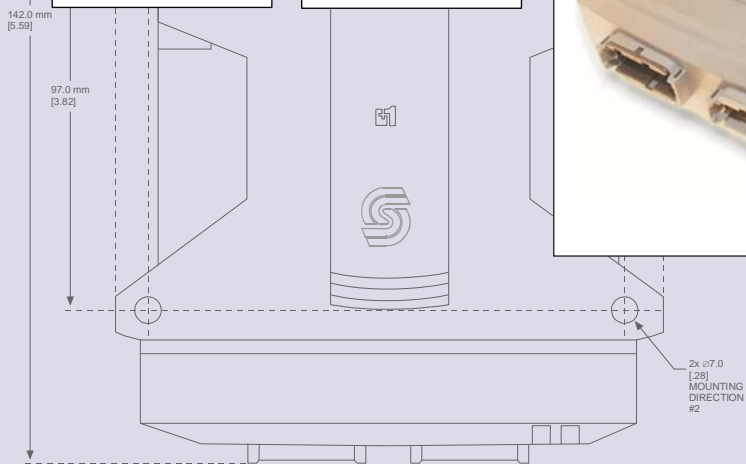


PLUS+1 Compliant  
SASA Function Block  
User Manual

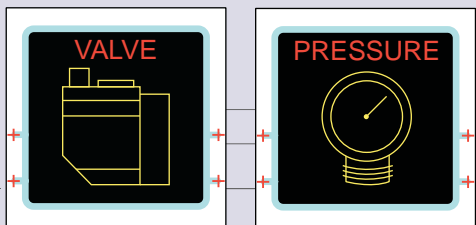

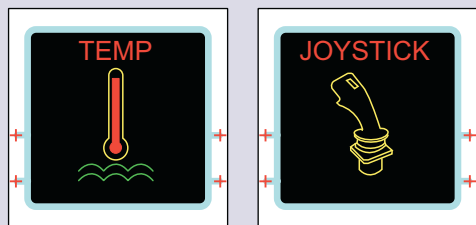

# PLUS+1 Compliant SASA Function Block User Manual

## About this Manual

### Organization and Headings

To help you quickly find information in this manual, the material is divided into sections, topics, subtopics, and details, with descriptive headings set in **red type**. Section titles appear at the top of every page in **large red type**.

In the PDF version of this document, clicking an item *underlined in blue italic type* jumps you to the referenced page in the document.

### Special Text Formatting

Controls and indicators are set in **bold black type**.

### Table of Contents

A Table of Contents (TOC) appears on the next page. In the PDF version of this document, the TOC entries are hyperlinked.

### *Revision History*

Revision	Date	Comment
Rev A	April 2007	
Rev AB	May 2010	

©2010 Sauer-Danfoss. All rights reserved.

Sauer-Danfoss accepts no responsibility for possible errors in catalogs, brochures and other printed material. Sauer-Danfoss reserves the right to alter its products without prior notice. This also applies to products already ordered provided that such alterations can be made without affecting agreed specifications.

All trademarks in this material are properties of their respective owners.


PLUS+1, GUIDE, and Sauer-Danfoss are trademarks of the Sauer-Danfoss Group. The PLUS+1 GUIDE, PLUS+1 Compliant, and Sauer-Danfoss logotypes are trademarks of the Sauer-Danfoss Group.



PLUS+1 Compliant SASA Function Block  
User Manual

Contents

SASA Function Block .....	4
Overview .....	4
Inputs.....	4
Outputs.....	5
Connections and Signals Overview.....	5
Status and Fault Logic.....	6

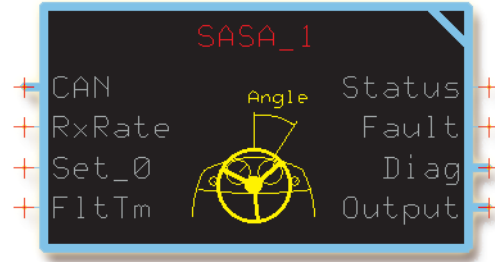

### Overview

The output of an **SASA** (Steering Angle Sensor Absolute) function block indicates the steering angle of a Sauer-Danfoss Steering Angle Sensor, and the amount that angle has changed since angle information was last received through a CAN message.

See [Connections and Signals Overview](#) on page 5 for an overview of the **SASA** function block's connections and signals.

### Inputs

#### SASA Function Block Inputs


Input	Type	Range	Description
<b>CAN</b>	—	—	The <b>CAN</b> bus in the GUIDE template reports the output of a Sauer-Danfoss Steering Angle Sensor. Route a bus from the GUIDE template's <b>CAN</b> input to this function block's <b>CAN</b> input.
<b>RxRate</b>	U8	5 to 20	The <b>RxRate</b> (Prescribed Rate) signal specifies the frequency that messages are received from the angle sensor. There is the option of specifying once every 5, 10, or 20 ms.
<b>Set_0</b>	Bool	—	The <b>Set_0</b> (Set-to-zero) signal specifies that the current steering angle is to now be set at 0 degrees. A set-to-zero command is transmitted to the sensor during an F to T transition of <b>Set_0</b> . T = 0°.
<b>FltTm</b>	—	LoopTime to 65535	The <b>FltTm</b> (Fault Time) signal specifies how long to wait before the CAN bus signal is considered lost and a fault is declared.

### Outputs

#### SASA Function Block Outputs

Output	Type	Range	Description
<b>Status</b>	U16	---	The <b>Status</b> signal reports the function block's status conditions. The <b>Status</b> signal does not use a standard bitwise scheme. For more information about status logic, see <a href="#">Status and Fault Logic</a> on page 6.
<b>Fault</b>	U16	---	The <b>Fault</b> signal reports the function block's fault conditions. The <b>Fault</b> signal does not use a standard bitwise scheme. For more information about fault logic, see <a href="#">Status and Fault Logic</a> on page 6.
<b>Diag</b>	Bus	---	Use these signals for troubleshooting. The <b>Diag</b> (Diagnostic) bus contains the <b>CRC_Value</b> (Cyclic Redundancy Check Value) and the <b>Msg_Counts</b> (Message Counts) signals.
<b>CRC_Value</b>	U16	0-65535	<b>CRC_Value</b> is a checksum value that is received with the <b>CAN</b> message from the sensor. The value is used inside the block to determine if valid data is received.
<b>Msg_Counts</b>	U8	0-255	<b>Msg_Counts</b> is a fault-detection value. Every message from the sensor is given a running number that is increased by 1 every time a message is sent. Used to determine if messages have been lost, and how many have been lost.
<b>Output</b>	Bus	---	The <b>Output</b> bus contains the <b>Angle Change</b> and <b>Steering Angle</b> signals:
<b>Angle Change</b>	S32	-35991 to 35991	The angle between two CAN measurements. 1° = 100
<b>Steering Angle</b>	U16	0 to 35991	The absolute angle relative to the 0-index point. 1° = 100

### Connections and Signals Overview

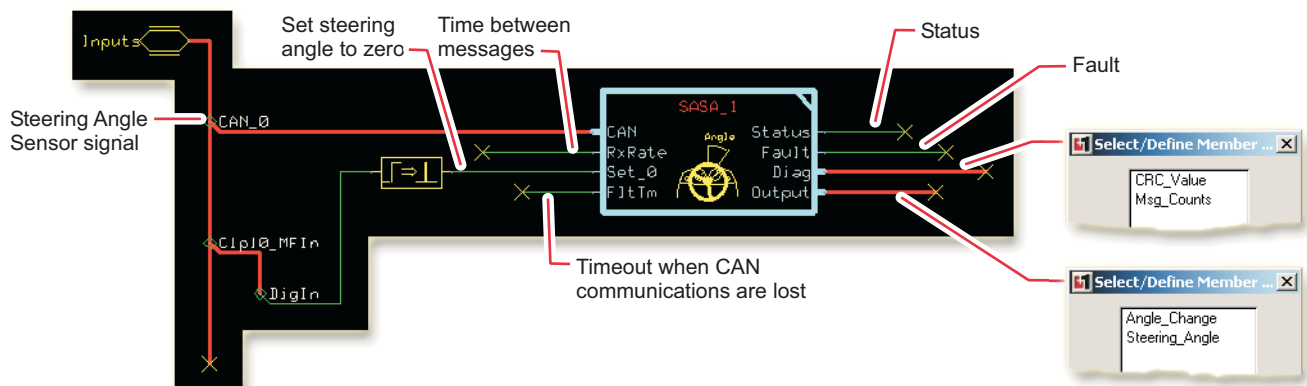

### Status and Fault Logic

The **SASA** function block does not use standard status and fault codes.

The status codes indicate the calibration state of the function block.

#### Status Logic

Status	Bit*	Reported While
Program Pending	1	The <b>SASA</b> is writing a parameter to memory.

\*Position of set bit in a 16 bit fault status code. Bit 1 is the least significant bit.

#### Fault Logic

Fault	Cause	Bit*	Response	Delay <sup>†</sup>	Latch <sup>‡</sup>	Correction
CRC error	A <b>CRC_Value</b> checksum value from the CAN message indicates that an error occurred during the transmission of that message.	1	Data freezes	No	No	There is a physical layer problem. Ensure the CAN bus integrity.
Count error	When comparing the number of messages received with a <b>Msg_Counts</b> fault-detection value, it was found that two or more messages in a row had not been received.	2				Check that the controller's <b>OS.ExecTime</b> is less than <b>RxRate</b> . ( <b>OS.ExecTime</b> is a global parameter on all devices.)
Timeout on CAN	The delay in receiving CAN signals exceeds the <b>FltTim</b> setting.	3				There is a physical layer problem. Ensure the CAN bus integrity.
Programming error		4	Old settings are used			Check that the correct <b>RxRate</b> is applied.

\*Position of set bit in a 16 bit fault code. Bit 1 is the least significant bit.



PLUS+1 Compliant SASA Function Block  
User Manual

(This page is intentionally blank.)

## OUR PRODUCTS

Hydrostatic transmissions  
Hydraulic power steering  
Electric power steering  
Electrohydraulic power steering  
Closed and open circuit axial piston pumps and motors  
Gear pumps and motors  
Bent axis motors  
Orbital motors  
Transit mixer drives  
Planetary compact gears  
Proportional valves  
Directional spool valves  
Cartridge valves  
Hydraulic integrated circuits  
Hydrostatic transaxles  
Integrated systems  
Fan drive systems  
Electrohydraulics  
Microcontrollers and software  
Electric motors and inverters  
Joysticks and control handles  
Displays  
Sensors

## Sauer-Danfoss Hydraulic Power Systems

### - Market Leaders Worldwide

Sauer-Danfoss is a comprehensive supplier providing complete systems to the global mobile market.

Sauer-Danfoss serves markets such as agriculture, construction, road building, material handling, municipal, forestry, turf care, and many others.

We offer our customers optimum solutions for their needs and develop new products and systems in close cooperation and partnership with them.

Sauer-Danfoss specializes in integrating a full range of system components to provide vehicle designers with the most advanced total system design.

Sauer-Danfoss provides comprehensive worldwide service for its products through an extensive network of Global Service Partners strategically located in all parts of the world.

Local address:  
Sauer-Danfoss Inc.  
3500 Annapolis Lane North  
Minneapolis, MN 55447, USA  
Phone: +1 763 509-2000  
Fax: +1 763 559-5769

Sauer-Danfoss (US) Company  
2800 East 13th Street  
Ames, IA 50010, USA  
Phone: +1 515 239-6000  
Fax: +1 515 239-6618

Sauer-Danfoss GmbH & Co. OHG  
Postfach 2460, D-24531 Neumünster  
Krokamp 35, D-24539 Neumünster, Germany  
Phone: +49 4321 871-0  
Fax: +49 4321 871 122

Sauer-Danfoss ApS  
DK-6430 Nordborg, Denmark  
Phone: +45 7488 4444  
Fax: +45 7488 4400

Sauer-Danfoss-Daikin LTD  
Shin-Osaka TERASAKI 3rd Bldg. 6F  
1-5-28 Nishimiyahara, Yodogawa-ku  
Osaka 532-0004, Japan  
Phone: +81 6 6395 6066  
Fax: +81 6 6395 8585